

# framery

SERIOUS ABOUT HAPPINESS



Framery One  
Handle repair instructions

English  
Version 1.0  
Tampere, Finland 22.02.2022



# Contents

<b>1 Important safety and product instructions.....</b>	<b>5</b>
1.1 Preface.....	5
1.2 Product information.....	5
1.3 Copyright.....	5
1.4 Manual contents.....	5
1.5 Warning, information, and safety symbols in this manual.....	5
1.6 Main safety risks related to the installation, maintenance, disassembly, and use of the product.....	6
1.6.1 Installation, maintenance, and disassembly.....	6
1.6.2 Electrical safety.....	7
1.6.3 Fire safety.....	8
1.7 Location of product markings.....	9
<b>2 Tools required.....</b>	<b>12</b>
<b>3 Disconnect the power cord.....</b>	<b>13</b>
<b>4 Remove the door handle.....</b>	<b>14</b>
<b>5 Attach the mounting templates to the door (one handle has come     off).....</b>	<b>15</b>
<b>6 Attach the mounting templates to the door (both handles have     come off).....</b>	<b>18</b>
<b>7 Glue the backplate to the door.....</b>	<b>22</b>
<b>8 Install the door handles.....</b>	<b>27</b>
<b>9 Install the wall body cover and plastic trims.....</b>	<b>28</b>
<b>10 Connect the power cord.....</b>	<b>29</b>



# 1 Important safety and product instructions

## 1.1 Preface

This instruction manual describes the maintenance of the product. Everyone involved in the maintenance of the product must read and understand the contents of the maintenance and safety instructions.

This instruction manual gives you necessary information for the correct maintenance.

All product instructions are also available at **[help.frameryacoustics.com](https://help.frameryacoustics.com)**.

## 1.2 Product information

The information in this manual corresponds to the product at the time of delivery. All information included in this manual is valid at the time of publication.

## 1.3 Copyright

This document must not be copied, presented, or delivered to a third party without explicit permission from Framery. The use of this document for any purpose other than those allowed by Framery is prohibited. Framery reserves the right to change the instructions related to the product without separate notice.

## 1.4 Manual contents

The instructions contain the following information:

- General information about the purpose and content of the instructions
- Information related to safety
- Instructions for handle repair



## 1.5 Warning, information, and safety symbols in this manual

The warnings in this manual have been divided into the following two categories:


- The term "DANGER" indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- The term "WARNING" indicates a hazardous situation which, if not avoided, could result in death or injury.

The safety symbols found in this manual may also be posted on the product. All personnel who install, disassemble, perform maintenance, or use the product are to be familiar with and observe all safety symbols, labels, and instructions about the action they are performing.


**Table 1: Hazard**

	An exclamation point symbol inside a colored triangle indicates a hazardous situation.
	

**Table 2: Mandatory action**






	A white symbol inside a colored circle indicates an action that must be taken to avoid a hazardous situation.
---	---




**Table 3: Prohibited action**

	A ring with a diagonal bar indicates an action that is not allowed.
---	---

## 1.6 Main safety risks related to the installation, maintenance, disassembly, and use of the product

### 1.6.1 Installation, maintenance, and disassembly









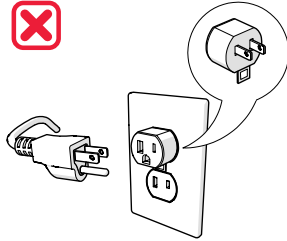
	<b>WARNING!</b> To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:
	Use cut resistant safety gloves during the installation, maintenance, or disassembly of the product.
	Use steel toed safety boots during the installation, maintenance, or disassembly of the product.
	Read and understand the instructions and plan your work beforehand.
	Obey all local rules and regulations regarding workplace safety.




	Keep the work site tidy and free from debris throughout the installation, maintenance, or disassembly process.
	Do not climb on top of the product or place any load on the roof of the product.
	<p>If the optional casters are not engaged, do not move the finished product by pushing.</p> <p>The product is very heavy. Moving the product after installation without engaging the optional casters is not allowed.</p>

### 1.6.2 Electrical safety

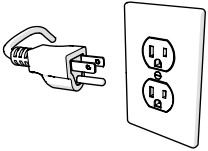

Input for the electrical system: 100-240 VAC (10 A) 50-60 Hz

The maximum load for the electrical system is 6.6 A.

	<p><b>DANGER!</b></p> <p><b>To reduce the risk electric shock, obey the following:</b></p>
	<p>Disconnect the power cord from the power outlet before starting any cleaning, maintenance, or disassembly procedures.</p> <p>The power cord serves as a power disconnect device for pluggable equipment. The power outlet shall be located near the equipment and shall be easily accessible.</p>
	<p><b>WARNING!</b></p> <p><b>To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:</b></p>
	Connect the power cord to a properly grounded outlet only.
	<p>This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in the figure below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">   </div> <div style="text-align: center;">   </div> </div>

	Keep the power cord of the product away from heated surfaces.
	Do not use the pod if you notice any defects or damage to the electrical equipment.
	Do not connect any extension cords to the power outlet(s) of the product.


### 1.6.3 Fire safety





	<p><b>WARNING!</b></p> <p><b>To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:</b></p>
	<p>If safely possible to perform, disconnect the power cord from the power outlet if there is a fire inside the product.</p> <p>The power cord serves as a power disconnect device for pluggable equipment. The power outlet shall be located near the equipment and shall be easily accessible.</p>

Fire safety end devices (alarms, sprinklers etc.) can also be installed inside the pods (instructions available upon request). The need for end devices inside the pod is always determined by the applicable local authorities.

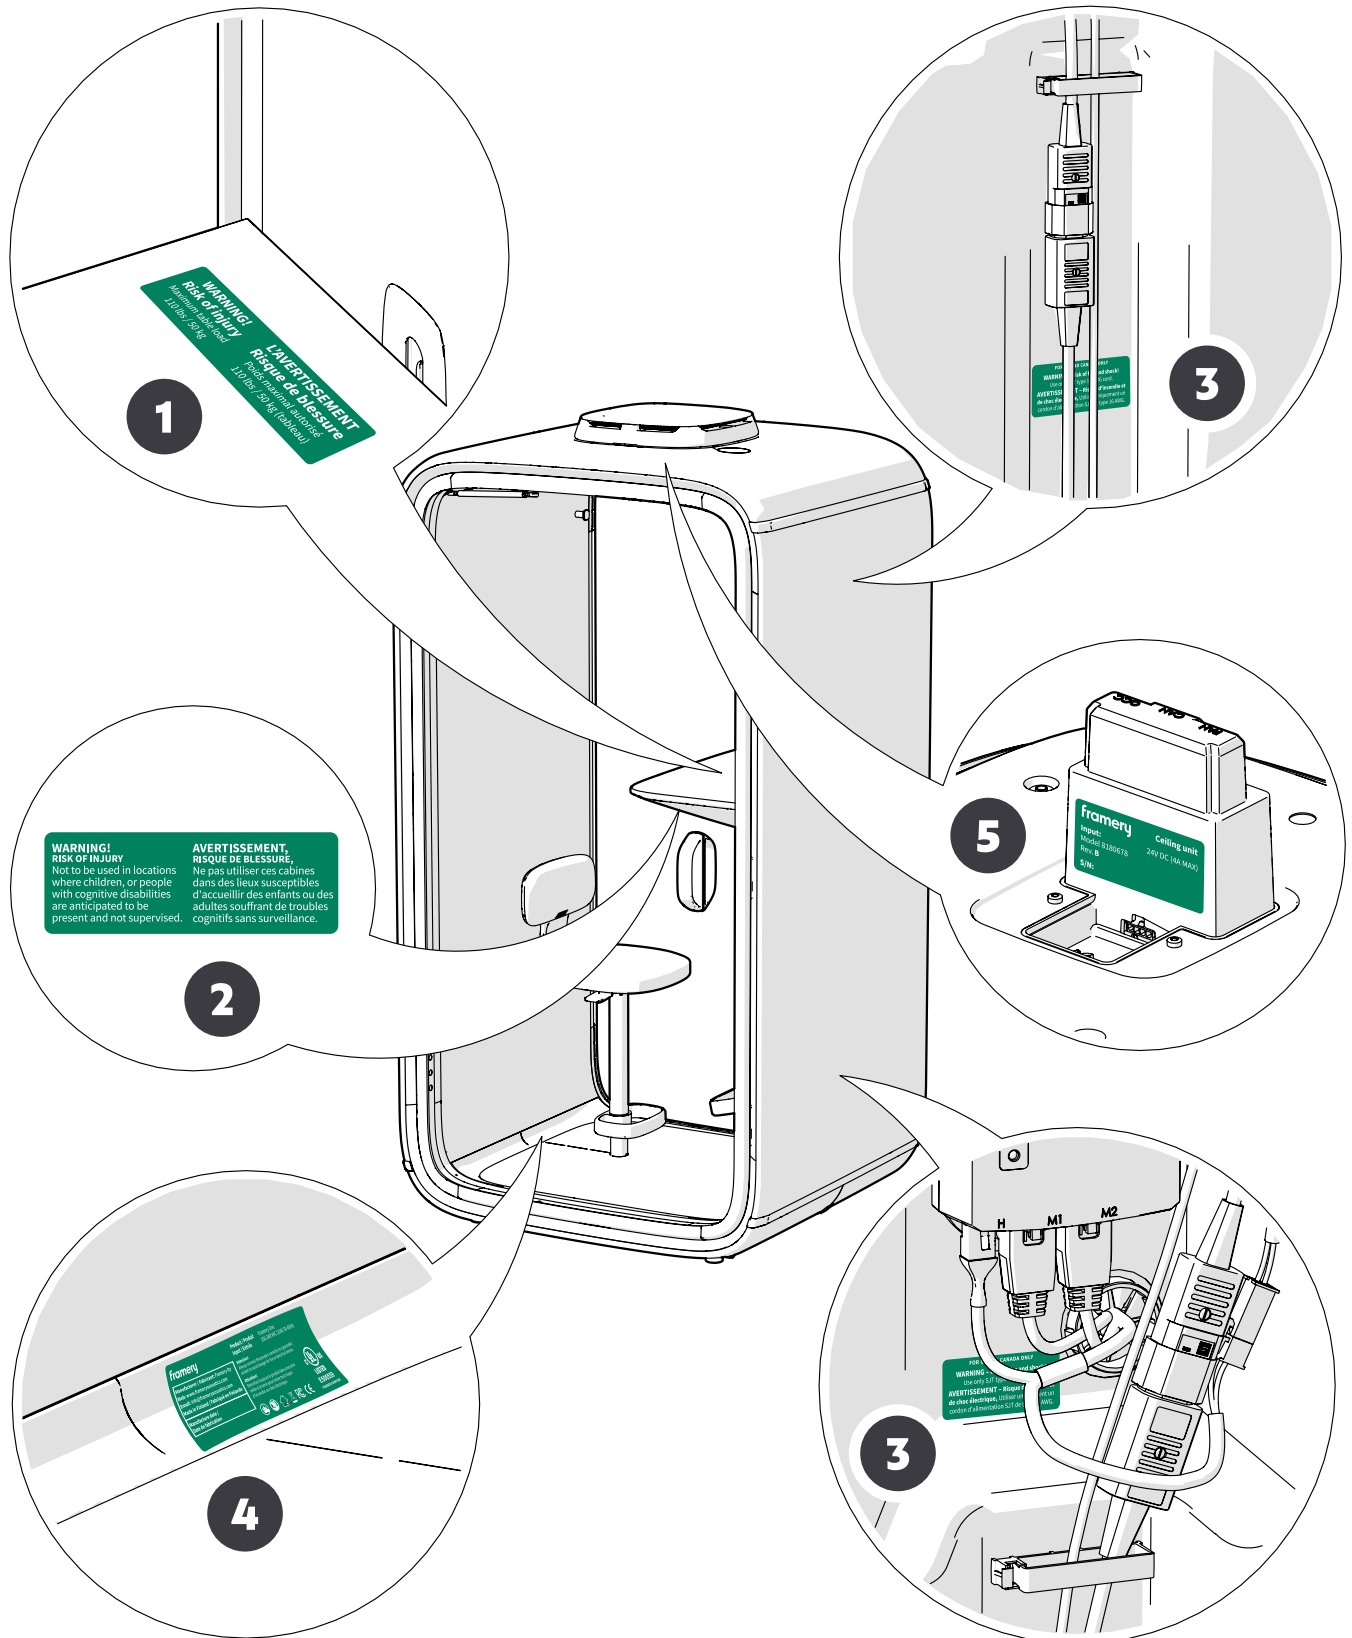

## 1.7 Location of product markings

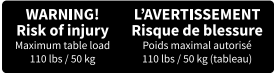


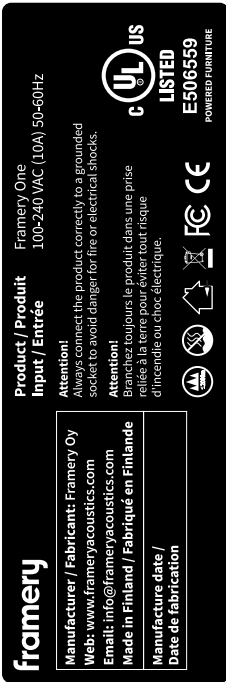Position	Label	Label text
1.	 <p><b>WARNING!</b> Risk of injury Maximum table load 110 lbs / 50 kg</p> <p><b>L'AVERTISSEMENT</b> Risque de blessure Poids maximal autorisé 110 lbs / 50 kg (tableau)</p>	<p><b>WARNING! Risk of injury</b></p> <p>Maximum table load 110 lbs / 50 kg</p> <p><b>L'AVERTISSEMENT</b> Risque de blessure</p> <p>Poids maximal autorisé 110 lbs / 50 kg (tableau)</p>
2.	 <p><b>WARNING!</b> RISK OF INJURY Not to be used in locations where children, or people with cognitive disabilities are anticipated to be present and not supervised.</p> <p><b>AVERTISSEMENT, RISQUE DE BLESSURE,</b> Ne pas utiliser ces cabines dans des lieux susceptibles d'accueillir des enfants ou des adultes souffrant de troubles cognitifs sans surveillance.</p>	<p><b>WARNING! RISK OF INJURY</b></p> <p>Not to be used in locations where children, or people with cognitive disabilities are anticipated to be present and not supervised.</p> <p><b>AVERTISSEMENT, RISQUE DE BLESSURE,</b></p> <p>Ne pas utiliser ces cabines dans des lieux susceptibles d'accueillir des enfants ou des adultes souffrant de troubles cognitifs sans surveillance.</p>
3.	 <p><b>FOR US AND CANADA ONLY</b> <b>WARNING – Risk of fire and shock!</b> Use only SJT type 16 AWG cord. <b>AVERTISSEMENT – Risque d'incendie et de choc électrique,</b> Utiliser uniquement un cordon d'alimentation SJT de type 16 AWG.</p>	<p><b>FOR US AND CANADA ONLY</b></p> <p><b>WARNING - Risk of fire and shock!</b></p> <p>Use only SJT type 16 AWG cord.</p> <p><b>AVERTISSEMENT - Risque d'incendie et de choc électrique,</b> Utiliser uniquement un cordon d'alimentation SJT de type 16 AWG.</p>
4.	 <p><b>framery</b></p> <p>Product / Produit Input / Entrée</p> <p>Framery One 100-240 VAC (10A) 50-60Hz</p> <p><b>Attention!</b> Always connect the product correctly to a grounded socket to avoid danger for fire or electrical shocks.</p> <p><b>Attention!</b> Branchez toujours le produit dans une prise reliée à la terre pour éviter tout risque d'incendie ou choc électrique.</p> <p><b>UL US LISTED E506559</b> POWERED FURNITURE</p> <p><b>FC CE</b></p> <p>Manufacturer / Fabricant: Framery Oy Web: <a href="http://www.frameryacoustics.com">www.frameryacoustics.com</a> Email: <a href="mailto:info@frameryacoustics.com">info@frameryacoustics.com</a> Made in Finland / Fabriqué en Finlande Manufacture date / Date de fabrication</p>	<p>Framery</p> <p>Manufacturer / Fabricant: Framery Oy</p> <p>WEB: <a href="http://www.frameryacoustics.com">www.frameryacoustics.com</a></p> <p>Email: <a href="mailto:info@frameryacoustics.com">info@frameryacoustics.com</a></p> <p>Made in Finland / Fabriqué en Finlande</p> <p>Manufacture date / Date de fabrication</p> <p>Product / Produit Framery One</p> <p>Input / Entrée 100-240 VAC (10 A) 50-60 HZ</p> <p><b>Attention! Always connect the product correctly to a grounded socket to avoid danger for fire or electrical shocks.</b></p> <p><b>Attention! Branchez toujours le produit dans une prise reliée à la terre pour éviter tout risque d'incendie ou choc électrique.</b></p>

Position	Label	Label text
5.	<div> <div> <div>framery</div> <div> <b>Input:</b>                      Model 8180678                      Rev. B                      S/N:                 </div> </div> <div> <b>Ceiling unit</b>                      24V DC (4A MAX)                 </div> </div>	Framery Ceiling unit Input: 24V DC (4A MAX) Model 8180678 Rev. B S/N:

SAVE THESE INSTRUCTIONS

## 2 Tools required

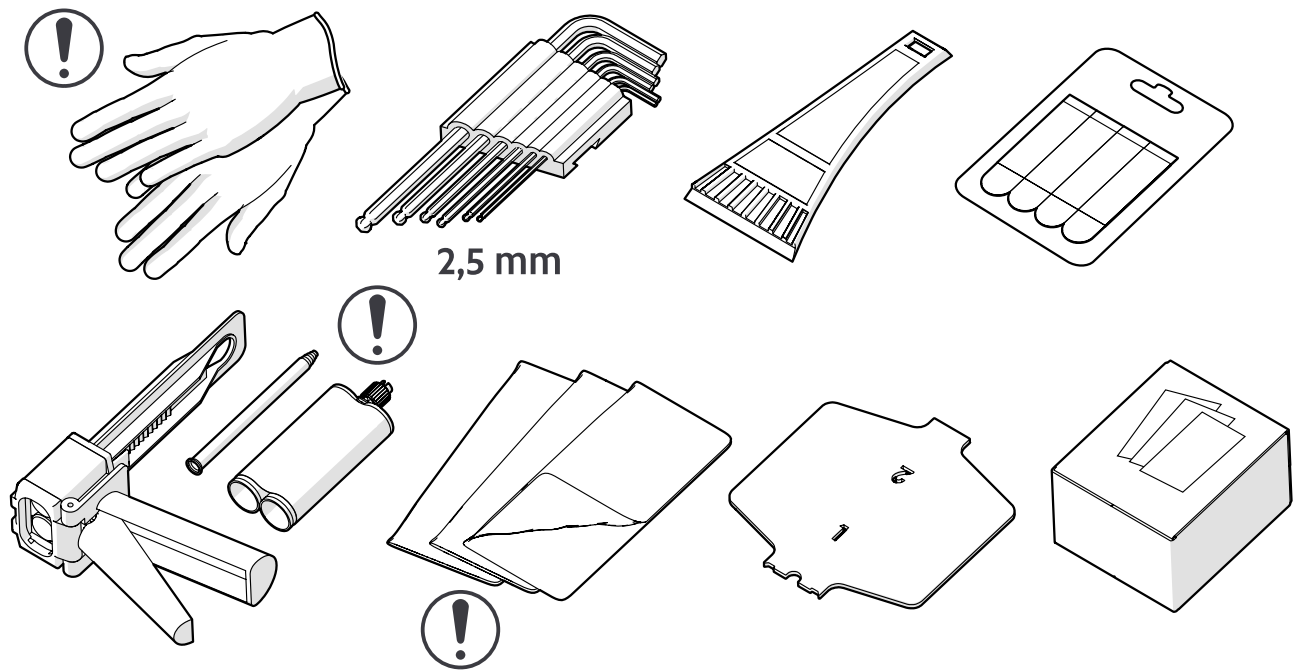

**Figure 1: Tools required for handle repair**

- ❗ **Note:** Wear safety gloves during the repair!
- ❗ **Note:** It takes 48 hours for the glue to fully cure.
- ❗ **Note:** Use paper towels to protect the gluing surface.

### 3 Disconnect the power cord

**⚠ DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

Remove the plug from the power outlet.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.

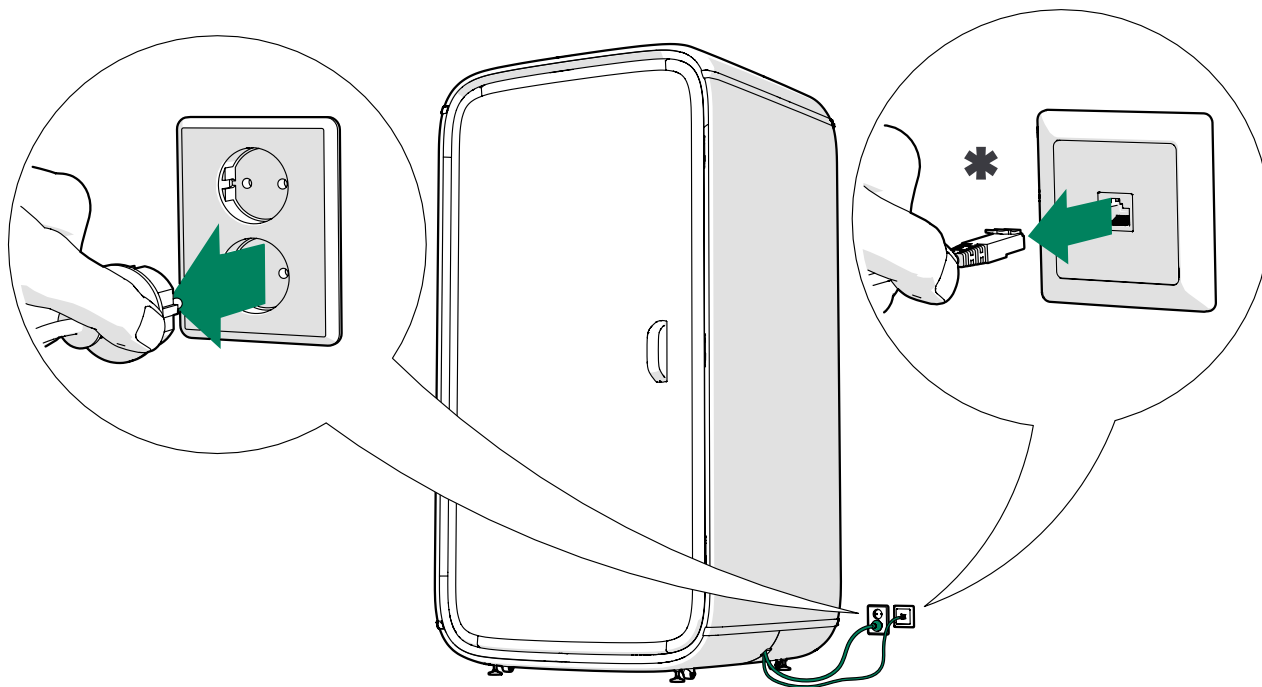





Figure 2: \* = Optional LAN cord

## 4 Remove the door handle

⚠ **Note:** Put on safety gloves before you begin the repair!


Remove the handle that is still in place. If both handles have come off, go to the following section.

Loosen the set screw and slide the handle up to remove it from the backplate on the door.

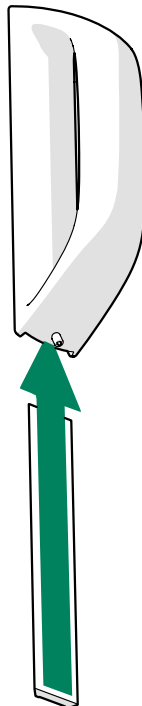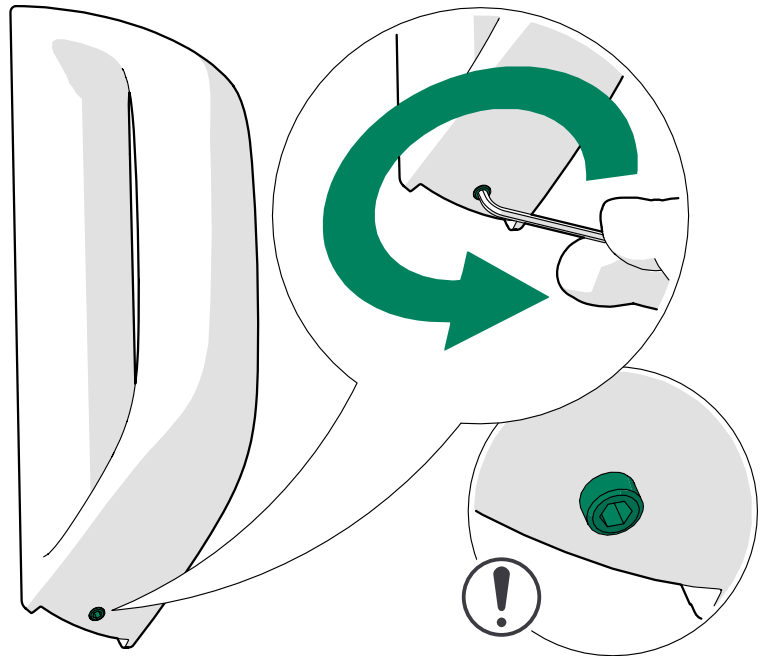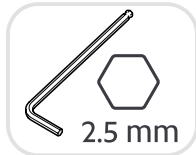


## 5 Attach the mounting templates to the door (one handle has come off)


1. Remove the old glue from the glass with the scraper.

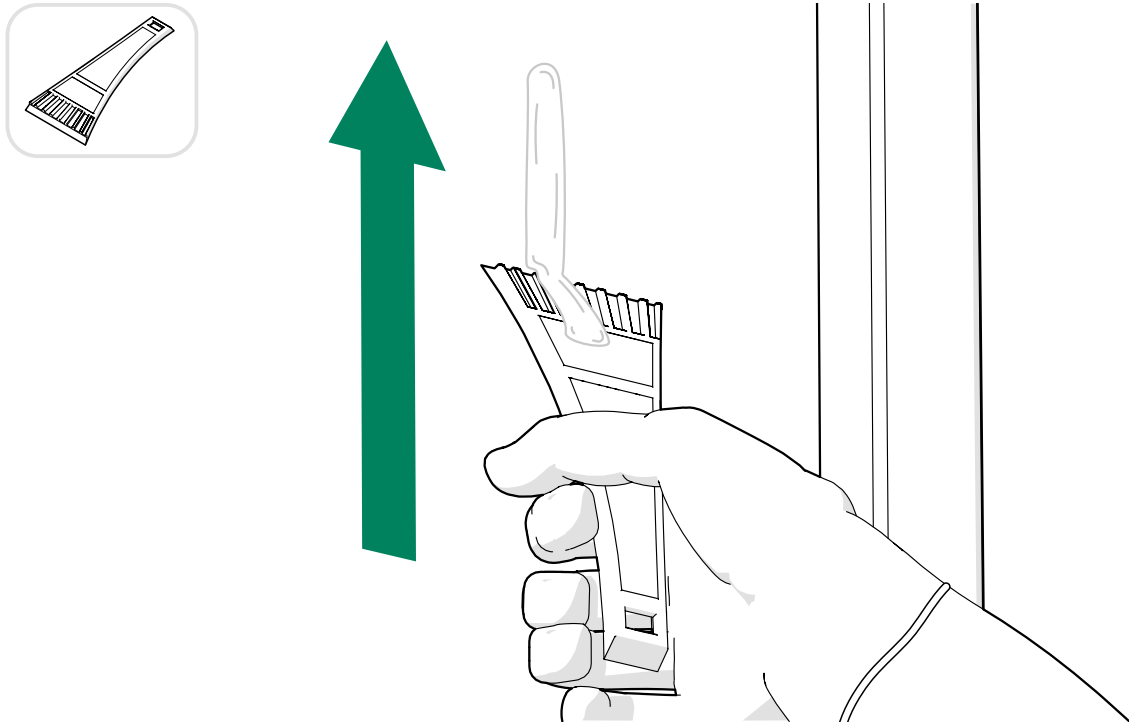

2. Separate the adhesive strips.  
Remove the liners from one side.

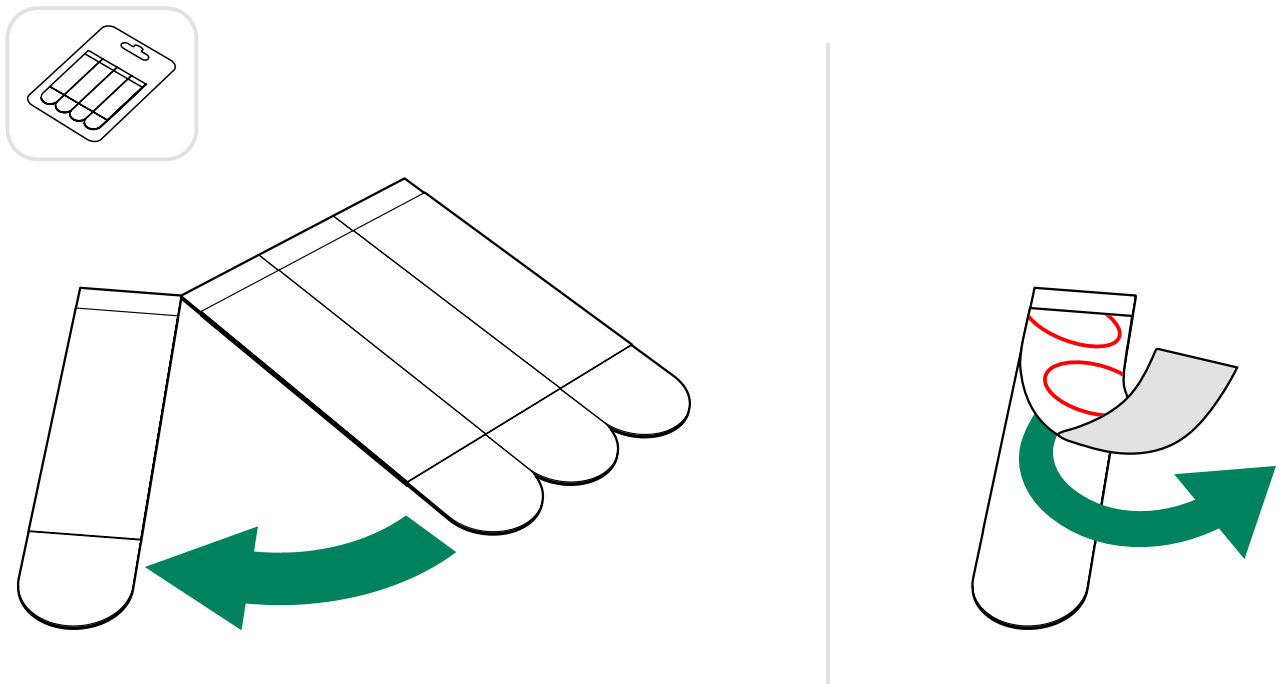

3. Attach three adhesive strips to both mounting templates as shown in the following image.

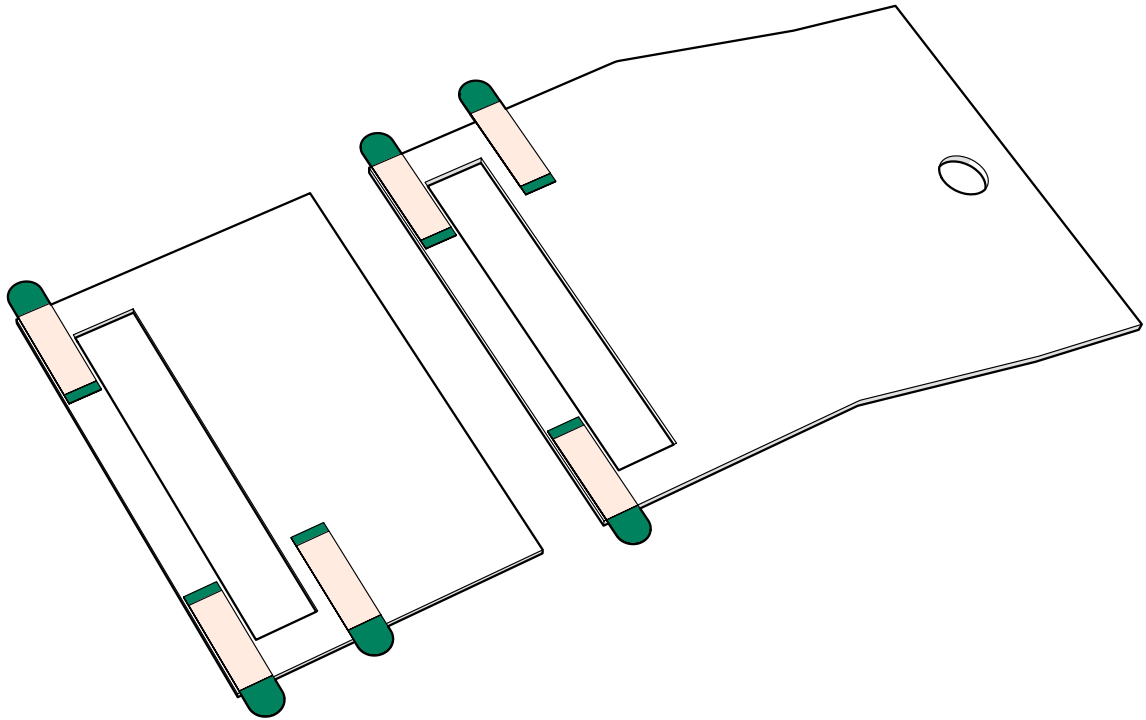


4. Attach the mounting template for the inner side over the backplate.  
If the inner handle has come off, install the mounting template for the outer side first.



**Note:** The smaller mounting template is for the inner side.




**Note:** Align the mounting template with the backplate as shown in the following image.

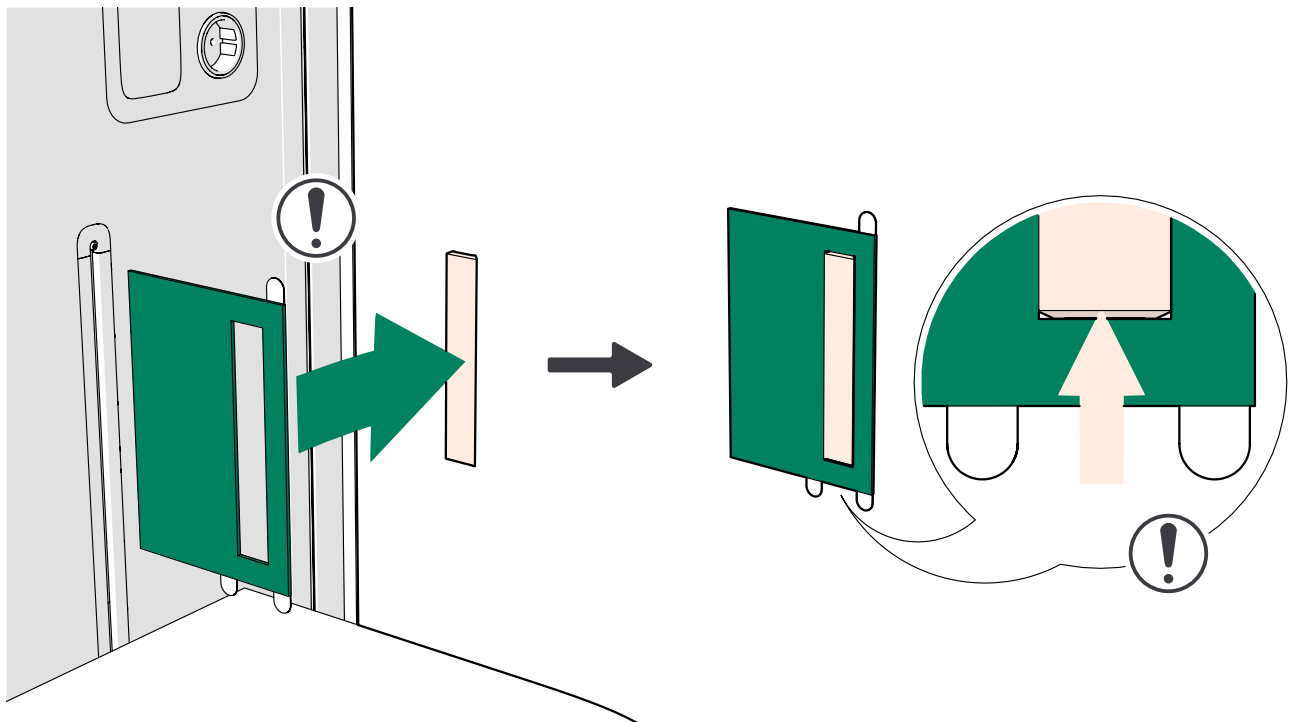




5. Attach the other mounting template on the outside of the door. Align the edges of the templates as shown in the following image.

⚠ **Note:** The mounting template with the longer edge is for the outer side.

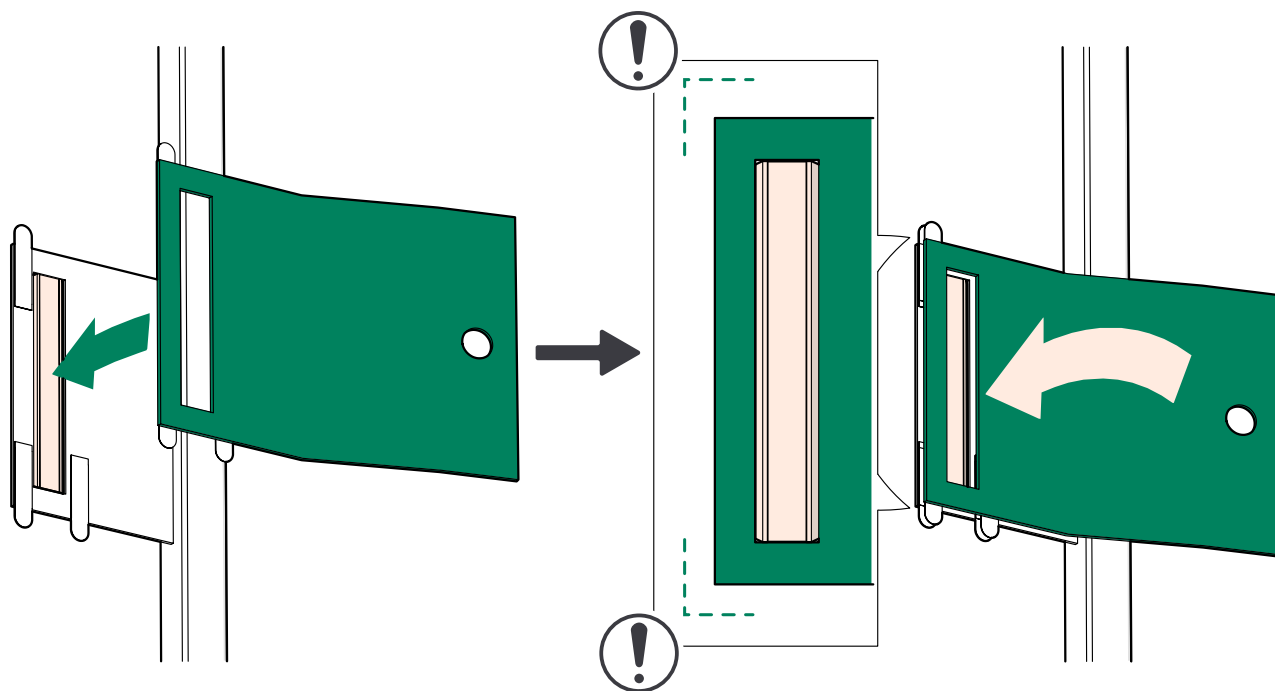


## 6 Attach the mounting templates to the door (both handles have come off)


1. Remove the plastic trims from the handle side wall.

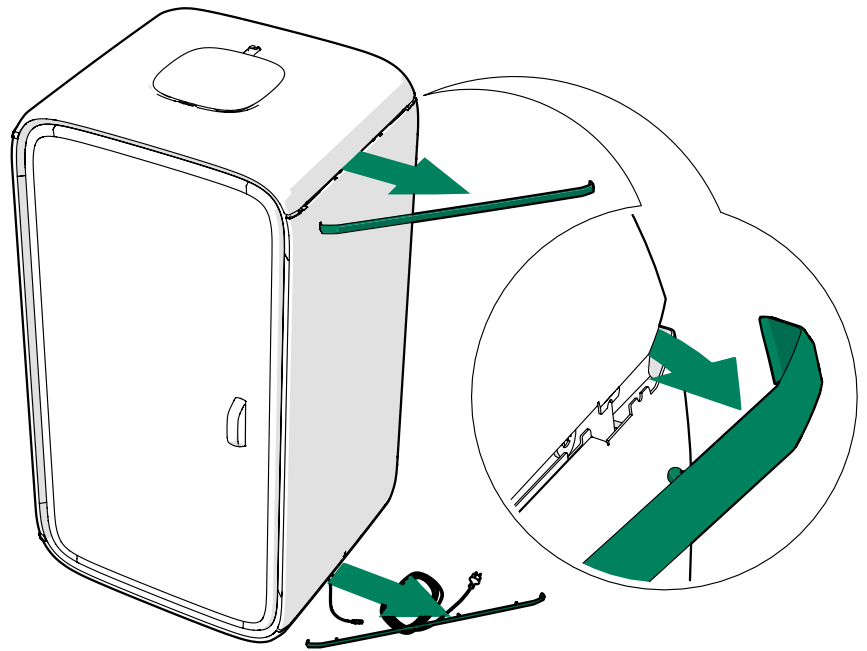


2. Remove the body cover from the handle side wall.

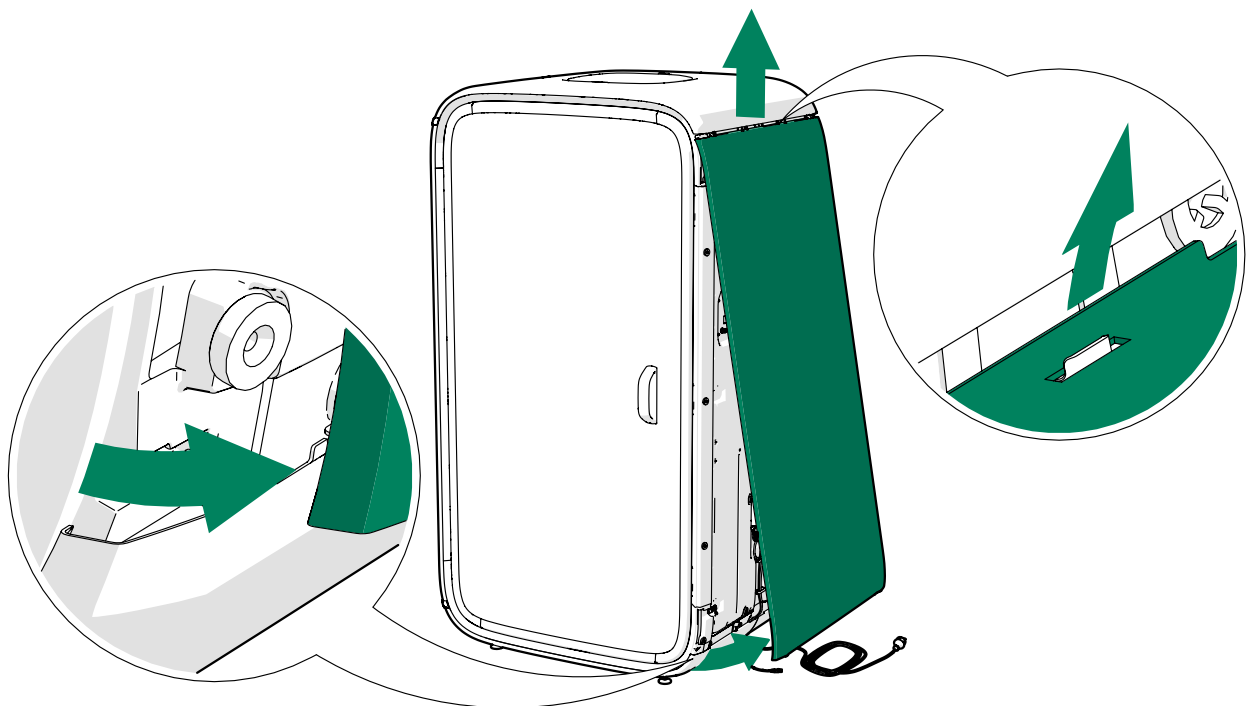


3. Remove the old glue from both sides of the glass with the scraper.

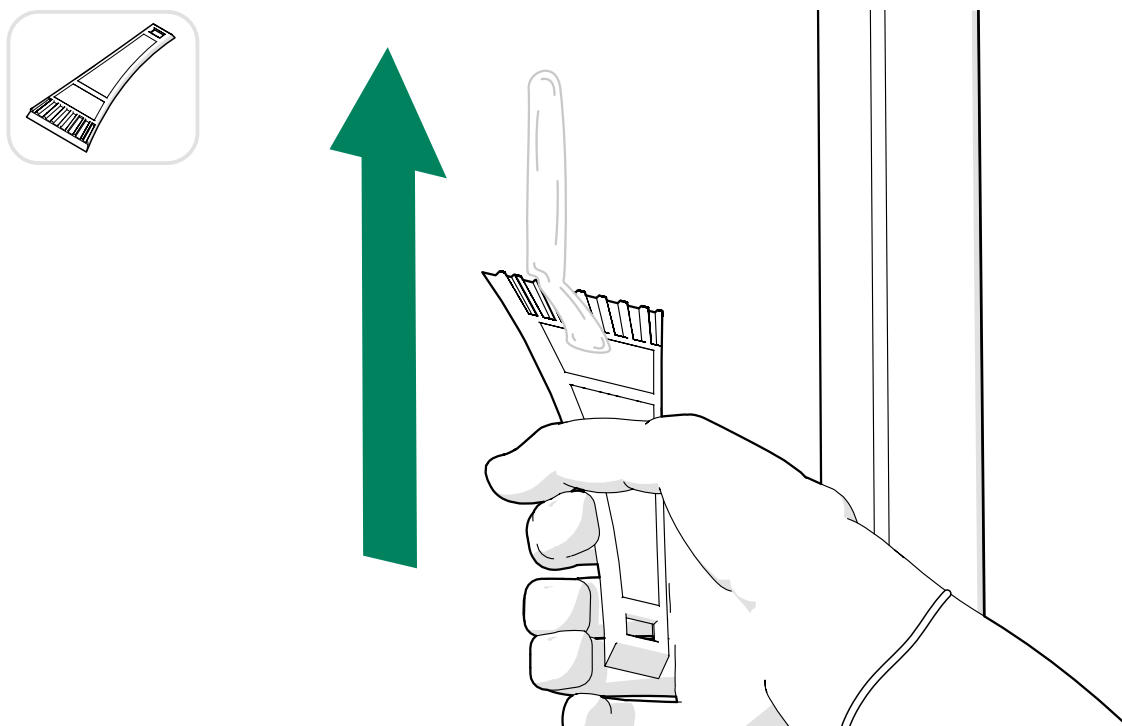


4. Separate the adhesive strips.  
Remove the liners from one side.

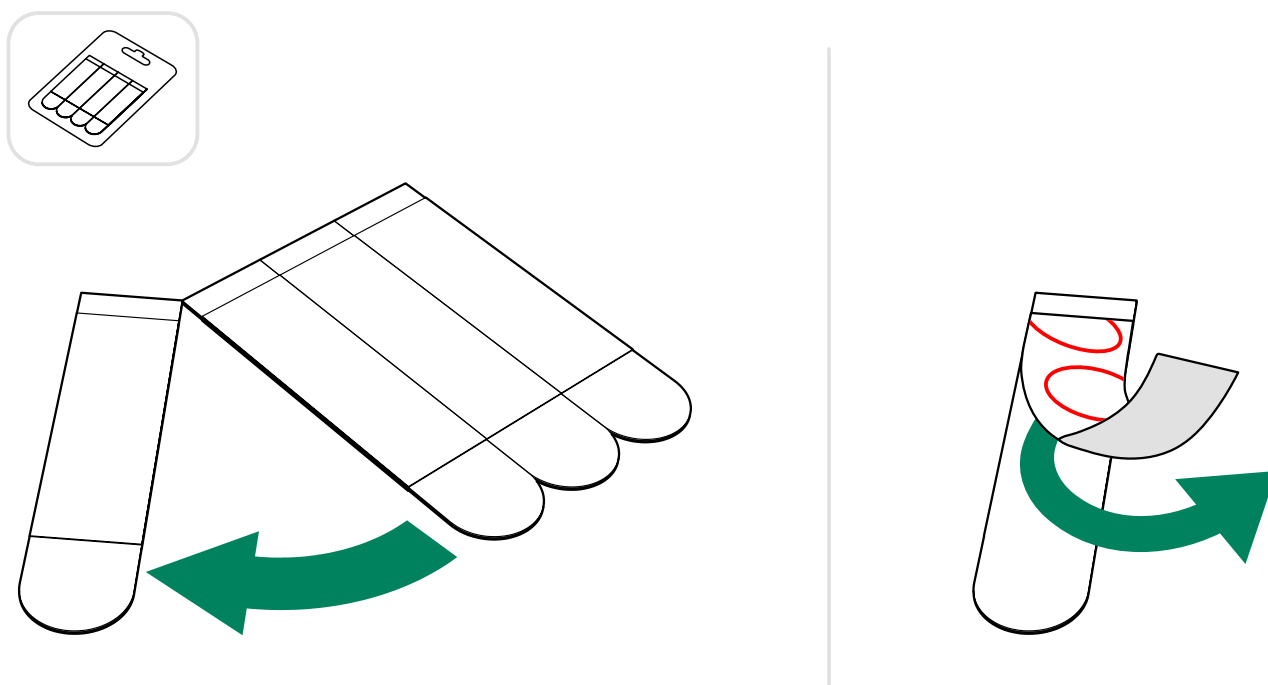


5. Attach three adhesive strips to both mounting templates as shown in the following image.

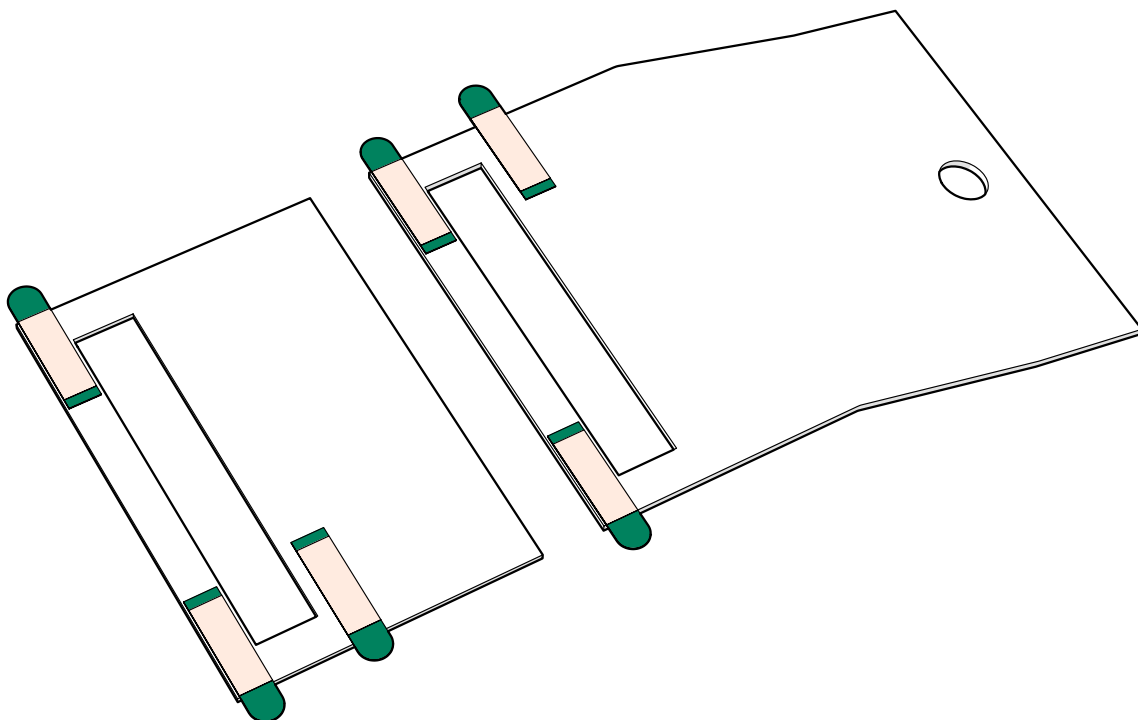

6. Attach the mounting template on the outside of the door. Bend the mounting template along the lines and align the hole on the template with the magnet in the front frame.

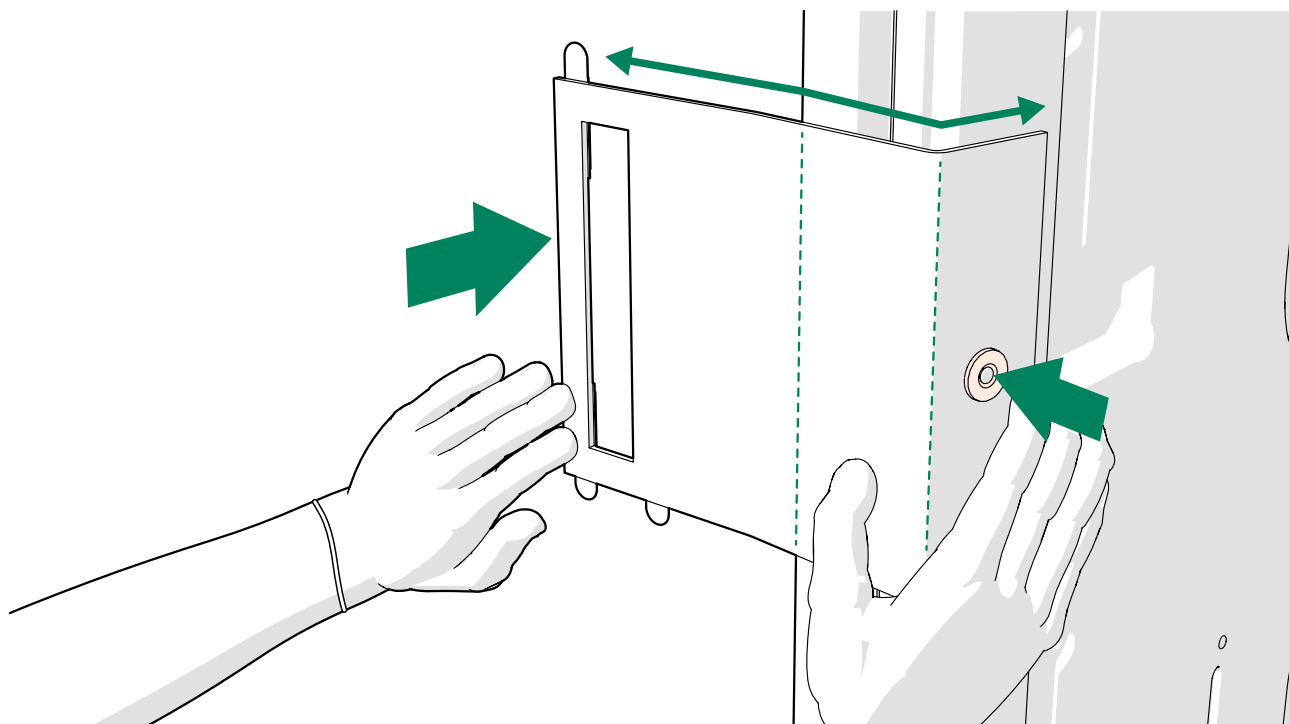


7. Attach the mounting template for the inner side. Align the edges of inner template with the outer template.

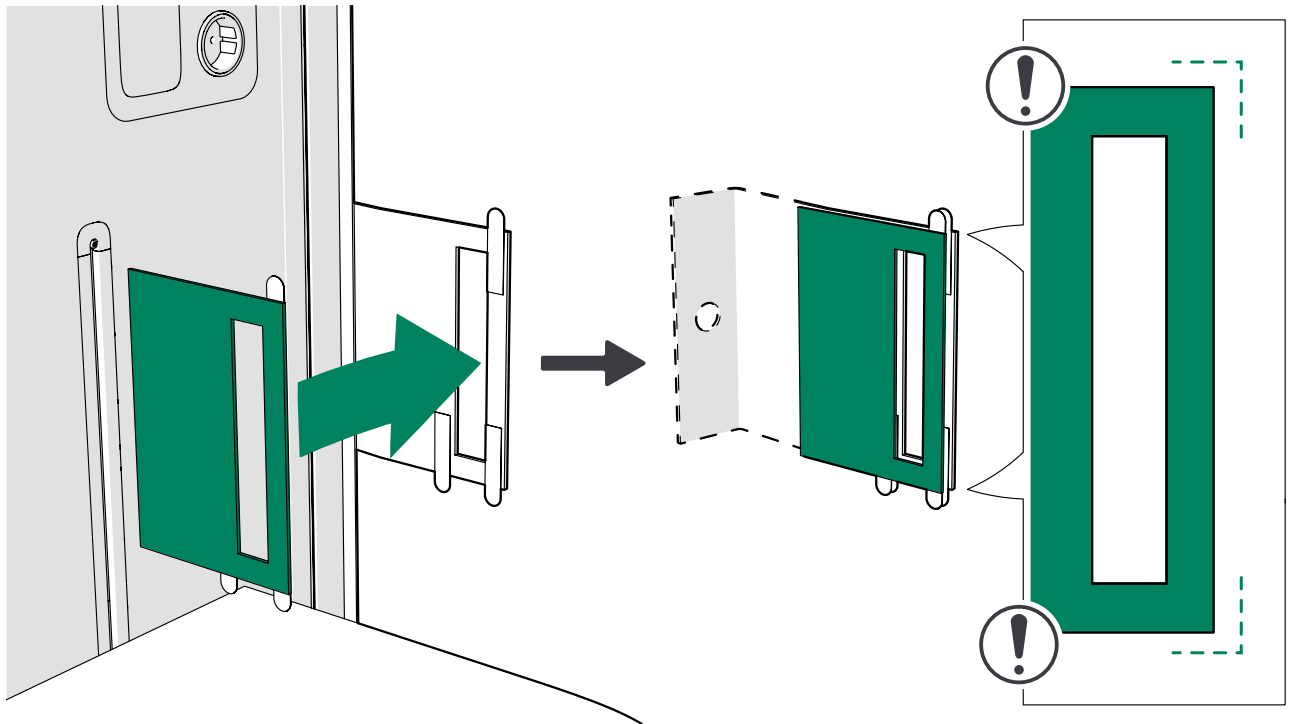


## 7 Glue the backplate to the door



1. Protect the gluing surface with paper towels and place the backplate on the surface.

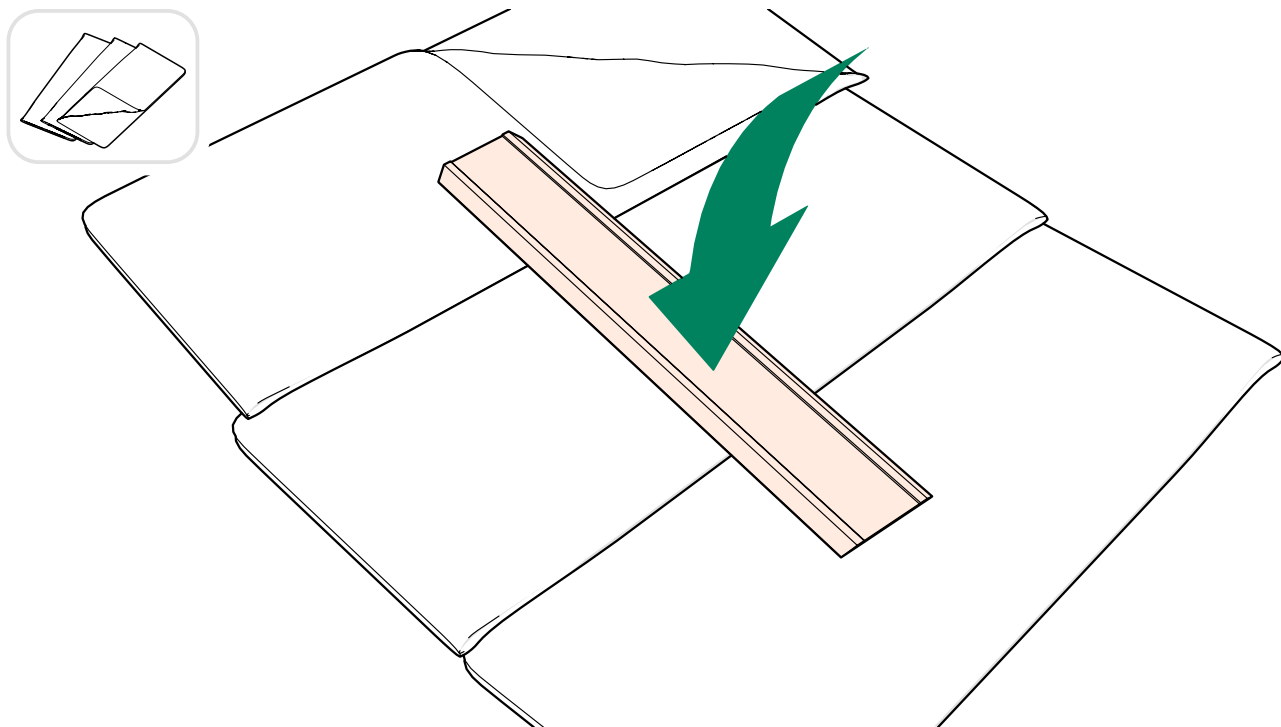

2. Load the glue gun with the 50 ml glue bottle and install the nozzle.

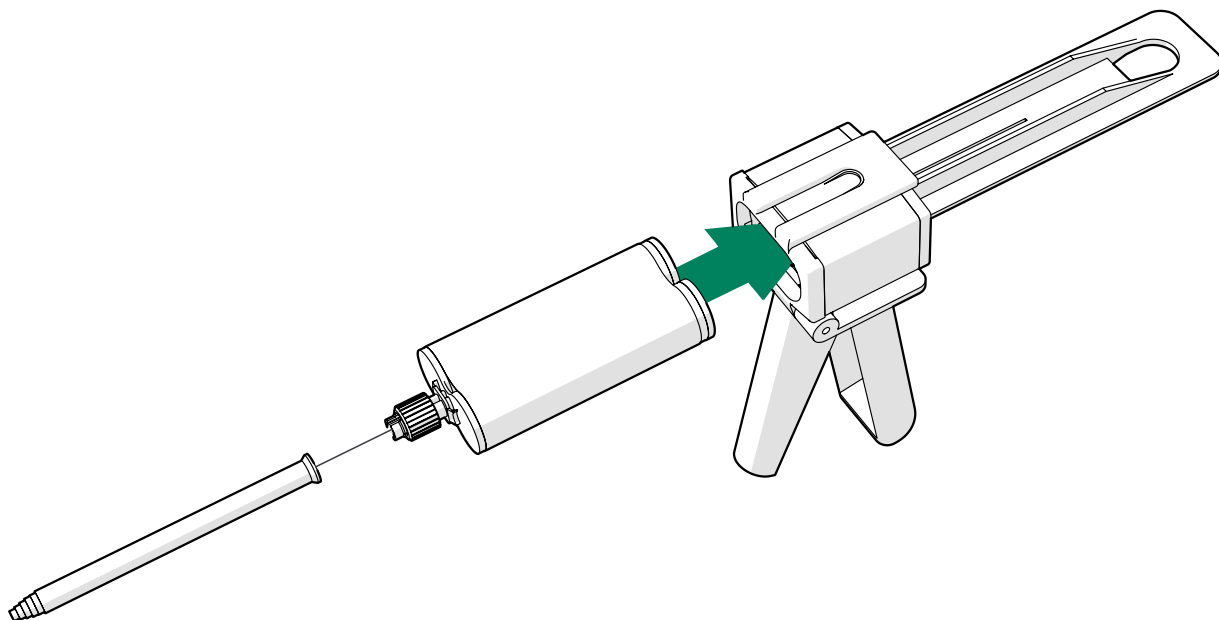



3. Dispense a small amount of the glue on a paper towel before beginning the actual gluing.

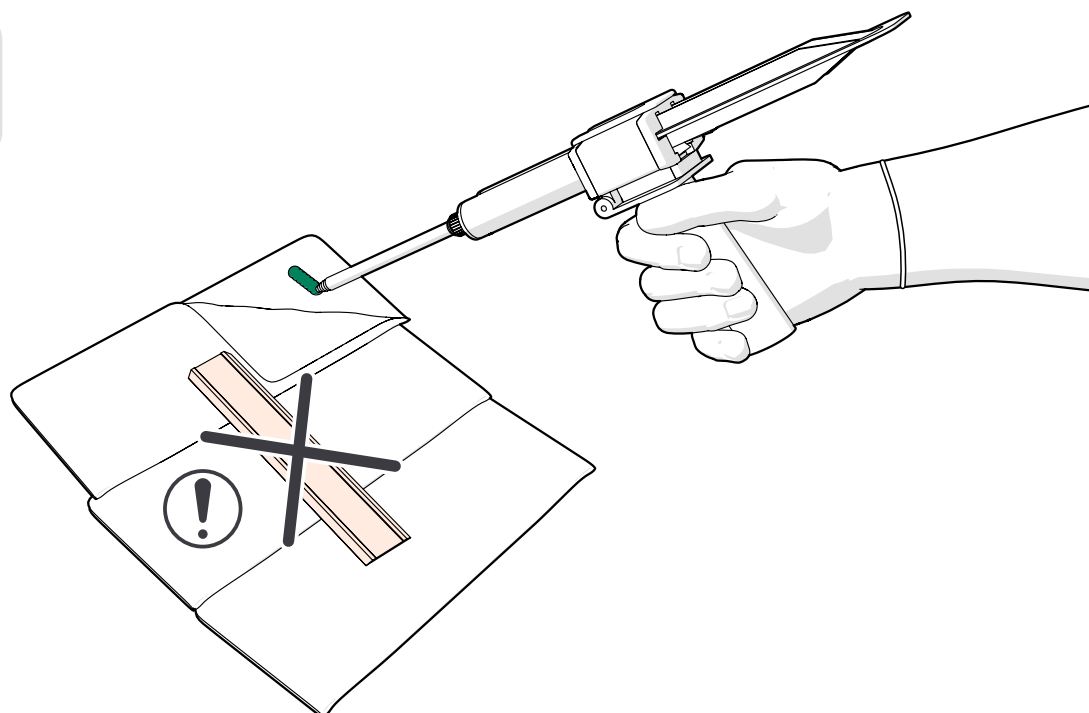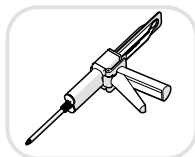

4. **Note:** The glue dries fast! Perform the following steps within 10 minutes.


Apply a straight line of glue in the middle of the backplate, from one end of the plate to the other. Keep the nozzle in contact with the backplate the whole time.

- Note:** Put a fair amount of the glue to the backplate. It is better to put too much than too little.
- Note:** If the glue comes out uncontrollably you can use the wipes provided in the kit to remove the unwanted glue. However, do not use the wipes for cleaning the grooved area of the backplate.

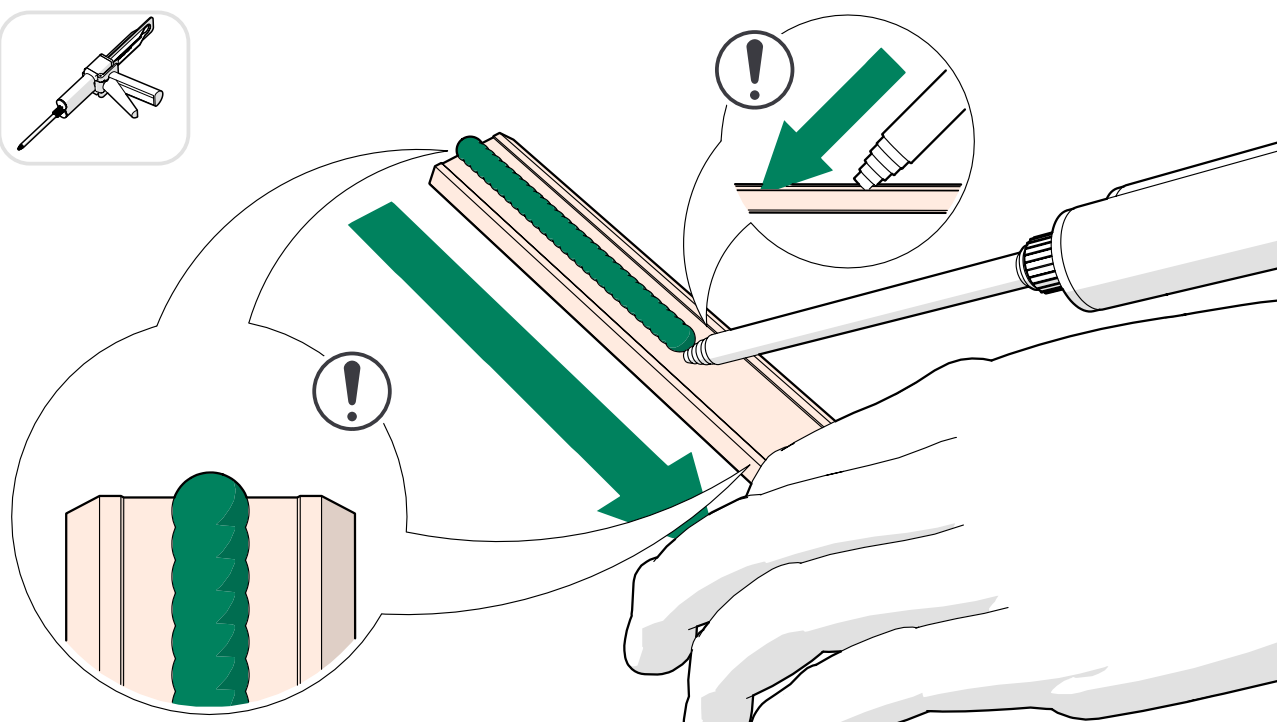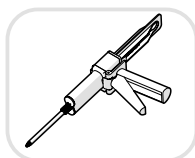


5. Hold the backplate in place with one hand and with the other hand scrape off the excess glue using the other end of the scraper (1).

Keep the scraper at a 90 degrees angle to the backplate.

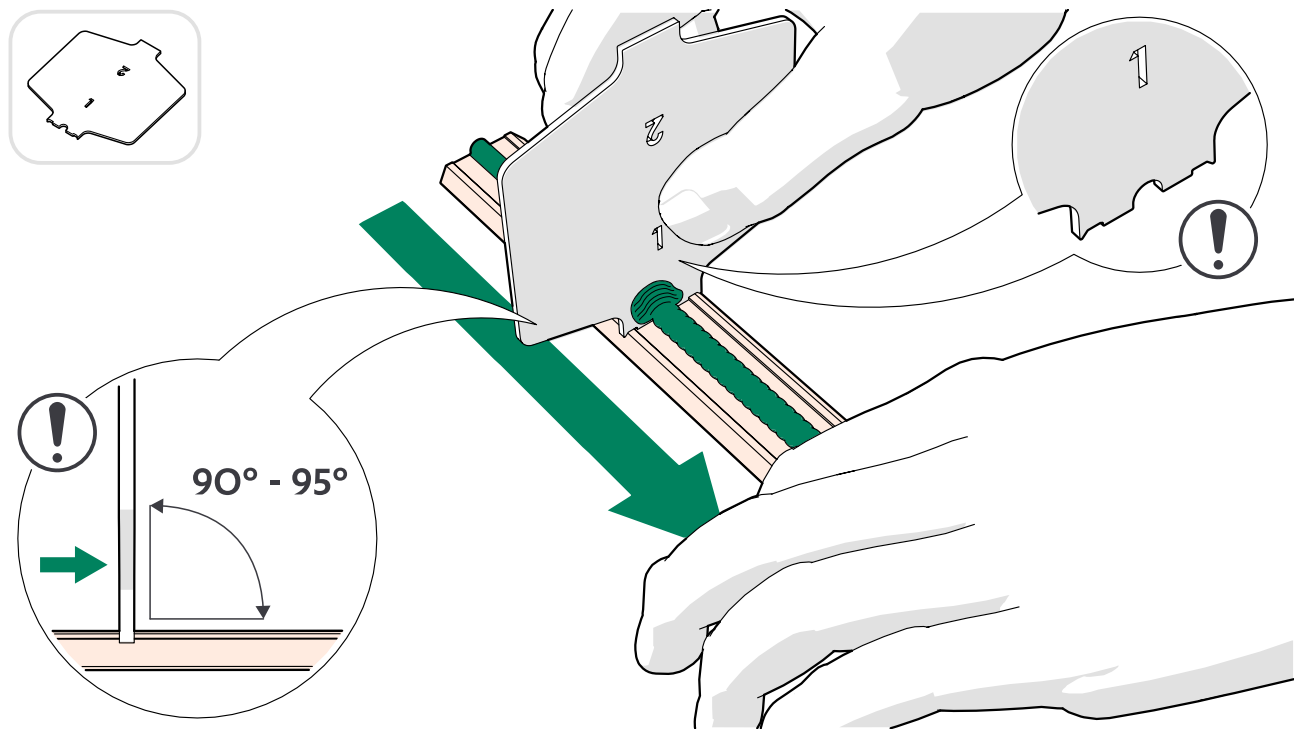


6. Using the other end of the scraper (2), remove about 10 mm of the glue from both ends of the backplate.

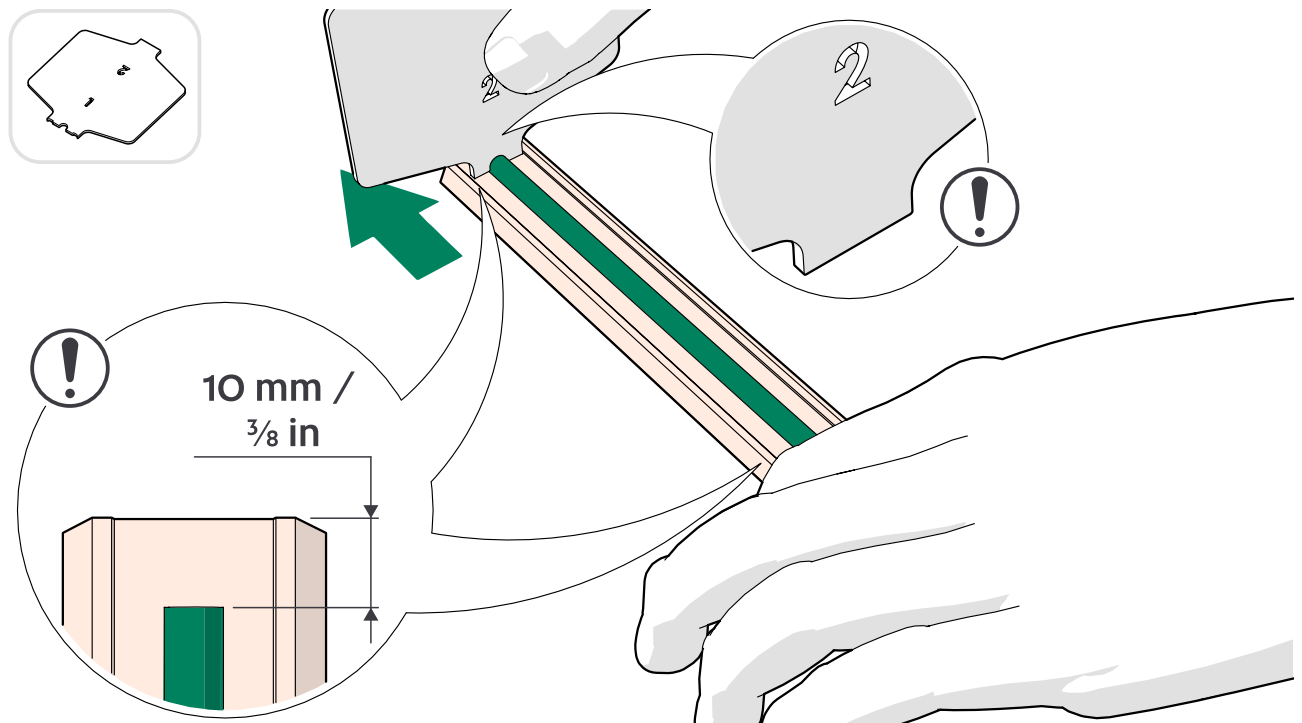




7. Place the backplate into the opening in the mounting template.  
Align the edges of the backplate with the edges of the opening as shown in the following image.

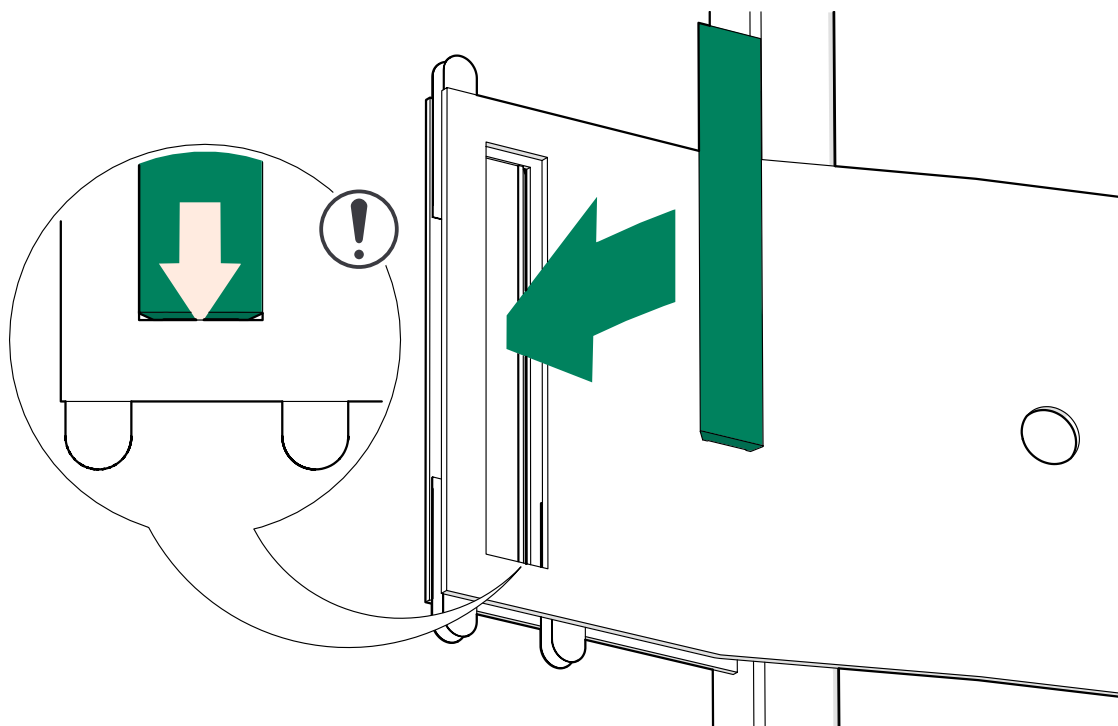

8. Press the backplate against the glass. First, press on the ends of the backplate for 5 seconds, then in the middle for 5 seconds, and then again on the ends for 5 seconds.


⚠ **Note:** Use force when pressing the backplate.

Leave the glue to cure for preferably 48 hours, but for 24 hours at minimum.

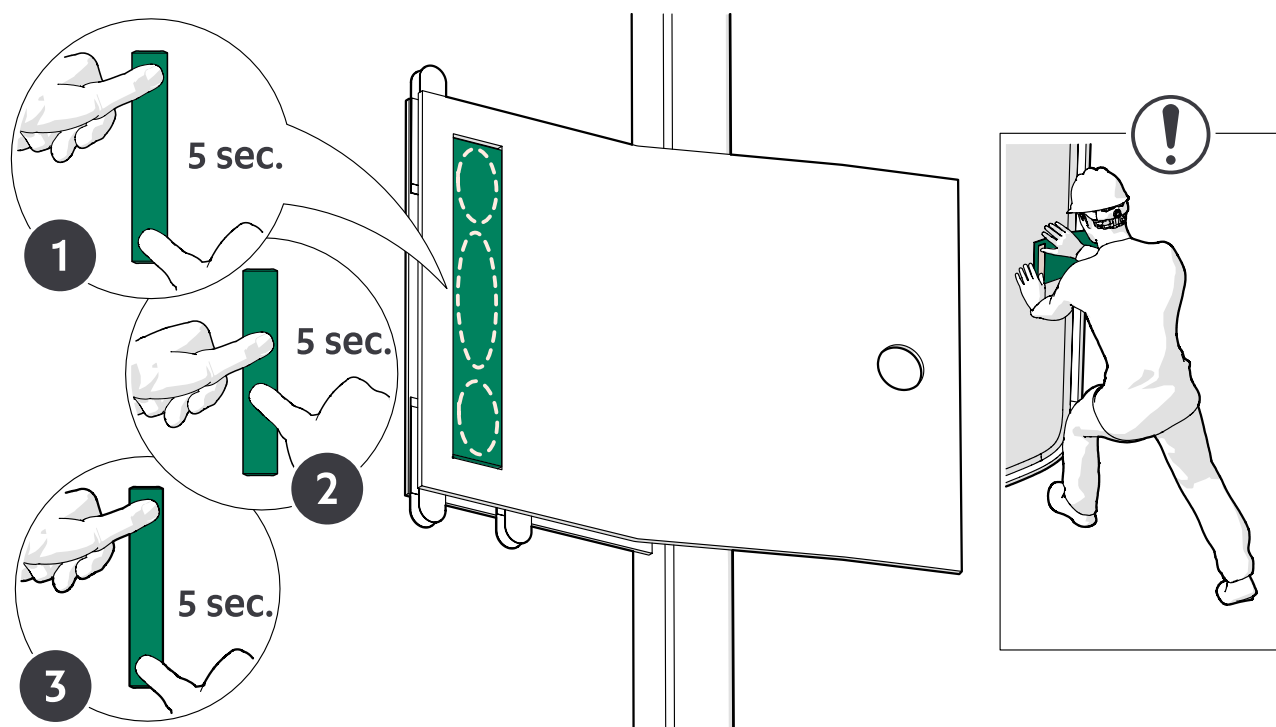

9. If both handles have come off, repeat the steps 4-8 for the other backplate.

10. After 48 hours, remove the mounting templates by stretching the lips of the strips straight along the glass.


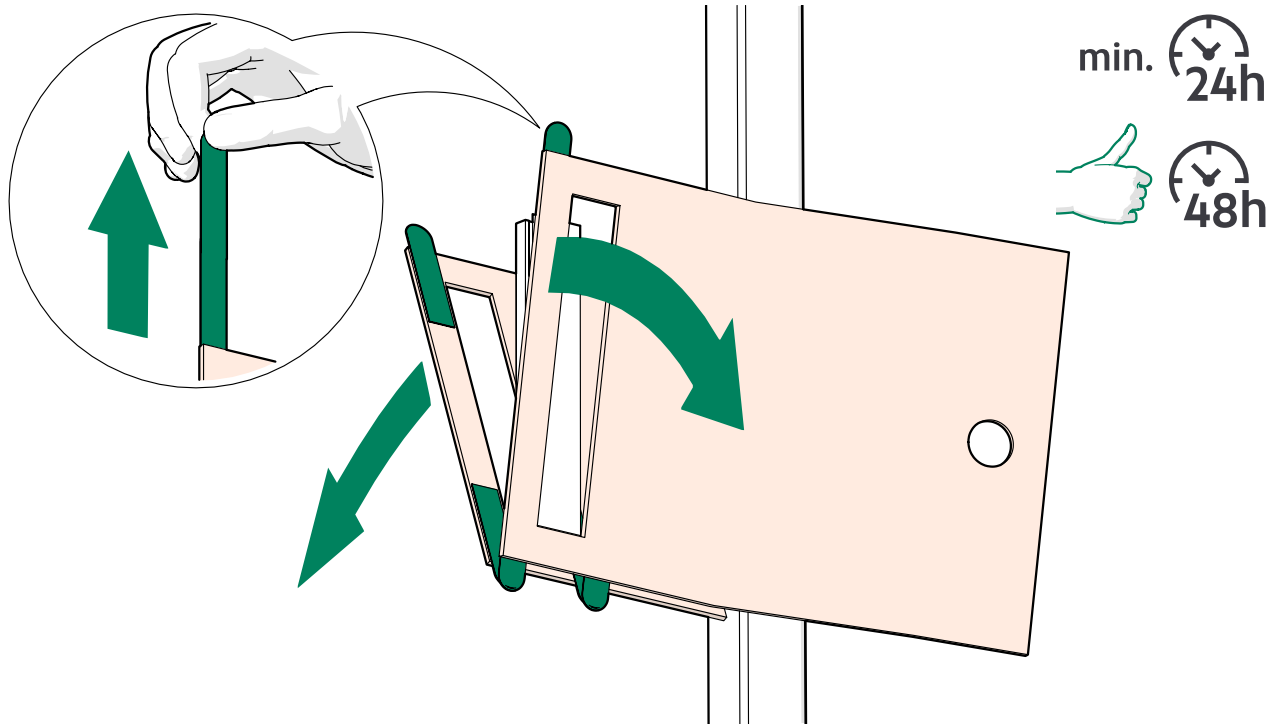


## 8 Install the door handles

Slide both handles into place and tighten the set screws.




**Warning:** Do not overtighten the handle screws. Insert the long end of the hex key into the screw end and rotate the short end to avoid overtightening.

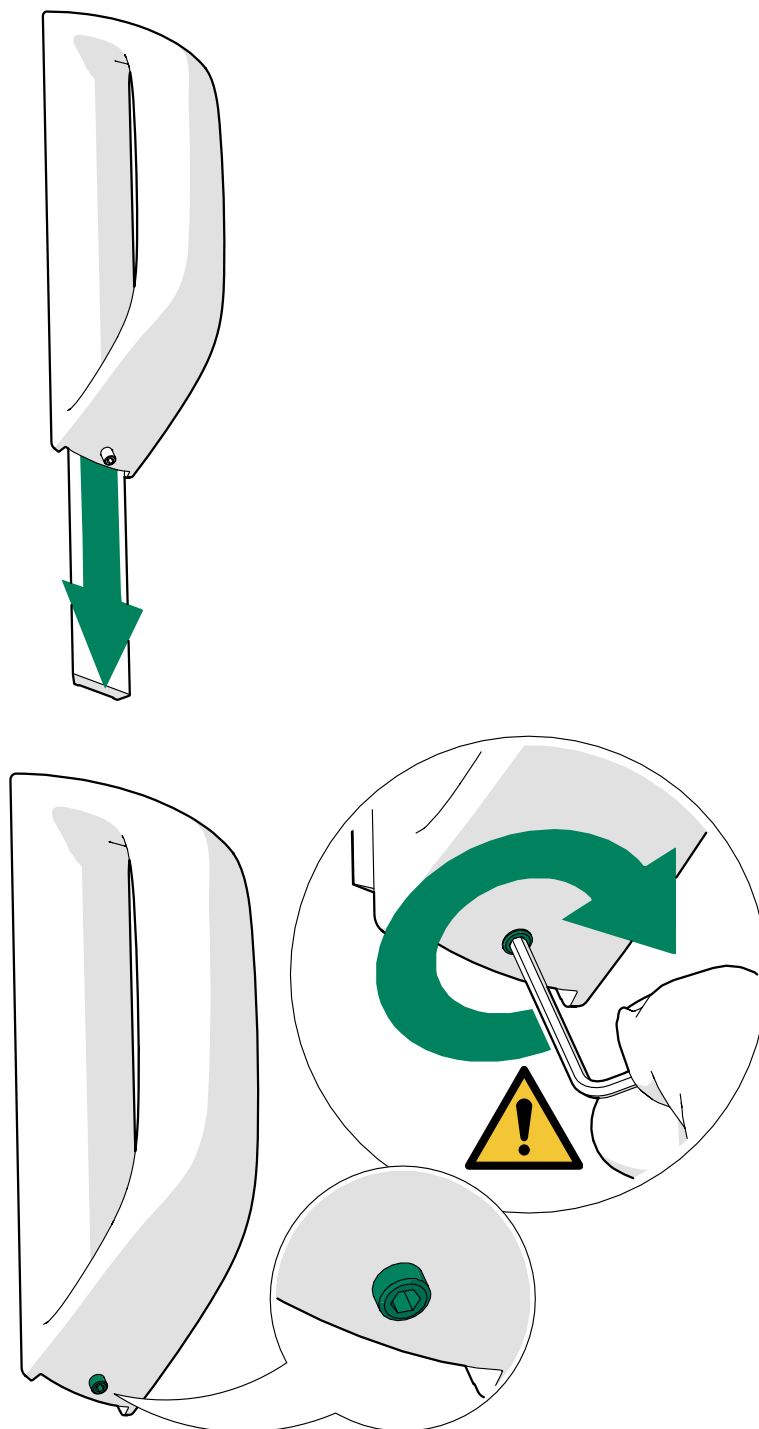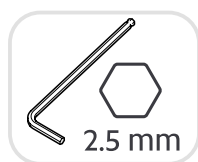


## 9 Install the wall body cover and plastic trims

If you removed the wall body cover and plastic trims from the handle side wall, reinstall them.

1. Install the wall body cover.

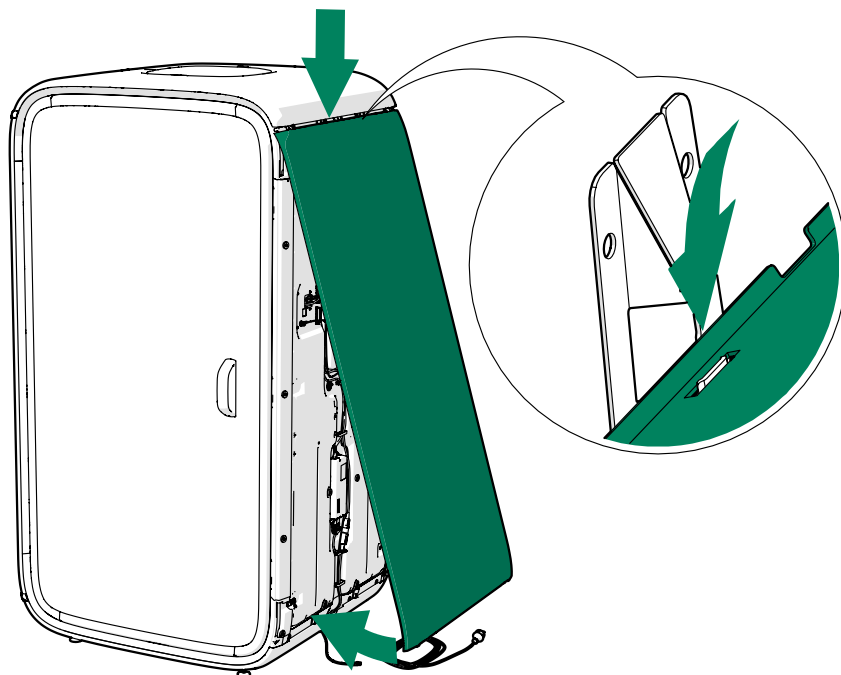

2. Install the plastic trims.

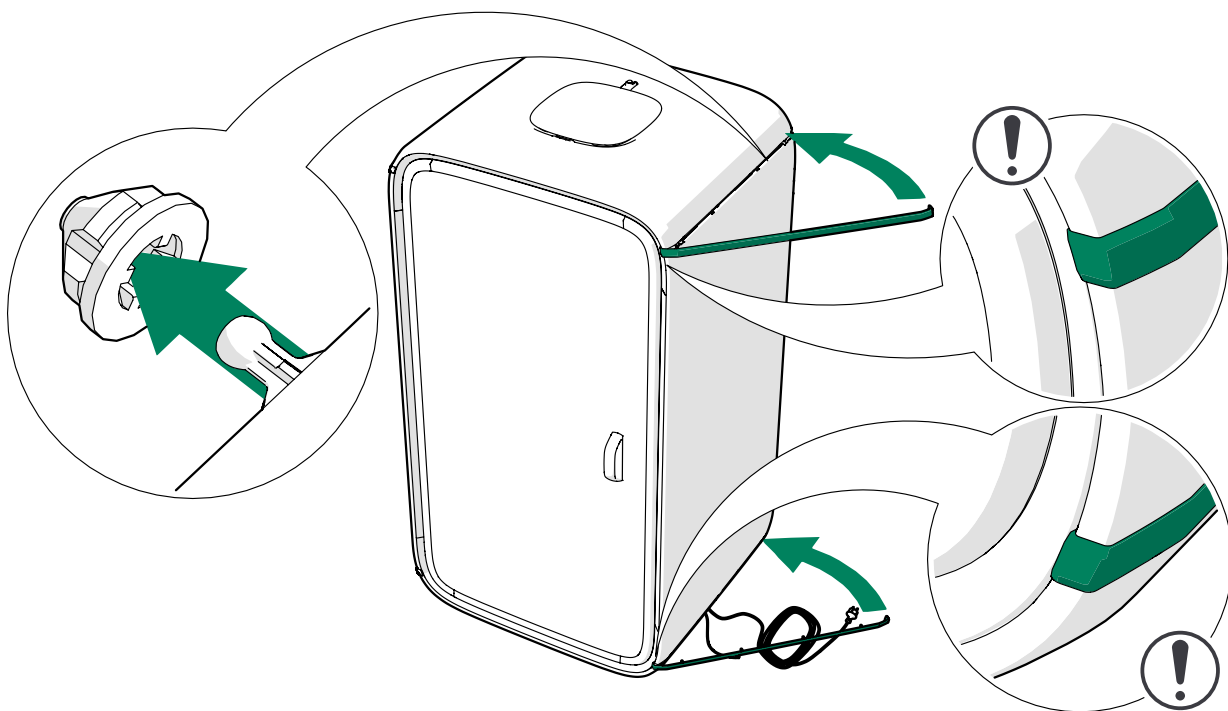

## 10 Connect the power cord

Connect the power cord to a power outlet.

If equipped with the optional LAN, also connect the LAN cord to an outlet.

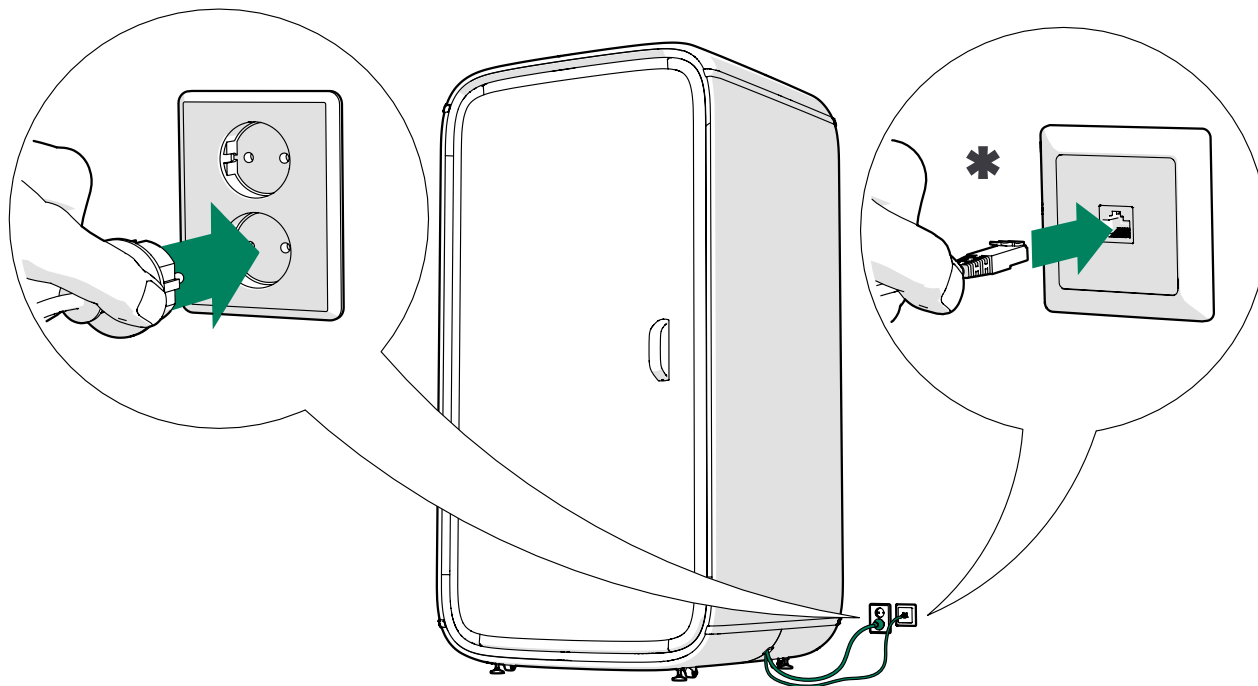


Figure 3: \* = Optional LAN cord





**framery**

Framery One  
Handle repair instructions  
Patamäenkatu 7  
33900 Tampere  
FINLAND  
VAT: FI 23527139