

Framery One
Maintenance instructions

English Version 1.0

Tampere, Finland 26.2.2021

Contents

	Important safety and product instructions	5
	1.1 Preface	
	1.2 Product information	
	1.3 Copyright	
	1.4 Manual contents	
	1.5 Intended use	5
	1.5.1 Non-conventional use	5
	1.5.2 Ambient conditions for use	6
	1.6 Warning, information and safety symbols in this manual	6
	1.7 Main safety risks related to the installation, maintenance, disassembly and	
	use of the product	7
	1.7.1 Installation, maintenance and disassembly	7
	1.7.2 Electrical safety	7
	1.7.3 Fire safety	8
	1.7.4 Use	
	1.7.5 Moving the product on wheels (optional)	10
	1.7.6 Radio frequency	10
	1.8 Location of product markings	12
2	Tools and accessories	14
3	Disconnect the power cord	15
4	Inspect the mechanical components	16
	4.1 Tighten all the screws	
	4.2 Check the positioning and sturdiness of the pod	
	4.3 Check that the floor of the pod is level	23
	4.4 Check the functionality of the door	25
5	Poplace the activated earbon filter	27
5	Replace the activated carbon filter	27
	Inspect the electrical components	30
	Inspect the electrical components	30 30
	Inspect the electrical components	30 30
	Inspect the electrical components 6.1 Check all the electrical connections 6.1.1 Check the connections in the wall 6.1.2 Check the connections under the table	30 30 35
	Inspect the electrical components	30 30 35 37
	Inspect the electrical components 6.1 Check all the electrical connections 6.1.1 Check the connections in the wall 6.1.2 Check the connections under the table 6.2 Connect the power cord 6.3 Check the functionality of electrical components	30 30 35 37
	Inspect the electrical components	30 30 35 37

1 Important safety and product instructions

1.1 Preface

This instruction manual describes the maintenance of the product. Everyone involved in the maintenance of the product must read and understand the contents of the maintenance and safety instructions.

This instruction manual gives you necessary information for the correct maintenance.

1.2 Product information

The information in this manual corresponds to the product at the time of delivery. All information included in this manual is valid at the time of publication.

1.3 Copyright

This document must not be copied, presented, or delivered to a third party without explicit permission from Framery. The use of this document for any purpose other than those allowed by Framery is prohibited. Framery reserves the right to change the instructions related to the product without separate notice.

1.4 Manual contents

The maintenance instructions contain the following information:

- General information about the purpose and content of the instructions
- Information related to safety
- · Maintenance instructions

1.5 Intended use

The Framery One is a pod intended for short term indoor commercial and household use by one (1) person at a time.



Warning:

WARNING -To reduce the risk of burns, fire, electric shock, or injury to persons:

Use this product only for its intended use as described in the user instructions. Do not use attachments not recommended by the manufacturer.

1.5.1 Non-conventional use

Any use or maintenance of the product that is not specifically allowed in the installation, maintenance, troubleshooting or user instructions is prohibited, including the following:

- Installation, maintenance or disassembly of the pod without reading and understanding the instructions for those actions
- Use of the pod beyond the limits of use



- Making alterations to the pod
- Using the pod in spite of obvious defects or damage
- Using the pod outdoors or in conditions where the temperature or air quality is not safe
- · Climbing on top of the product or placing any load on the roof of the product
- · Smoking in the pod

1.5.2 Ambient conditions for use

The pod is intended to be used in the following conditions:

- Ambient temperature: +15°C ... +30°C (59°F ... 86°F)
- Humidity: max. 50%
- · Sufficient air quality surrounding the product

1.6 Warning, information and safety symbols in this manual

The warnings in this manual have been divided into the following two categories:

- The term "DANGER" indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- The term "WARNING" indicates a hazardous situation which, if not avoided, could result in death or injury.

The safety symbols found in this manual may also be posted on the product. All personnel who install, disassemble, perform maintenance or use the product are to be familiar with and observe all safety symbols, labels, and instructions about the action they are performing.

Table 1: Hazard



An exclamation point symbol inside a colored triangle indicates a hazardous situation.



Table 2: Mandatory action



A white symbol inside a colored circle indicates an action that must be taken to avoid a hazardous situation.

Table 3: Prohibited action



A ring with a diagonal bar indicates an action that is not allowed.



1.7 Main safety risks related to the installation, maintenance, disassembly and use of the product

1.7.1 Installation, maintenance and disassembly



WARNING!

To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:



Use cut resistant safety gloves during the installation, maintenance or disassembly of the product.



Use steel toed safety boots during the installation, maintenance or disassembly of the product.



Read and understand the instructions and plan your work beforehand.



Obey all local rules and regulations regarding workplace safety.



Keep the work site tidy and free from debris throughout the installation, maintenance or disassembly process.



Do not climb on top of the product or place any load on the roof of the product.



Do not move the finished product by pushing if the optional wheels are not engaged.

The product is very heavy. Moving the product after installation without engaging the optional wheels is not allowed.

1.7.2 Electrical safety

Input for the electrical system: 100-240 VAC (10 A) 50-60 Hz

The maximum load for the electrical system is 6.6 A.



DANGER!

To reduce the risk electric shock, obey the following:



Disconnect the power cord from the power outlet before starting any cleaning, maintenance or disassembly procedures.

The power cord serves as a power disconnect device for pluggable equipment. The power outlet shall be located near the equipment and shall be easily accessible.



WARNING!

To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:



Connect the power cord to a properly grounded outlet only.



Keep the power cord of the product away from heated surfaces.



Do not use the pod if you notice any defects or damage to the electrical equipment.



Do not connect any extension cords to the power outlet(s) of the product.

1.7.3 Fire safety



WARNING!

To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:



If safely possible to perform, disconnect the power cord from the power outlet if there is a fire inside the product.

The power cord serves as a power disconnect device for pluggable equipment. The power outlet shall be located near the equipment and shall be easily accessible.

Fire safety end devices (alarms, sprinklers etc.) can also be installed inside the pods (instructions available upon request). The need for end devices inside the pod is always determined by the applicable local authorities.

1.7.4 Use



Warning:

WARNING –To reduce the risk of burns, fire, electric shock, or injury to persons:

If the product is anticipated to be used in places where children under the age of 8 and people with cognitive disabilities are present, use must be supervised at all times.



The maximum load for the Framery One adjustable table is 50 kg (110 lbs)

The maximum load for the Framery One chair is 136 kg (300 lbs)

L	!	

WARNING!

To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:



Read and understand the user instructions before using the product.



Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.



Keep children away from extended foot support (or other similar parts).



Risk of injury! Keep hands and other body parts clear of the side edges of the table when raising or lowering the electrically adjustable table top. This applies to all Framery pods with an electric adjustable table.



Do not use the product if the surrounding conditions are in any way hazardous; the air circulating inside the pod is derived from the surrounding space.



Do not use the product if the ventilation is not functioning.



Do not use the product if the ventilation channels are blocked. Keep the ventilation channels free of lint, hair, and the like.



Do not use the pod if you notice any defects in the electrical equipment or if the product is not working properly. Disconnect the power cord from the power outlet and contact your local dealer or the manufacturer immediately.




Do not drop or insert any object into any opening if not specifically instructed to do so in this manual.



Do not use outdoors.



Do not use where aerosol (spray) products are being used or where oxygen is being administered.

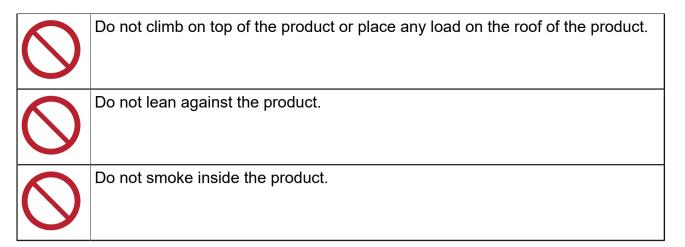

1.7.5 Moving the product on wheels (optional)



WARNING!

The product is very heavy. Moving the product on the wheels requires planning and care. Make sure the product cannot tip over while moving.



Only move the product on even surfaces: no cracks or thresholds over 3 mm (1/8 in) on the intended route.



When moving the product, only push below the vertical middle. Do not tow the product.



Do not enter the product if it is standing on the wheels. It is only allowed to use the wheels for moving the product. Return the full weight of the product onto the leveling feet immediately after relocation and level the floor.


1.7.6 Radio frequency

- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Note: Any changes or modifications not expressly approved by Framery Oy could void the user's authority to operate the equipment.




The Control Unit of this Framery Phone Booth is a portable device per FCC 2.093. The FCC labelling and compliance information is electronically available on Control Unit display. The Control Unit is exclusively for use in Framery Phone Booth and not to be integrated to any other device.


The regulatory information can be accessed from the control panel:

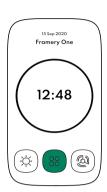



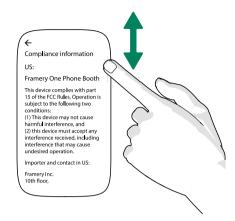

1.8 Location of product markings

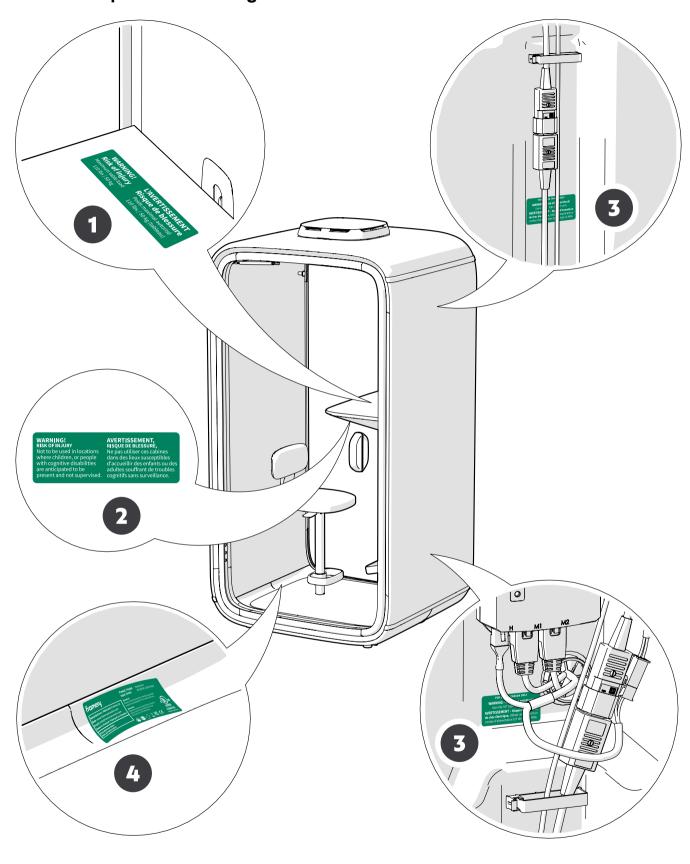

Position	Label	Label text		
1.	WARNING! Risk of injury Maximum table load 110 lbs / 50 kg L'AVERTISSEMENT Risque de blessure Poids maximal autorisé 110 lbs / 50 kg (tableau)	WARNING! Risk of injury		
		Maximum table load 110 lbs / 50 kg		
		L'AVERTISSEMENT Risque de blessure		
		Poids maximal autorisé 110 lbs / 50 kg (tableau)		
2.	WARNING! RISK OF INJURY Not to be used in locations where children, or people with cognitive disabilities are anticipated to be present and not supervised. AVERTISSEMENT, RISQUE DE BLESSURE, Ne pas utiliser ces cabines dans des lieux susceptibles d'accueillir des enfants ou des adultes souffrant de troubles cognitifs sans surveillance.	WARNING! RISK OF INJURY		
		Not to be used in locations where children, or people with cognitive disabilities are anticipated to be present and not supervised.		
		AVERTISSEMENT, RISQUE DE BLESSURE,		
		Ne pas utiliser ces cabines dans des lieux susceptibles d'accueillir des ensfants ou des adultes souffrant de troubles cognitifs sans surveillance.		
3.	FOR US AND CANADA ONLY WARNING — Risk of fire and shock! Use only SJT type 16 AWG cord. AVERTISSEMENT — Risque d'incendie et de choc électrique, Utiliser uniquement un cordon d'alimentation SJT de type 16 AWG.	FOR US AND CANADA ONLY		
		WARNING - Risk of fire and shock!		
		Use only SJT type 16 AWG cord.		
		AVERTISSEMENT - Risque d'incendie et de choc électrique, Utiliser uniquement un cordon d'alimentation SJT de type 16 AWG.		
4.	Froduct / Produit Framery One Input / Entrée 100-240 VAC (10A) 50-60Hz Manufacturer / Fabricant: Framery On Attention / Manufacturer of Fabrication Manufacture date / Manufacture date / Date de fabrication Manufacture date / Date date / Date date / Date date / Date de fabrication Manufacture date / Date date / Date date / Date date / Date de fabrication Manufacture date / Date de fabrication Manufacture date / Date date /	Framery		
		Manufacturer / Fabricant: Framery Oy		
		WEB: www.frameryacoustics.com		
		Email: info@frameryacoustics.com		
		Made in Finland / Fabriqué en Finlande		
		Manufacture date / Date de fabrication		
		Product / Produit Framery One		
		Input / Entrée 100-240 VAC (10 A) 50-60 HZ		
		Attention! Always connect the product correctly to a grounded socket to avoid danger for fire or electrical shocks.		
		Attention! Branchez toujours le produit dans une prise reliée à la terre pour éviter tout risque d'incendie ou choc électrique.		

SAVE THESE INSTRUCTIONS

2 Tools and accessories

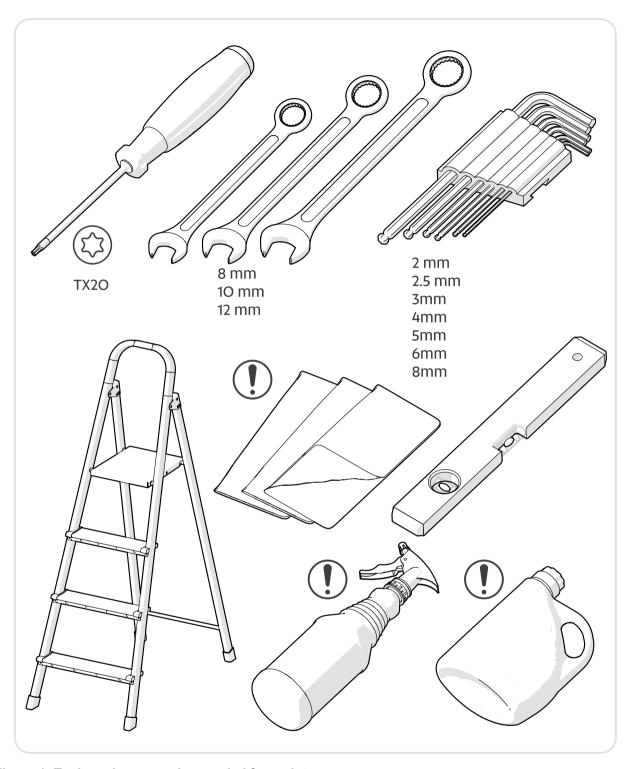


Figure 1: Tools and accessories needed for maintenance

Note: Use a lint-free cloth to clean the pod.

• Note: Use glass washing liquid to clean the glasses.

Note: Use a mild alcohol-based cleaning solution to clean the pod.

3 Disconnect the power cord

A

DANGER: Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

Remove the plug from the power outlet.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.


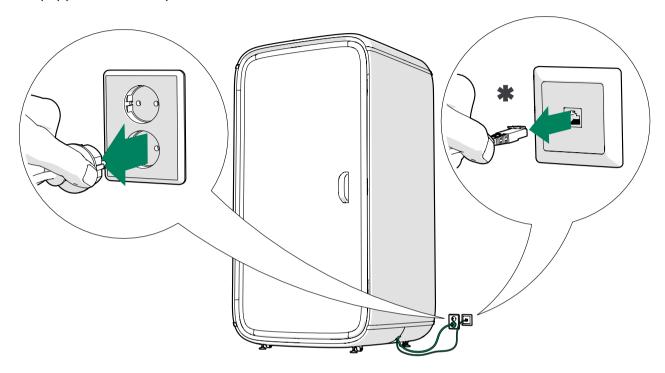


Figure 2: * = Optional LAN cord


4 Inspect the mechanical components

4.1 Tighten all the screws


1. Tighten the screws on the door handle.

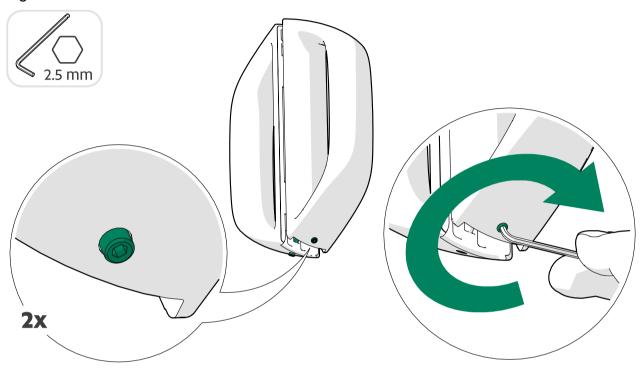


2. Remove the carpet.

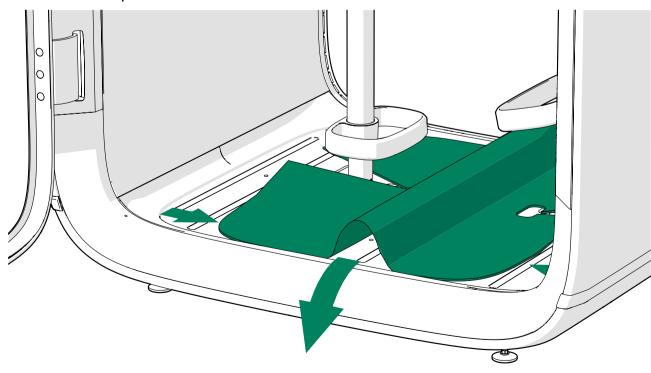


3. Tighten the screws on the base of the chair.

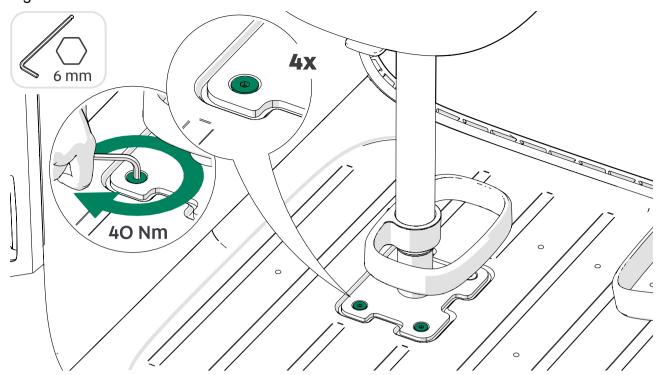


4. Tighten the screws on the chair leg.

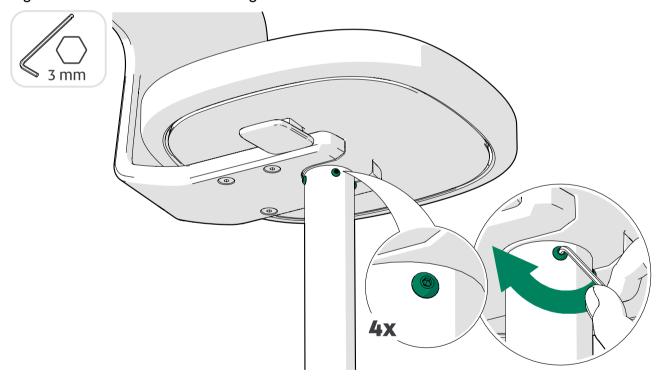


5. Tighten the screws on the base of the footrest.

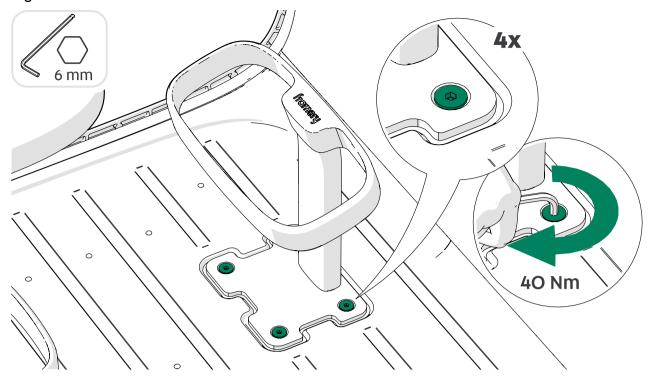

6. Tighten the screw on the footrest.

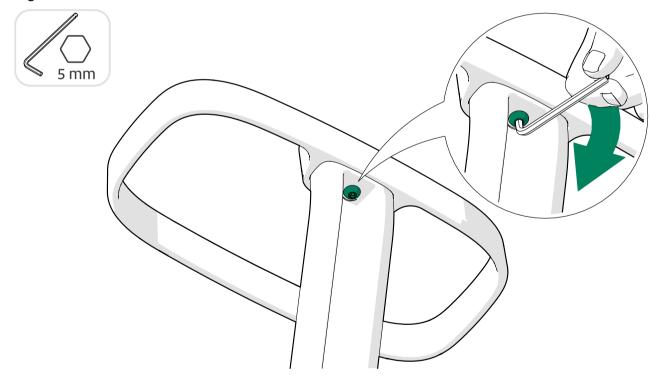

7. Remove the table cover felt.

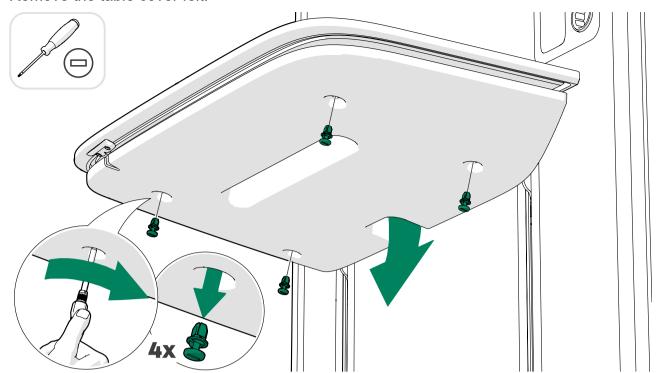

8. Tighten the screws under the table.

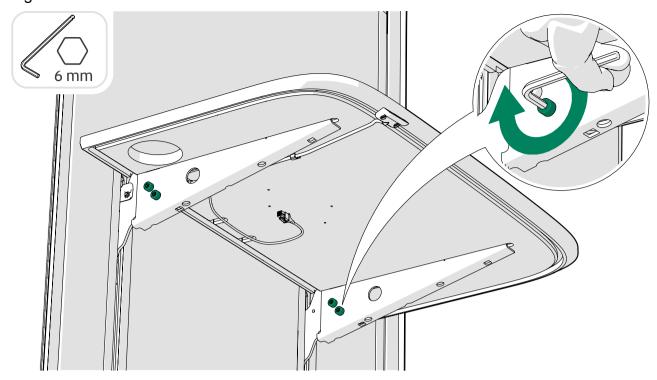


Figure 3: Without the optional wireless charger



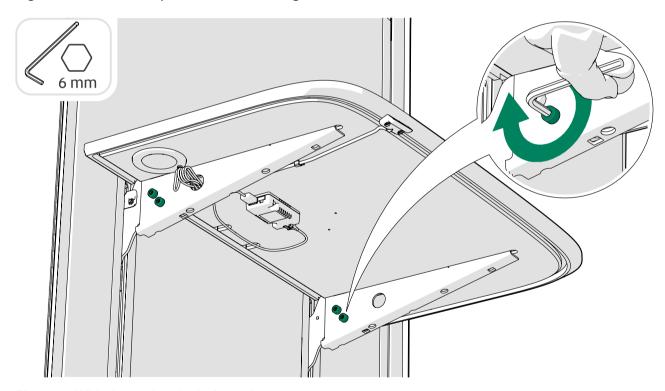


Figure 4: With the optional wireless charger


9. Install the table cover felt.

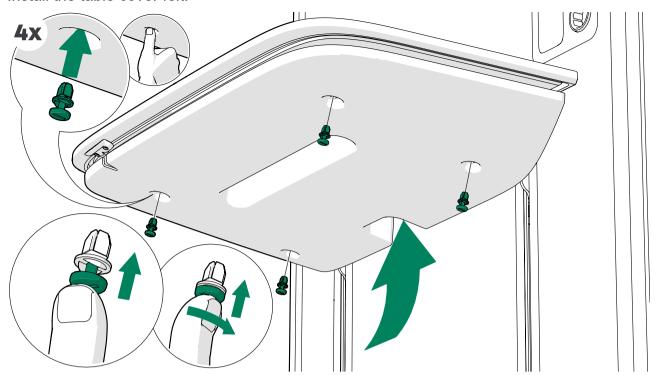

10. Tighten the screw on the coat hook.

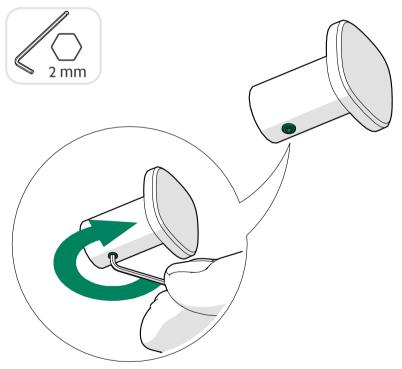


11. Install the carpet.

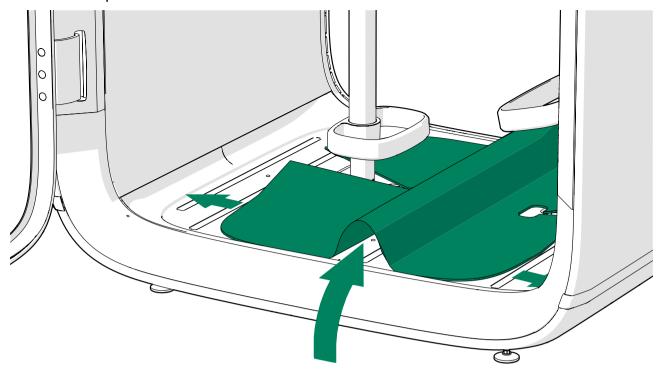


4.2 Check the positioning and sturdiness of the pod

1. Check that there is enough space around and above the pod for air to circulate.

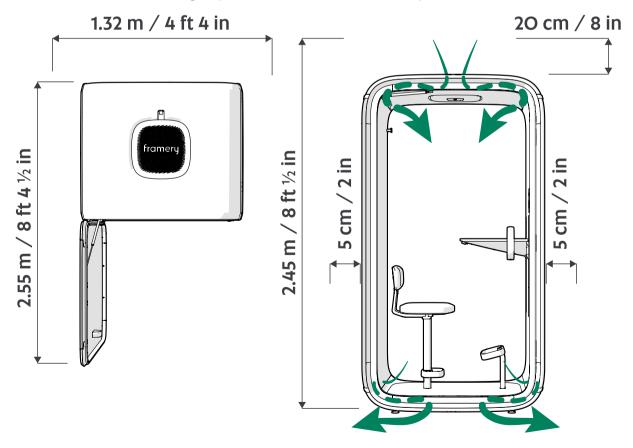

- 2. Check that the pod feels sturdy and is standing on the leveling feet.
 - Note: If the pod is equipped with the optional wheels, make sure that the leveling feet are past the wheels and lightly touching the floor. The leveling feet are against the floor when you feel resistance.

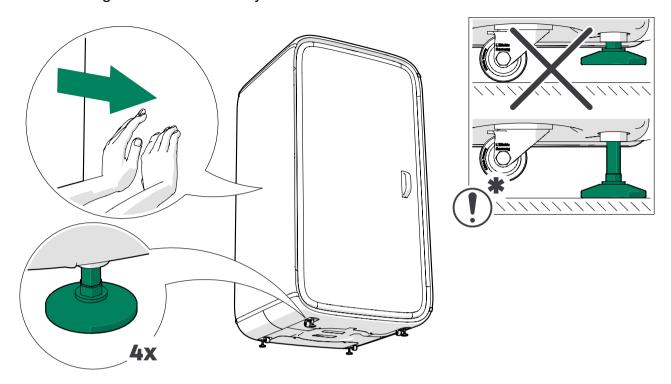

4.3 Check that the floor of the pod is level

1. Remove the carpet.

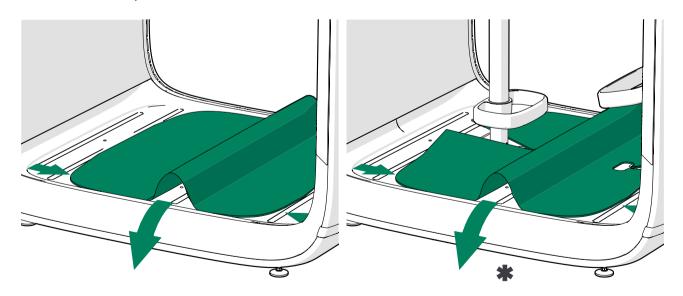


Figure 5: * = With optional chair and footrest

- **2.** Measure the floor with a spirit level at four measuring points:
 - Along both sides
 - · Along the glass wall
 - · Along the front of the pod


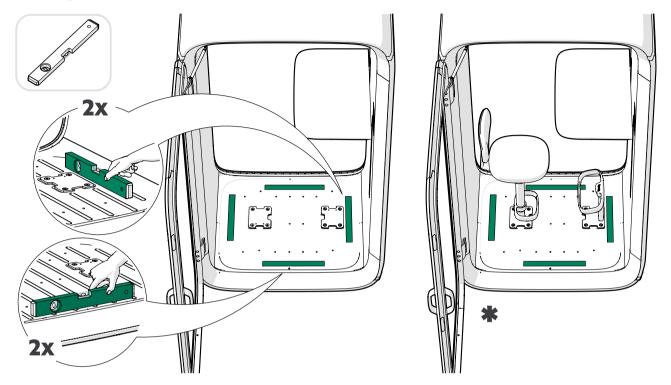


Figure 6: * = With optional chair and footrest

3. If needed, level the floor of the pod.

Measure the opposite points with a spirit level repeatedly and adjust the leveling feet gradually.

Note: If the pod is equipped with the optional wheels, only screw the leveling feet outward, to make sure that they all stay past the wheels

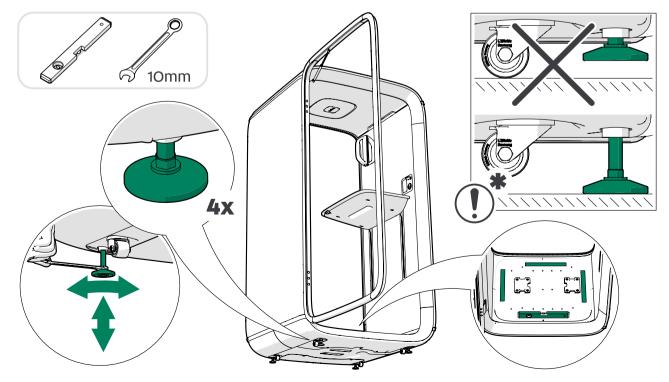

4. Install the carpet.


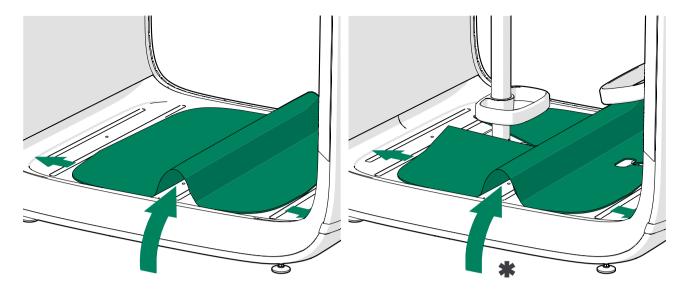



Figure 7: * = With optional chair and footrest

4.4 Check the functionality of the door

1. Check that the door opens and closes properly and that the gas spring works normally.

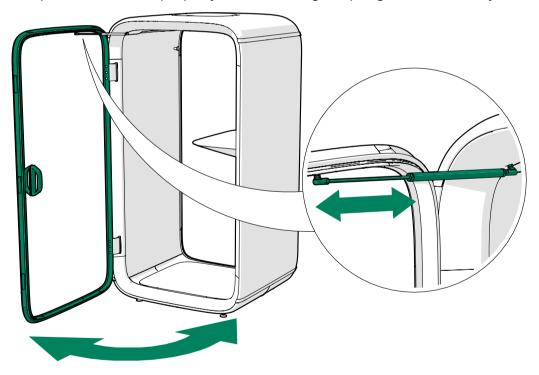


2. Check that the door seals properly.

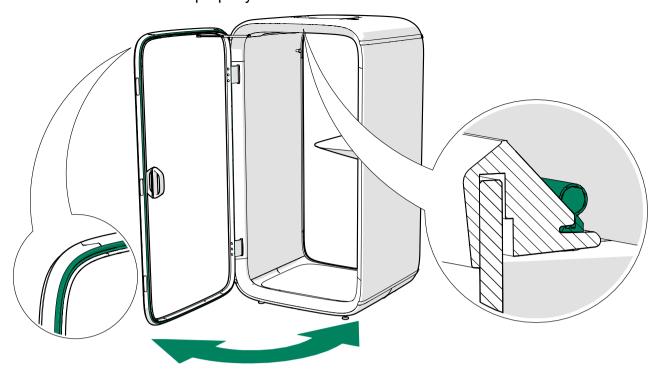


5 Replace the activated carbon filter

Note: The activated carbon filter is optional.


1. Remove the fan cover with the activated carbon filter.

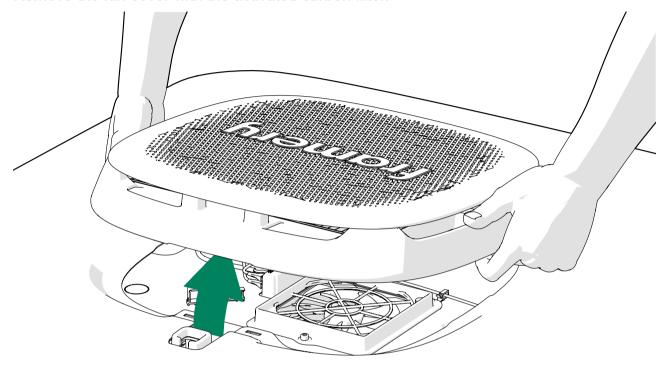


2. Remove the fan cover.

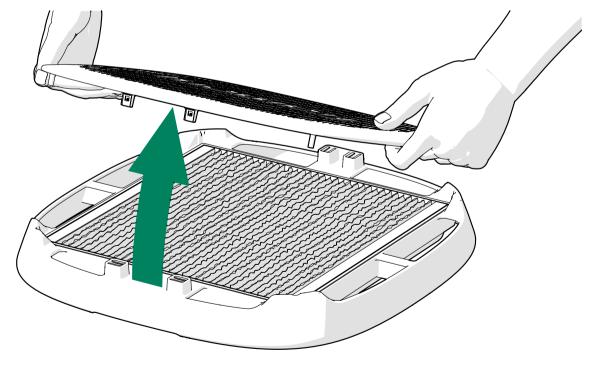


3. Remove the old filter.

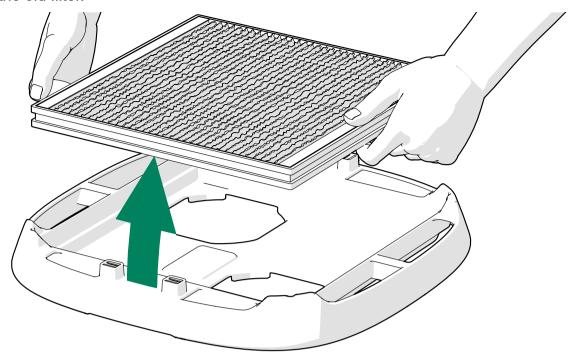


4. Install the new filter.

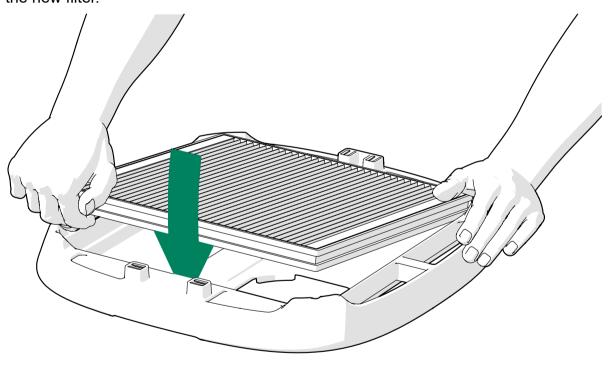

5. Install the fan cover.

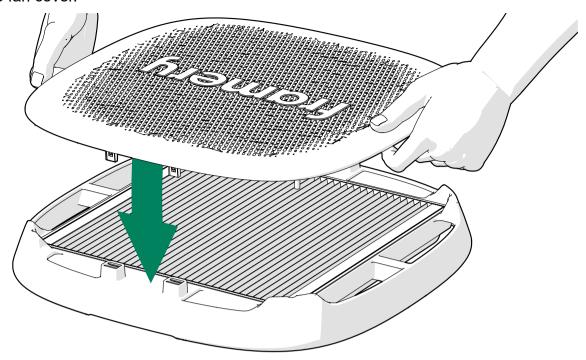

6. Install the fan cover with the activated carbon filter onto the roof.

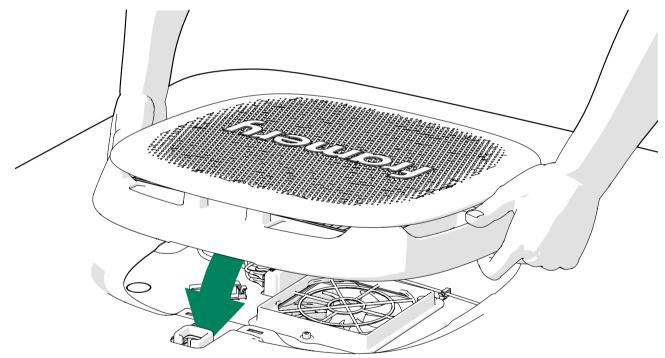


6 Inspect the electrical components


6.1 Check all the electrical connections

6.1.1 Check the connections in the wall

1. Remove the plastic trims from the techwall.

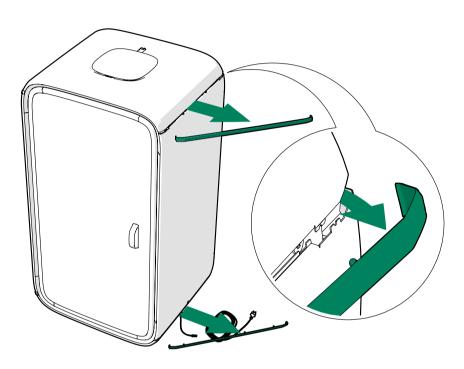

2. Remove the wall body cover from the techwall.

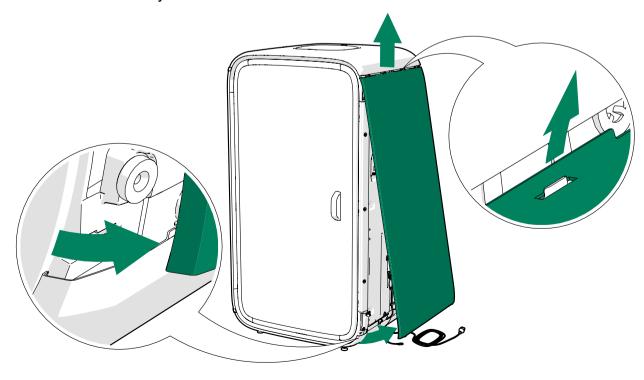

3. Check that the connections at the table control unit are secure.

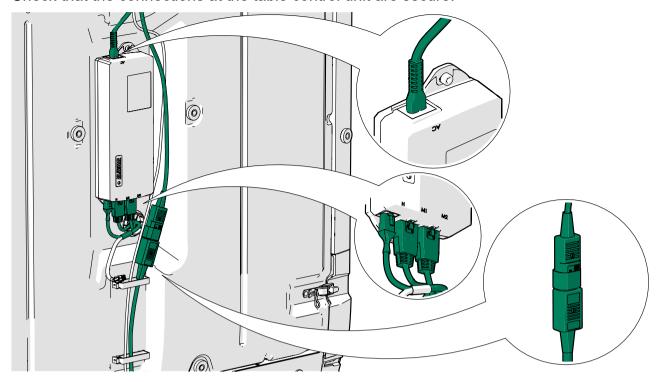


Figure 8: Without the optional wireless charger

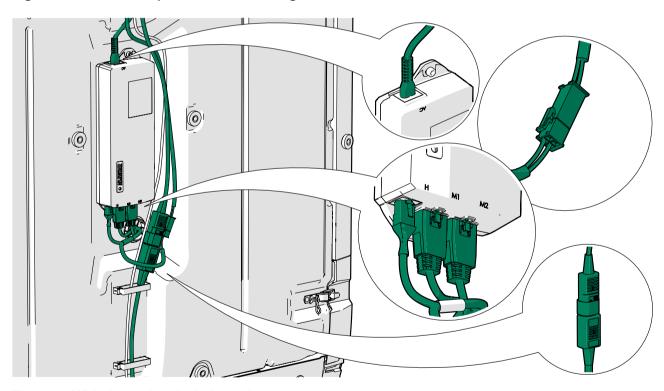


Figure 9: With the optional wireless charger

4. Remove the screws from the power unit cover and open the cover.

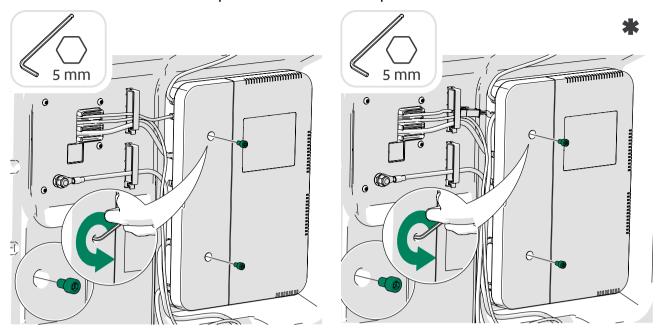


Figure 10: * = With the optional wireless charger

5. Check that the connections in the power unit are secure.

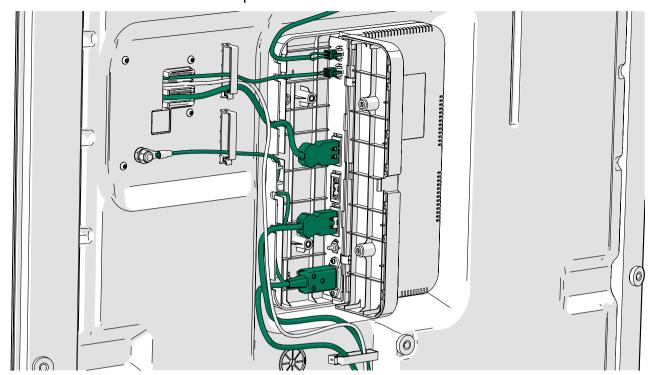


Figure 11: Without the optional wireless charger

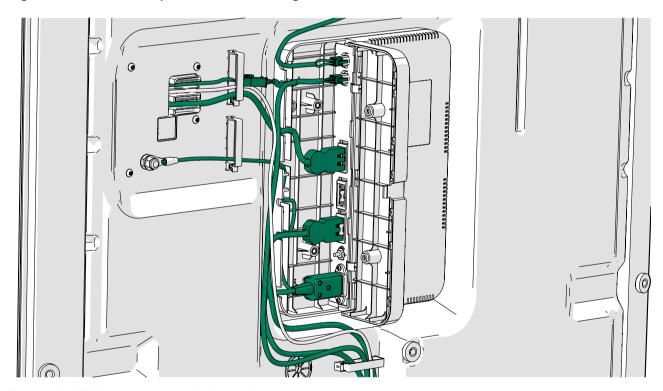


Figure 12: With the optional wireless charger

6. Close the power unit cover and secure it with the previously removed screws.



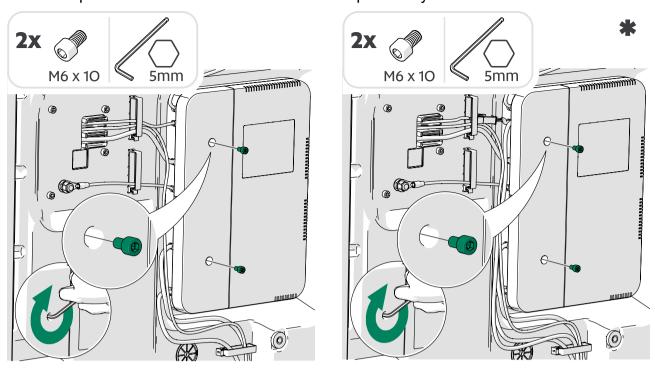


Figure 13: * = With the optional wireless charger

7. Install the wall body cover.

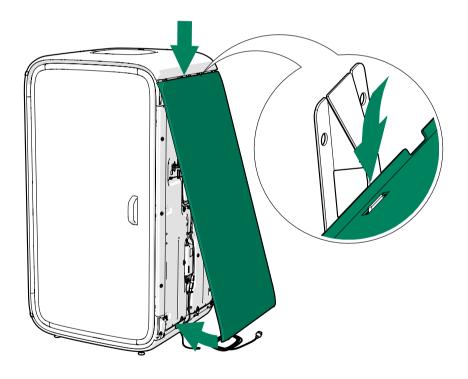


- 8. Install the plastic trims.
 - **Note:** Make sure that you install the plastic trims the correct way around.

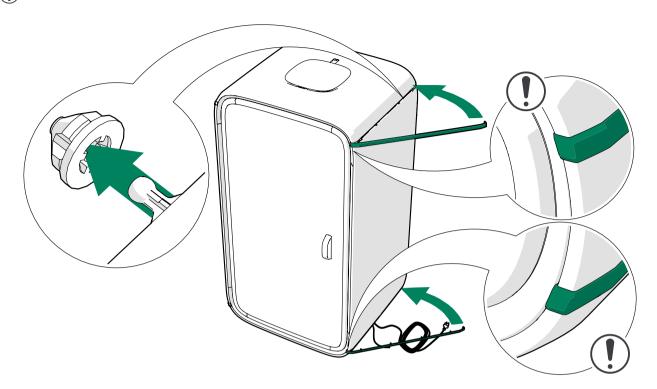

6.1.2 Check the connections under the table

1. Remove the table cover felt.

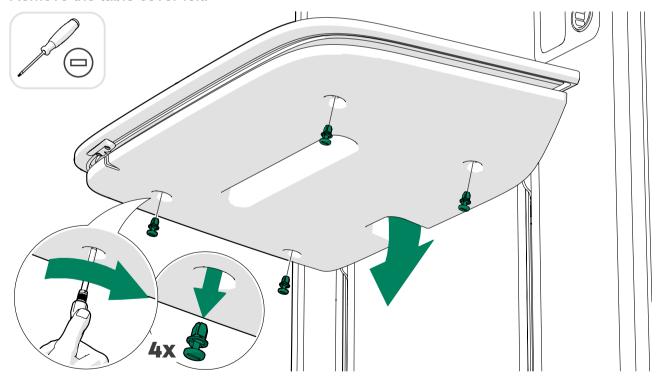

35

2. Check that the connections are secure.

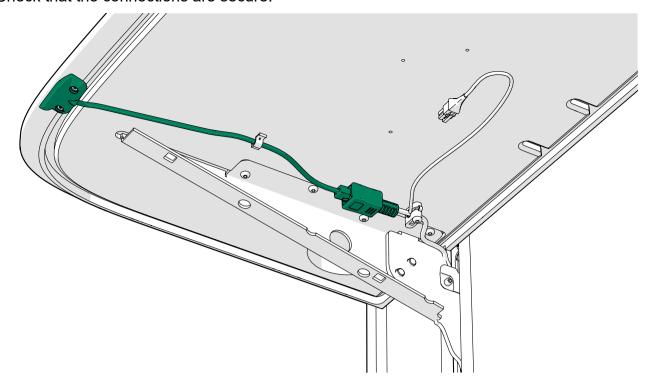


Figure 14: Without the optional wireless charger


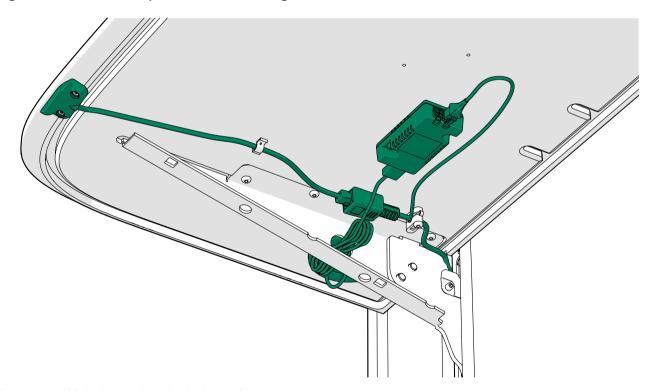


Figure 15: With the optional wireless charger

3. Install the table cover felt.

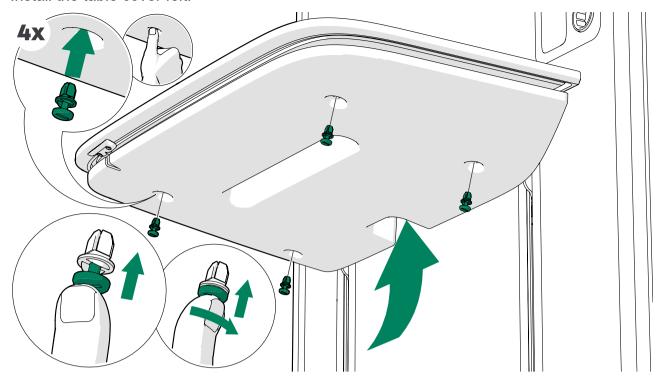

6.2 Connect the power cord

Connect the power cord to a power outlet.

If equipped with the optional LAN, also connect the LAN cord to an outlet.


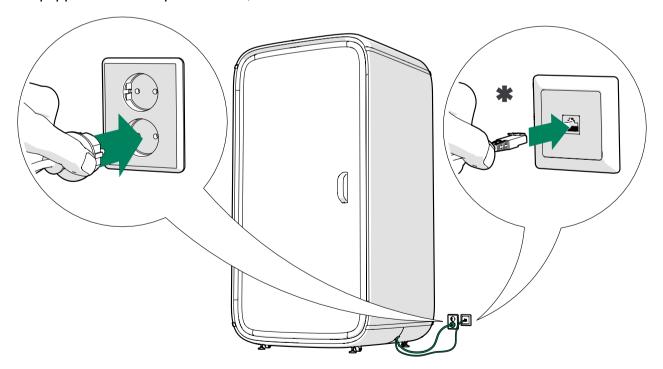


Figure 16: * = Optional LAN cord


6.3 Check the functionality of electrical components

1. If the pod is equipped with a wireless charger, place a device (compatible with wireless charging) on top of the wireless charger sticker on the table top to check that wireless charging works.

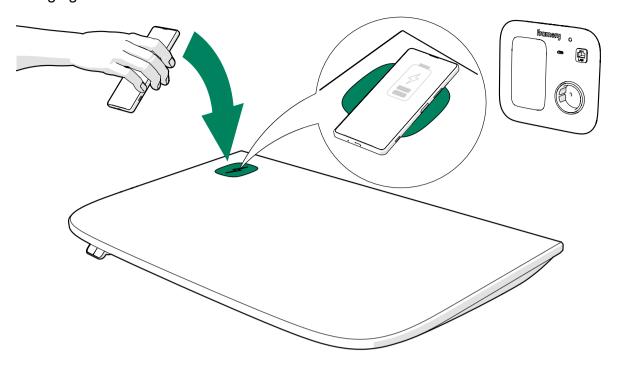


Connect a device to the power outlet and USB-C connector to check that the power outlet and USB-C connector work.

If the pod is equipped with the optional LAN, also check the functionality of the LAN connector.

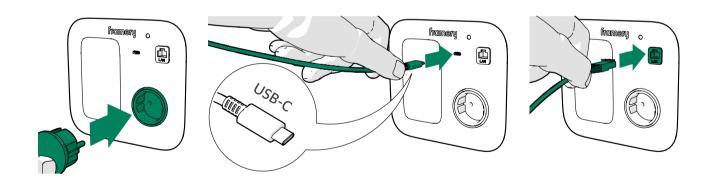


3. Press the buttons on the table handset one at a time to check that the table moves up and down.

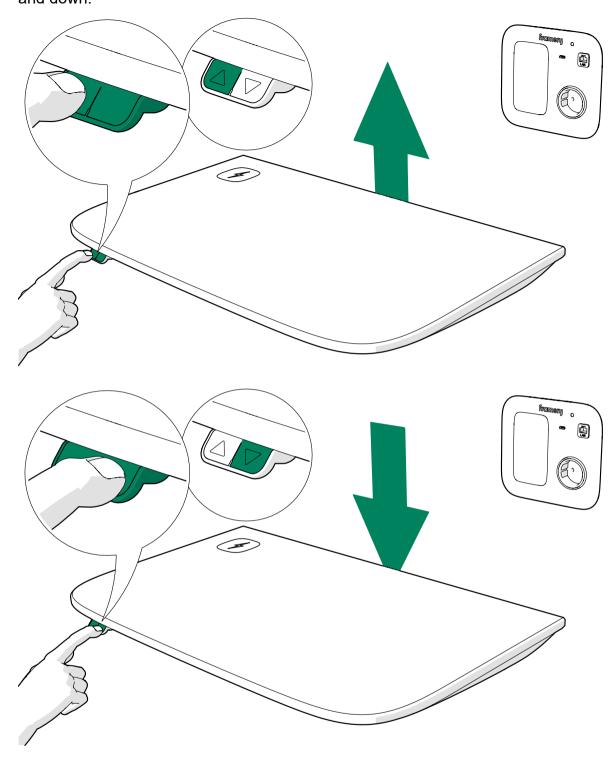


6.4 Check the functionality of the control panel

39


1. Check that the menu opens when pressing the menu icon.

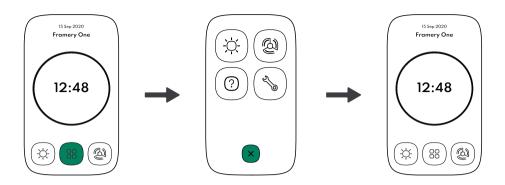

2. Check that the brightness of the light changes when sliding the level line.

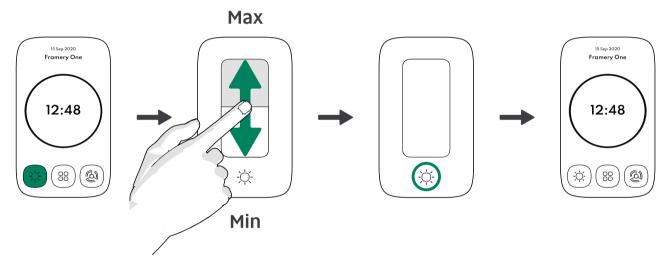

3. Check that the level of ventilation changes when sliding the level line.

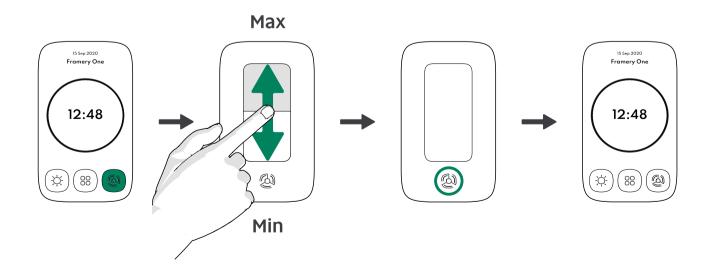

7 Clean the pod

1. Clean the carpet with a vacuum cleaner.



- 2. Wipe the furniture with mild alcohol-based cleaning solution and a lint-free cloth.
 - Note: Do not use cleaning solution on the oak veneer table top! Only use a damp cloth for cleaning the oak veneer table top.



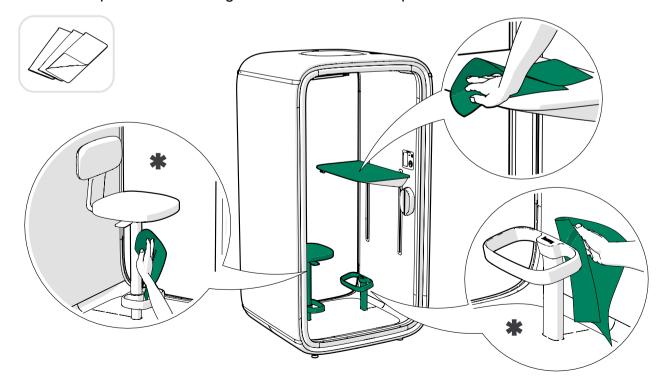


Figure 17: * = The chair and footrest are optional.

3. Clean the outer surfaces with mild alcohol-based cleaning solution and a lint-free cloth.

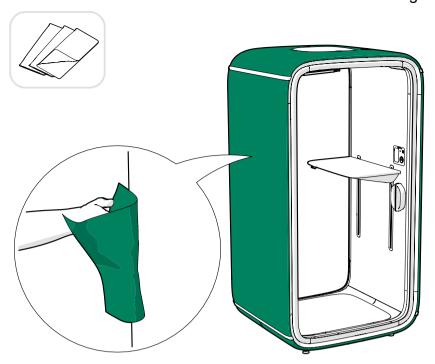

4. Clean the glasses with glass washing liquid and a lint-free cloth.

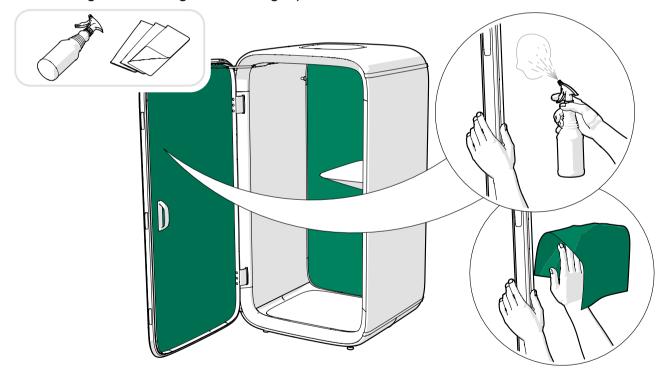

framery

Framery One Maintenance instructions Patamäenkatu 7 33900 Tampere FINLAND

VAT: FI 23527139