


# framery

SERIOUS ABOUT HAPPINESS

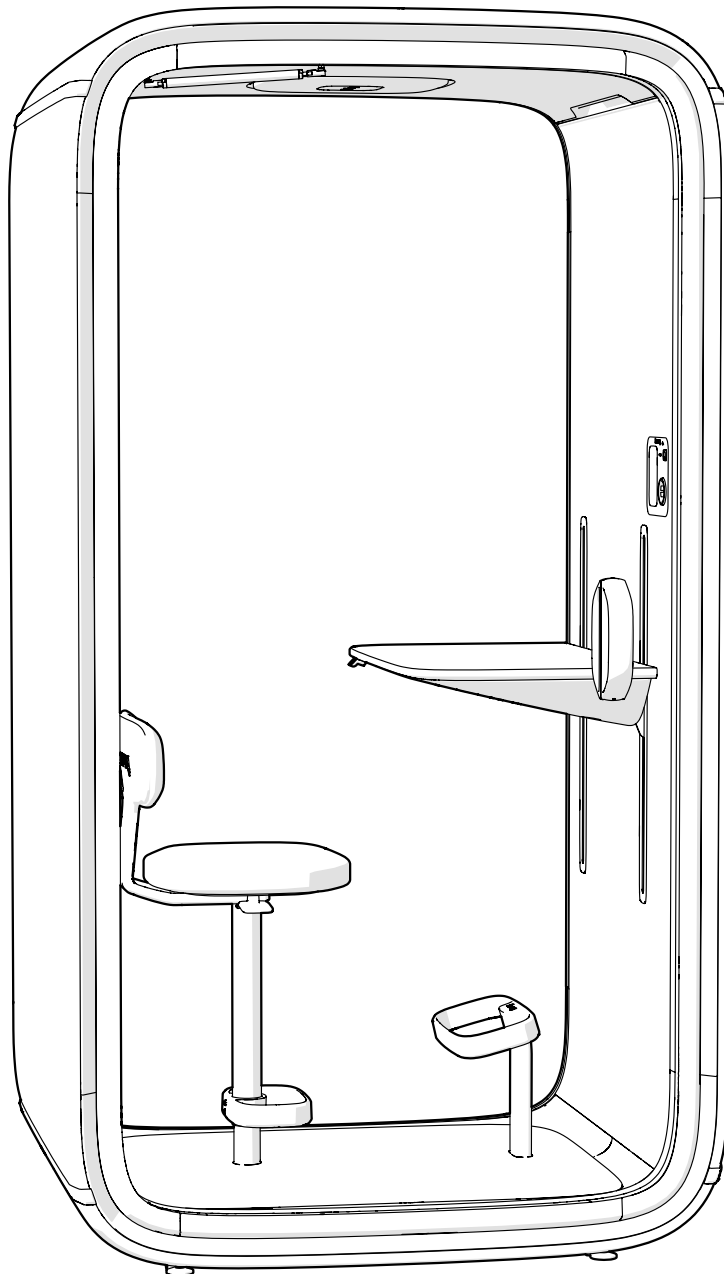

Framery One  
Part replacement

English  
Version 1.1  
Tampere, Finland 27.10.2021





# Contents

<b>1 Important safety and product instructions.....</b>	<b>5</b>
1.1 Preface.....	5
1.2 Product information.....	5
1.3 Copyright.....	5
1.4 Manual contents.....	5
1.5 Intended use.....	5
1.5.1 Non-conventional use.....	5
1.5.2 Ambient conditions for use.....	6
1.6 Warning, information, and safety symbols in this manual.....	6
1.7 Main safety risks related to the installation, maintenance, disassembly, and use of the product.....	7
1.7.1 Installation, maintenance, and disassembly.....	7
1.7.2 Electrical safety.....	7
1.7.3 Fire safety.....	8
1.7.4 Lifting safety.....	9
1.7.5 Use.....	9
1.7.6 Radio frequency.....	11
1.8 Location of product markings.....	12
<b>2 Replace the glass wall.....</b>	<b>15</b>
<b>3 Replace the front frame and door.....</b>	<b>25</b>
3.1 Replace the front frame with the door.....	25
3.1.1 Disassemble the necessary parts (front frame with the door replacement).....	25
3.1.2 Install the removed parts (front frame with the door replacement).....	32
3.2 Replace the door handles.....	36
<b>4 Replace the electrical components.....</b>	<b>38</b>
4.1 Replace the ceiling light with control hub.....	38
4.2 Replace the fans.....	42
4.3 Replace the control panel.....	46
4.4 Replace the occupancy indicator lights.....	55
<b>5 Replace the activated carbon filter.....</b>	<b>60</b>
<b>6 Replace the interior panels.....</b>	<b>63</b>
6.1 Replace the ceiling panel.....	63
6.1.1 Disassemble the necessary parts (ceiling panel replacement).....	63
6.1.2 Install the removed parts (ceiling panel replacement).....	84
6.2 Replace the techwall panel.....	100
6.2.1 Disassemble the necessary parts (techwall panel).....	101
6.2.2 Install the removed parts (techwall panel).....	119
6.3 Replace the blank wall panel.....	134

6.3.1 Disassemble the necessary parts (blank wall panel).....	134
6.3.2 Install the removed parts (blank wall panel).....	143
<b>7 Replace the furniture.....</b>	<b>149</b>
7.1 Replace the table.....	149
7.1.1 Disassemble the necessary parts (table replacement).....	149
7.1.2 Install the removed parts (table replacement).....	155
7.2 Replace the chair and footrest.....	160

# 1 Important safety and product instructions

## 1.1 Preface

This instruction manual describes the maintenance of the product. Everyone involved in the maintenance of the product must read and understand the contents of the maintenance and safety instructions.

This instruction manual gives you necessary information for the correct maintenance.

## 1.2 Product information

The information in this manual corresponds to the product at the time of delivery. All information included in this manual is valid at the time of publication.

## 1.3 Copyright

This document must not be copied, presented, or delivered to a third party without explicit permission from Framery. The use of this document for any purpose other than those allowed by Framery is prohibited. Framery reserves the right to change the instructions related to the product without separate notice.

## 1.4 Manual contents

The part replacement instructions contain the following information:

- General information about the purpose and content of the instructions
- Information related to safety
- Instructions for the replacement of parts

## 1.5 Intended use

The Framery One is a pod intended for short term indoor commercial and household use by one (1) person at a time.



### **Warning:**

WARNING –To reduce the risk of burns, fire, electric shock, or injury to persons:

Use this product only for its intended use as described in the user instructions. Do not use attachments not recommended by the manufacturer.

### 1.5.1 Non-conventional use

Any use or maintenance of the product that is not specifically allowed in the installation, maintenance, troubleshooting or user instructions is prohibited, including the following:

- Installation, maintenance or disassembly of the pod without reading and understanding the instructions for those actions
- Use of the pod beyond the limits of use

- Making alterations to the pod
- Using the pod in spite of obvious defects or damage
- Using the pod outdoors or in conditions where the temperature or air quality is not safe
- Climbing on top of the product or placing any load on the roof of the product
- Smoking in the pod

### 1.5.2 Ambient conditions for use

The pod is intended to be used in the following conditions:

- Ambient temperature: +15°C ... +30°C (59°F ... 86°F)
- Humidity: max. 50%
- Sufficient air quality surrounding the product



## 1.6 Warning, information, and safety symbols in this manual

The warnings in this manual have been divided into the following two categories:


- The term "DANGER" indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- The term "WARNING" indicates a hazardous situation which, if not avoided, could result in death or injury.

The safety symbols found in this manual may also be posted on the product. All personnel who install, disassemble, perform maintenance, or use the product are to be familiar with and observe all safety symbols, labels, and instructions about the action they are performing.


**Table 1: Hazard**

	An exclamation point symbol inside a colored triangle indicates a hazardous situation.
	

**Table 2: Mandatory action**







	A white symbol inside a colored circle indicates an action that must be taken to avoid a hazardous situation.
---	---

**Table 3: Prohibited action**

	A ring with a diagonal bar indicates an action that is not allowed.
---	---

## 1.7 Main safety risks related to the installation, maintenance, disassembly, and use of the product

### 1.7.1 Installation, maintenance, and disassembly









	<p><b>WARNING!</b></p> <p>To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:</p>
	Use cut resistant safety gloves during the installation, maintenance, or disassembly of the product.
	Use steel toed safety boots during the installation, maintenance, or disassembly of the product.
	Read and understand the instructions and plan your work beforehand.
	Obey all local rules and regulations regarding workplace safety.
	Keep the work site tidy and free from debris throughout the installation, maintenance, or disassembly process.
	Do not climb on top of the product or place any load on the roof of the product.
	<p>If the optional casters are not engaged, do not move the finished product by pushing.</p> <p>The product is very heavy. Moving the product after installation without engaging the optional casters is not allowed.</p>

### 1.7.2 Electrical safety


Input for the electrical system: 100-240 VAC (10 A) 50-60 Hz


The maximum load for the electrical system is 6.6 A.

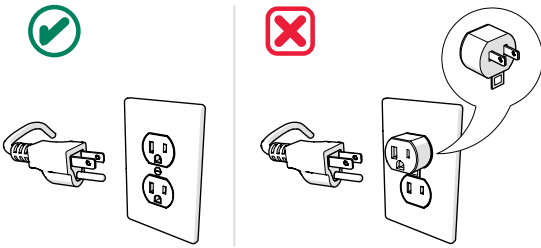	<p><b>DANGER!</b></p> <p>To reduce the risk electric shock, obey the following:</p>
---	---

	<p>Disconnect the power cord from the power outlet before starting any cleaning, maintenance, or disassembly procedures.</p> <p>The power cord serves as a power disconnect device for pluggable equipment. The power outlet shall be located near the equipment and shall be easily accessible.</p>
	<p><b>WARNING!</b></p> <p><b>To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:</b></p>
	<p>Connect the power cord to a properly grounded outlet only.</p>
	<p>This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in the figure below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.</p> <div data-bbox="336 898 879 1144">  </div>
	<p>Keep the power cord of the product away from heated surfaces.</p>
	<p>Do not use the pod if you notice any defects or damage to the electrical equipment.</p>
	<p>Do not connect any extension cords to the power outlet(s) of the product.</p>





### 1.7.3 Fire safety

	<p><b>WARNING!</b></p> <p><b>To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:</b></p>
---	---

	<p>If safely possible to perform, disconnect the power cord from the power outlet if there is a fire inside the product.</p> <p>The power cord serves as a power disconnect device for pluggable equipment. The power outlet shall be located near the equipment and shall be easily accessible.</p>
---	--

Fire safety end devices (alarms, sprinklers etc.) can also be installed inside the pods (instructions available upon request). The need for end devices inside the pod is always determined by the applicable local authorities.

#### 1.7.4 Lifting safety

	<p><b>WARNING!</b></p> <p><b>To reduce the risk of injury to persons and damage to property, obey the following:</b></p>
	<p>Obey all local rules and regulations regarding lifting ergonomics and lifting safety.</p>
	<p>Carefully plan all lifts before hand.</p>
	<p>Keep the work site tidy and free from debris.</p>

#### 1.7.5 Use





##### **Warning:**













**WARNING** –To reduce the risk of burns, fire, electric shock, or injury to persons:

If the product is anticipated to be used in places where children under the age of 8 and people with cognitive disabilities are present, use must be supervised at all times.



The maximum load for the Framery One adjustable table is 50 kg (110 lbs)

The maximum load for the Framery One chair is 136 kg (300 lbs)

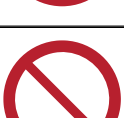	<p><b>WARNING!</b></p> <p><b>To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:</b></p>
	<p>Read and understand the user instructions before using the product.</p>

	<p>⚠ <b>Note:</b> The following statement applies to use in Japan.</p> <p>This equipment is not suitable for use in locations where children are likely to be present.</p>
	<p>⚠ <b>Note:</b> The following statements apply to use in all other countries.</p> <p>Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.</p> <p>Keep children away from extended foot support (or other similar parts).</p>
	<p>Risk of injury! Keep hands and other body parts clear of the side edges of the table when raising or lowering the electrically adjustable table top. This applies to all Framery pods with an electric adjustable table.</p>
	<p>Do not use the product if the surrounding conditions are in any way hazardous; the air circulating inside the pod is derived from the surrounding space.</p>
	<p>Do not use the product if the ventilation is not functioning.</p>
	<p>Do not use the product if the ventilation channels are blocked. Keep the ventilation channels free of lint, hair, and the like.</p>
	<p>Do not use the pod if you notice any defects in the electrical equipment or if the product is not working properly. Disconnect the power cord from the power outlet and contact your local dealer or the manufacturer immediately.</p>
	<p>Do not drop or insert any object into any opening if not specifically instructed to do so in this manual.</p>
	<p>Do not use outdoors.</p>
	<p>Do not use where aerosol (spray) products are being used or where oxygen is being administered.</p>
	<p>Do not climb on top of the product or place any load on the roof of the product.</p>
	<p>Do not lean against the product.</p>



	Do not smoke inside the product.
	Do not obstruct the view through the front and back glasses by posting signs, decorations, or by installing blinds or draperies that would prevent occupants from seeing the visible alarm appliances located in the structure where the pod is installed.

### 1.7.6 Radio frequency



**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.




**Note:** Any changes or modifications not expressly approved by Framery Oy could void the user's authority to operate the equipment.



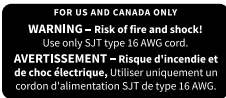
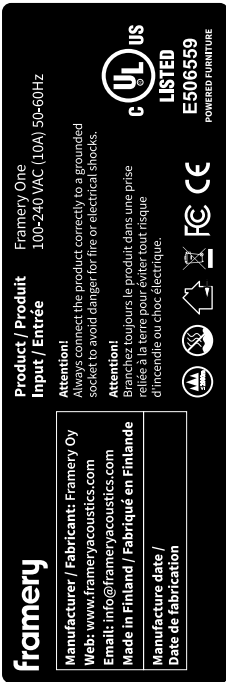
The Control Unit of this Framery Phone Booth is a portable device per FCC 2.093. The FCC labelling and compliance information is electronically available on Control Unit display. The Control Unit is exclusively for use in Framery Phone Booth and not to be integrated to any other device.


The regulatory information can be accessed from the control panel:

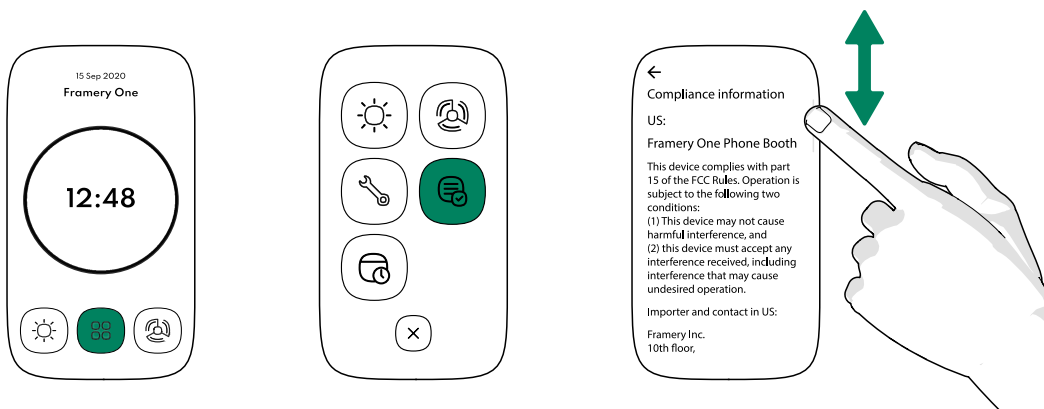

## 1.8 Location of product markings

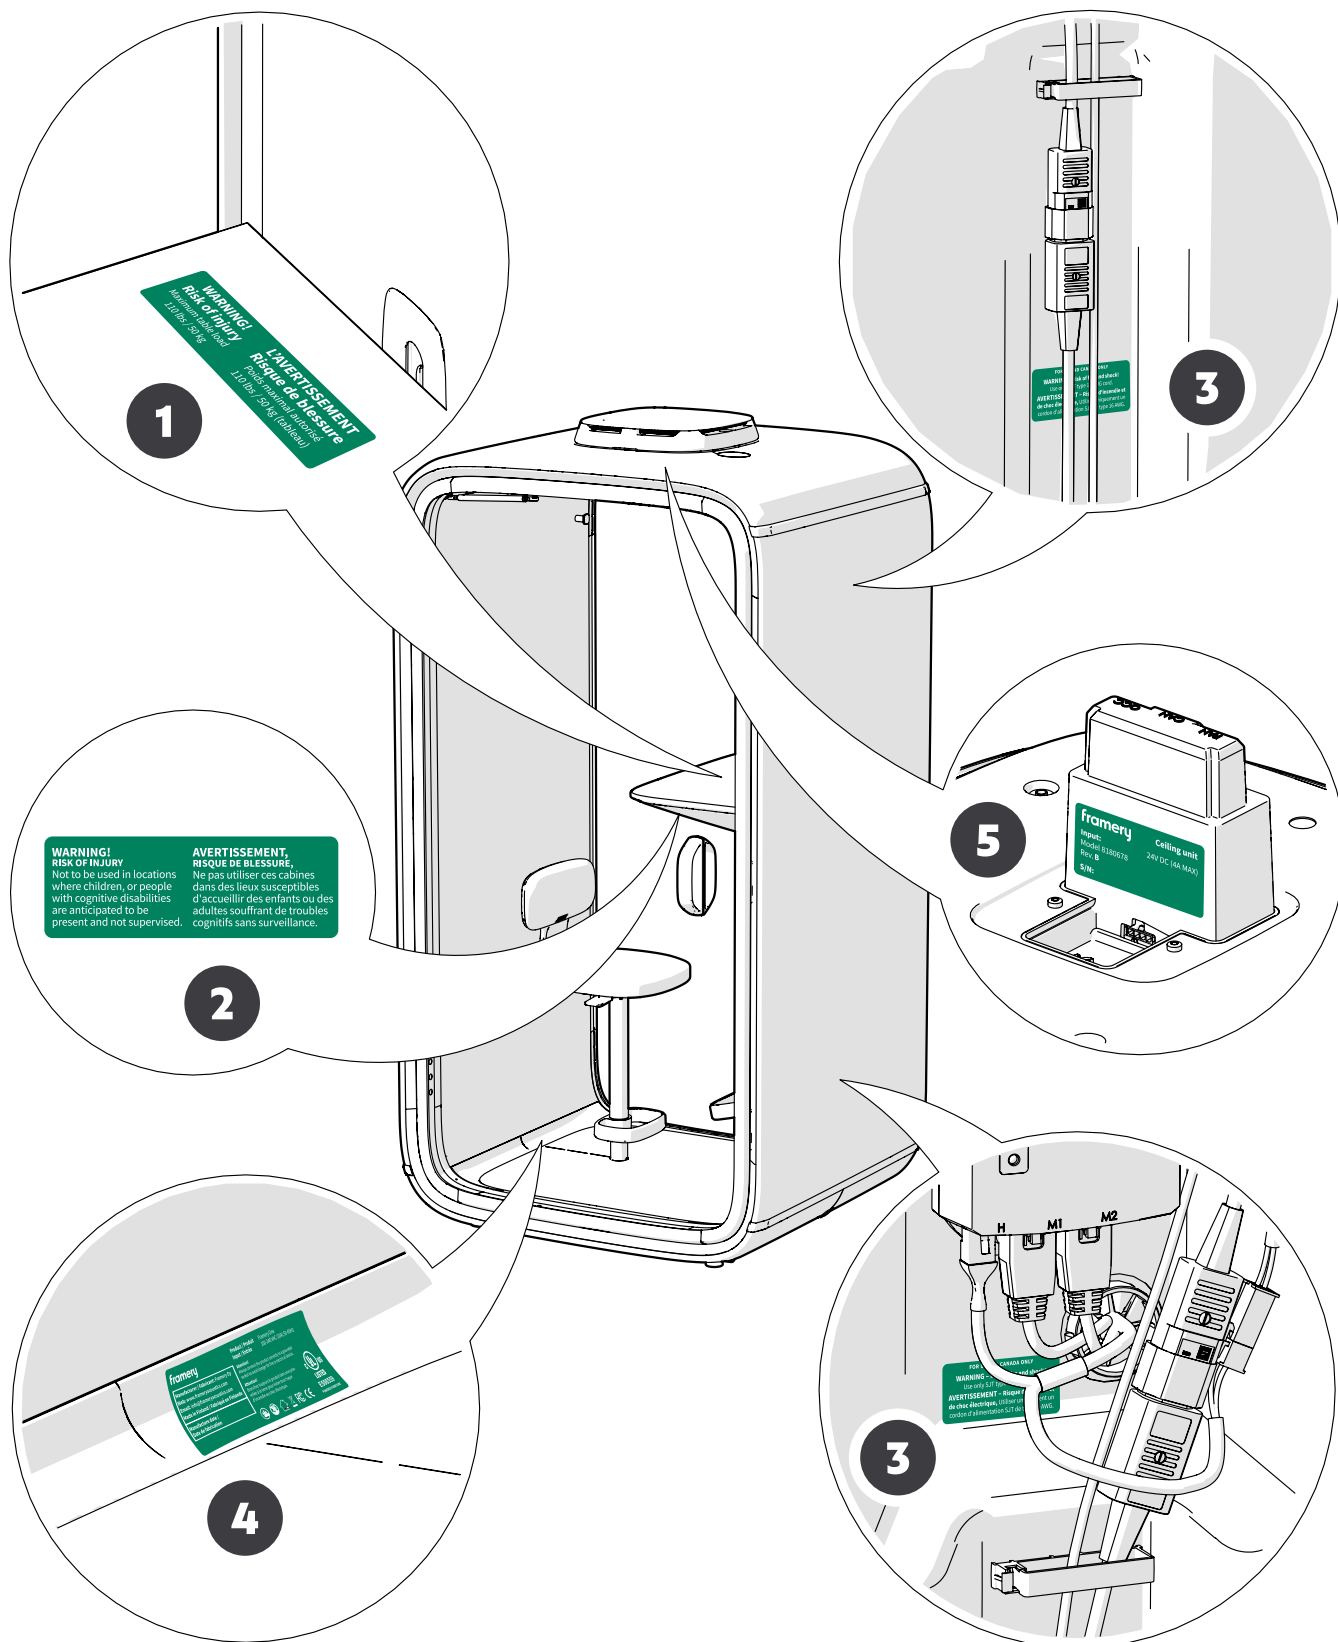

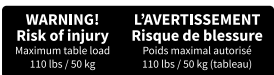Position	Label	Label text
1.		<p>WARNING! Risk of injury</p> <p>Maximum table load 110 lbs / 50 kg</p> <p>L'AVERTISSEMENT Risque de blessure</p> <p>Poids maximal autorisé 110 lbs / 50 kg (tableau)</p>
2.		<p>WARNING! RISK OF INJURY</p> <p>Not to be used in locations where children, or people with cognitive disabilities are anticipated to be present and not supervised.</p> <p>AVERTISSEMENT, RISQUE DE BLESSURE,</p> <p>Ne pas utiliser ces cabines dans des lieux susceptibles d'accueillir des enfants ou des adultes souffrant de troubles cognitifs sans surveillance.</p>
3.		<p>FOR US AND CANADA ONLY</p> <p>WARNING - Risk of fire and shock!</p> <p>Use only SJT type 16 AWG cord.</p> <p>AVERTISSEMENT - Risque d'incendie et de choc électrique, Utiliser uniquement un cordon d'alimentation SJT de type 16 AWG.</p>
4.		<p>Framery</p> <p>Manufacturer / Fabricant: Framery Oy</p> <p>WEB: <a href="http://www.frameryacoustics.com">www.frameryacoustics.com</a></p> <p>Email: <a href="mailto:info@frameryacoustics.com">info@frameryacoustics.com</a></p> <p>Made in Finland / Fabriqué en Finlande</p> <p>Manufacture date / Date de fabrication</p> <p>Product / Produit Framery One</p> <p>Input / Entrée 100-240 VAC (10 A) 50-60 HZ</p> <p>Attention! Always connect the product correctly to a grounded socket to avoid danger for fire or electrical shocks.</p> <p>Attention! Branchez toujours le produit dans une prise reliée à la terre pour éviter tout risque d'incendie ou choc électrique.</p>

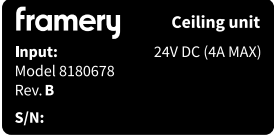Position	Label	Label text
5.		Framery Ceiling unit Input: 24V DC (4A MAX) Model 8180678 Rev. B S/N:

**SAVE THESE INSTRUCTIONS**

## 2 Replace the glass wall

- ⚠ **Note:** Set all removed parts aside carefully and neatly. All removed parts, excluding the one being replaced, will be needed for reassembly.

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.

⚠ **DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

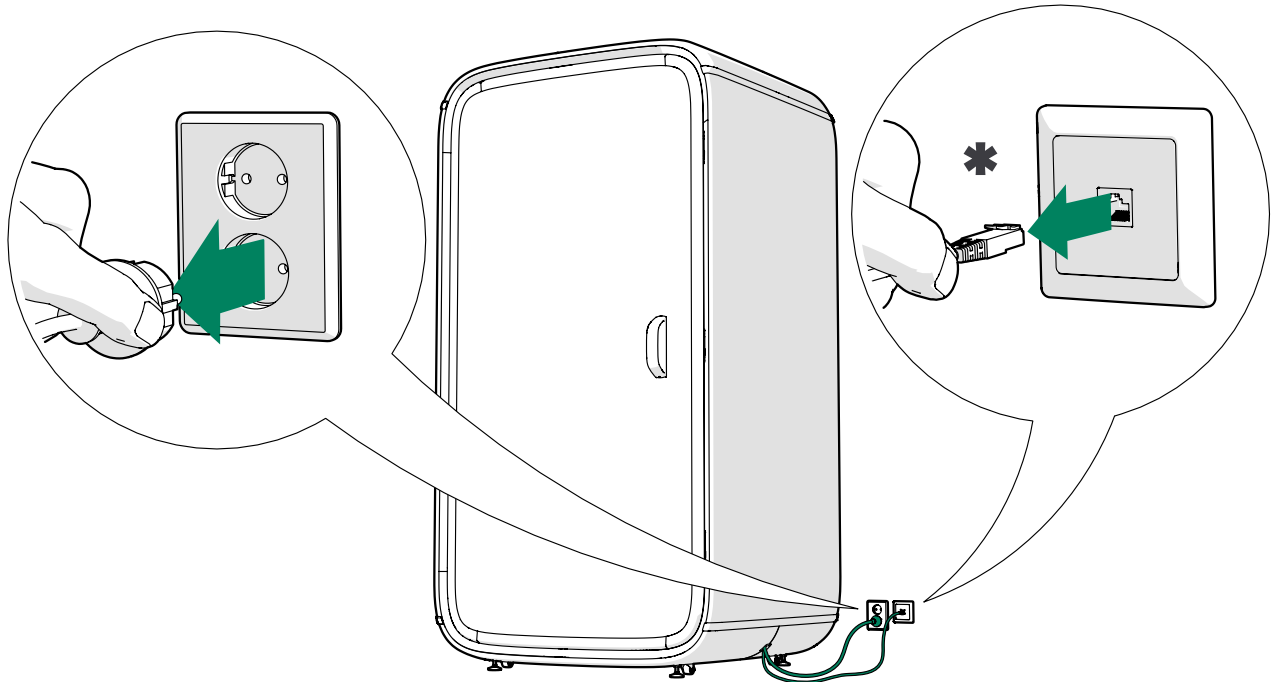


Figure 1: \* = optional LAN

2. Remove the fan cover.



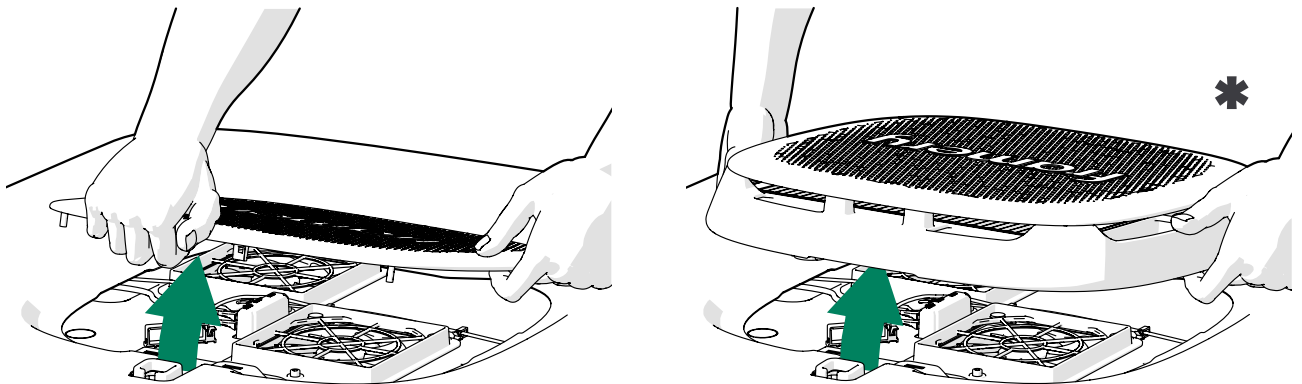


Figure 2: \* = With optional activated carbon filter


3. Remove the plastic trims.

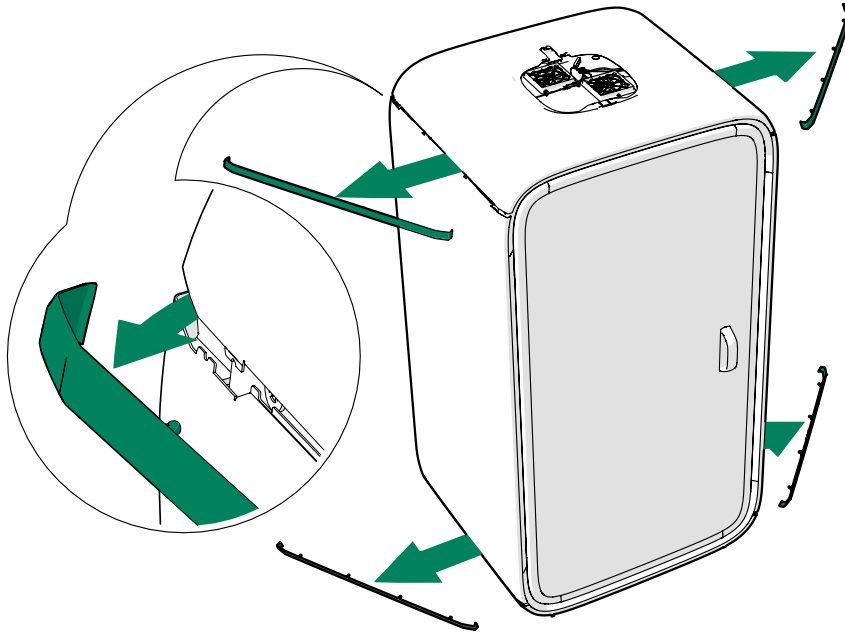


4. Remove the roof body cover.

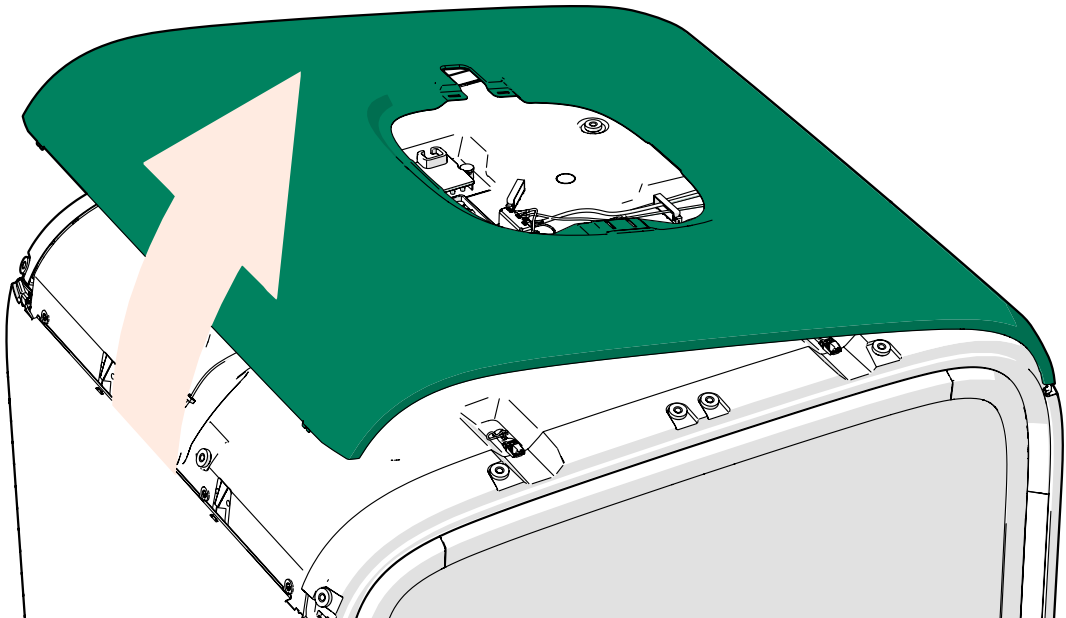

5. Remove the wall body covers.

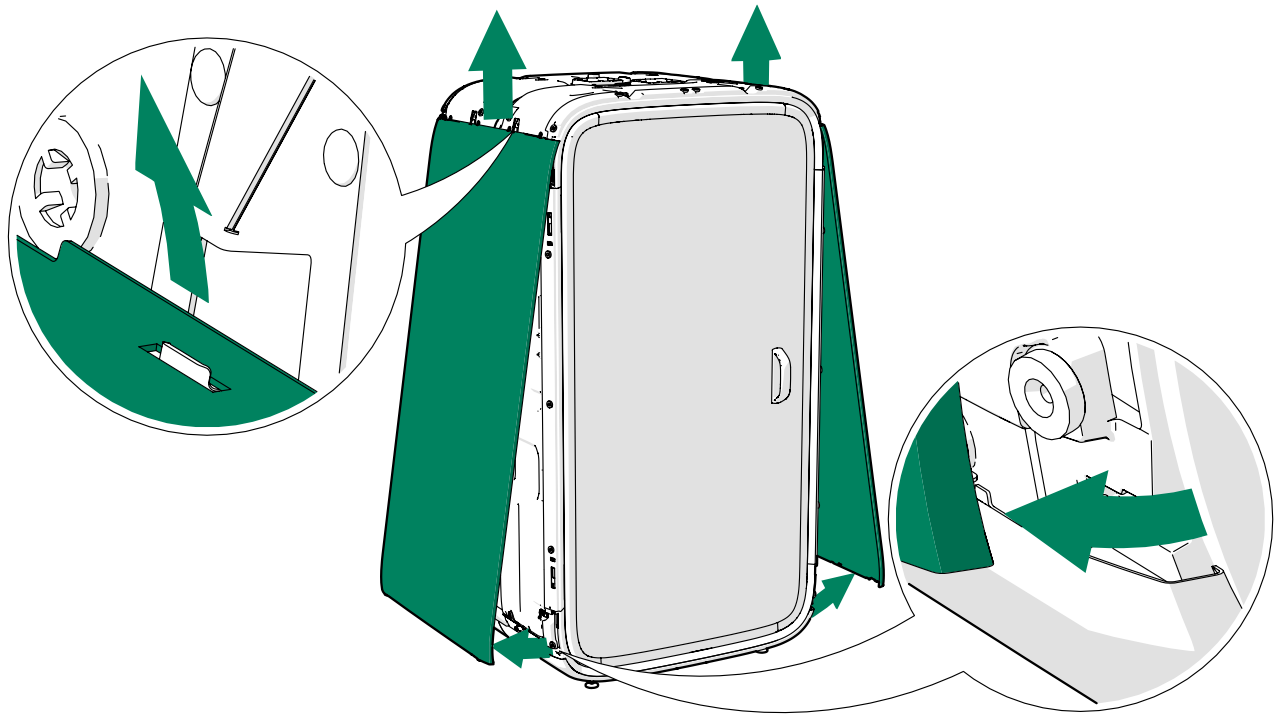


6. Remove the front floor body cover.

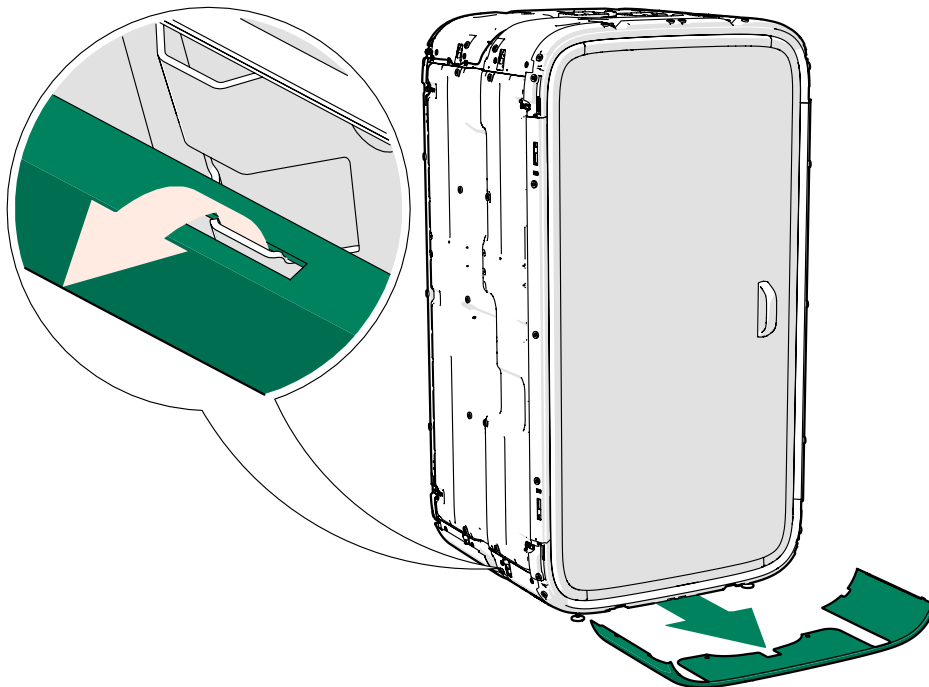

7. Remove the back floor body cover.




8. Remove the occupancy indicator lights from the back of the pod, if installed.

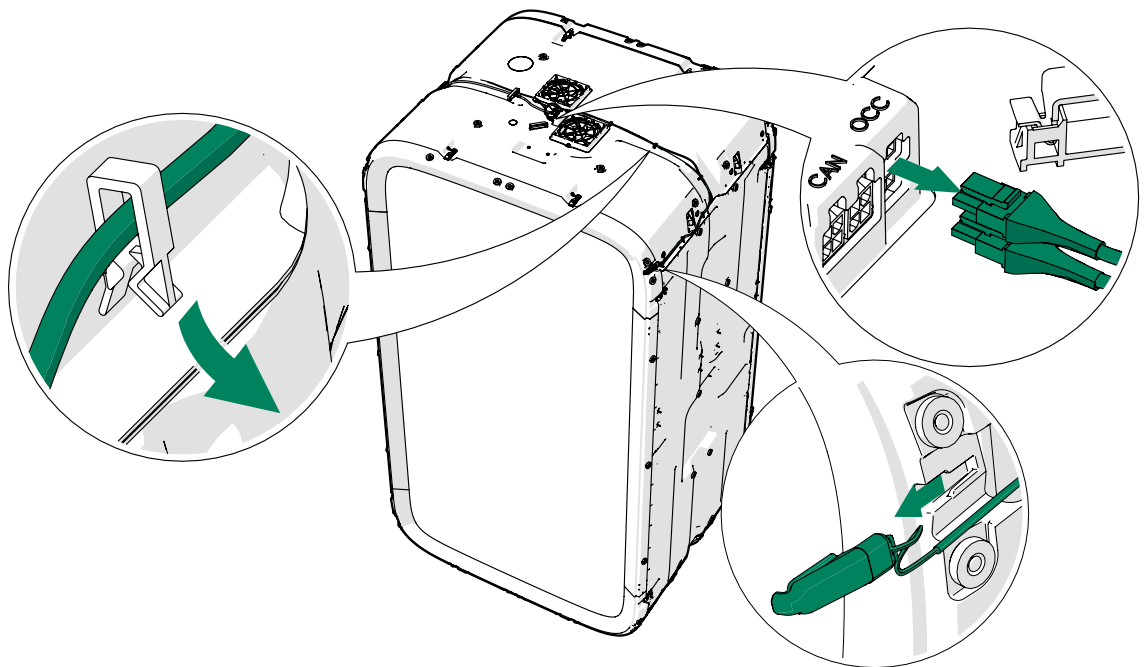




9. Lay a carpet on the floor behind the pod.

⚠ **Note:** The carpet is needed to protect the frame from scratches.

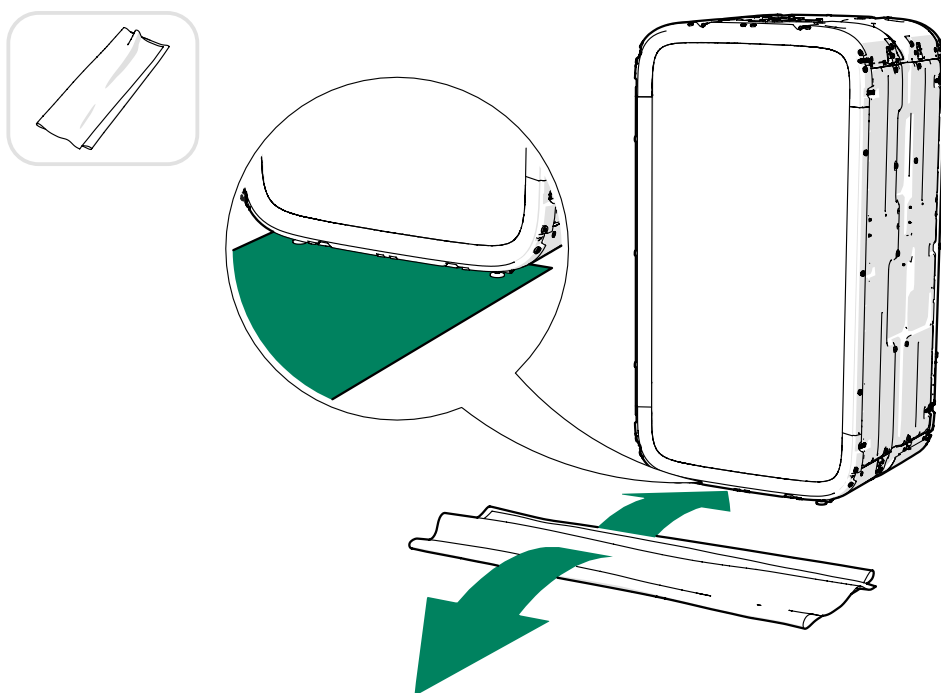

10. Remove the pins (6 pcs) and open the latches (6 pcs) around the glass wall.


⚠ **Note:** Support the glass wall while opening the latches.

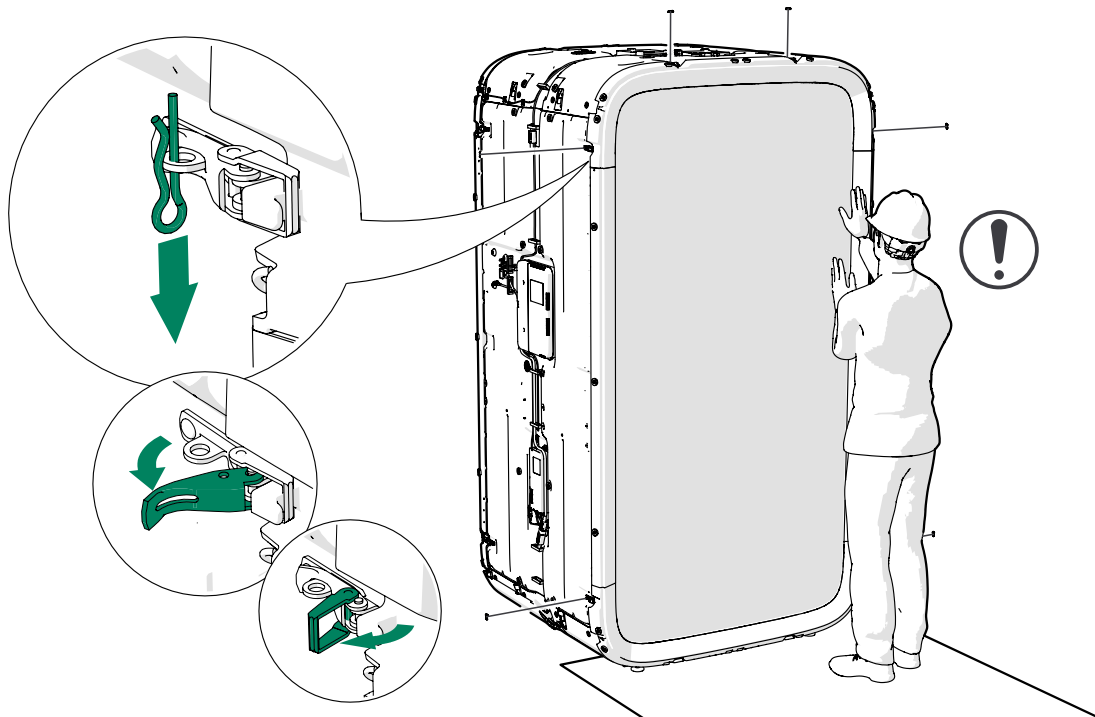


11. Carefully lower the glass wall onto the carpet.



**Note:** Make sure that the guide pin at the upper edge of the frame stays in place.

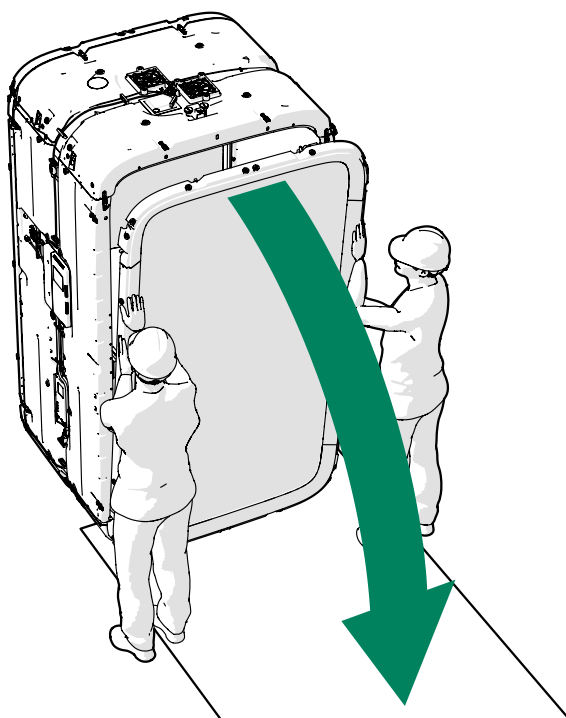

12. Remove the guide pin from the frame.

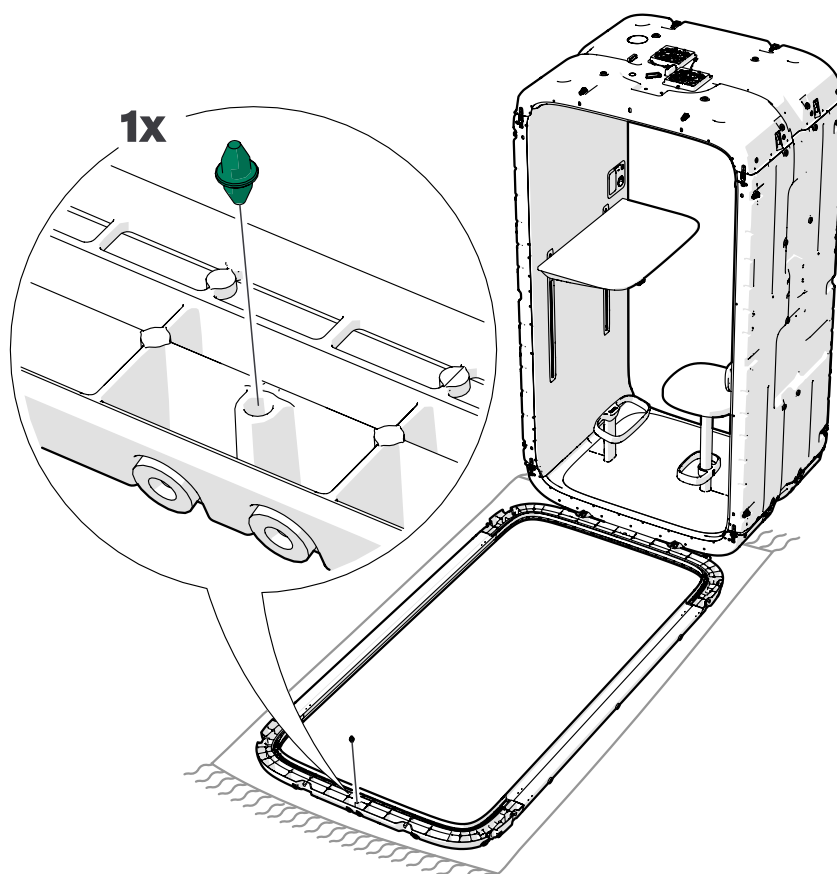


13. Set aside the old glass wall and place the new glass wall onto the carpet.




**Warning:** Risk of injury or damage to property. Heavy object. Make sure that you observe safe lifting practices.




**Note:** Make sure that the carpet is in place before lifting the new glass wall. The carpet is needed to protect the frame from scratches.

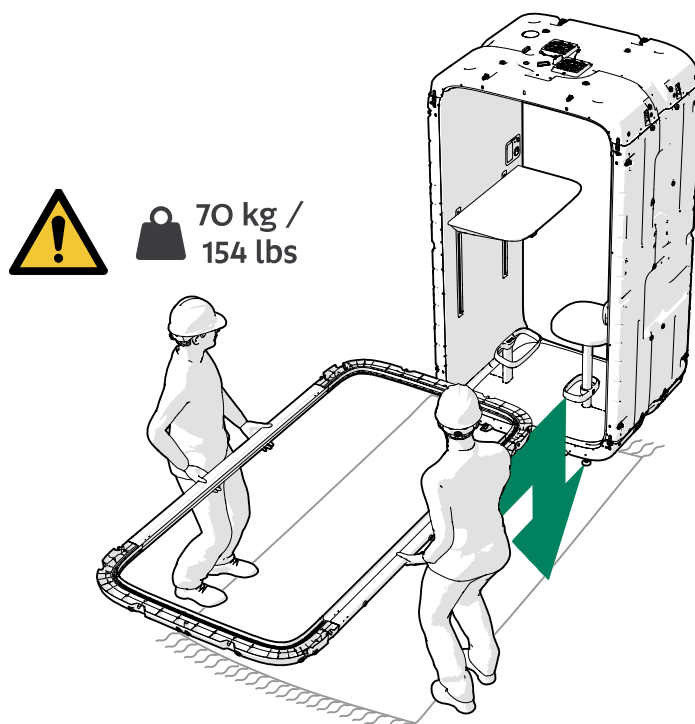


14. Position the glass wall close to the back of the pod so that the hooks on the frame are directly above the slots in the floor.

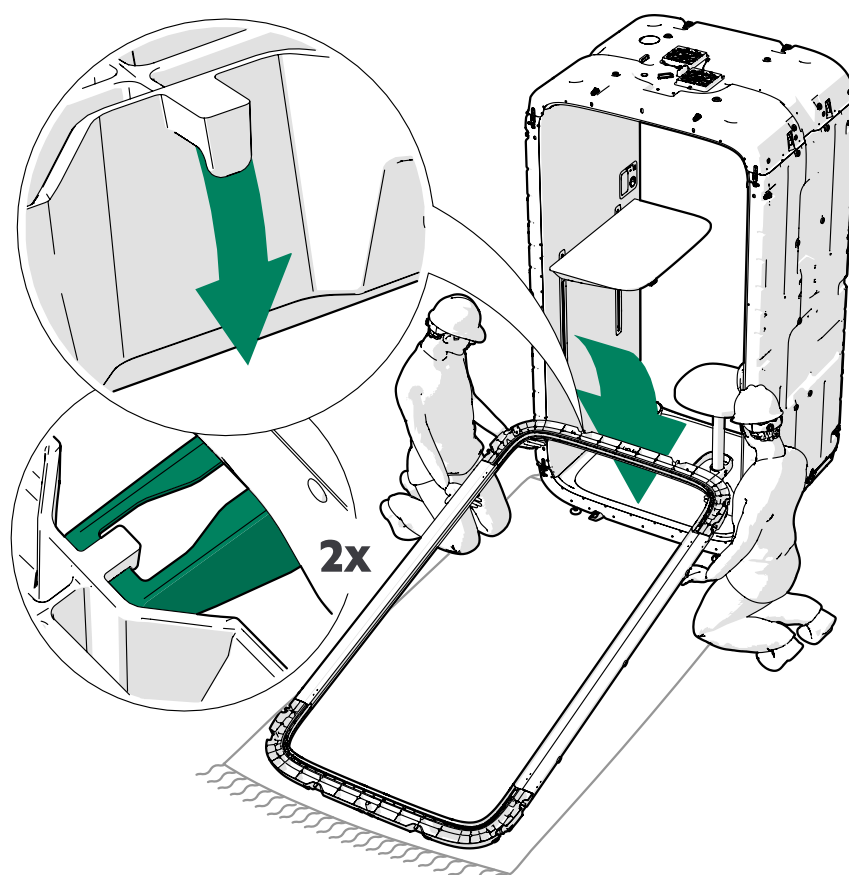

15. Install the guide pin to the frame.

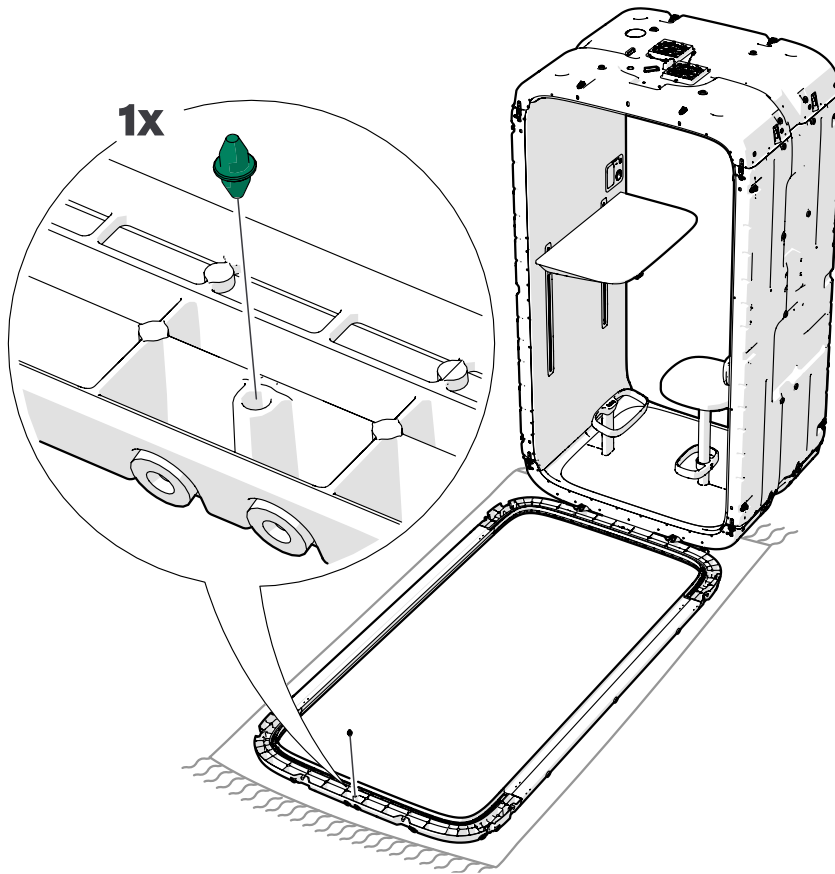


16. Lift the glass wall into place.

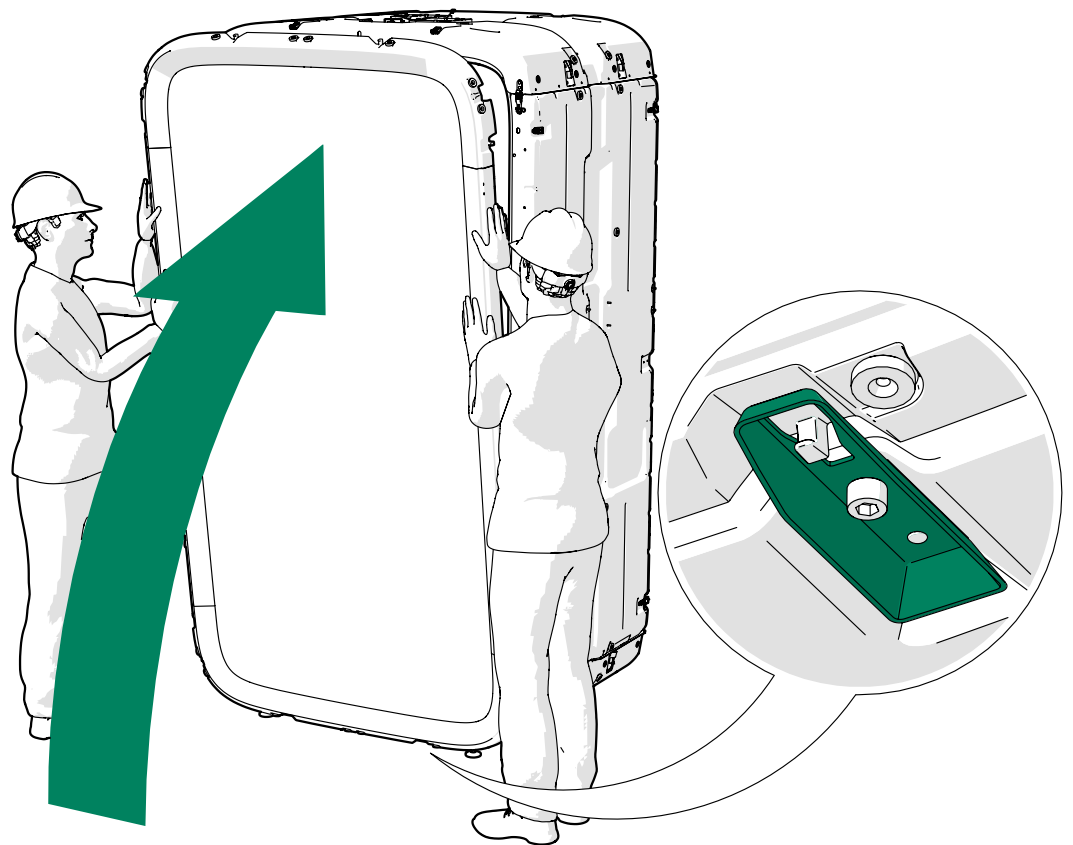


17. Close the latches (6 pcs) and insert the pins (6 pcs) around the glass wall frame.

⚠ **Note:** Support the glass wall until all latches are secured.

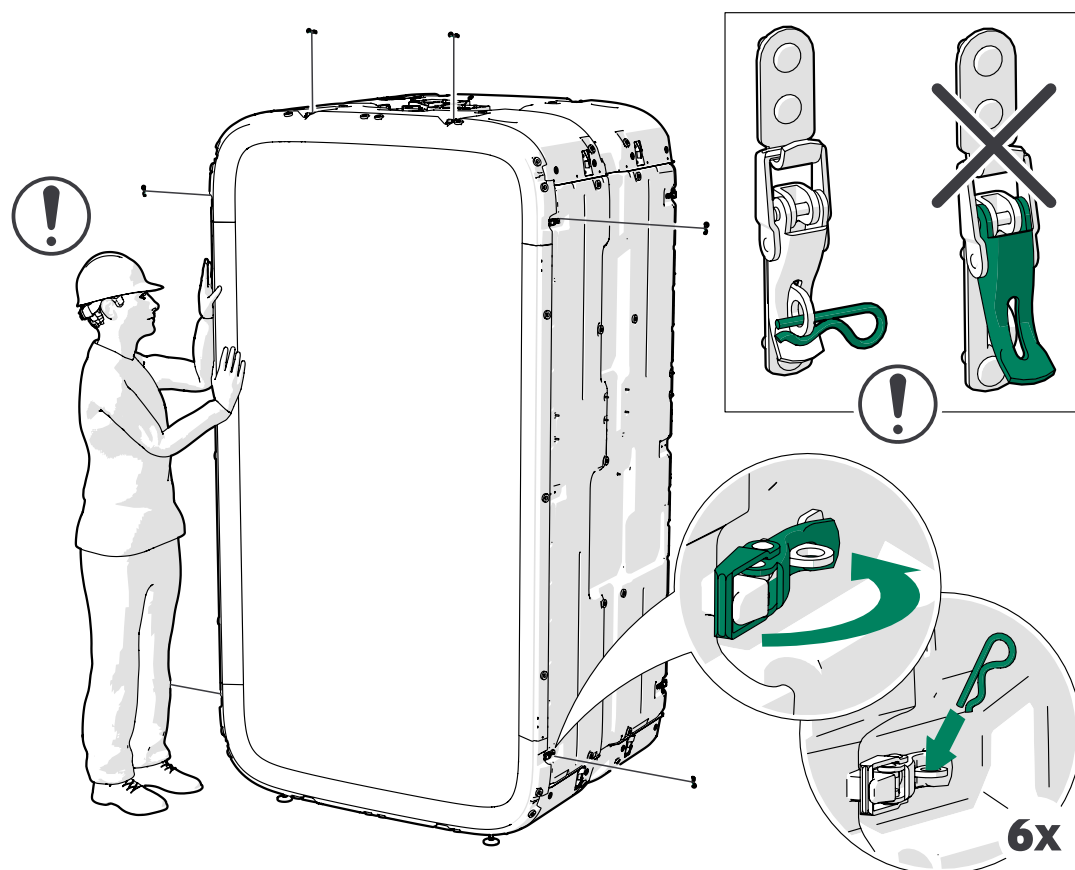

18. Install the occupancy indicator lights to the pod and connect the cords to the OCC connectors of the control hub.


Install the occupancy indicator lights to the same corners from which they were removed.

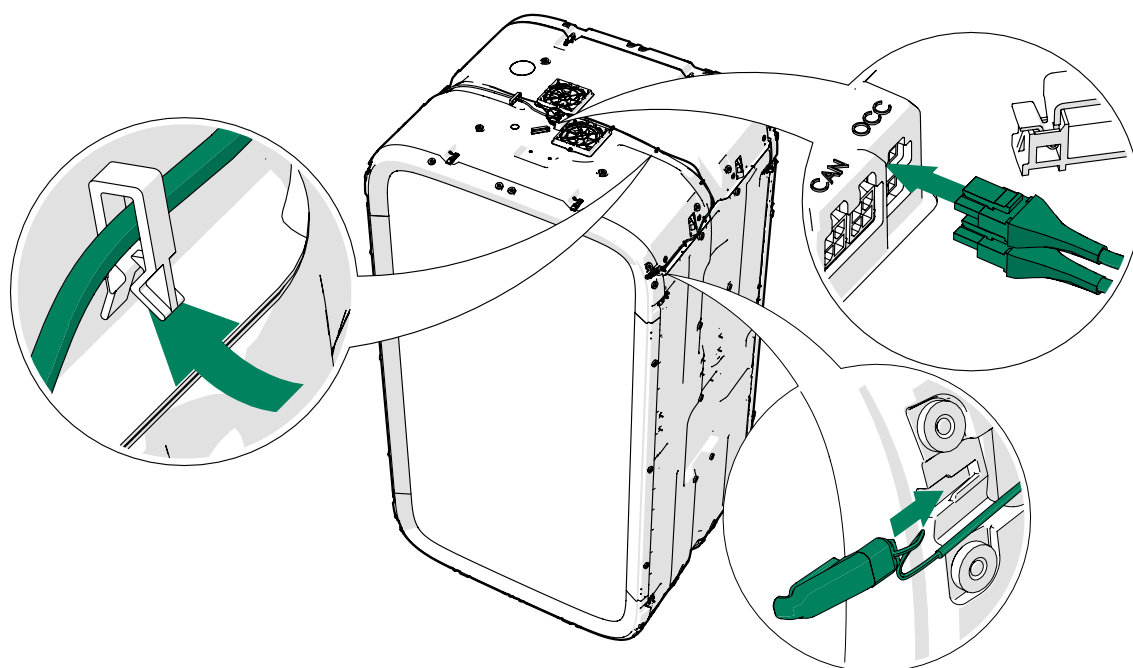

19. Install the body covers, plastic trims, and fan cover in the reverse order.

**20.** Connect the power cord to the power outlet.

If equipped with the optional LAN, also connect the LAN cord to the outlet.

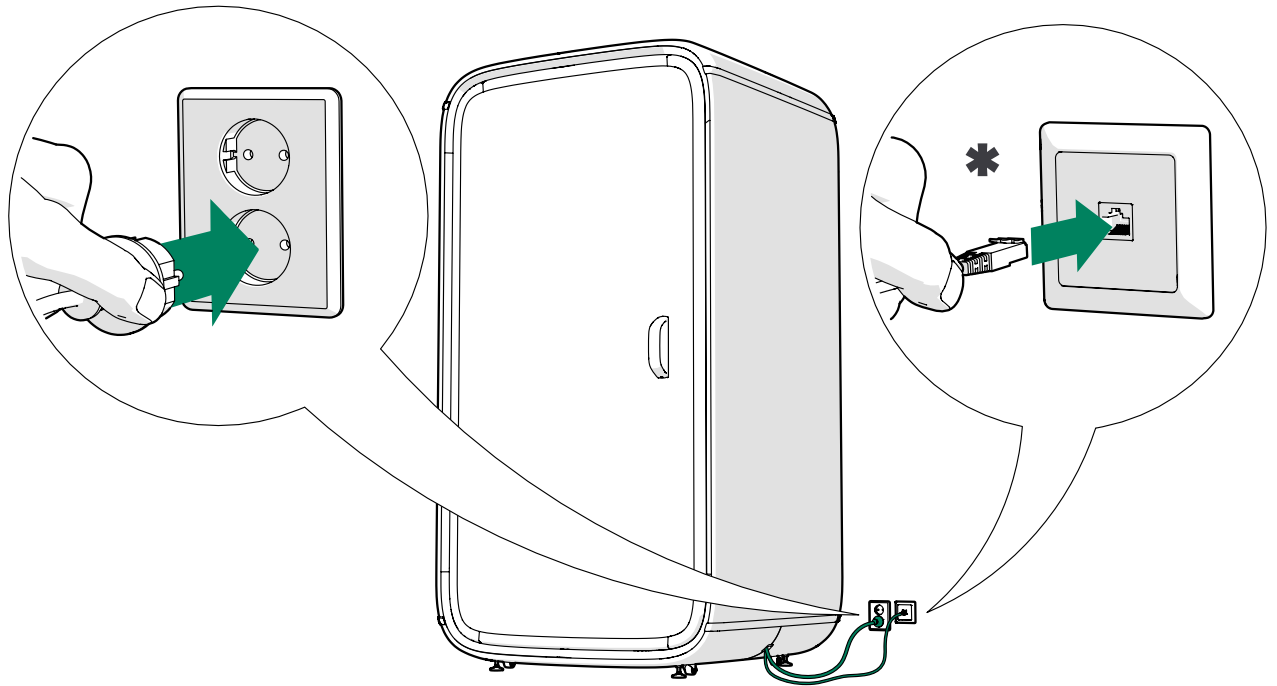

**Figure 3:** \* = optional LAN

## 3 Replace the front frame and door

### 3.1 Replace the front frame with the door

- ⚠ **Note:** Set all removed parts aside carefully and neatly. All removed parts, excluding the one being replaced, will be needed for reassembly.

#### 3.1.1 Disassemble the necessary parts (front frame with the door replacement)

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.

⚠ **DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

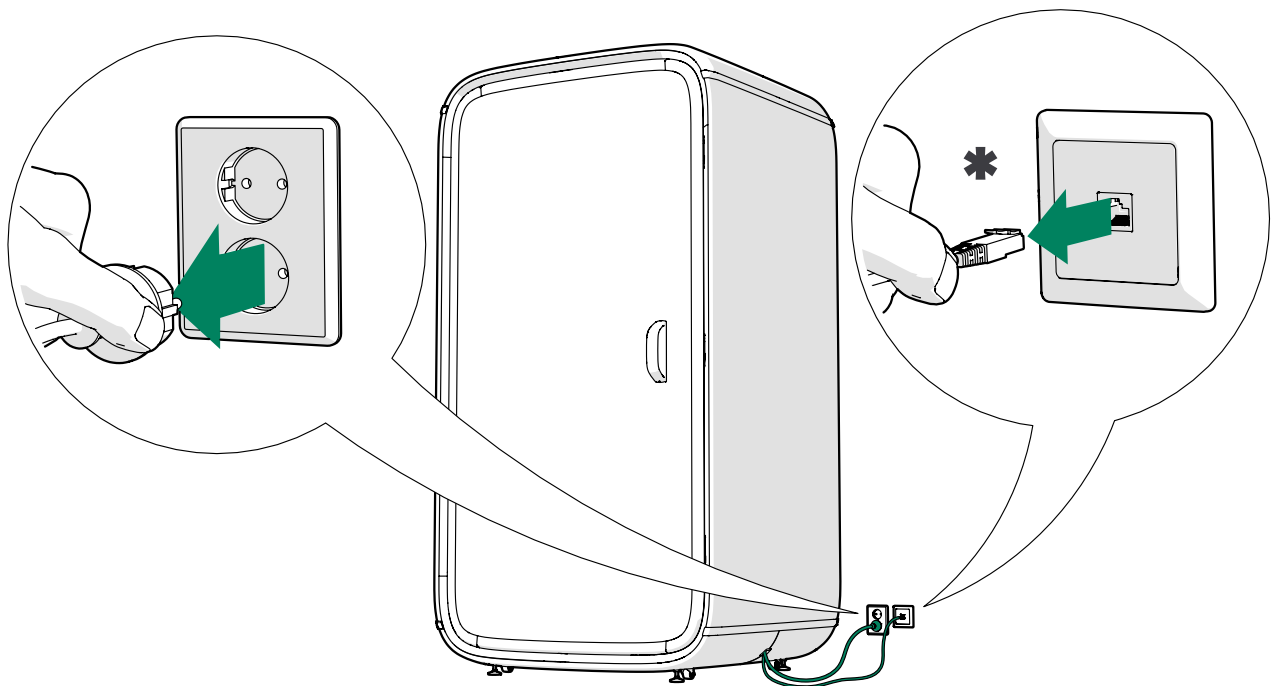


Figure 4: \* = optional LAN

2. Remove the fan cover.



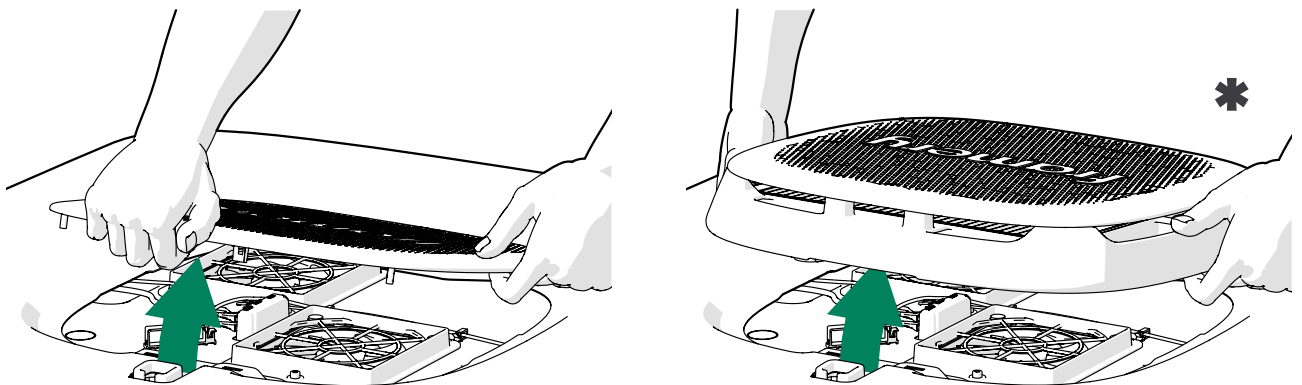


Figure 5: \* = With optional activated carbon filter

3. Remove the plastic trims.

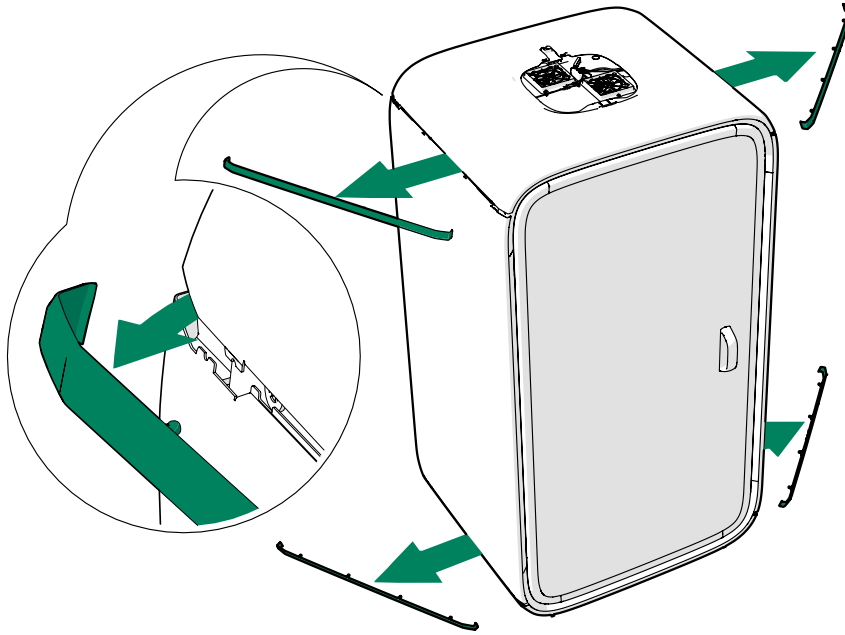


4. Remove the roof body cover.

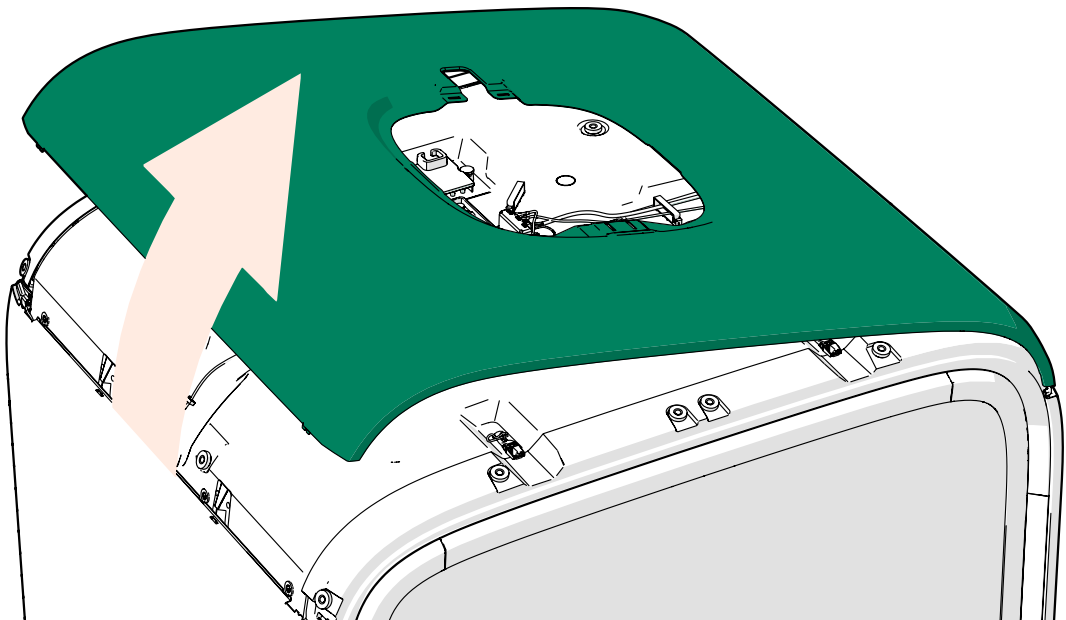




5. Remove the wall body covers.

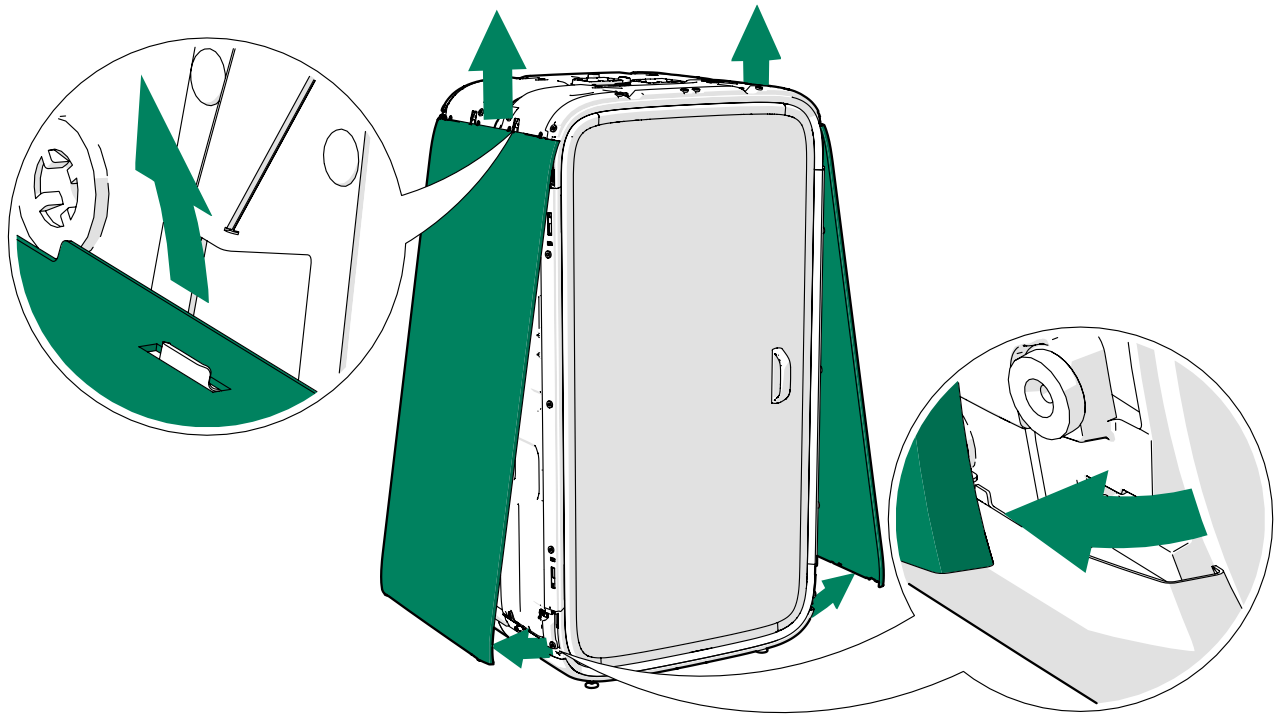


6. Remove the front floor body cover.

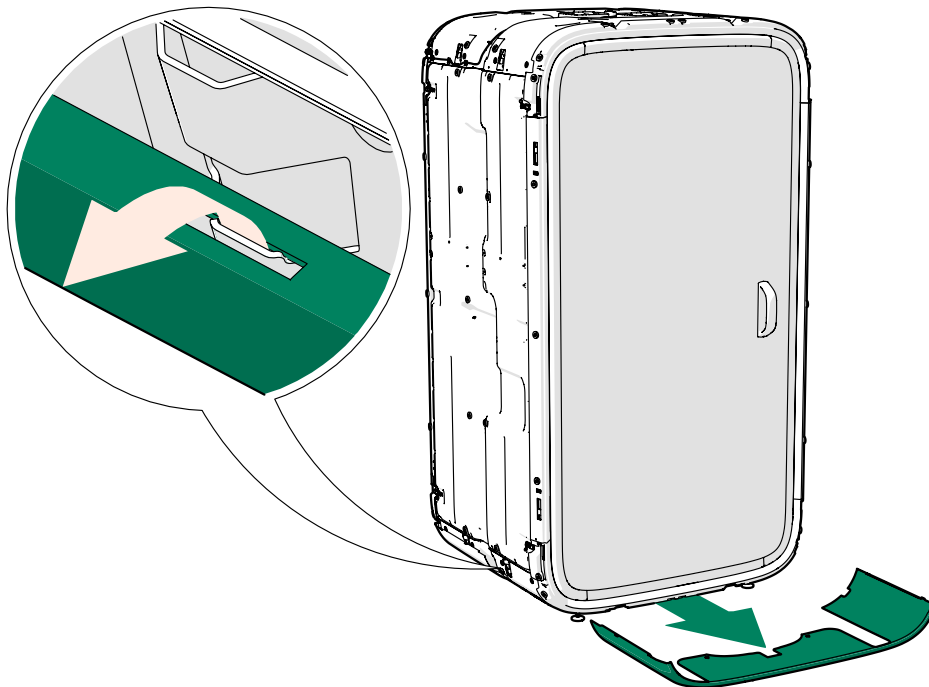


7. Remove the door handle from the outside of the door.  
Loosen the set screw to remove the handle.

⚠ **Note:** Do not remove the set screw.

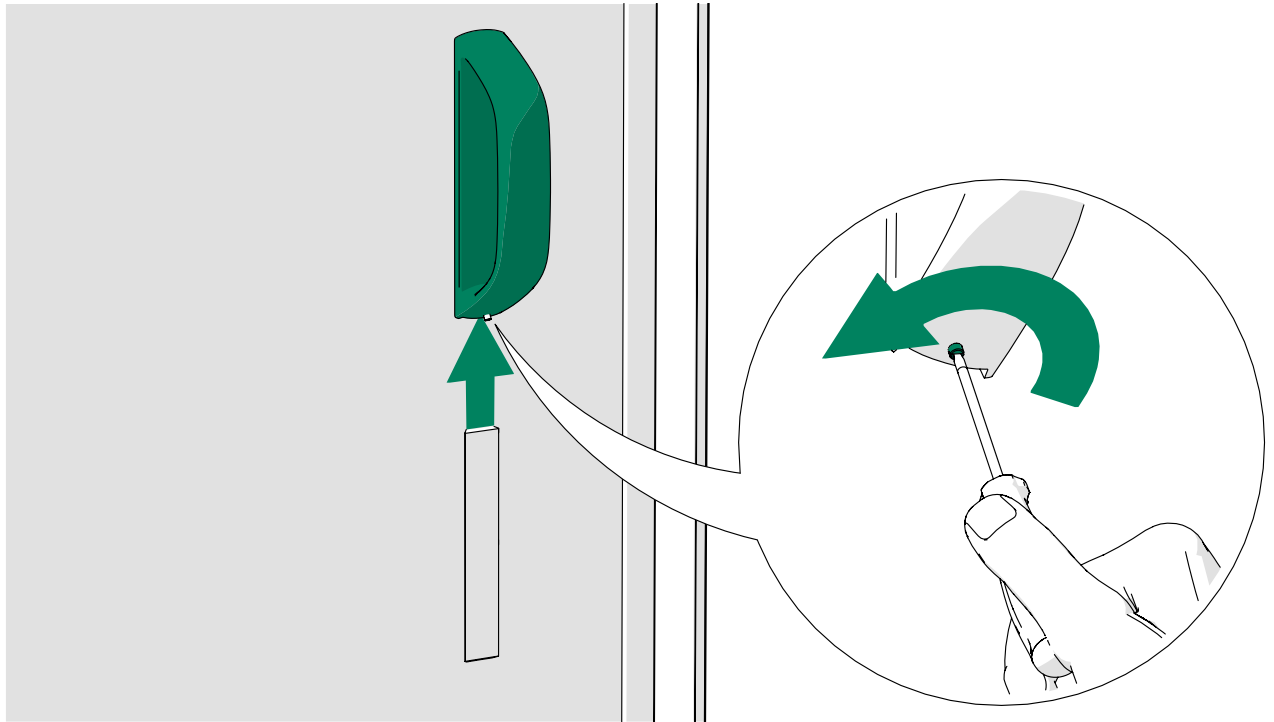


8. Install the door brace.

⚠ **Warning:** Risk of injury or damage to property. Make sure that the door brace is in place before detaching the front frame with the door.

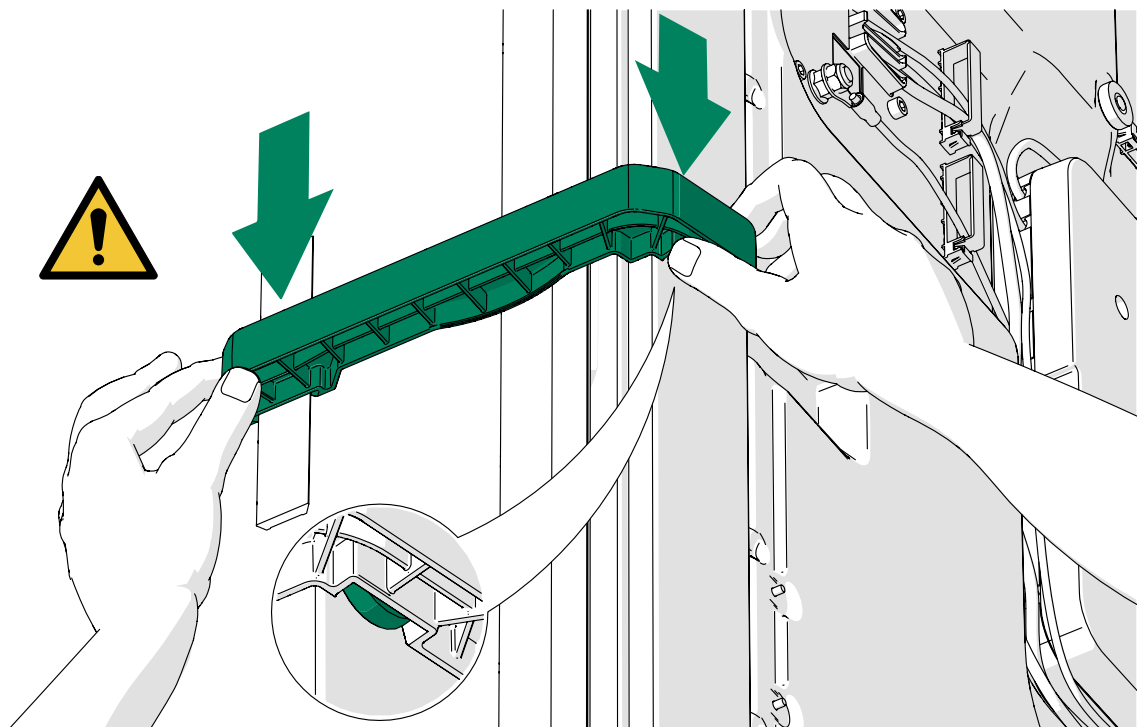



9. Remove the occupancy indicator lights from the front of the pod, if installed.

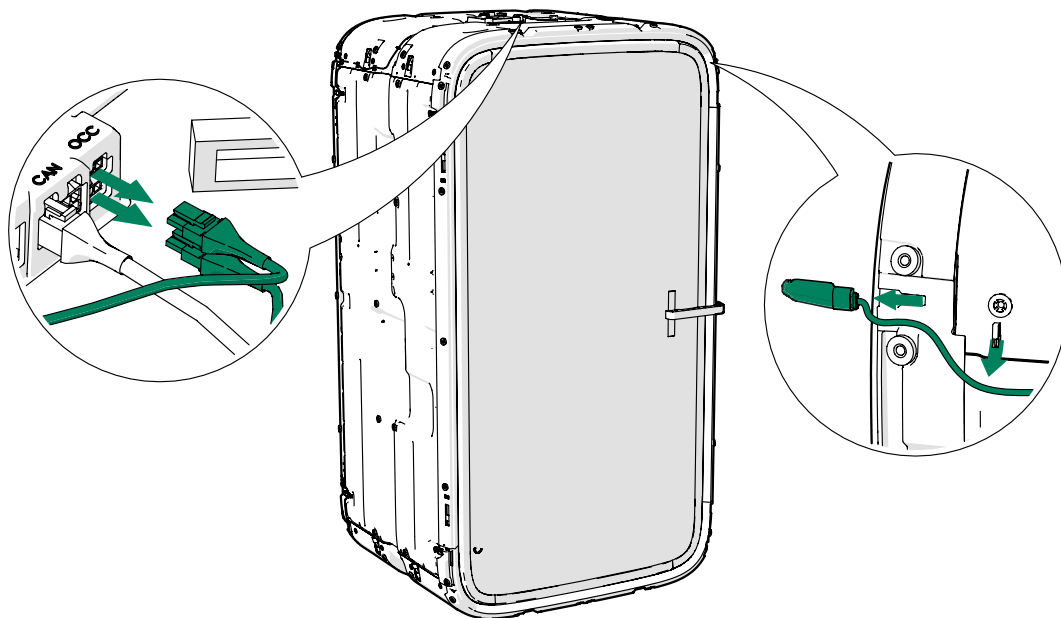

10. Lay a carpet on the floor in front of the pod.




**Note:** The carpet is needed to protect the frame from scratches.

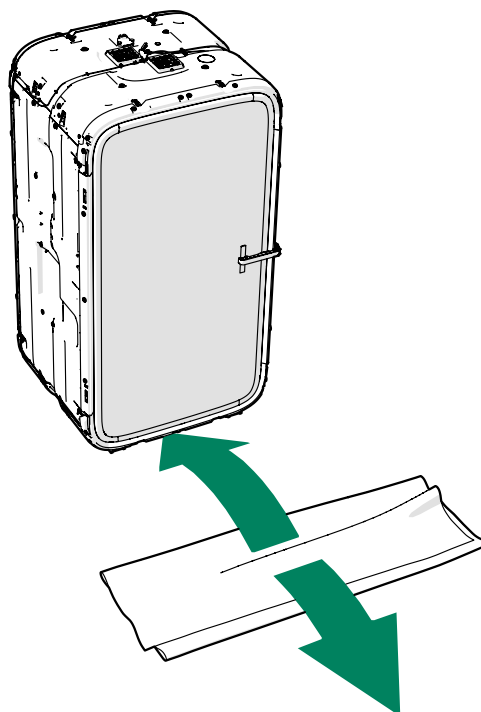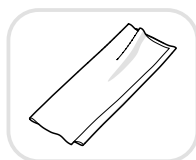


11. Remove the pins (6 pcs) and open the latches (6 pcs) around the front frame.


⚠ **Note:** Support the frame while opening the latches.

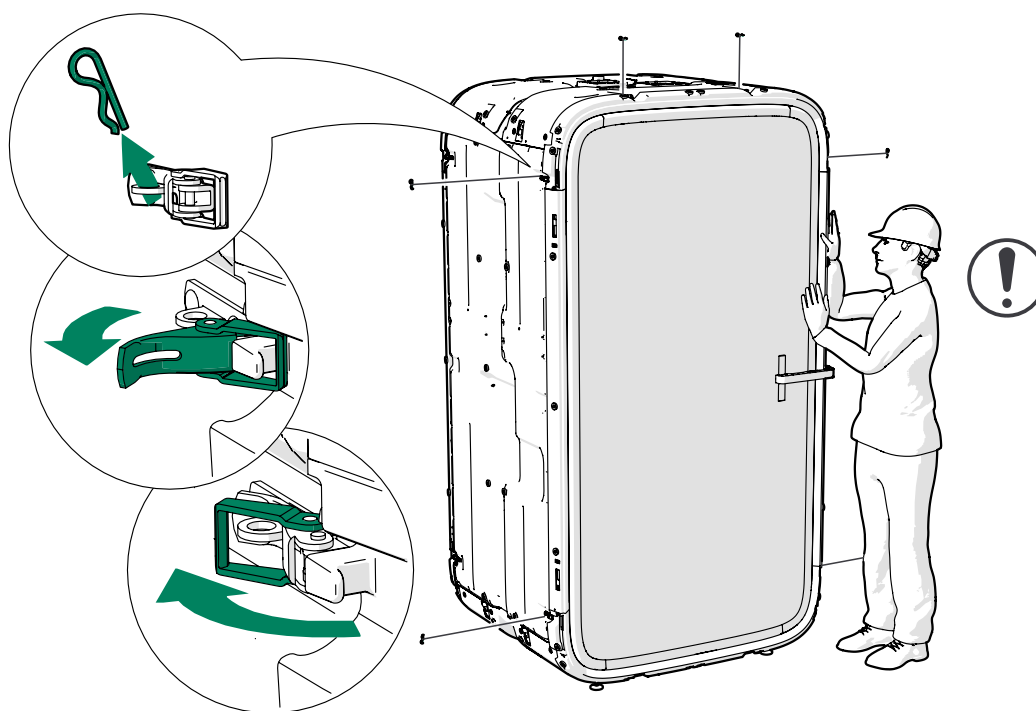

12. Carefully lower the front frame with door onto the carpet.

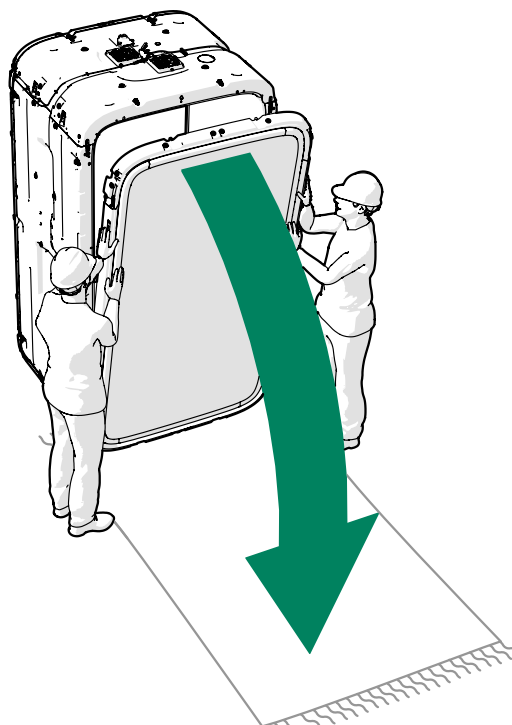

13. Remove the guide pin from the frame.

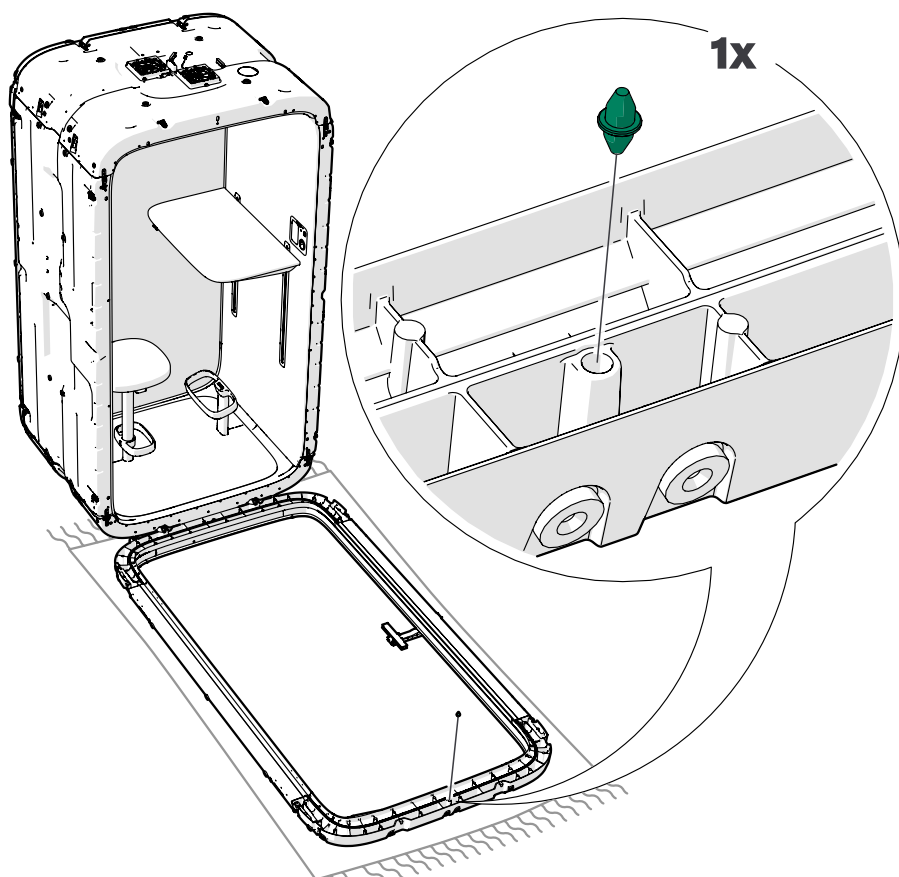


14. Set aside the old front frame with door.




**Warning:** Risk of injury or damage to property. Heavy object. Make sure that you observe safe lifting practices.

15. Remove the door brace from the old front frame with door.

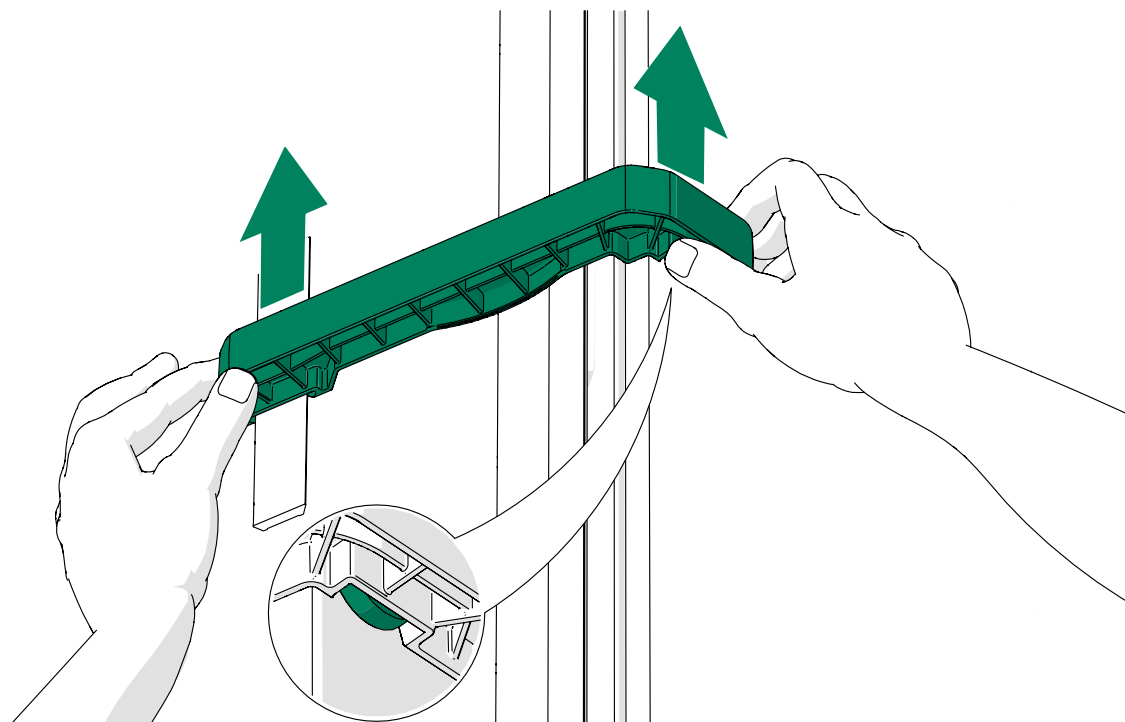

### 3.1.2 Install the removed parts (front frame with the door replacement)

1. Install the door brace to the new front frame with door.

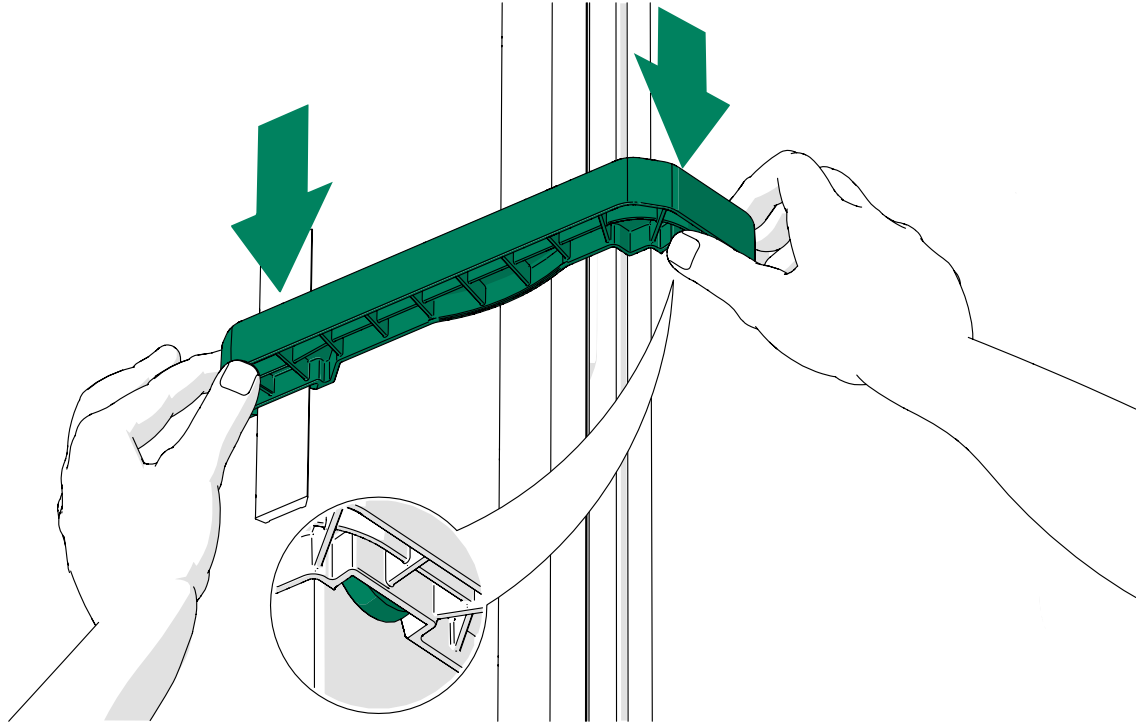

2. Lift the new front frame with door next to the pod.



**Note:** Make sure that the door brace is in place before lifting the new front frame with door.




**Warning:** Risk of injury or damage to property. Heavy object. Make sure that you observe safe lifting practices.




**Note:** Make sure that the carpet is in place before lifting the new front frame with door next to the pod. The carpet is needed to protect the frame from scratches.




86 kg /  
190 lbs

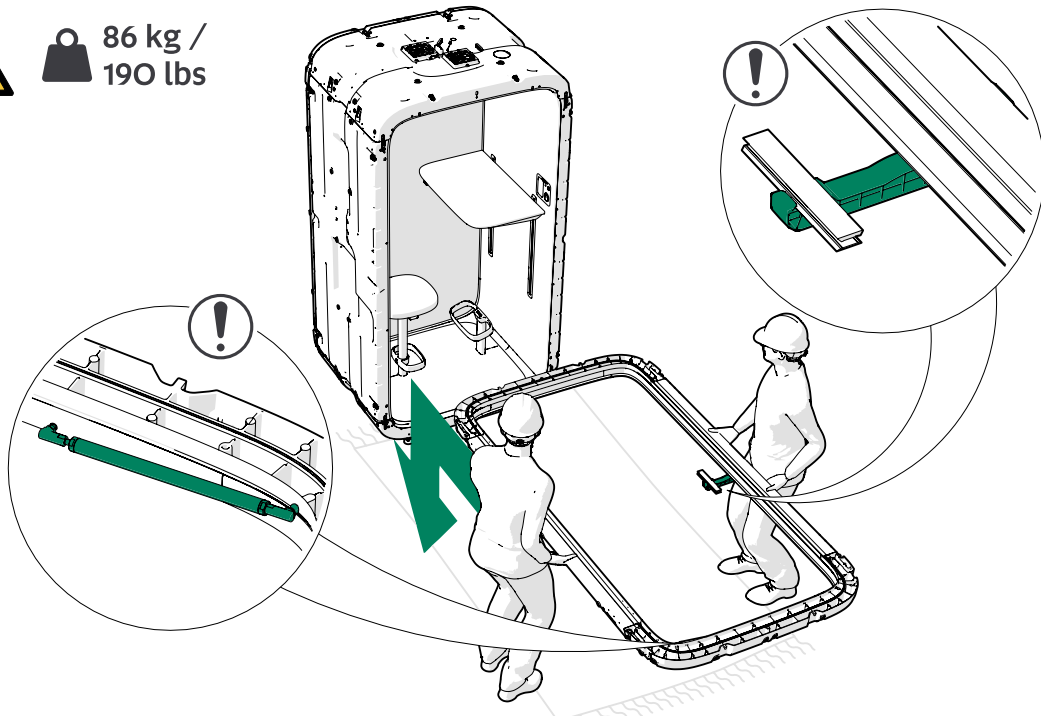


3. Position the front frame with door close to the front of the pod so that the hooks on the frame are directly above the slots in the floor.

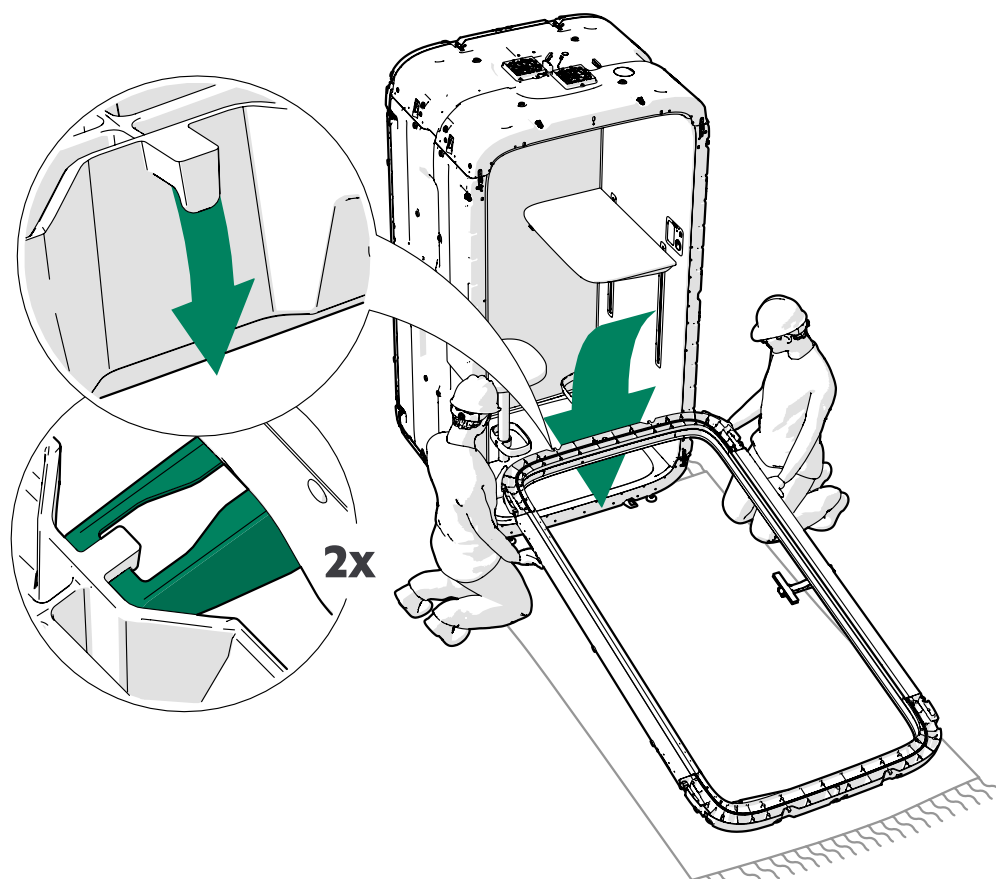

4. Install the guide pin to the frame.

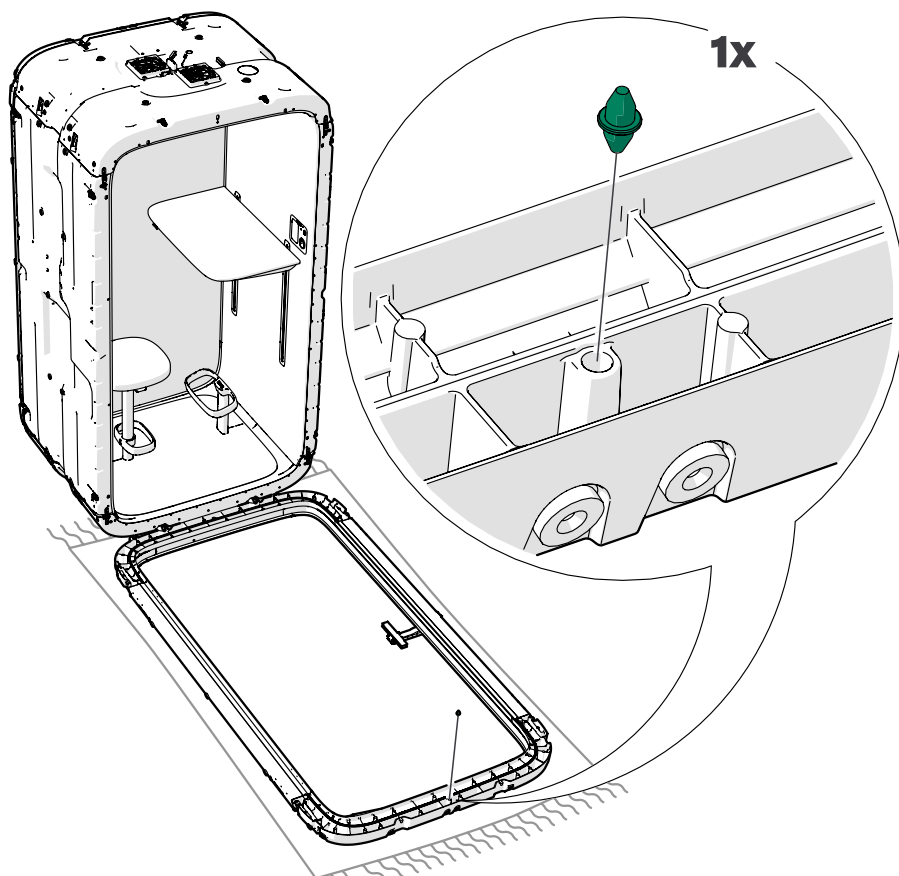


5. Lift the front frame with door into place.

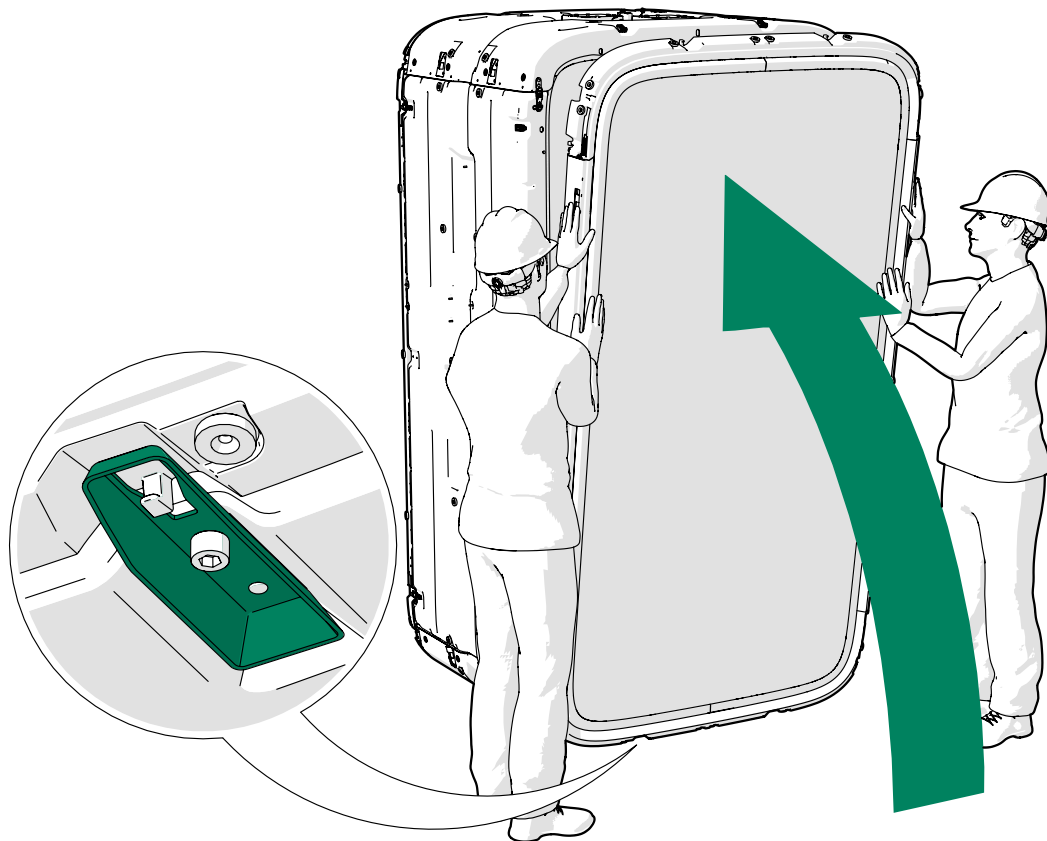

6. Close the latches (6 pcs) and insert the pins (6 pcs) around the front frame.


⚠ **Note:** Support the front frame with door until all latches are secured.

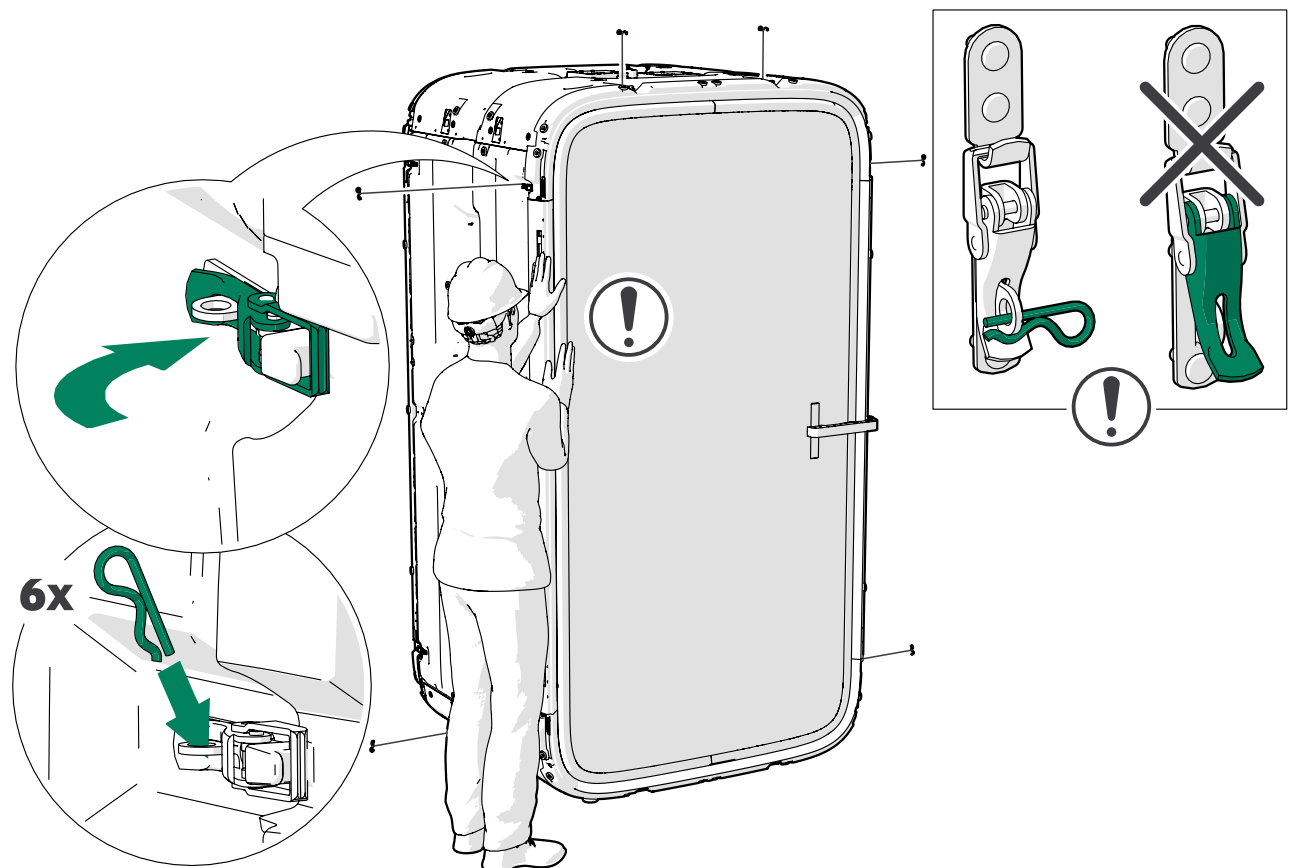




7. Remove the door brace and install the outside door handle.

⚠ **Note:** Make sure that the set screw is at the bottom.

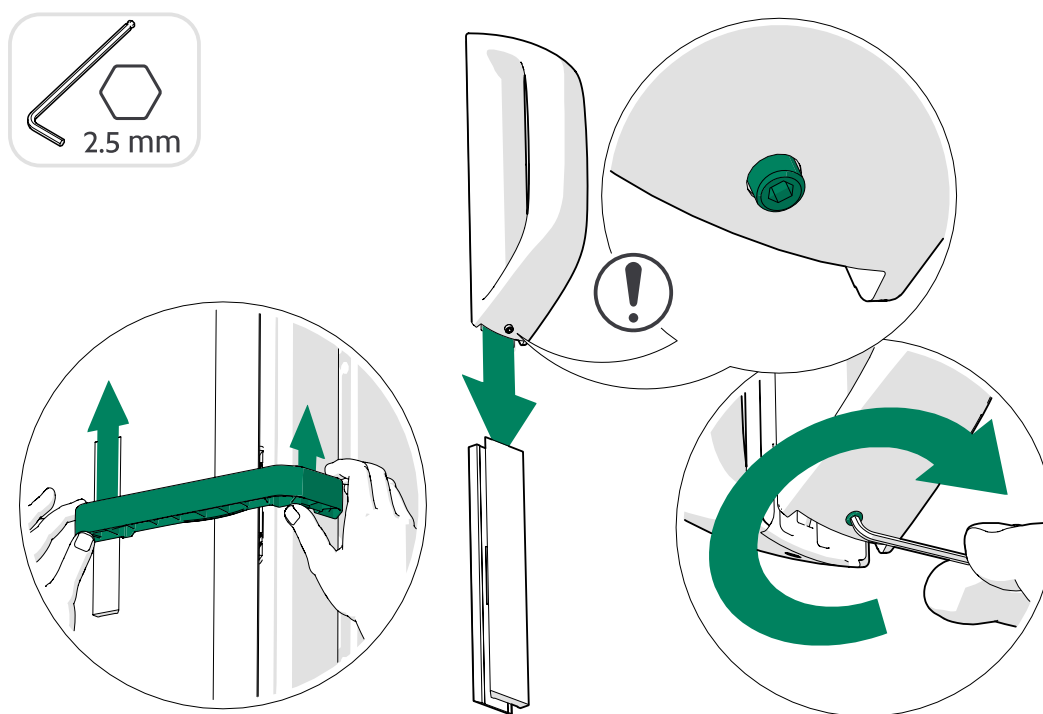

8. Install the occupancy indicator lights to the pod and connect the cords to the OCC connectors of the control hub.

Install the occupancy indicator lights to the same corners from which they were removed.

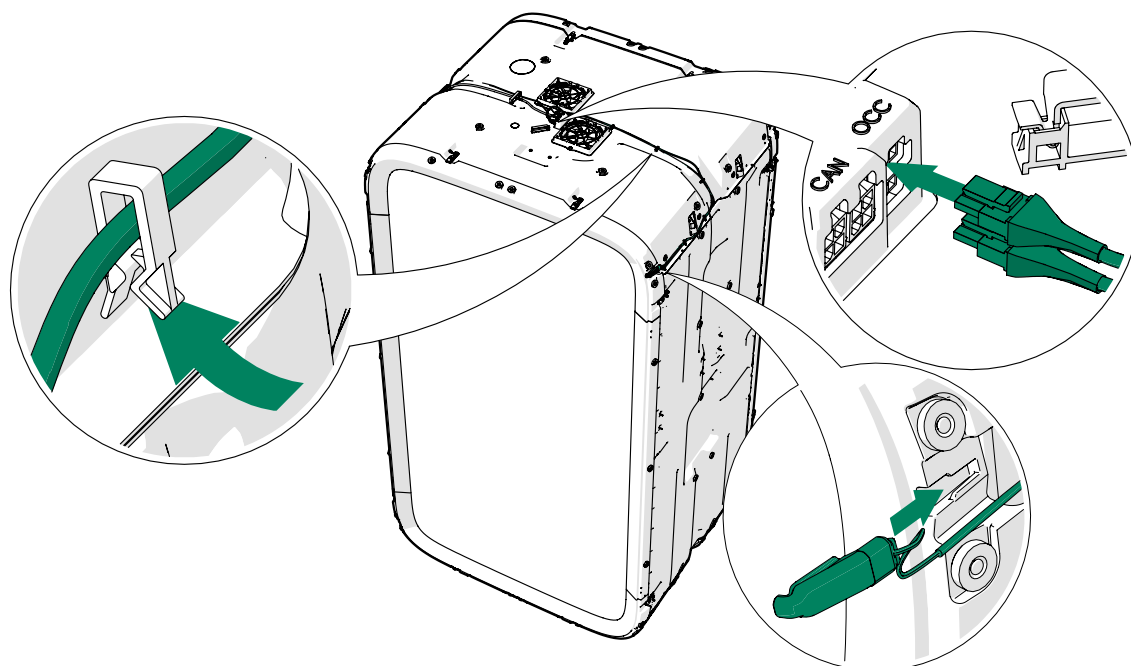

9. Install the body covers, plastic trims, and fan cover in the reverse order.

**10. Connect the power cord to the power outlet.**

If equipped with the optional LAN, also connect the LAN cord to the outlet.

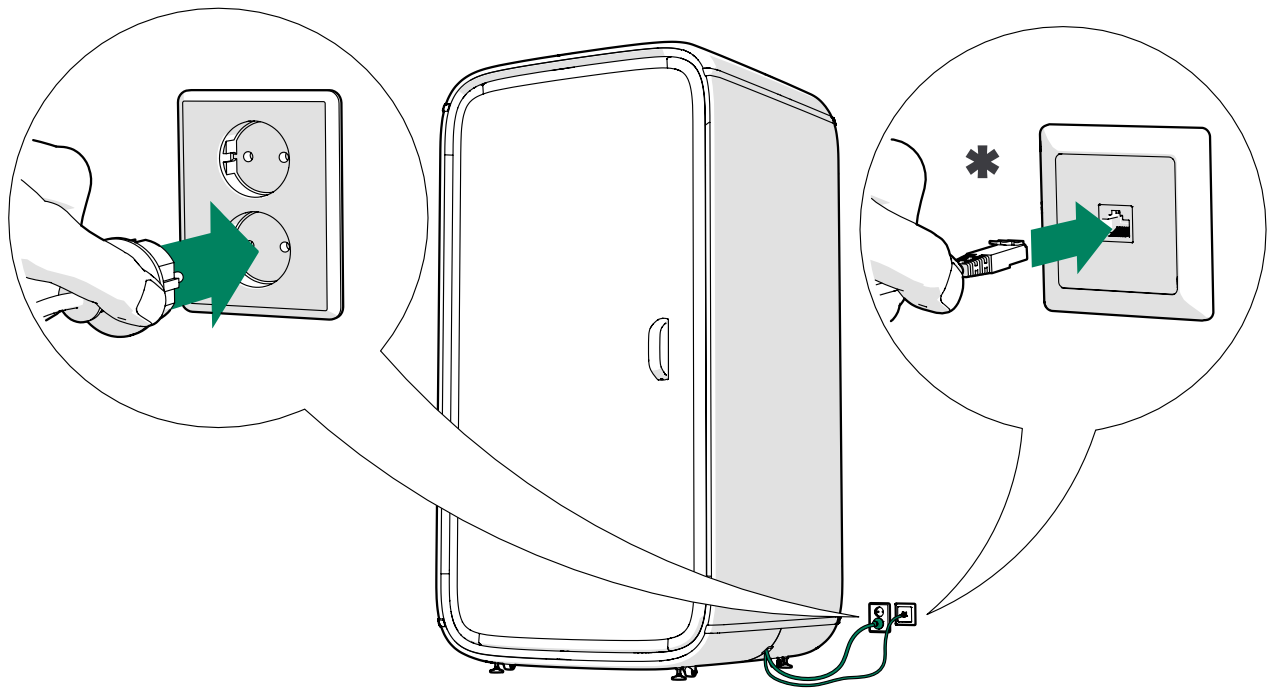



Figure 6: \* = optional LAN

**3.2 Replace the door handles****1. Remove the old door handles.**

Loosen the set screws to remove the handles.





**Note:** You do not have to remove the set screws.

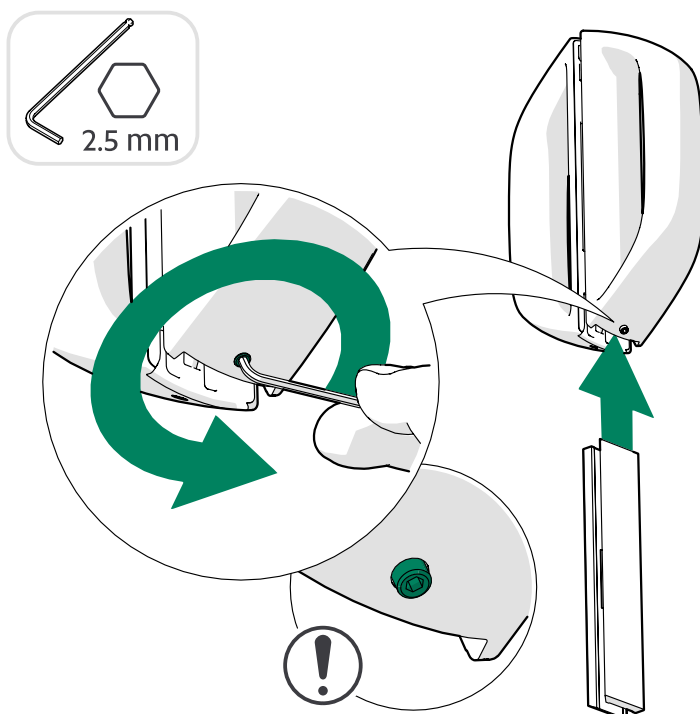

2. Slide the new handles into place and tighten the set screws.



**Note:** Make sure that the set screw is at the bottom.

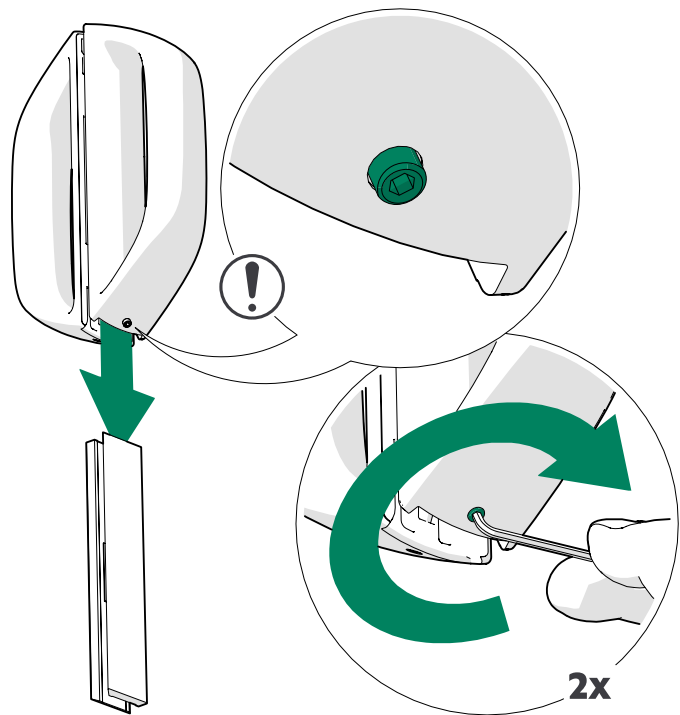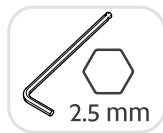

## 4 Replace the electrical components

### 4.1 Replace the ceiling light with control hub

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.



**DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

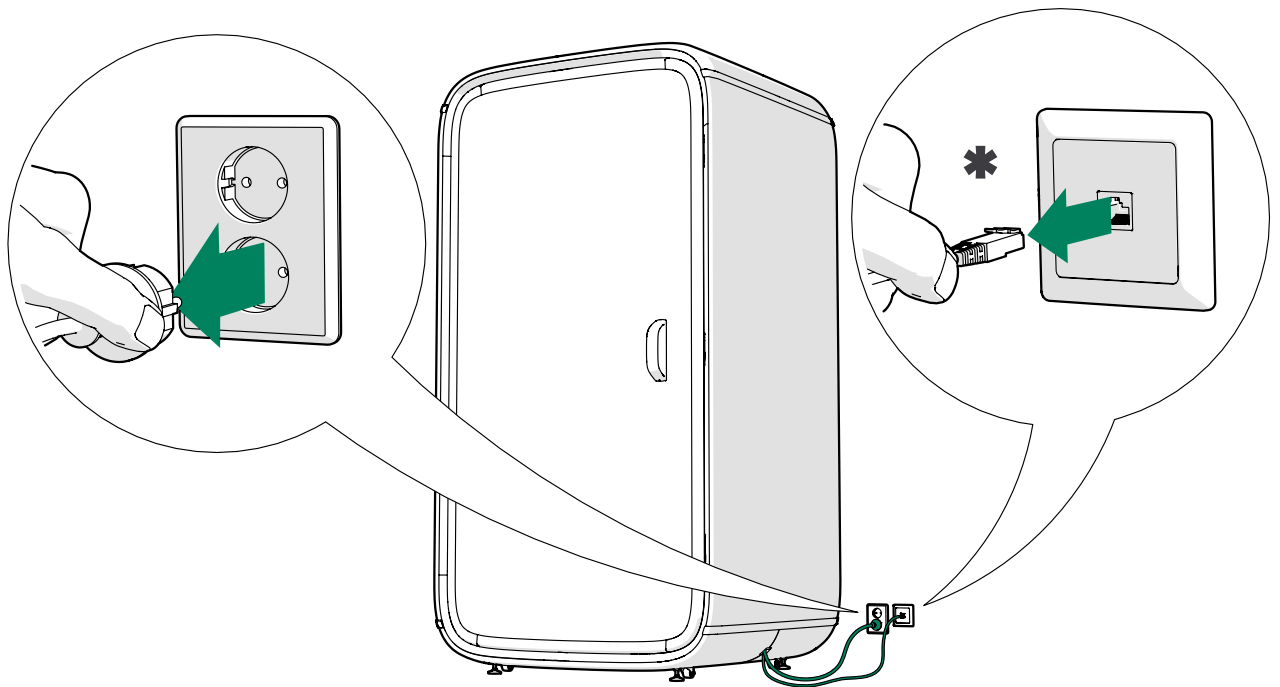


Figure 7: \* = optional LAN

2. Remove the fan cover.



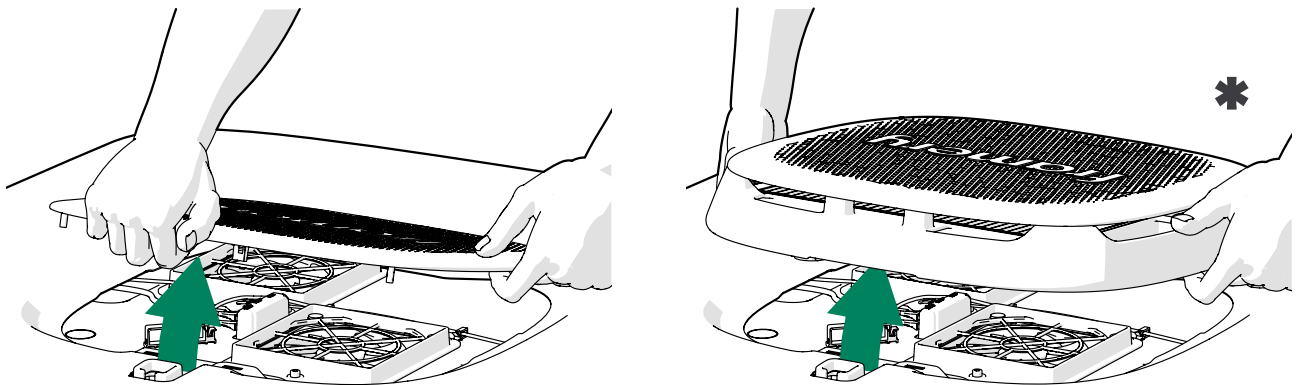


Figure 8: \* = With optional activated carbon filter

3. Disconnect all of the electrical cords from the control hub.

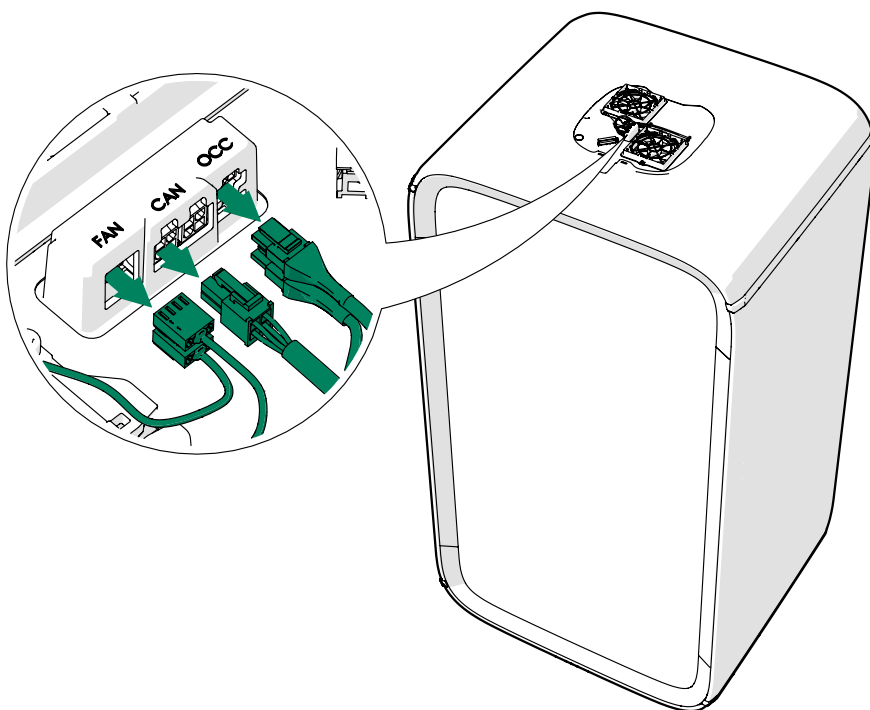


4. Remove the light with control hub from the ceiling.

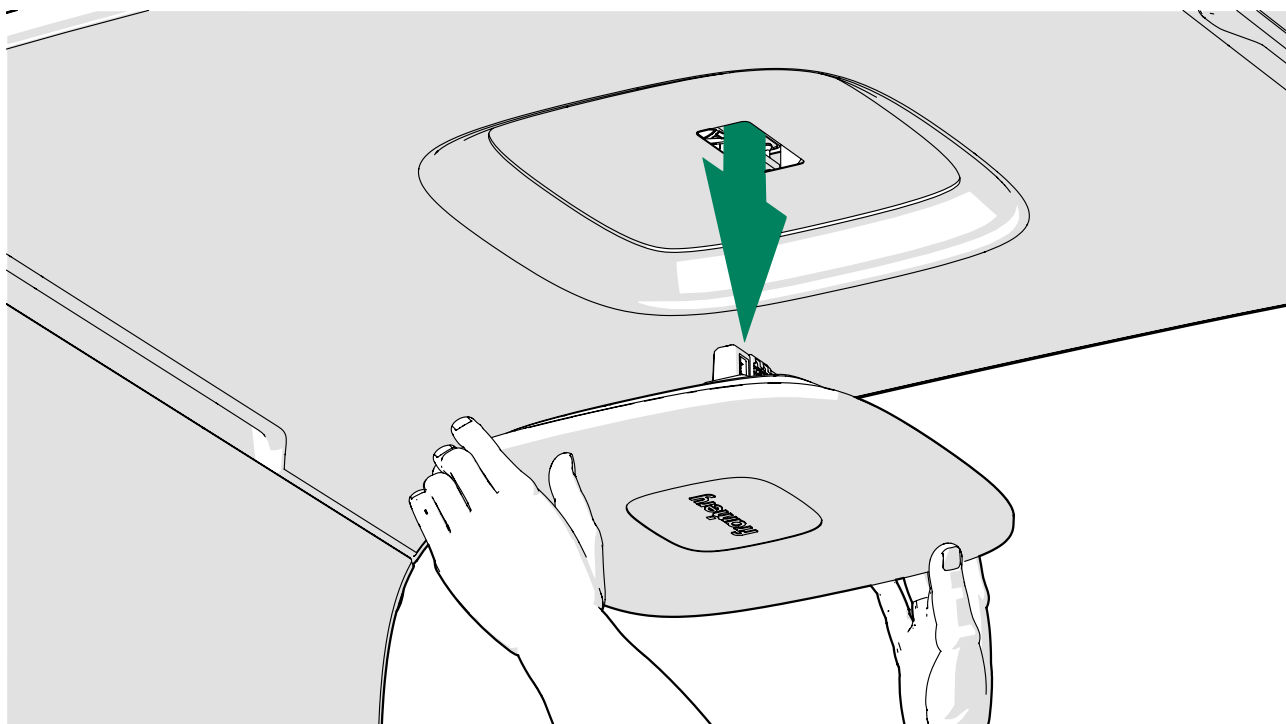


5. Install the new light with control hub.

The light with control hub attaches to the ceiling with magnets.

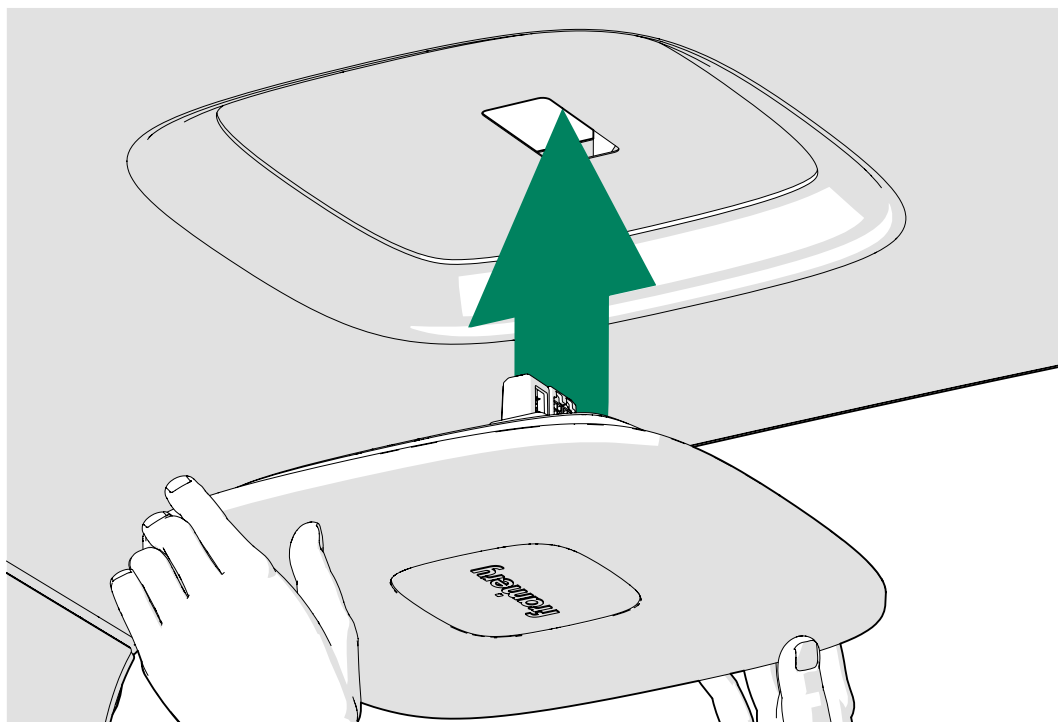

6. Connect the electrical cords to the control hub.

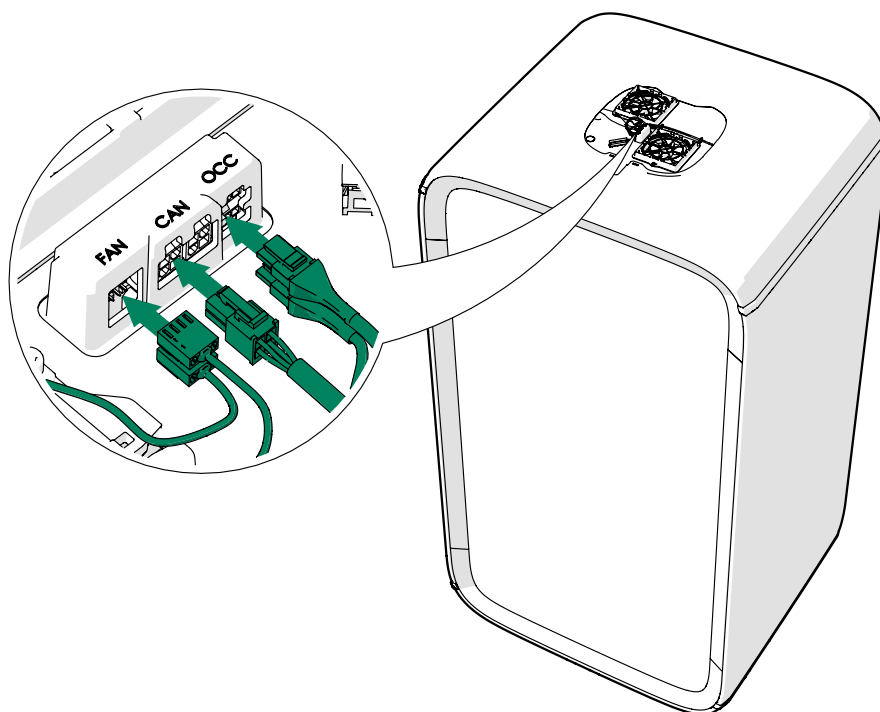

7. Install the fan cover.

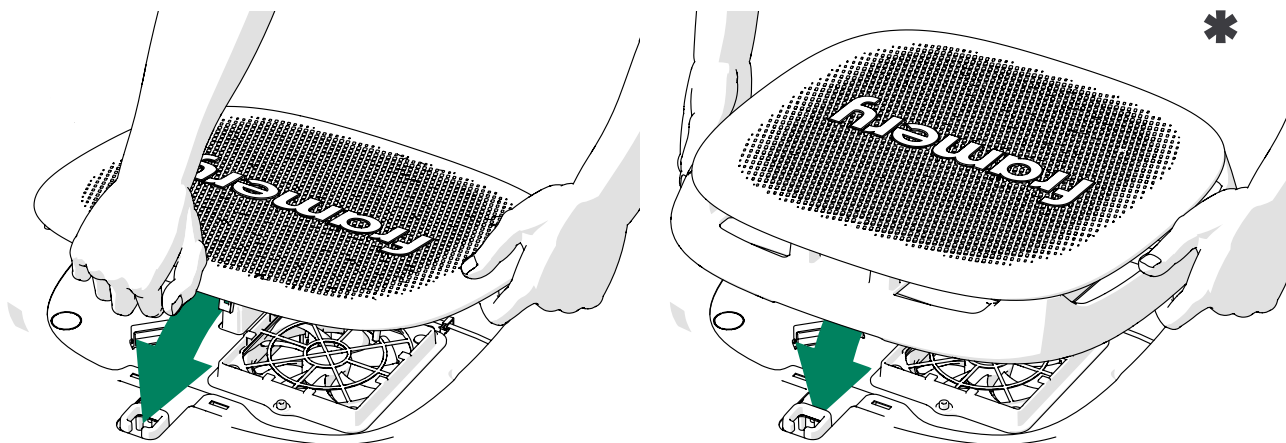


Figure 9: \* = With optional activated carbon filter

8. Connect the power cord to the power outlet.

If equipped with the optional LAN, also connect the LAN cord to the outlet.

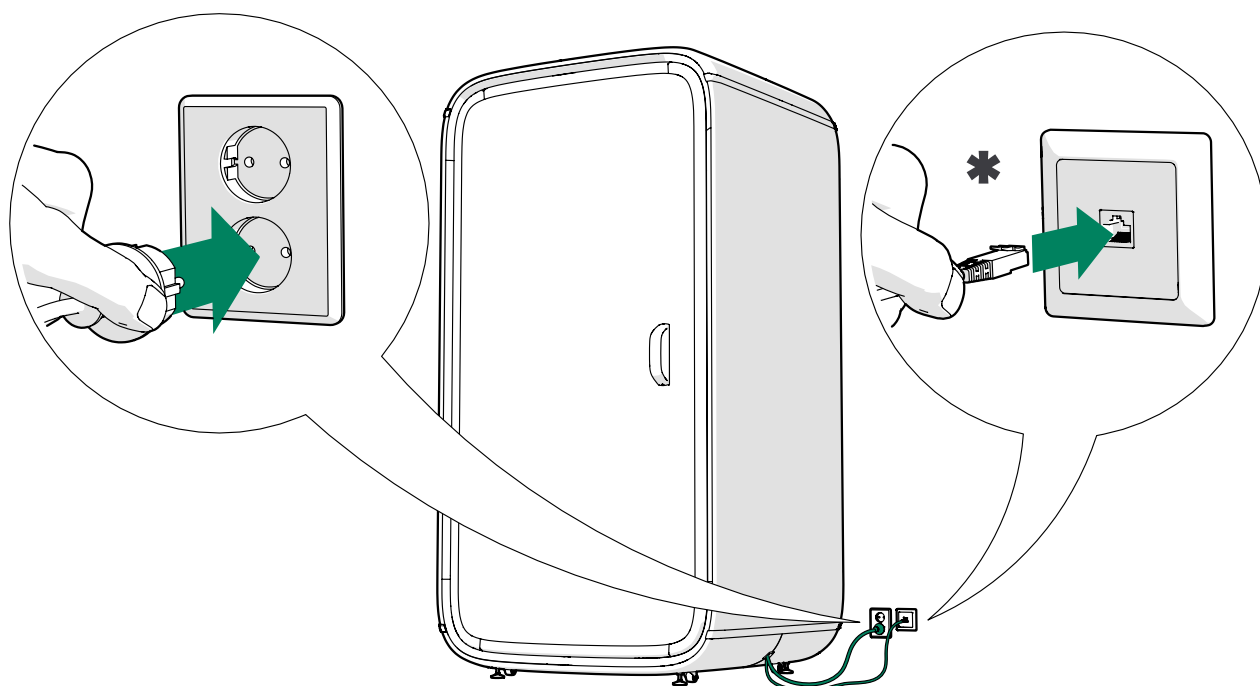


Figure 10: \* = optional LAN

## 4.2 Replace the fans

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.



**DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

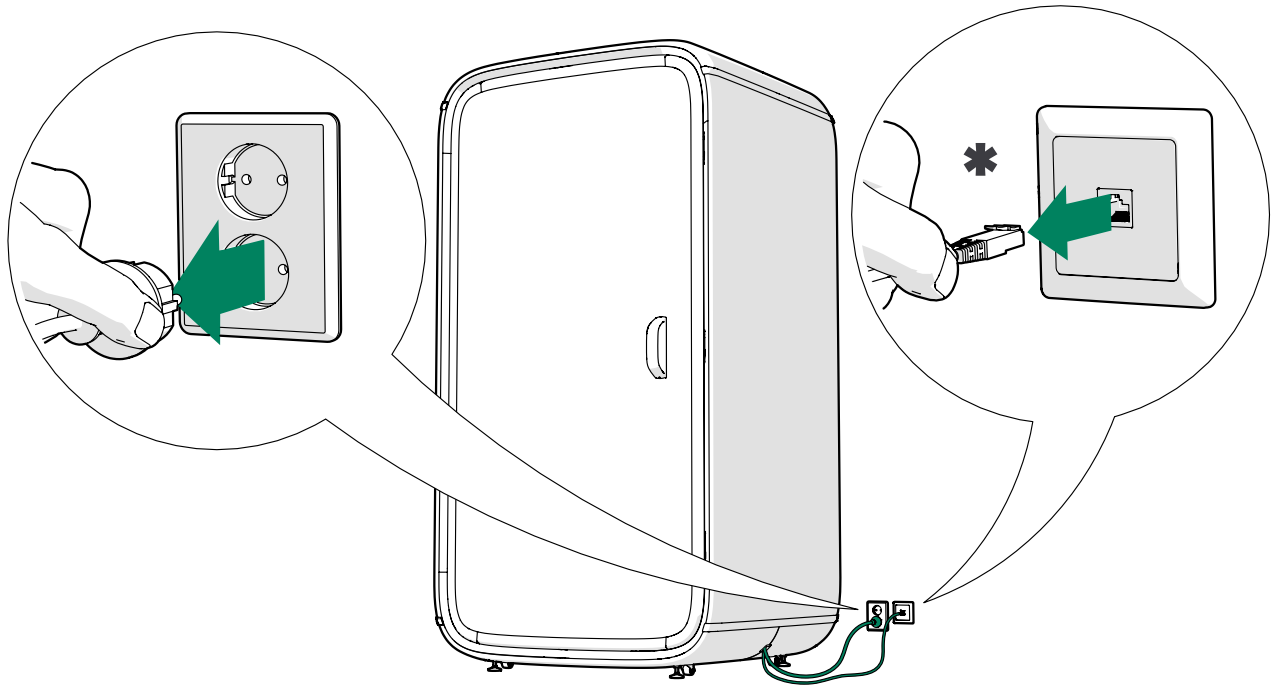


Figure 11: \* = optional LAN

2. Remove the fan cover.


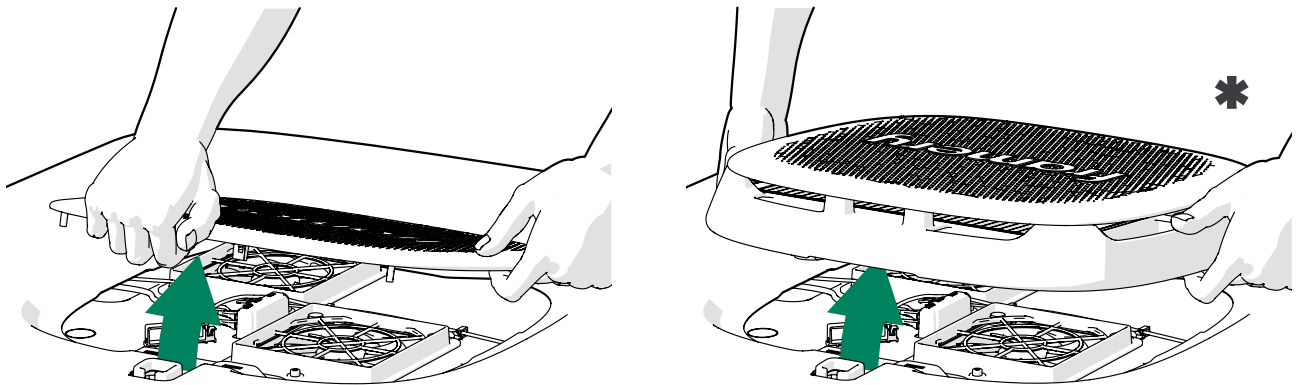



Figure 12: \* = With optional activated carbon filter




3. Disconnect the fan cords from the control hub.

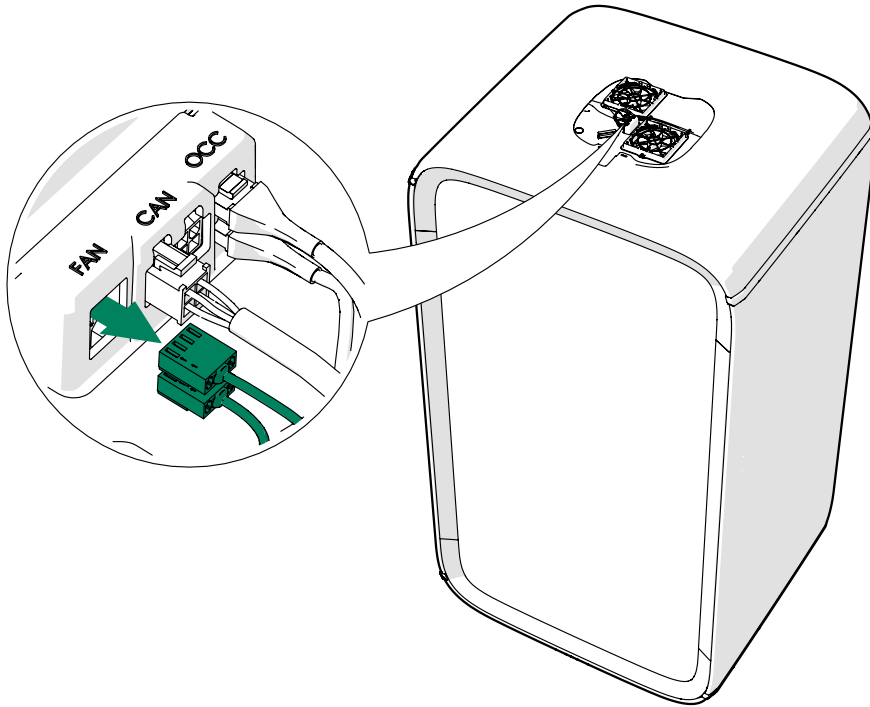


4. Remove the old fans from the roof.

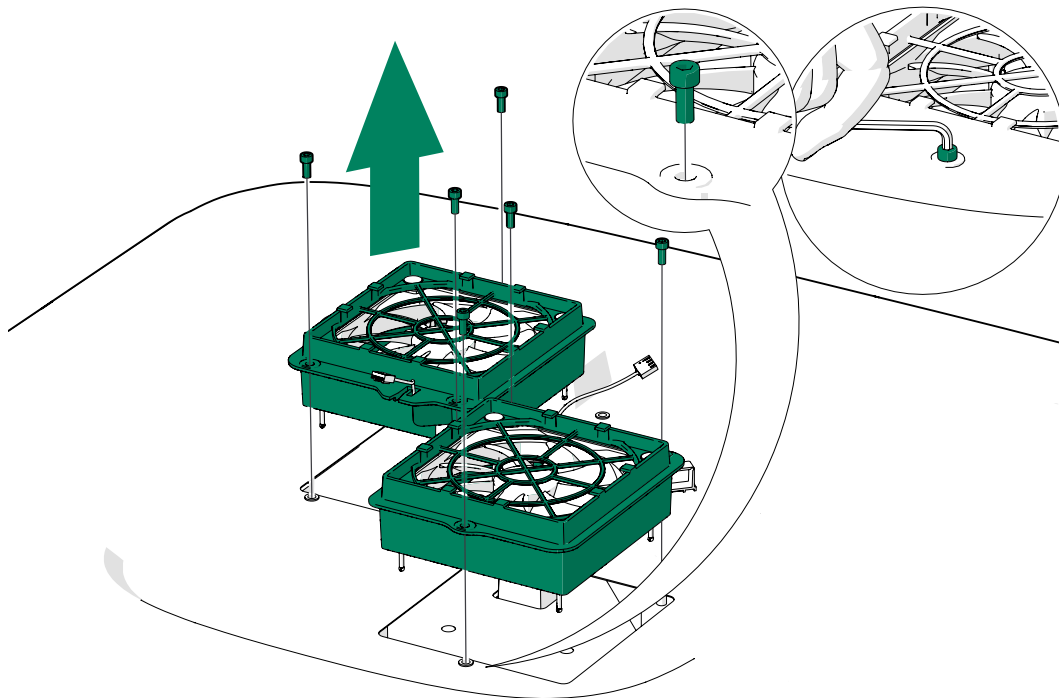

5. Install the new fans to the roof.

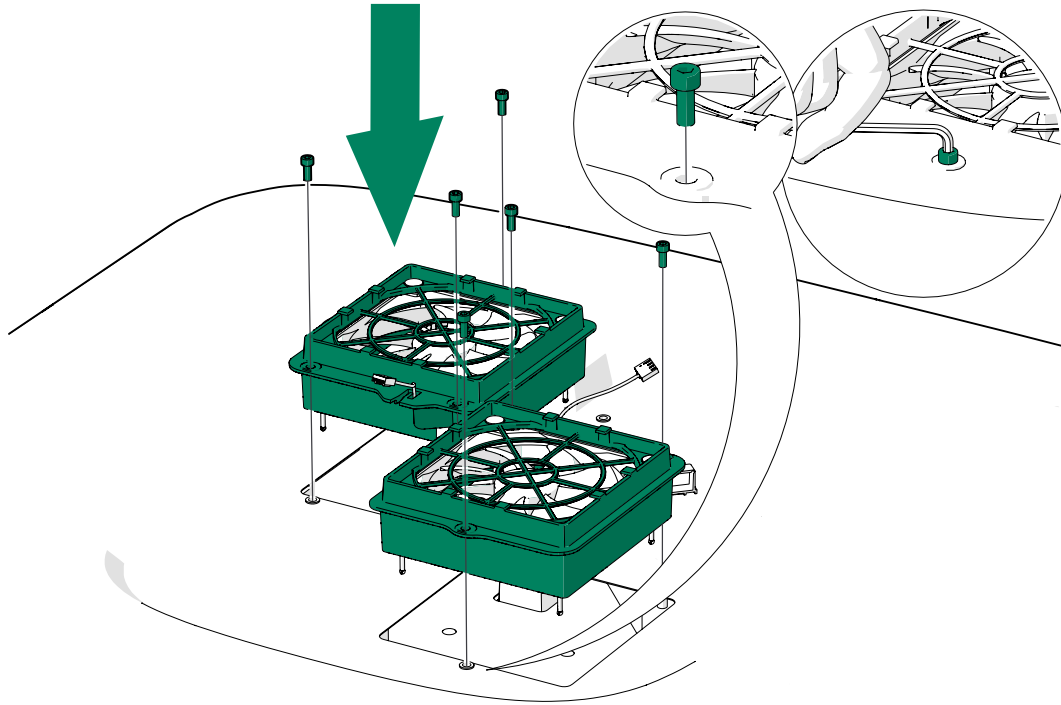

6. Connect the fan cords to the FAN connectors of the control hub.

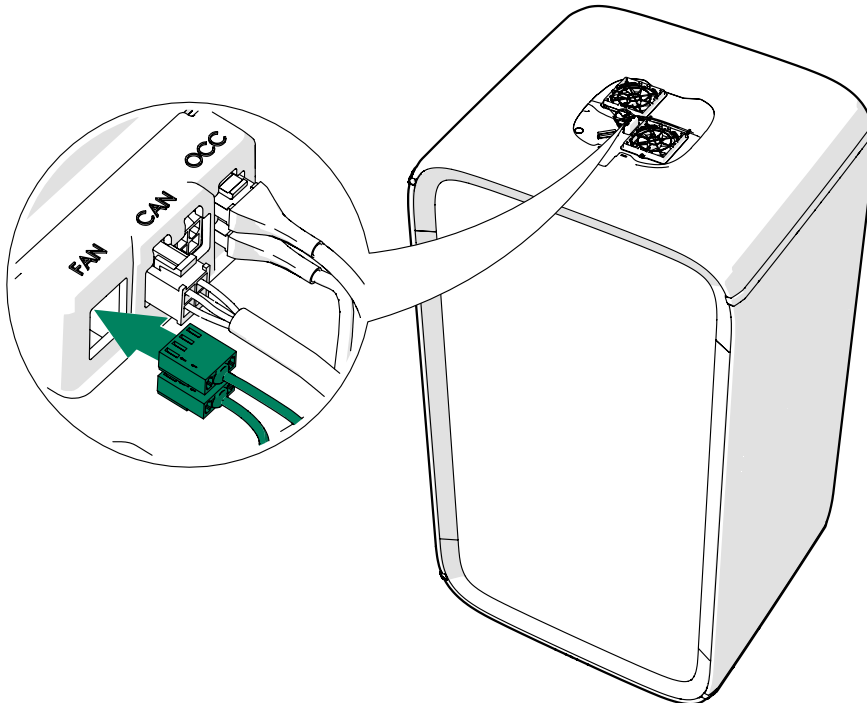

7. Install the fan cover.

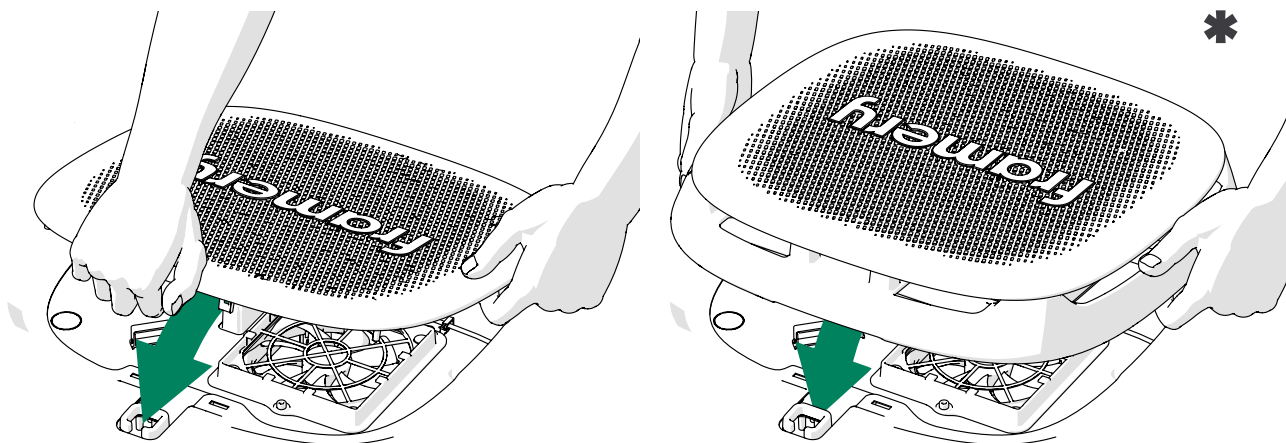


Figure 13: \* = With optional activated carbon filter

8. Connect the power cord to the power outlet.

If equipped with the optional LAN, also connect the LAN cord to the outlet.

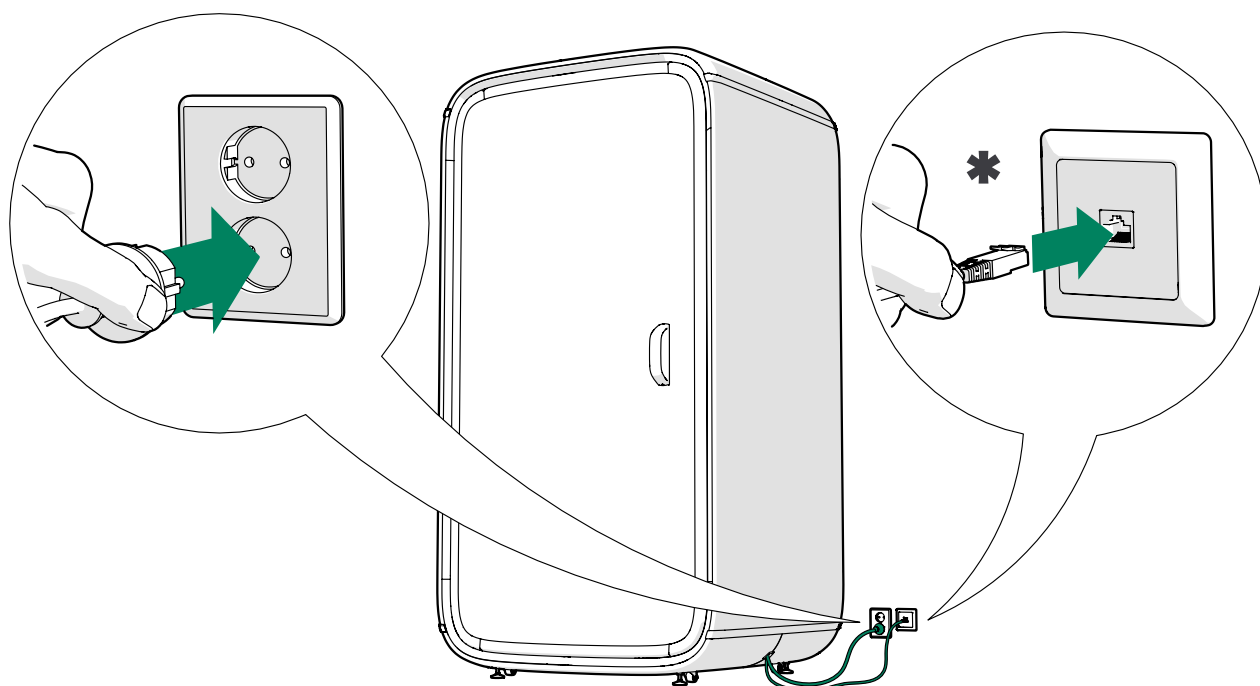


Figure 14: \* = optional LAN

## 4.3 Replace the control panel

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.

**⚠ DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.



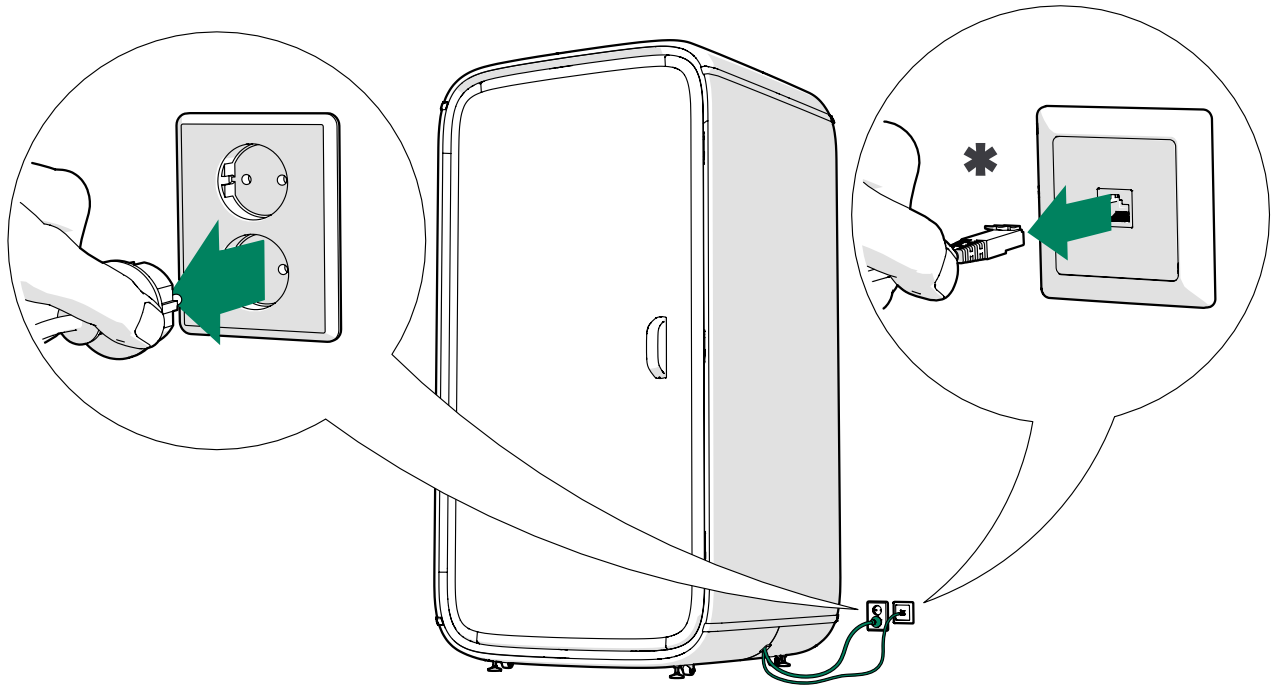


Figure 15: \* = optional LAN

2. Remove the plastic trims from the techwall.

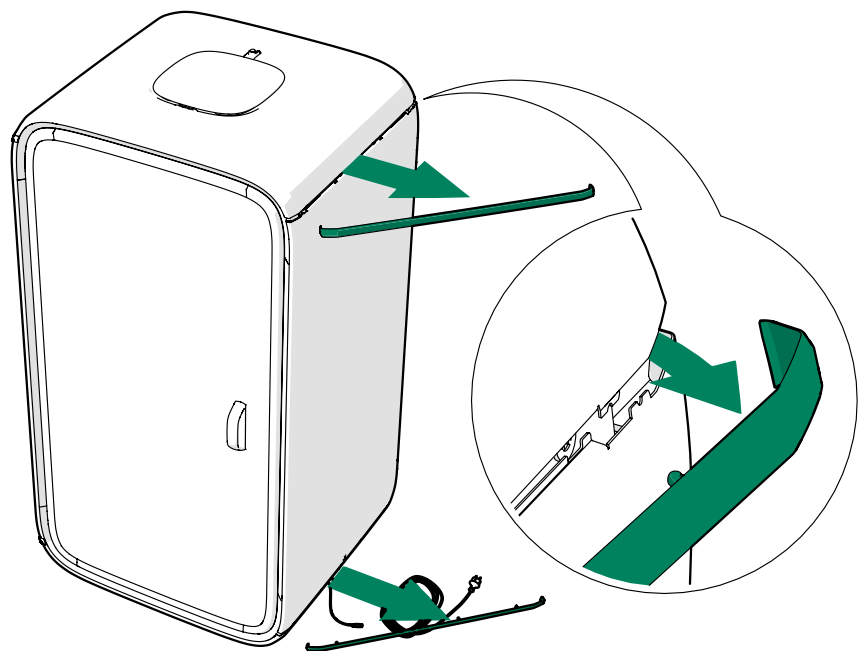

3. Remove the wall body cover from the techwall.

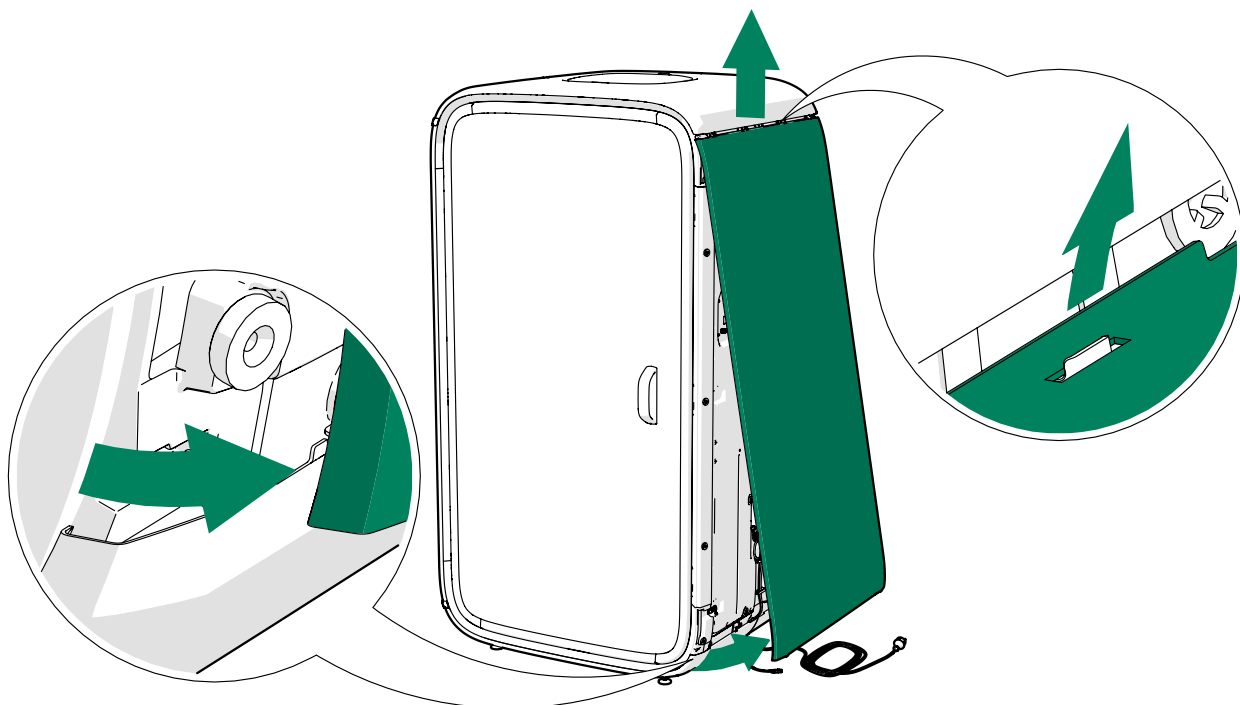

4. Remove the screws from the power unit cover and open the cover.



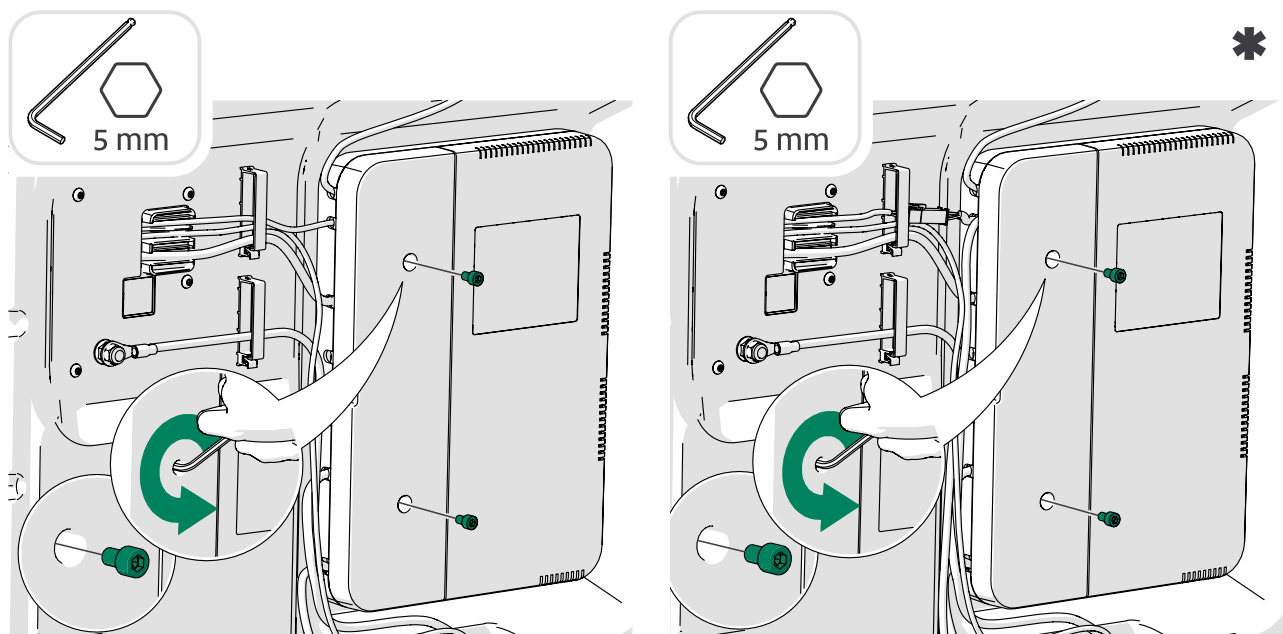


Figure 16: \* = With the optional wireless charger

5. Disconnect the CAN cord from the power unit.

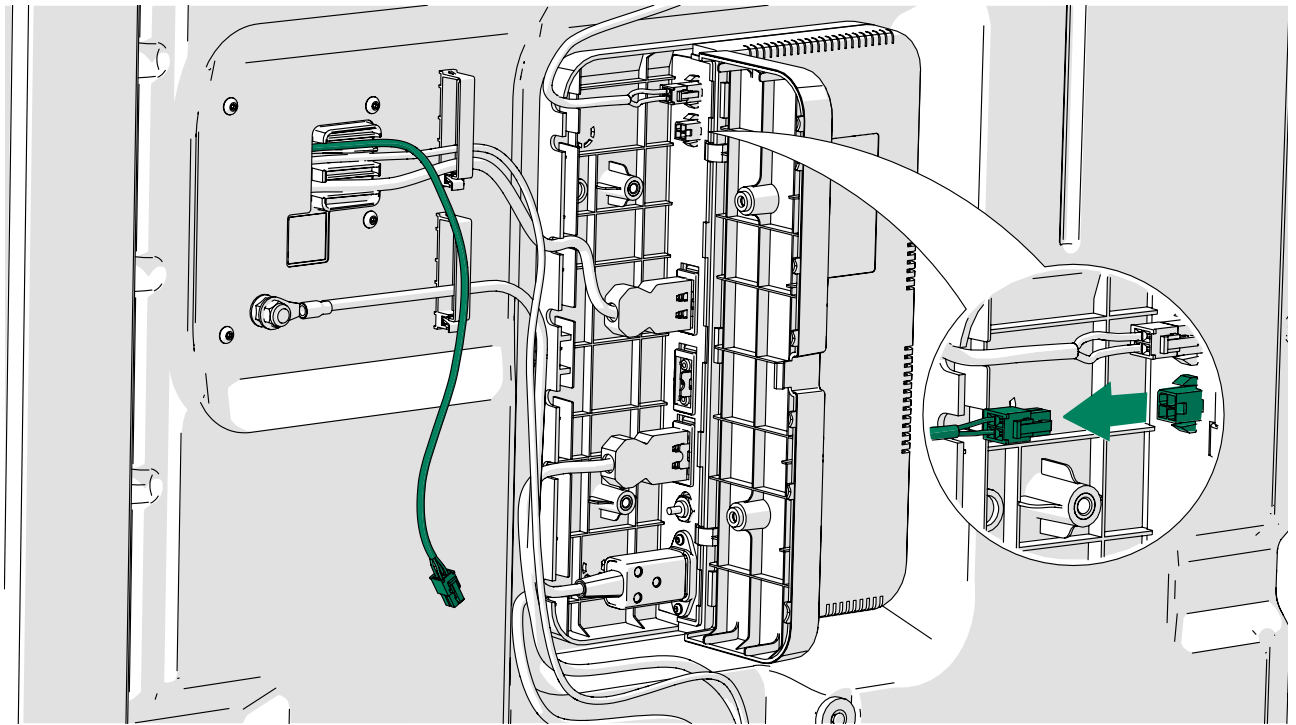


**Figure 17: Without the optional wireless charger**

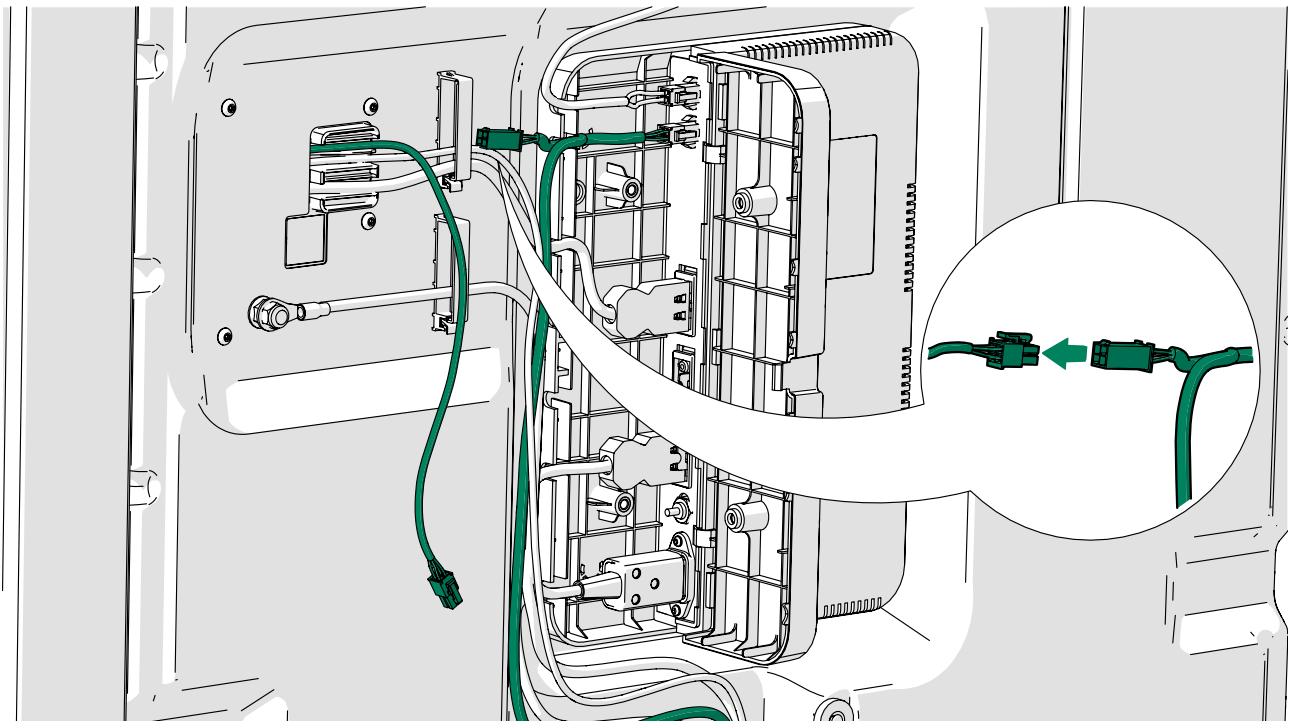


**Figure 18: With the optional wireless charger**

6. Disconnect the power outlet cord from the power unit.

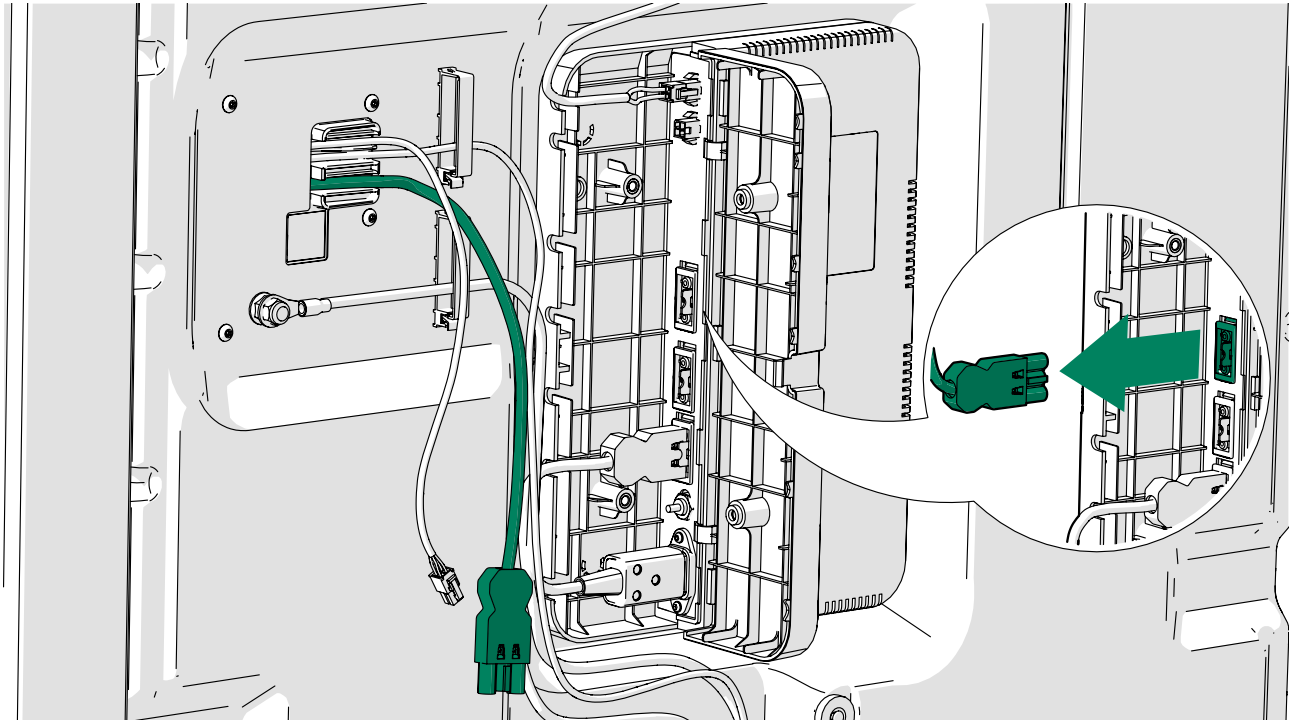

**Figure 19: Without the optional wireless charger**

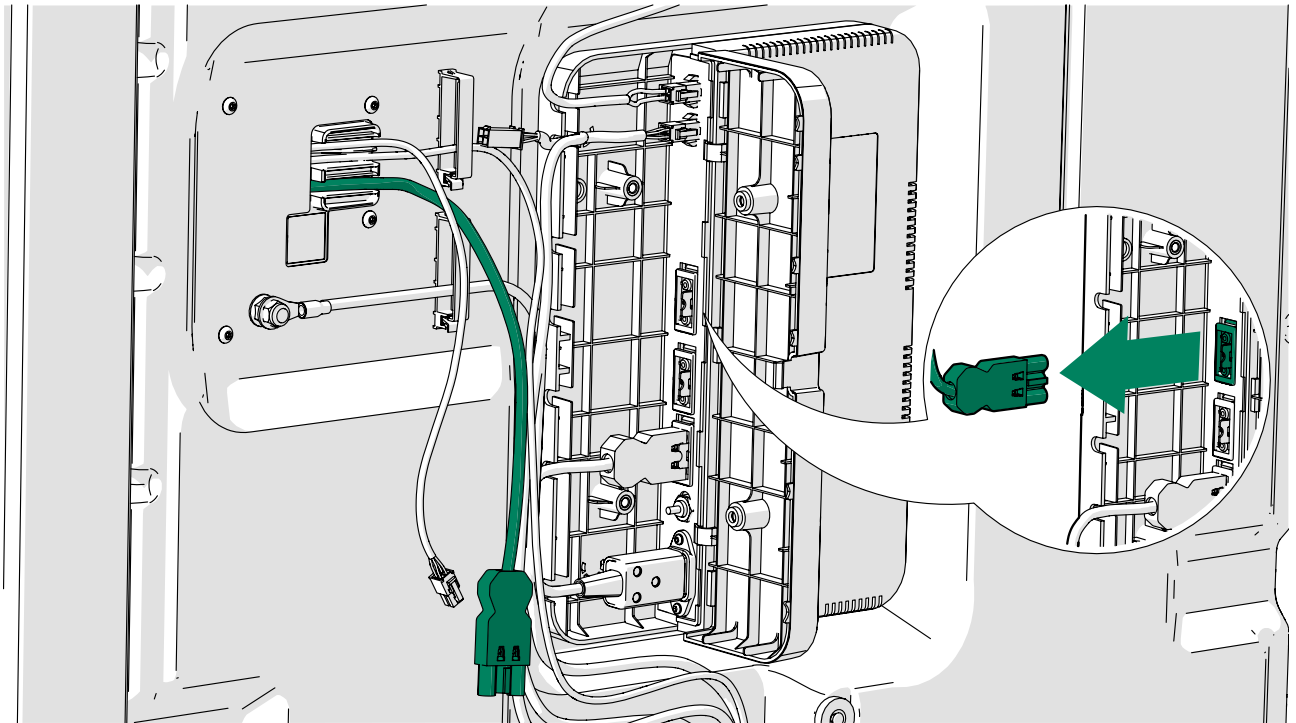

**Figure 20: With the optional wireless charger**



7. Remove the screws from the back of the control panel.

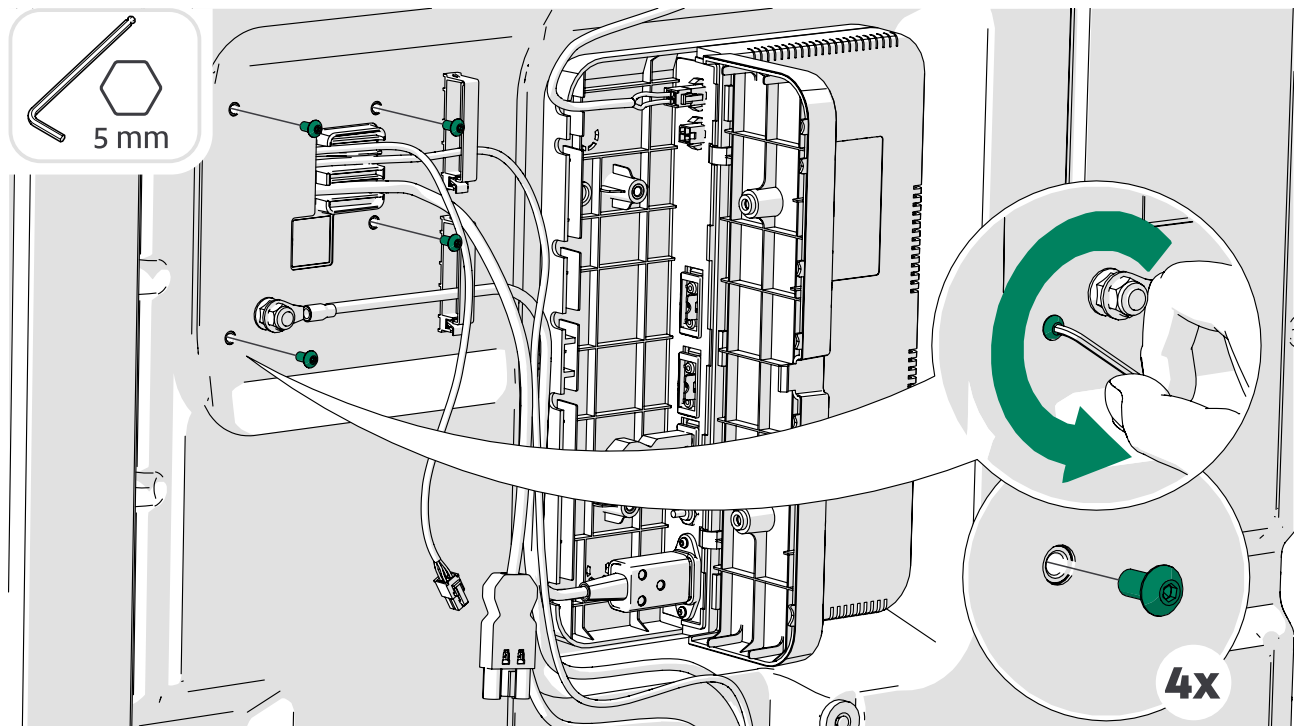


Figure 21: Without the optional wireless charger

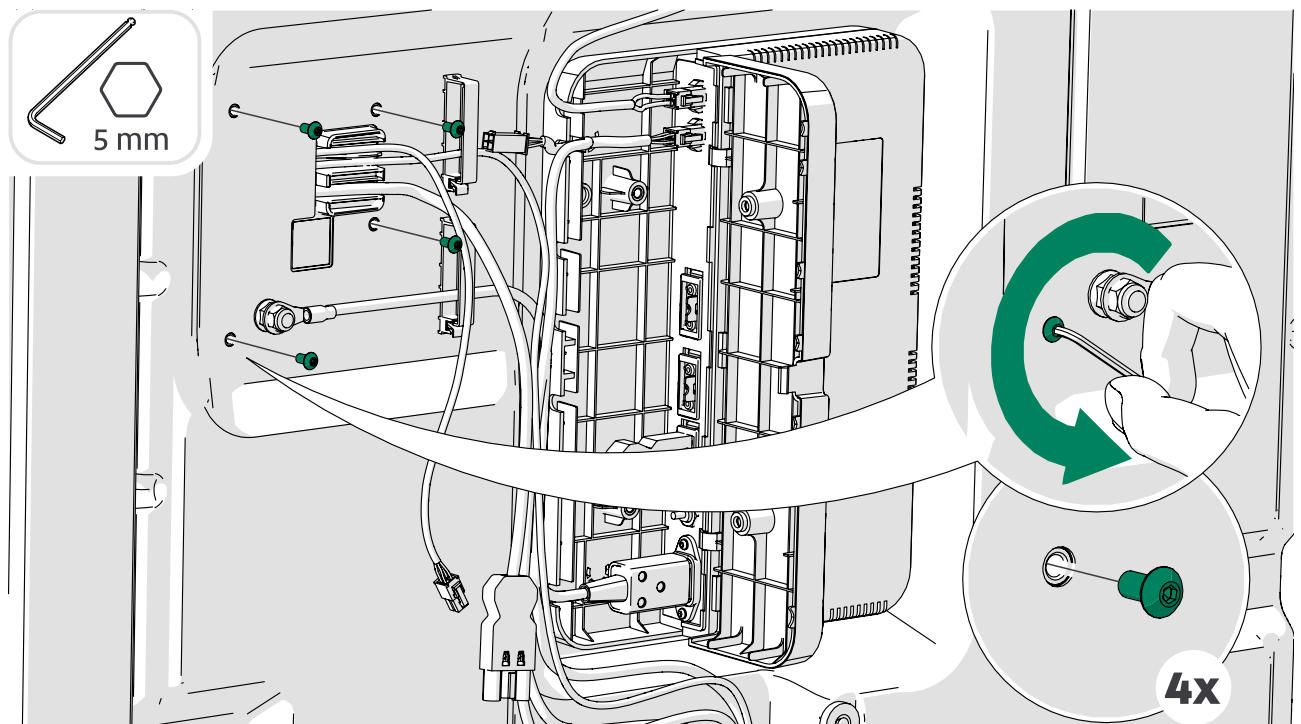


Figure 22: With the optional wireless charger



8. Remove the old control panel from the techwall.

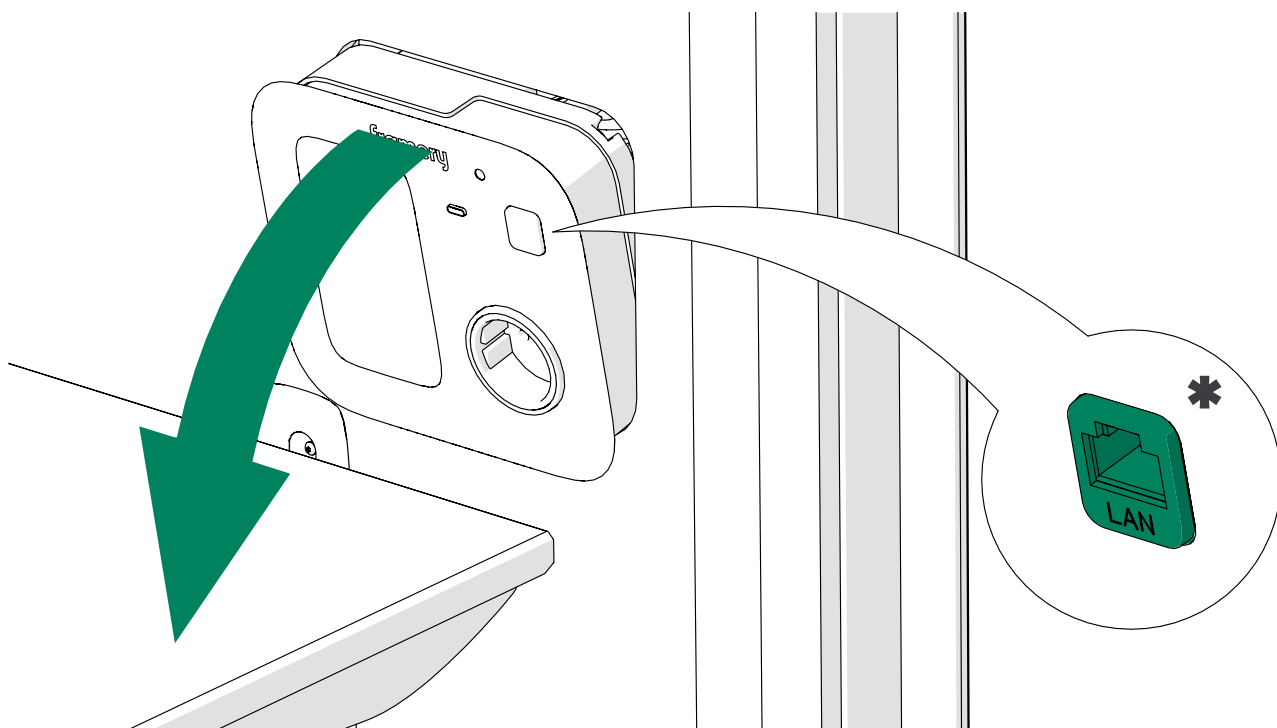


Figure 23: \* = optional LAN

9. Connect the CAN cord to the new control panel.  
If the optional LAN cord is included, connect it to the new control panel.


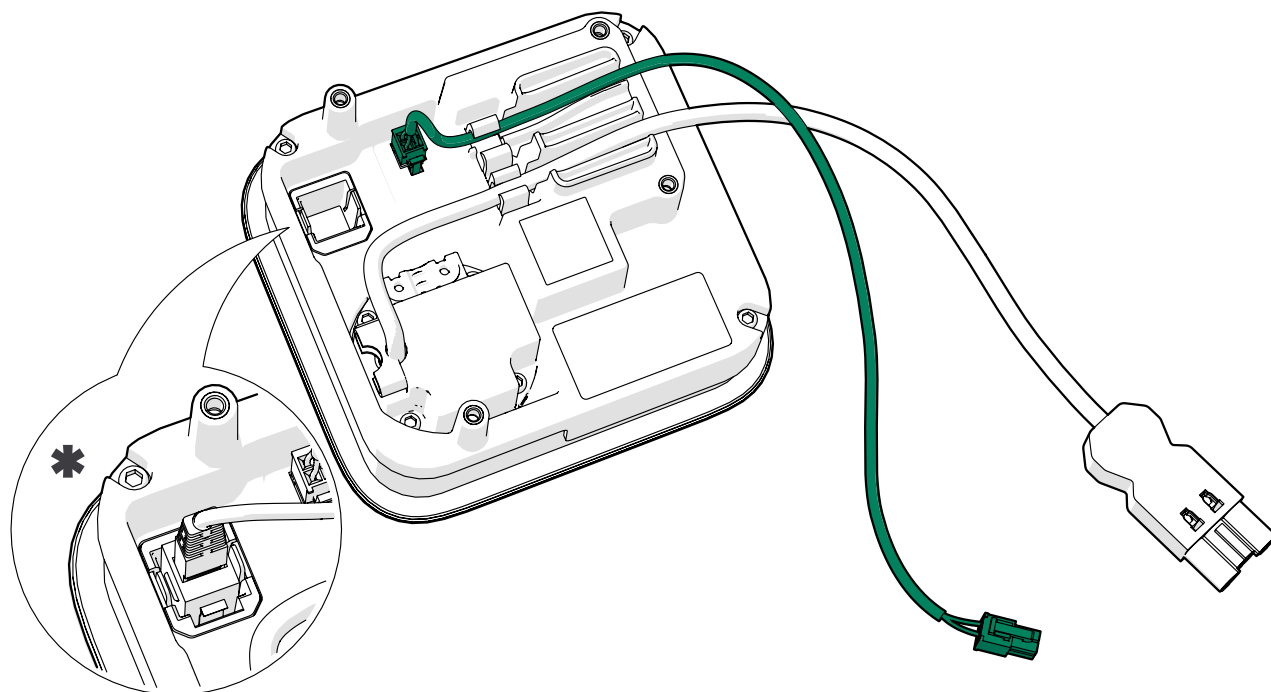


Figure 24: \* = optional LAN cord

10. Install the new control panel to the techwall.

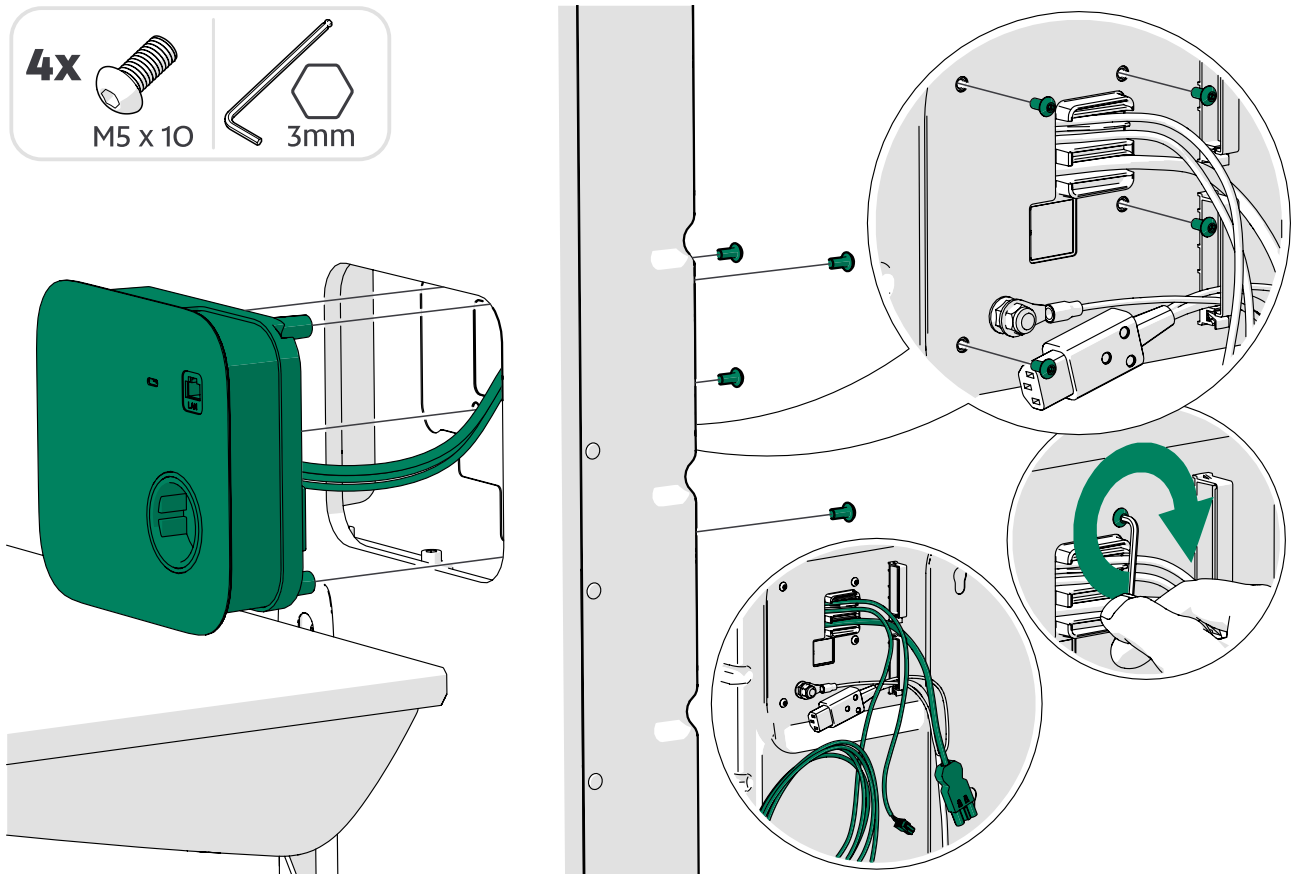

11. Connect the power outlet cord to the power unit.

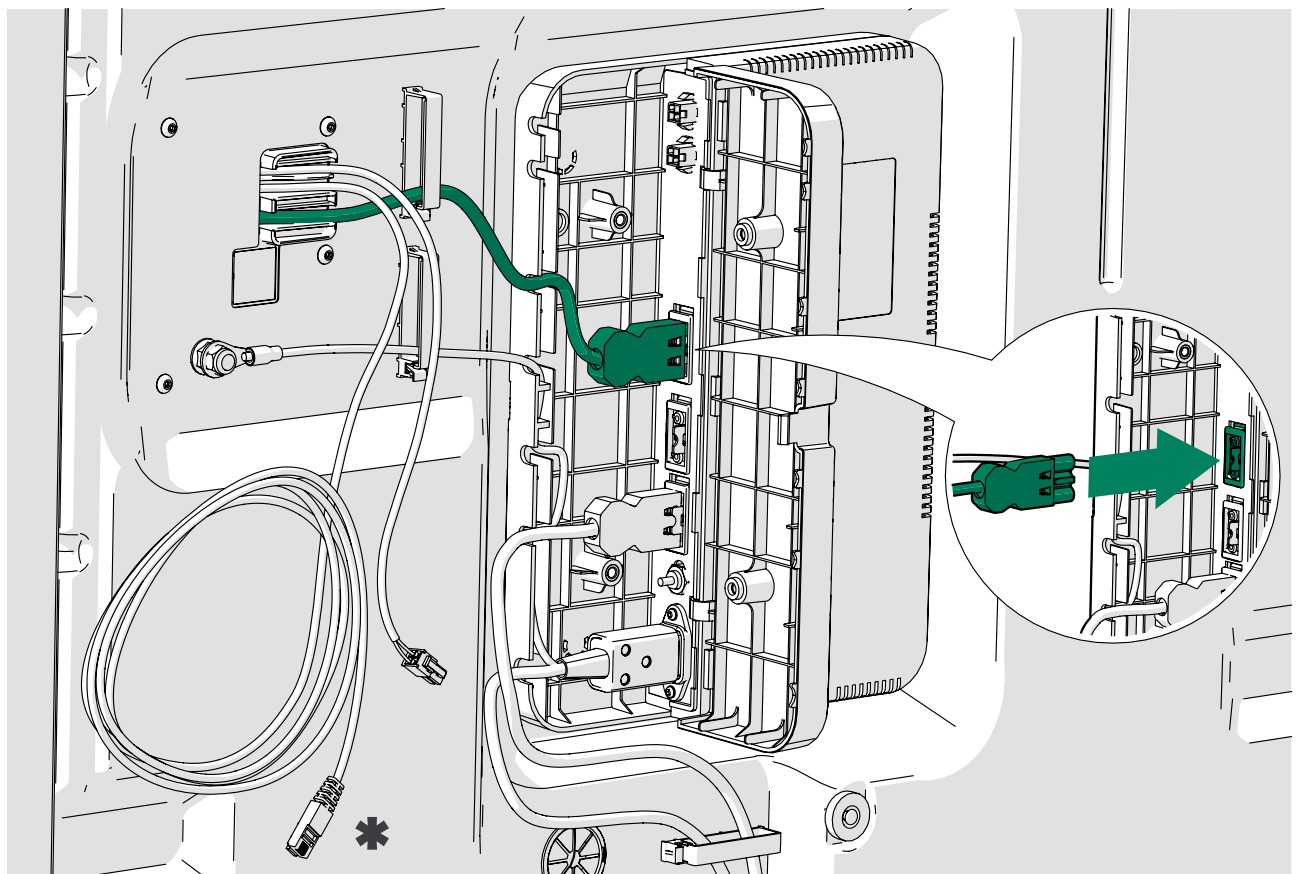


Figure 25: \* = optional LAN cord

12. Connect the CAN cord to the power unit.

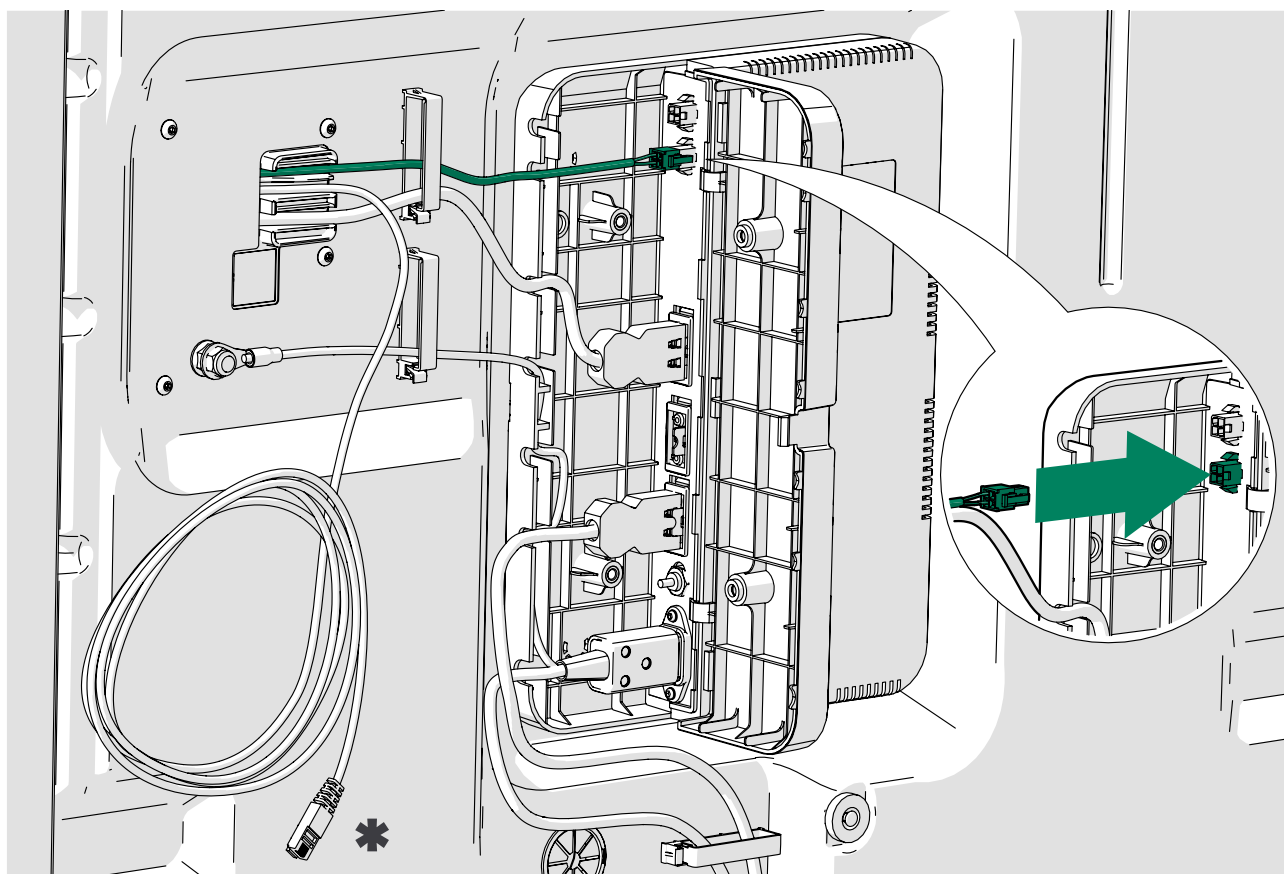


Figure 26: Without the optional wireless charger (\* = optional LAN cord)

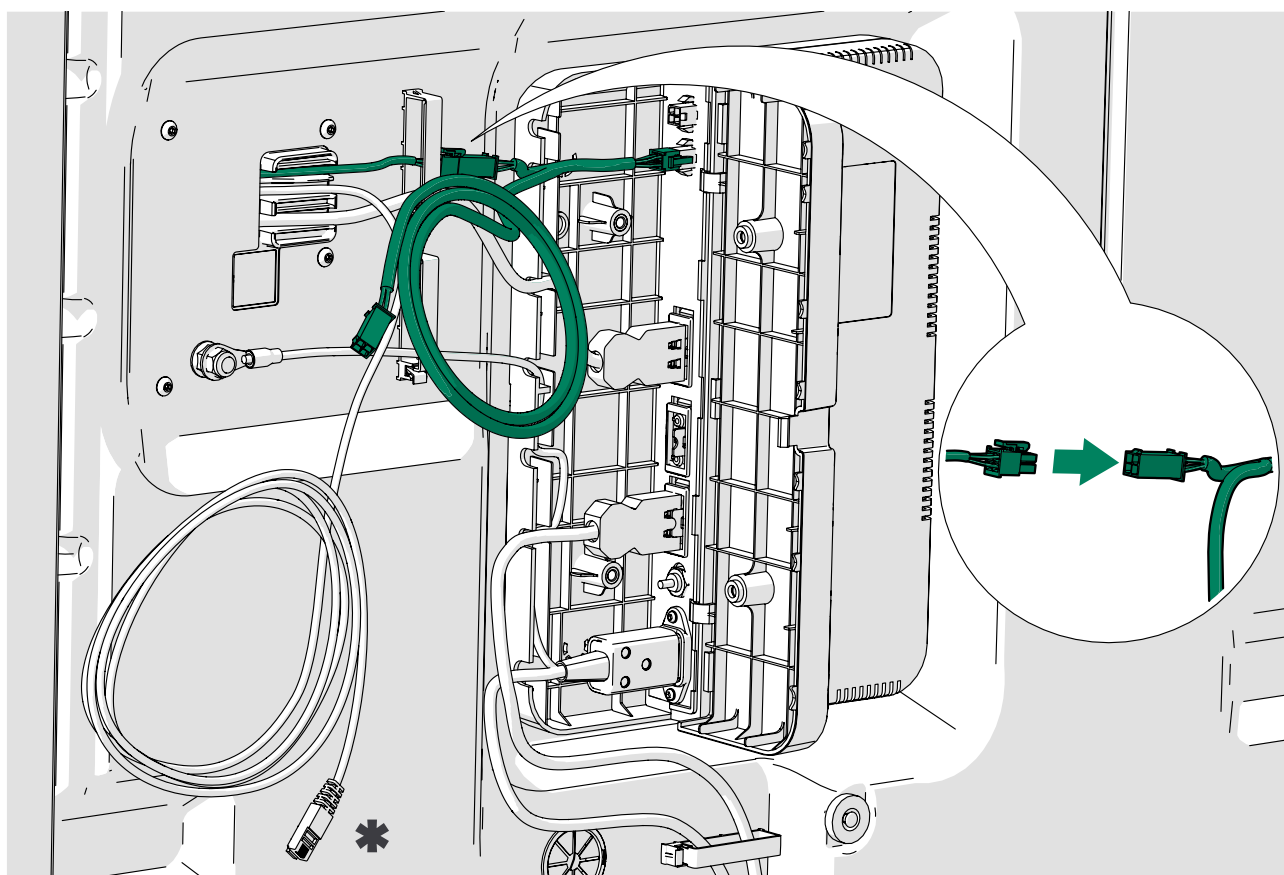


Figure 27: With the optional wireless charger (\* = optional LAN cord)

13. Close the power unit cover and install the screws.

⚠ **Note:** Make sure that the cords are not pinched or damaged.



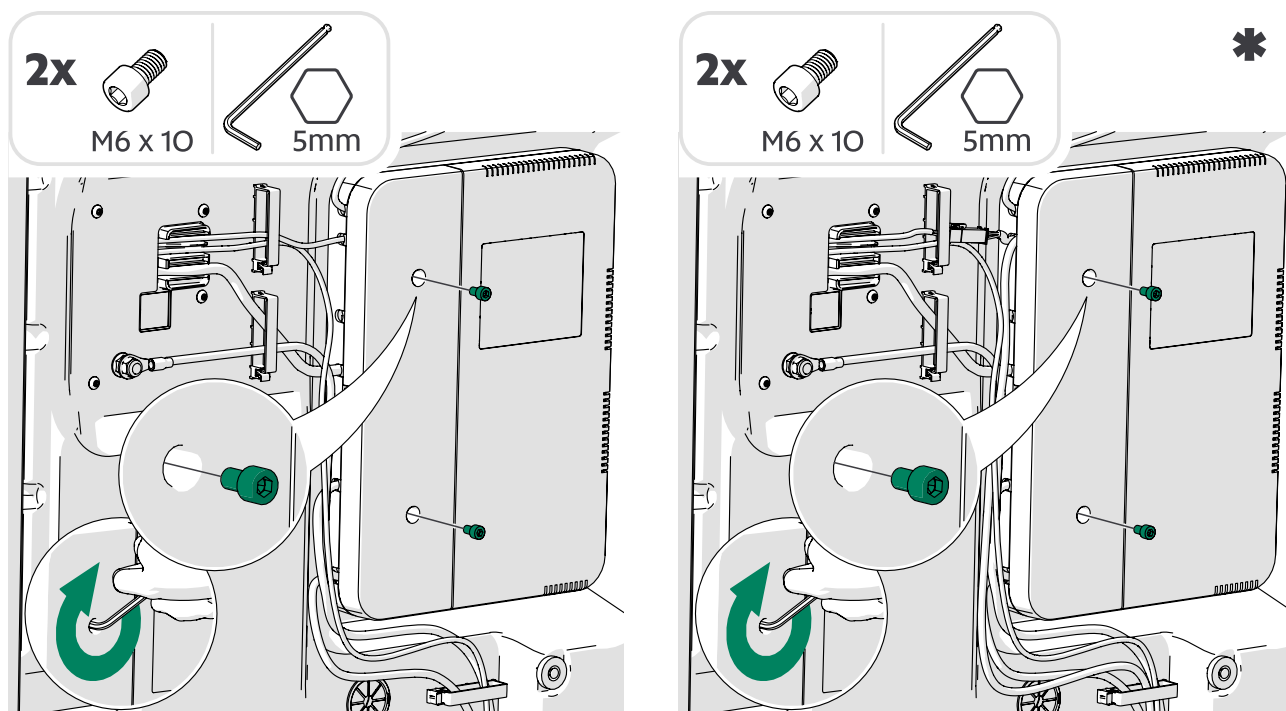


Figure 28: \* = With the optional wireless charger

14. Install the wall body cover.

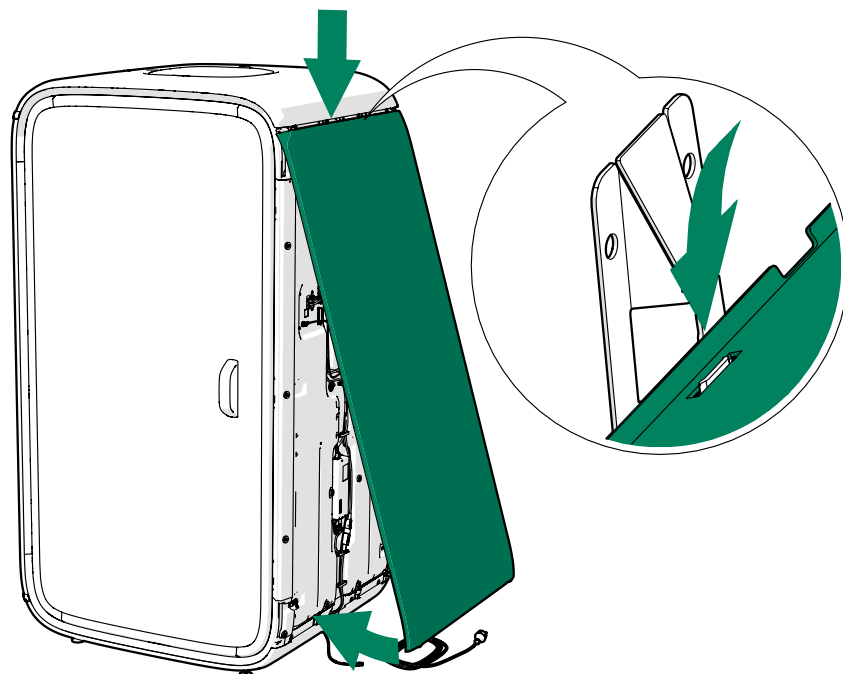

### 15. Install the plastic trims.

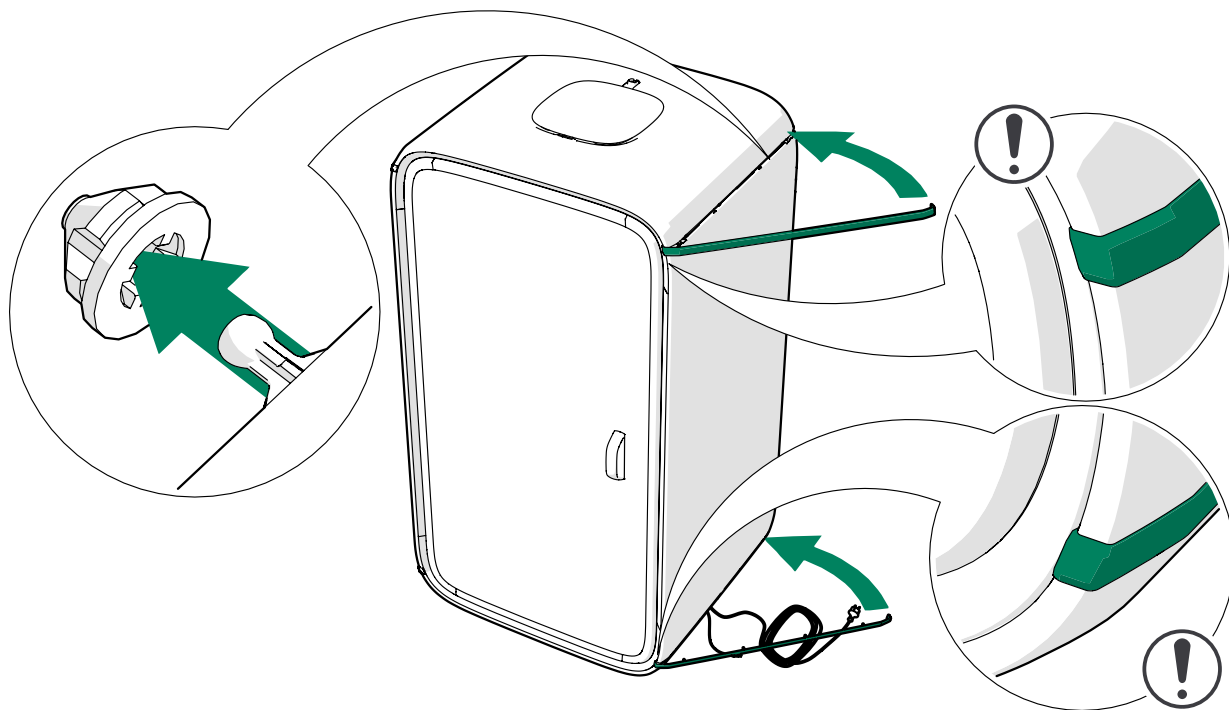

### 16. Connect the power cord.

If equipped with the optional LAN, also connect the LAN cord to an outlet.

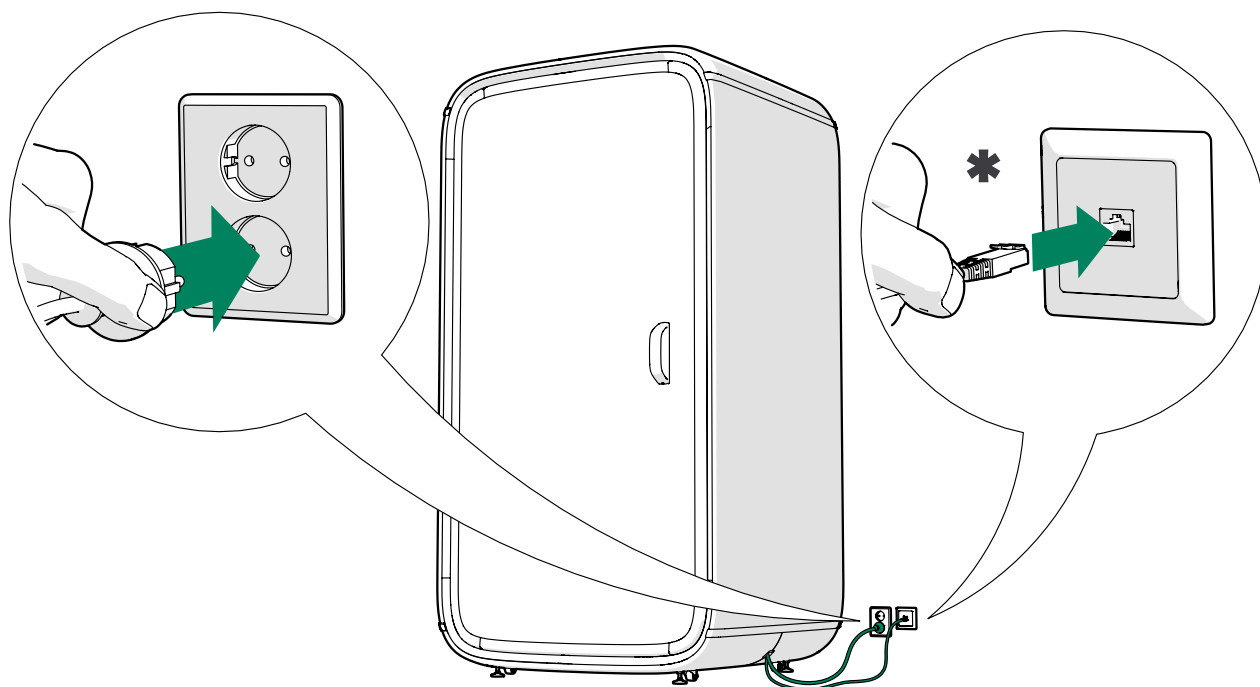


Figure 29: \* = optional LAN

## 4.4 Replace the occupancy indicator lights



**Note:** Set all removed parts aside carefully and neatly. All removed parts, excluding the one being replaced, will be needed for reassembly.

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.



**DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

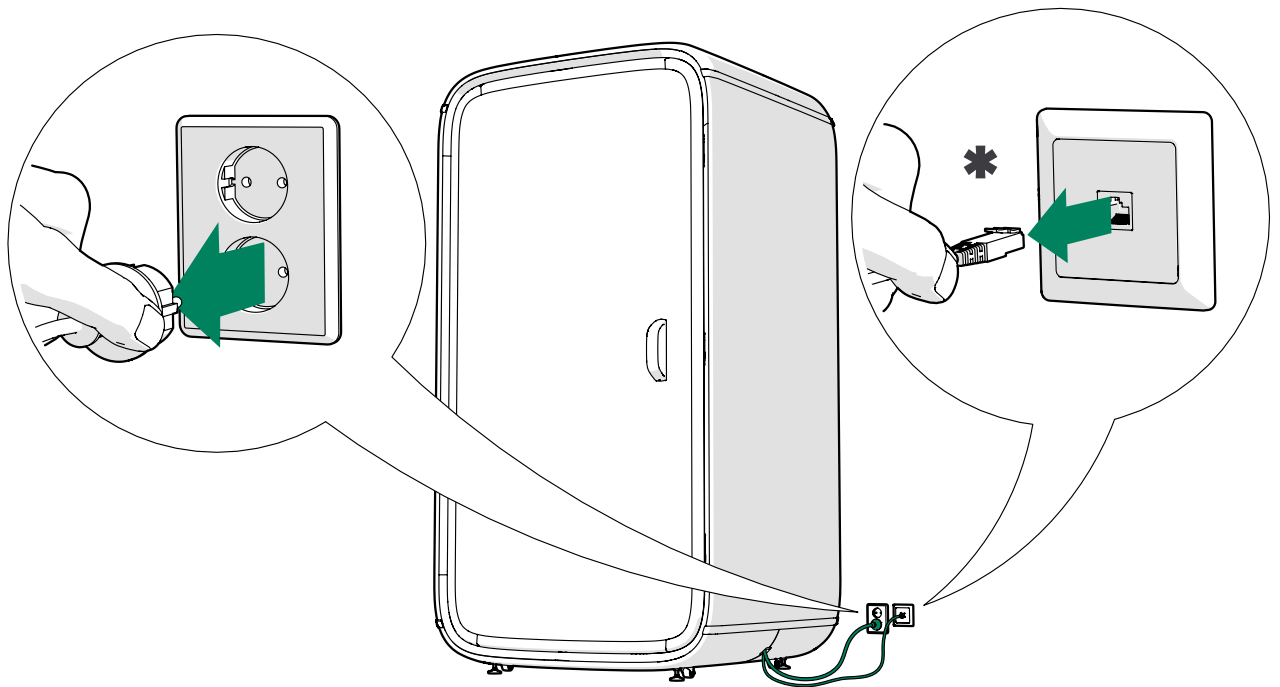


Figure 30: \* = optional LAN

2. Remove the fan cover.



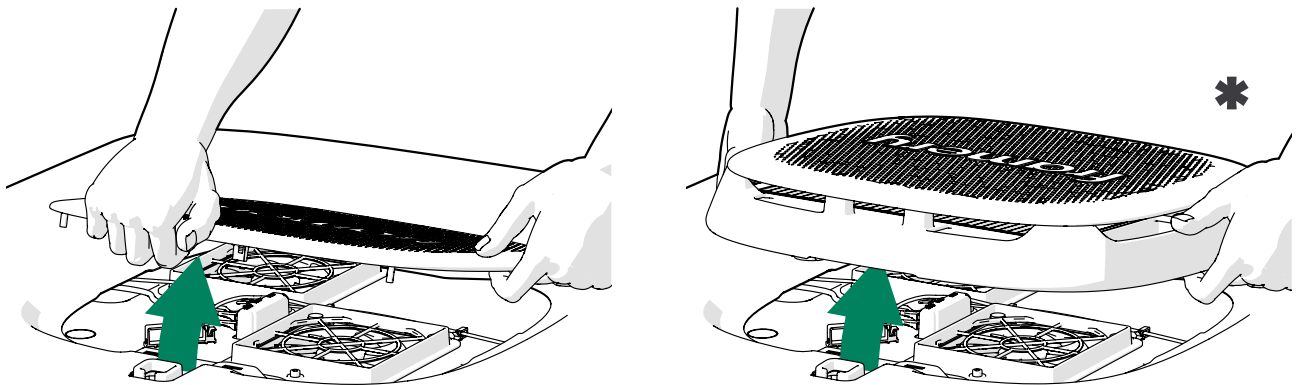


Figure 31: \* = With optional activated carbon filter

3. Remove the plastic trims.

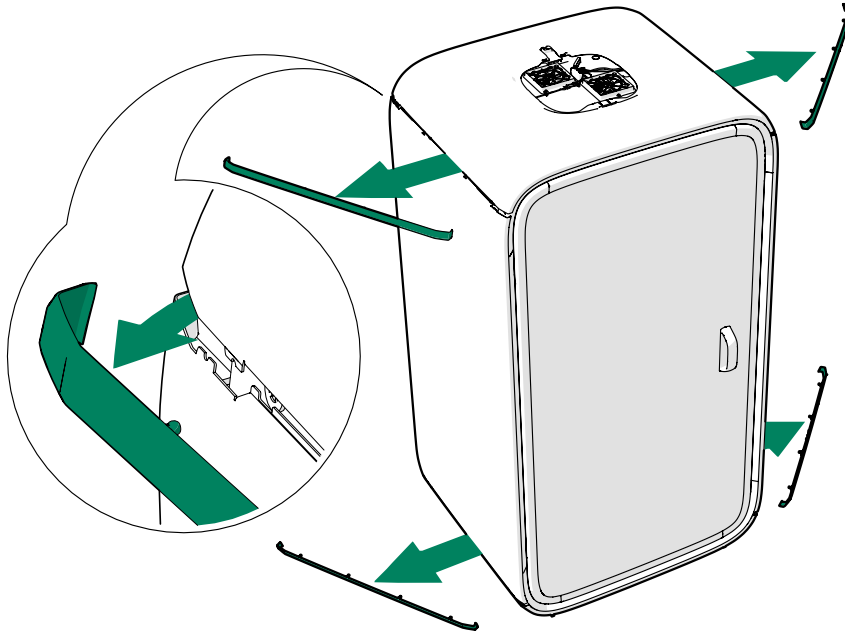


4. Remove the roof body cover.

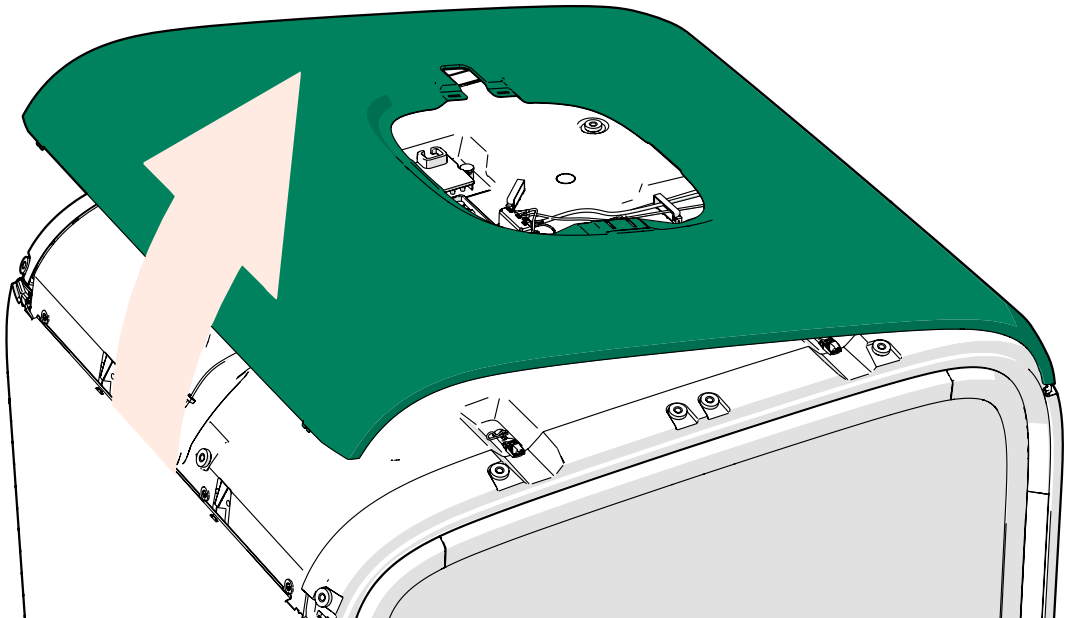




5. Remove the wall body covers.

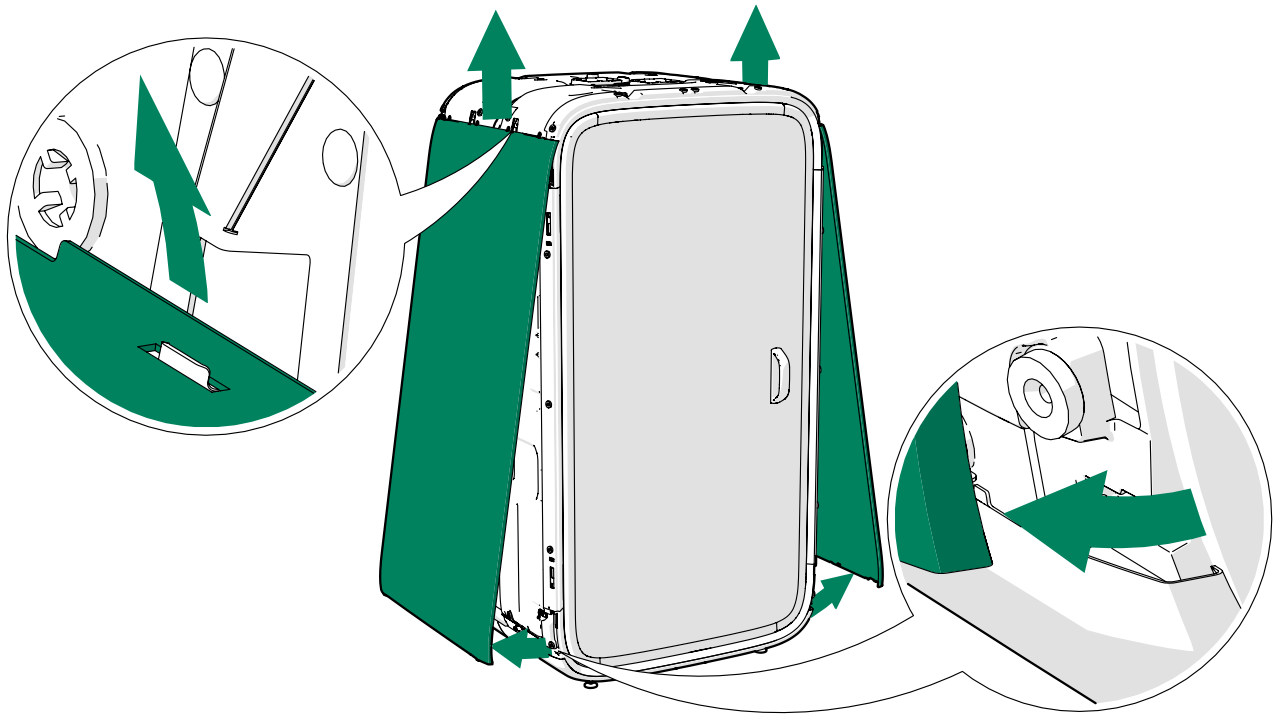

6. Disconnect the old occupancy indicator lights from the control hub and remove them from the pod.


⚠ **Note:** For reassembly, make a note of which corners the lights were removed from.

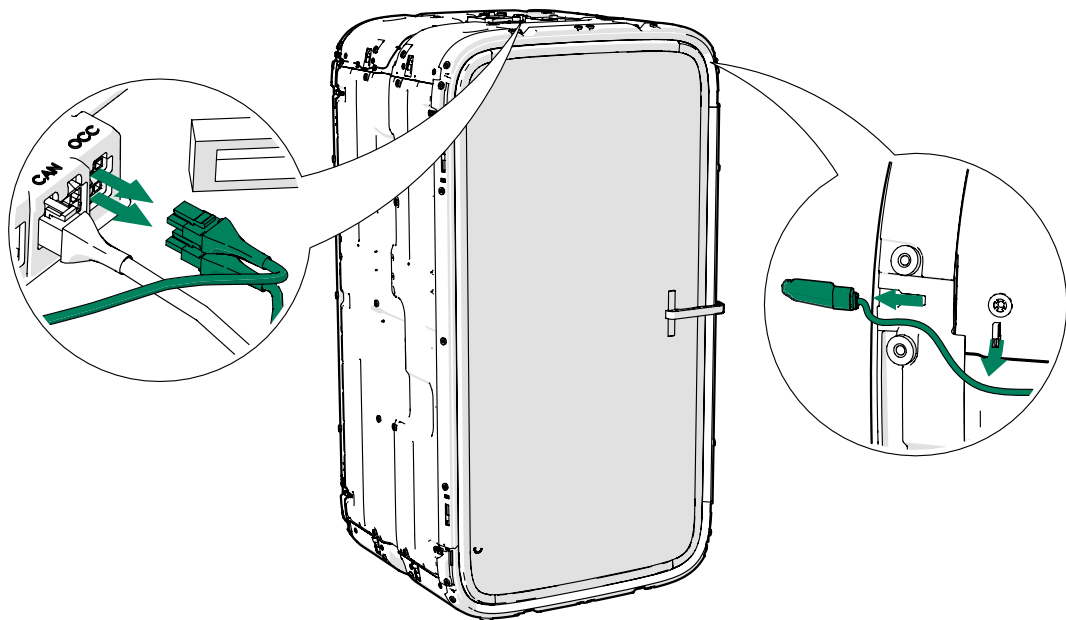



7. Install the new occupancy indicator lights to the pod and connect the cords to the OCC connectors of the control hub.

Install the new occupancy indicator lights to the same corners from which the old ones were removed.

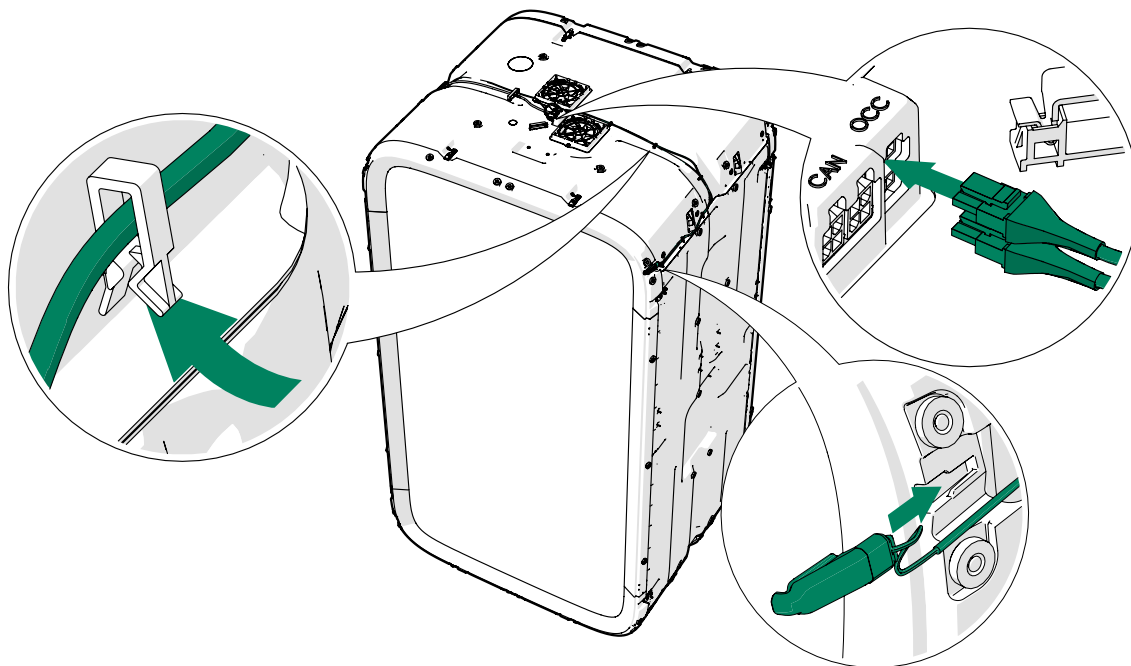

8. Install the body covers, plastic trims, and fan cover in the reverse order.
  9. Connect the power cord to the power outlet.
- If equipped with the optional LAN, also connect the LAN cord to the outlet.


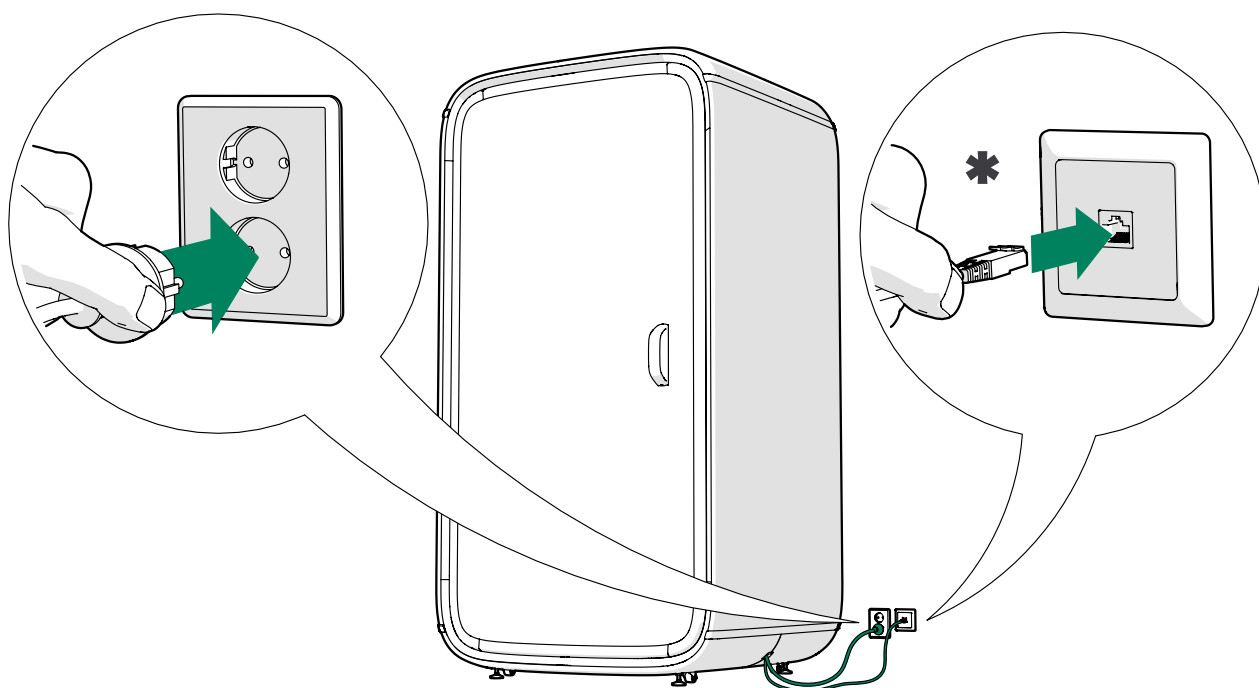


Figure 32: \* = optional LAN


## 5 Replace the activated carbon filter

ⓘ **Note:** The activated carbon filter is optional.


1. Remove the fan cover with the activated carbon filter.

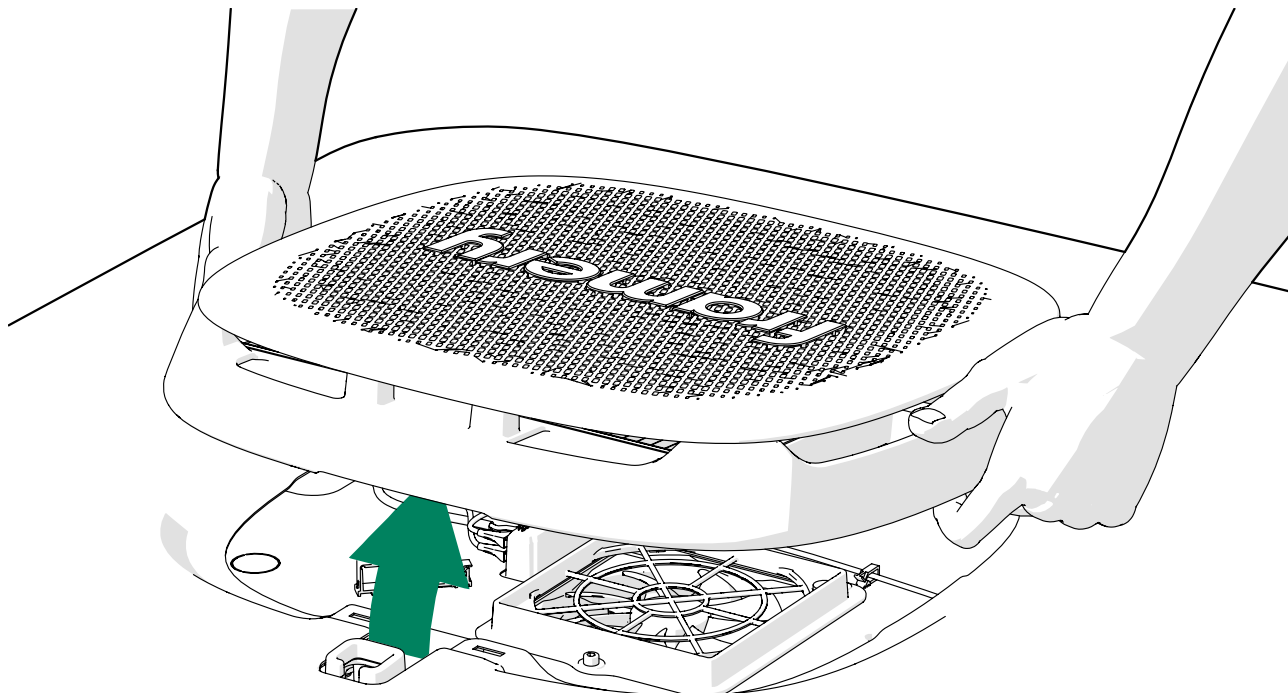


2. Remove the fan cover.

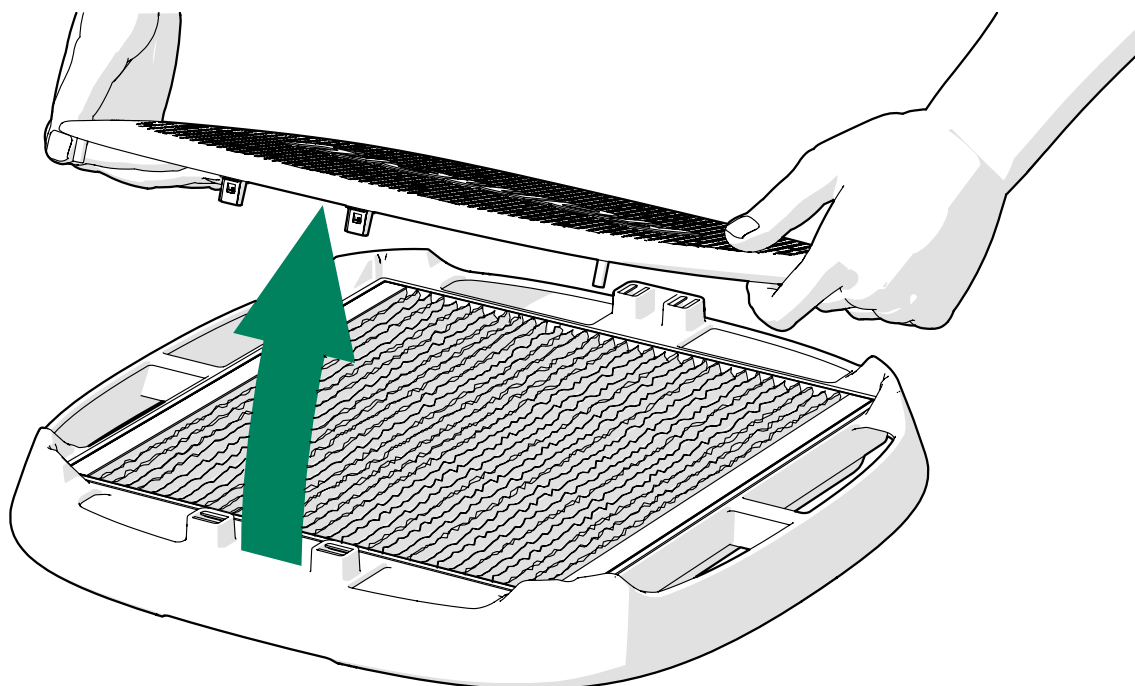


**3. Remove the old filter.**

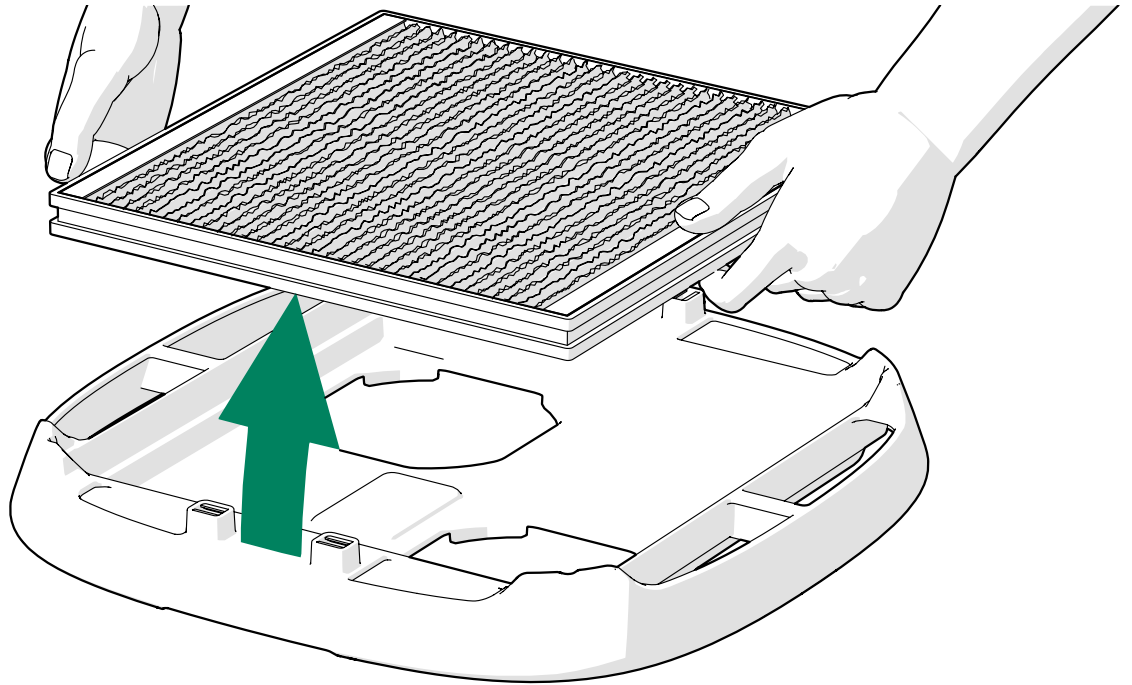


**4. Install the new filter.**

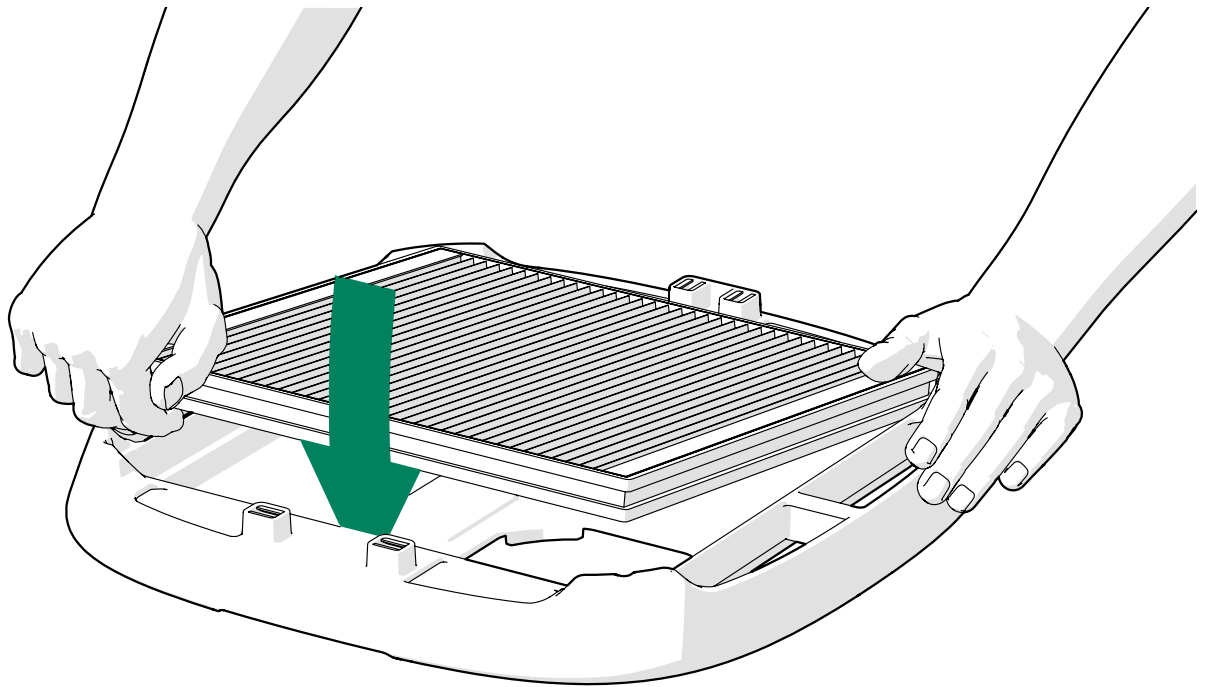

5. Install the fan cover.

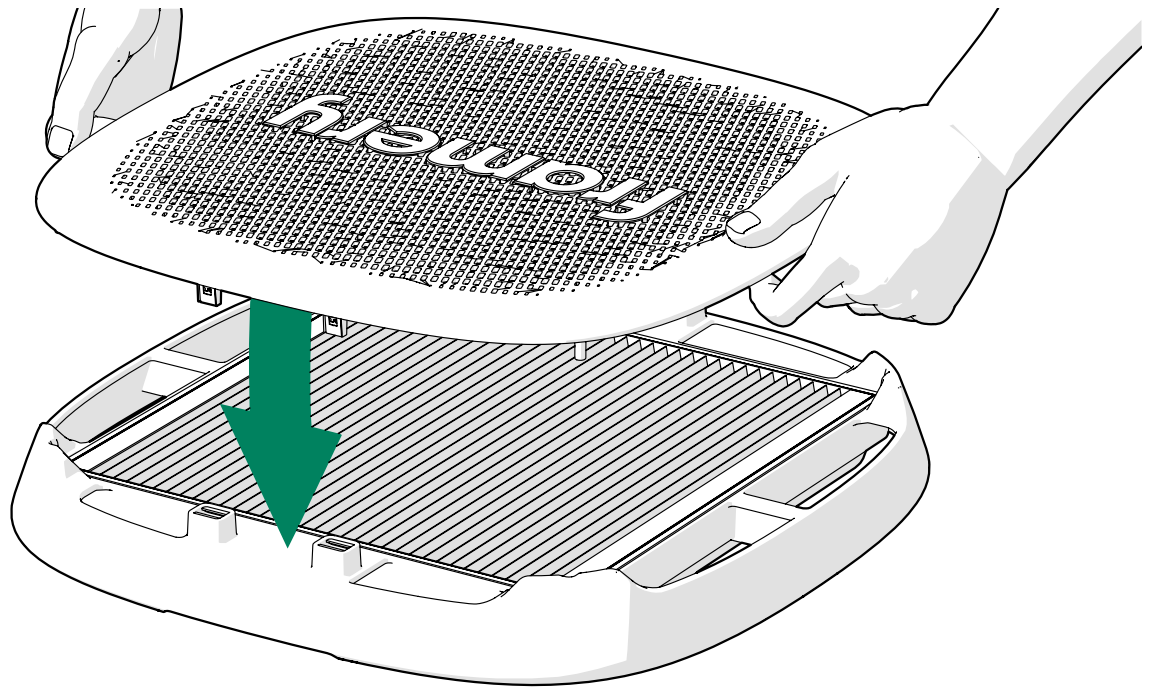

6. Install the fan cover with the new activated carbon filter onto the roof.

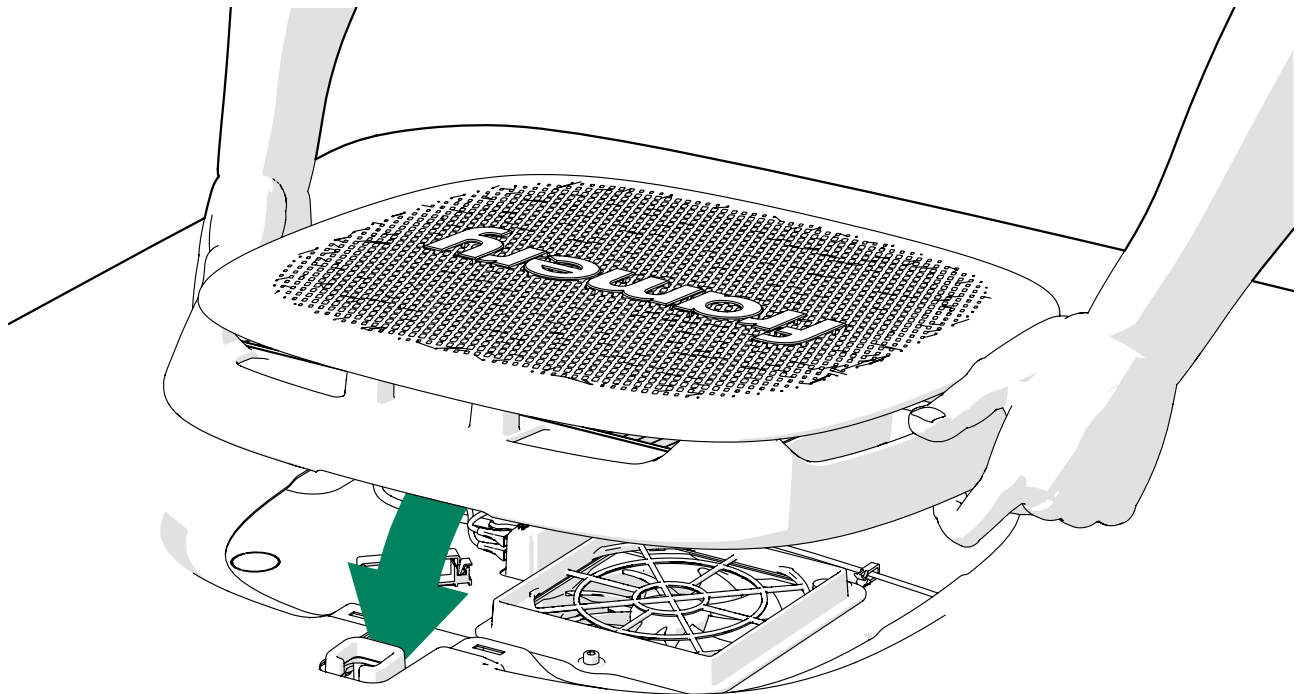

## 6 Replace the interior panels

### 6.1 Replace the ceiling panel

- ⚠ **Note:** Set all removed parts aside carefully and neatly. All removed parts, excluding the one being replaced, will be needed for reassembly.

#### 6.1.1 Disassemble the necessary parts (ceiling panel replacement)

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.

- ⚠ **DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

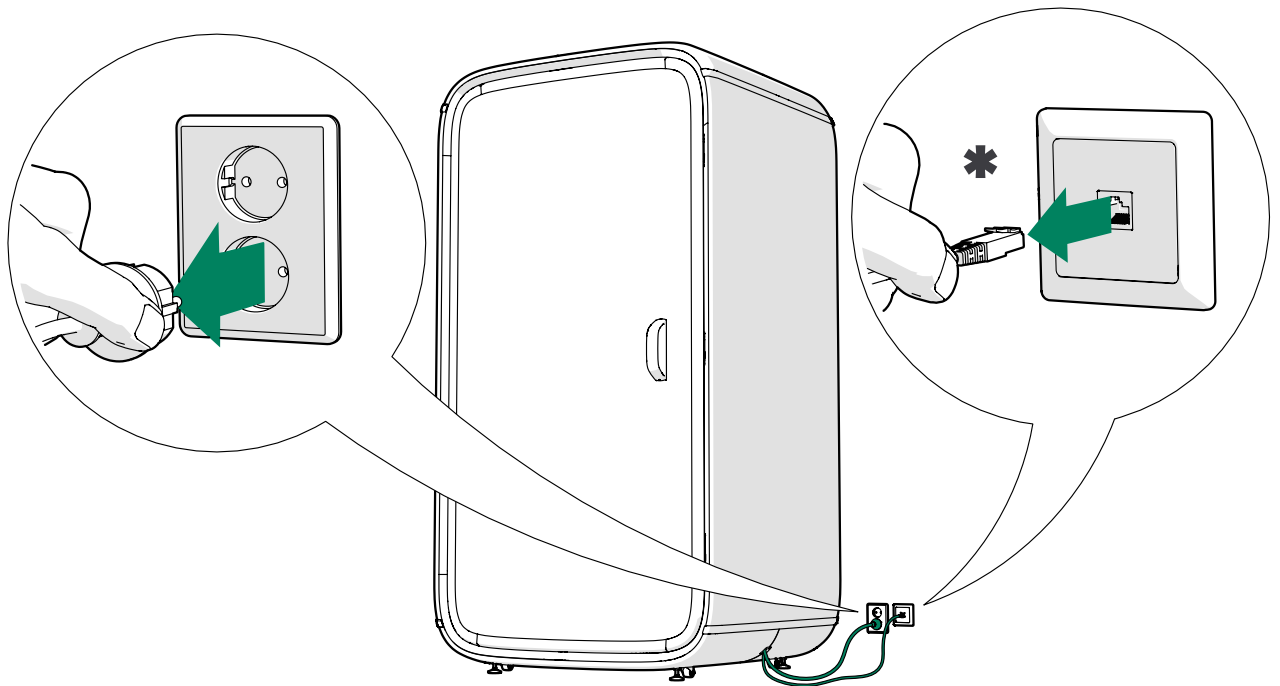


Figure 33: \* = optional LAN

2. Remove the fan cover.



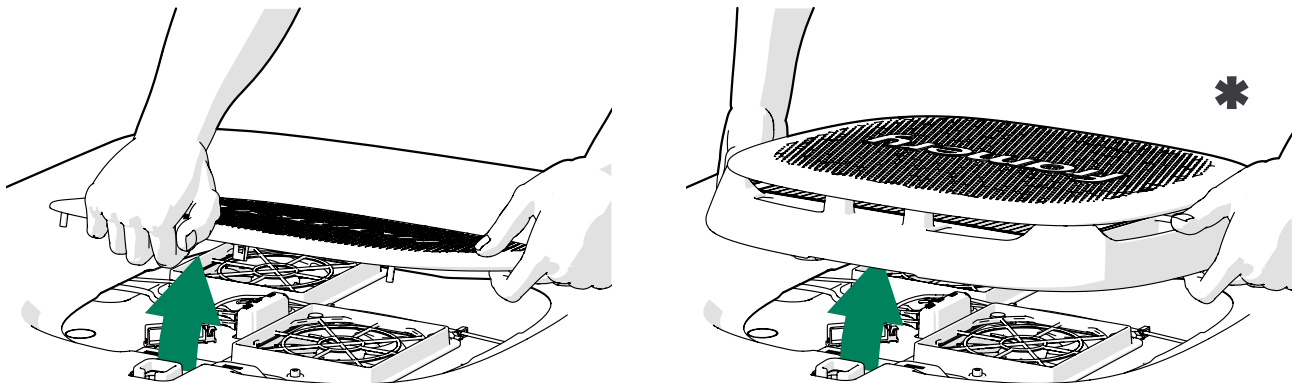


Figure 34: \* = With optional activated carbon filter


3. Remove the plastic trims.

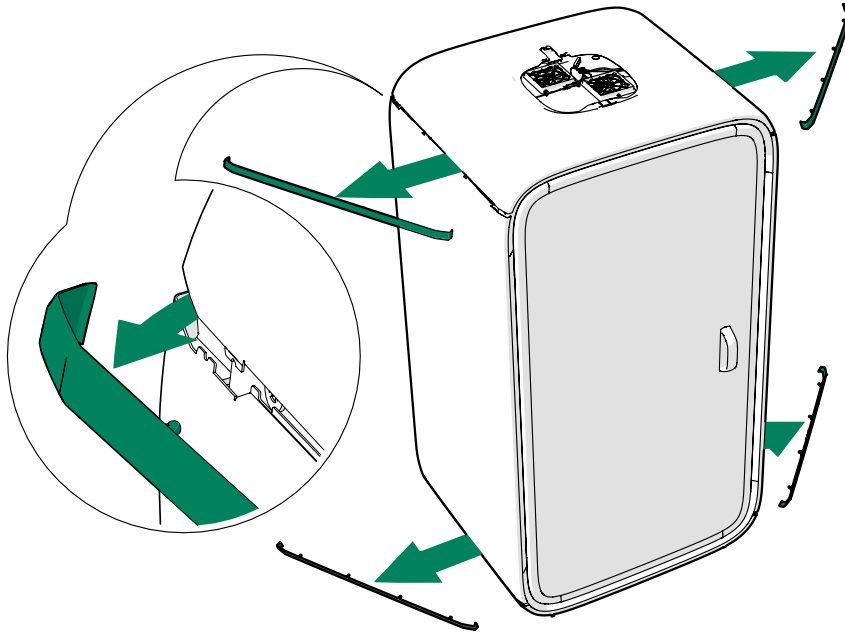


4. Remove the roof body cover.

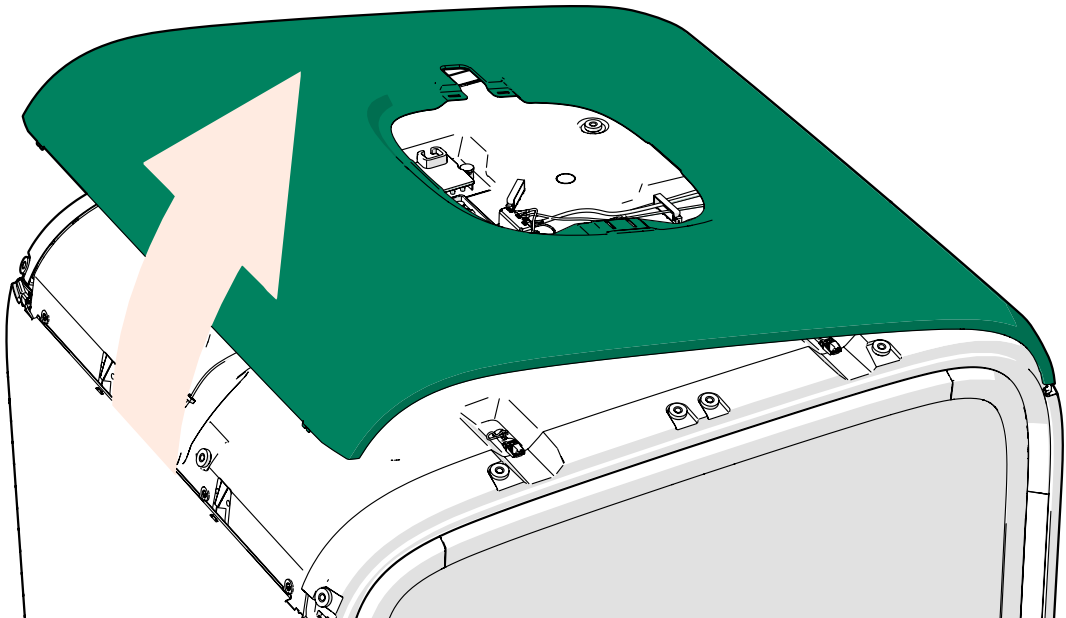

5. Remove the wall body covers.

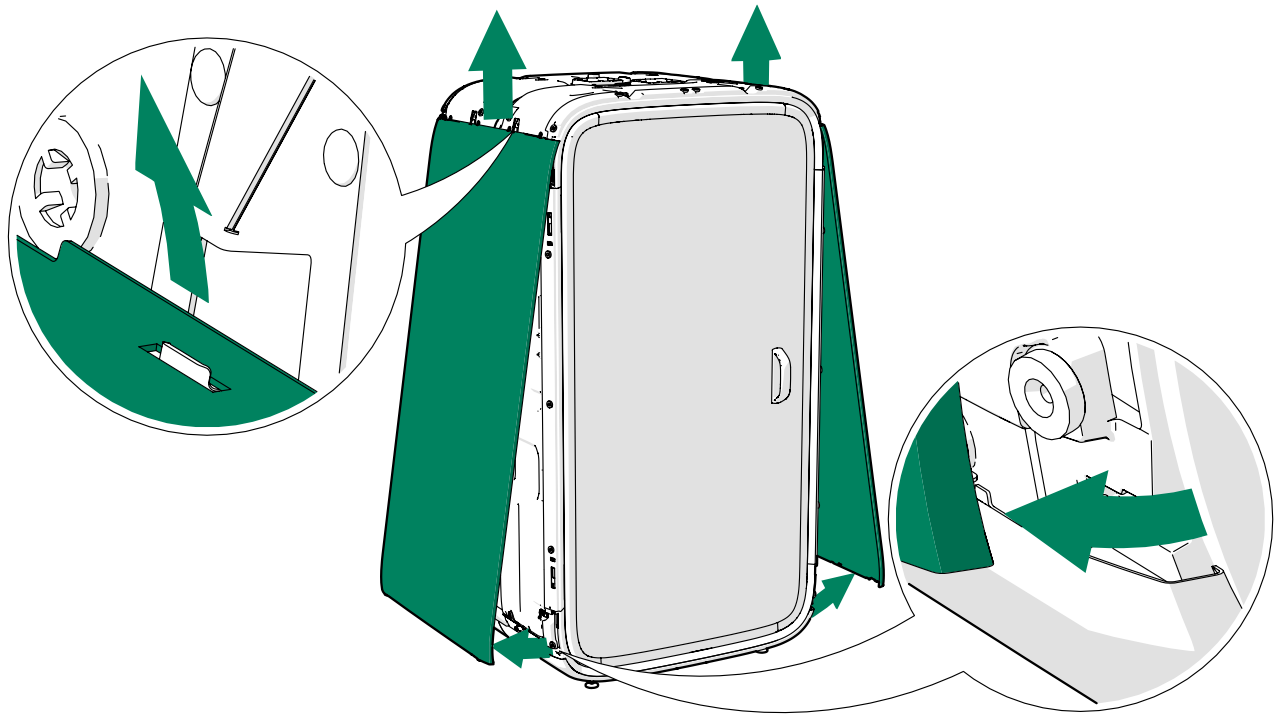

6. Remove the front floor body cover.

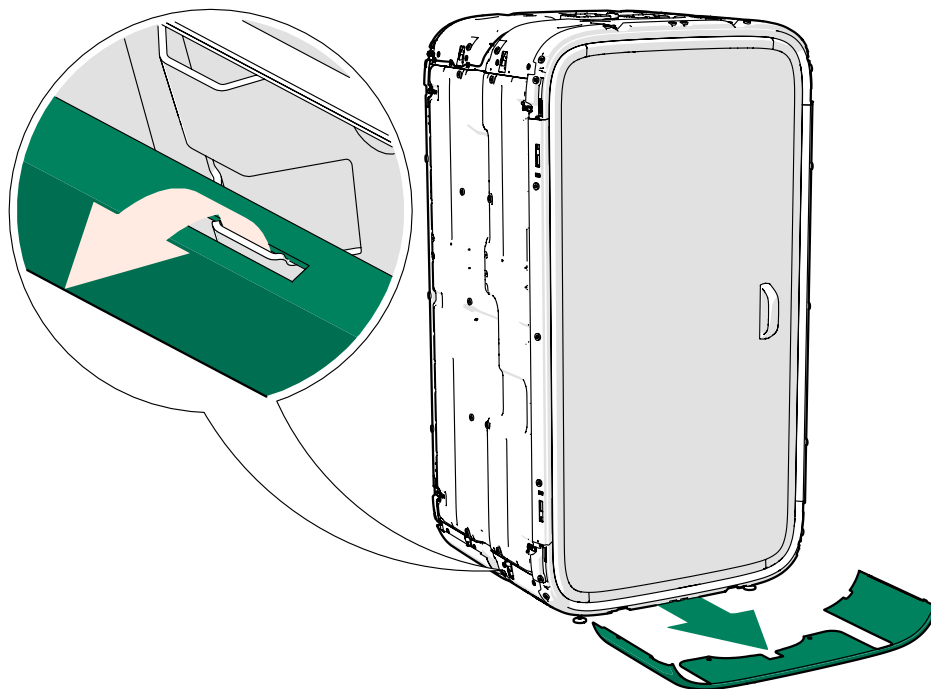


7. Remove the back floor body cover.



8. Remove the door handle from the outside of the door.  
Loosen the set screw to remove the handle.



**Note:** Do not remove the set screw.

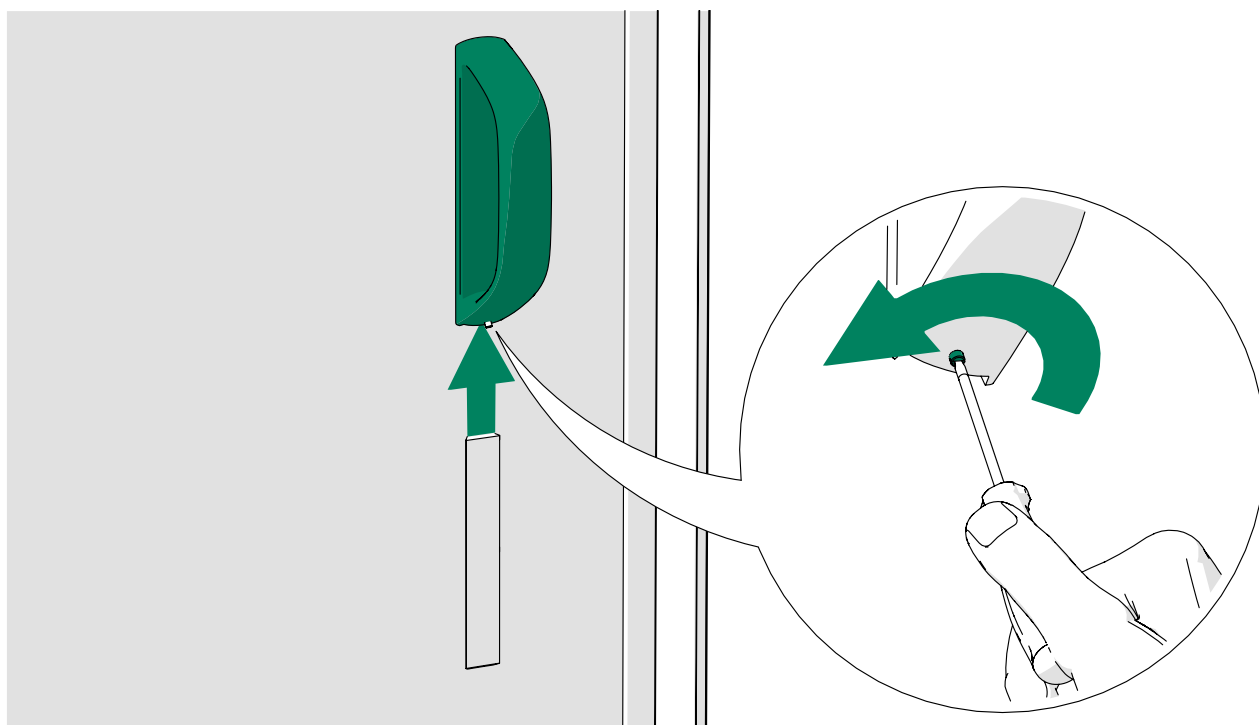




9. Install the door brace.




**Warning:** Risk of injury or damage to property. Make sure that the door brace is in place before detaching the front frame with the door.

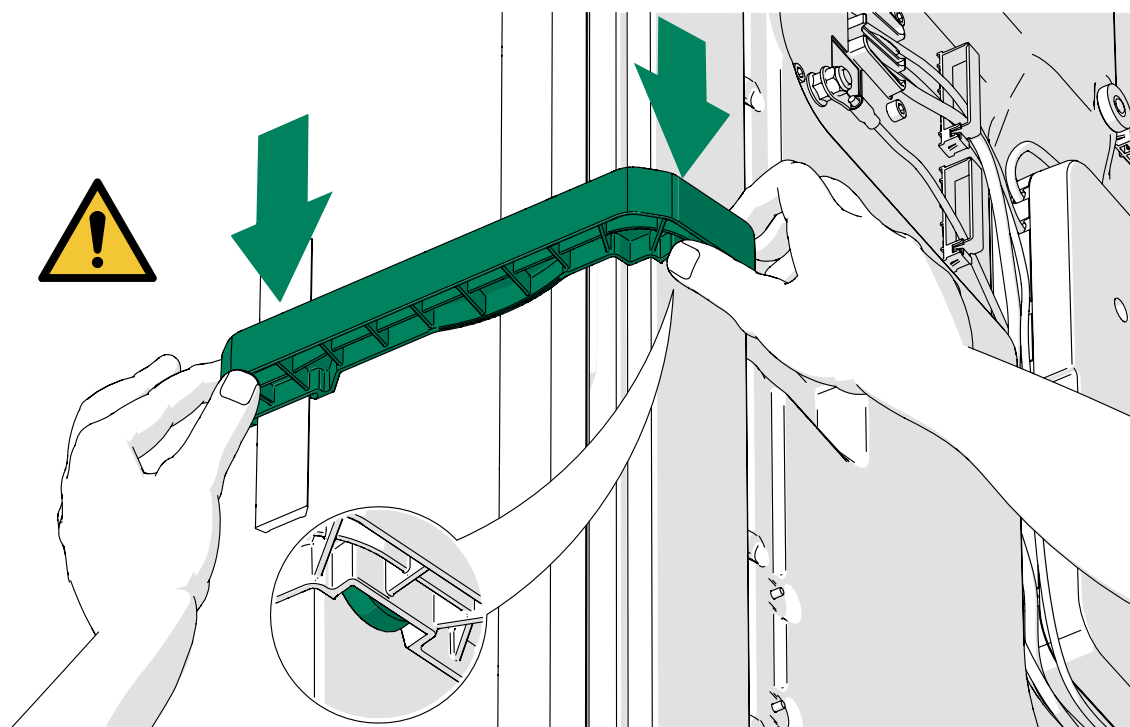

10. Disconnect all installed occupancy indicator lights from the control hub and remove them from the pod.




**Note:** For reassembly, make a note of which corners the lights were removed from.

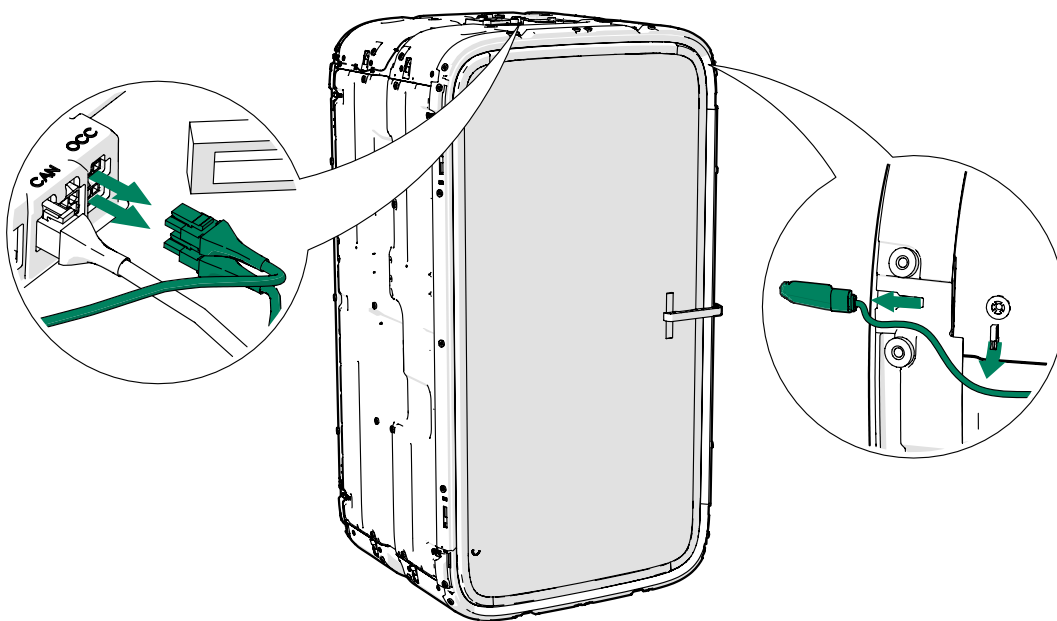


11. Lay a carpet on the floor in front of the pod.

⚠ **Note:** The carpet is needed to protect the frame from scratches.

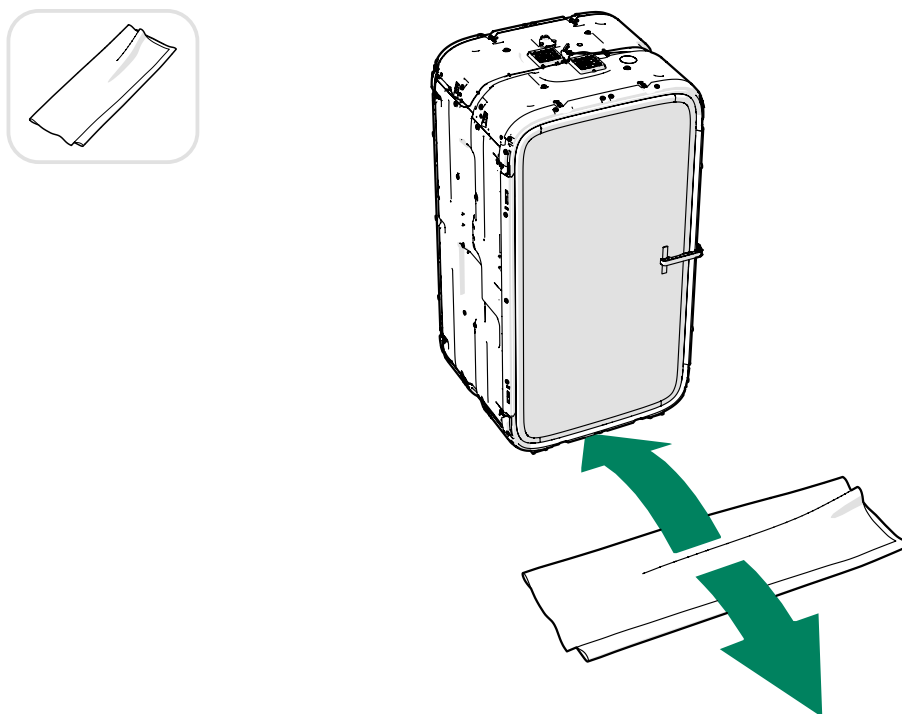

12. Remove the pins (6 pcs) and open the latches (6 pcs) around the front frame.


⚠ **Note:** Support the frame while opening the latches.

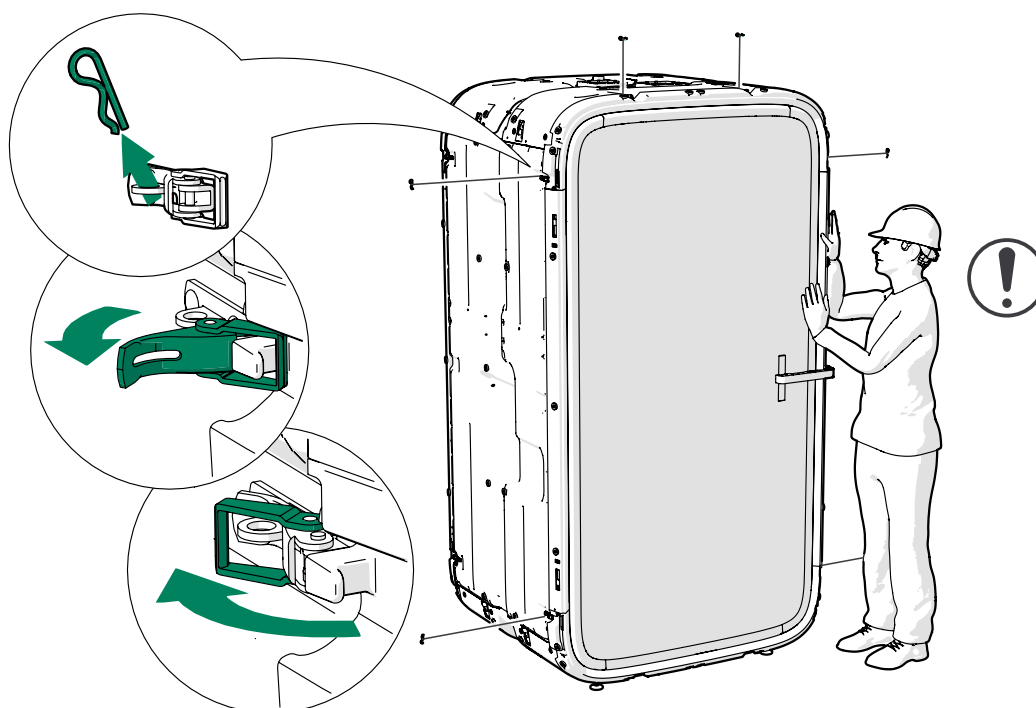

13. Carefully lower the front frame with door onto the carpet.





**Note:** Make sure that the guide pin at the upper edge of the frame stays in place.

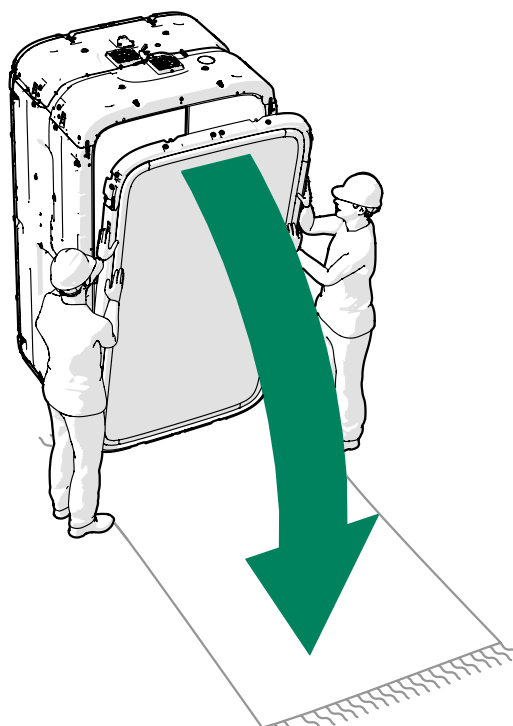

14. Lay a carpet on the floor behind the pod.




**Note:** The carpet is needed to protect the frame from scratches.

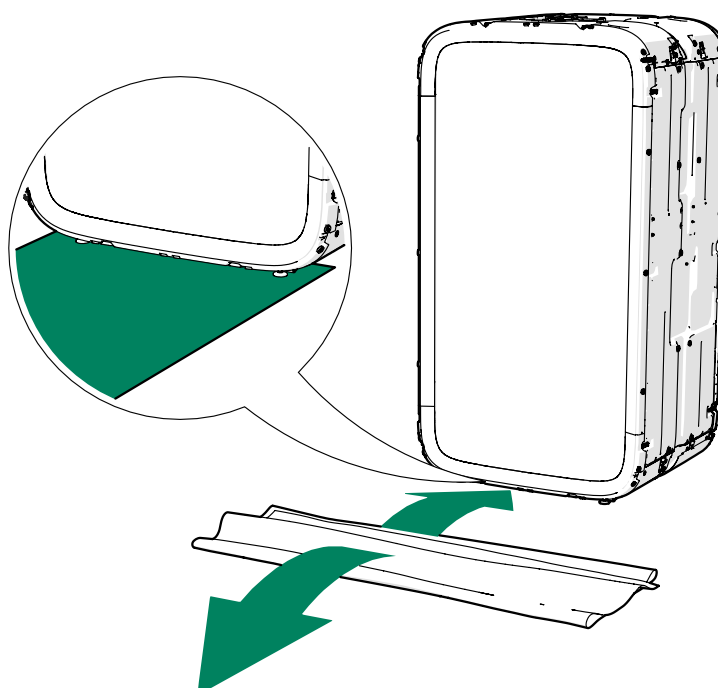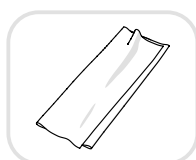


15. Remove the pins (6 pcs) and open the latches (6 pcs) around the glass wall.

⚠ **Note:** Support the glass wall while opening the latches.

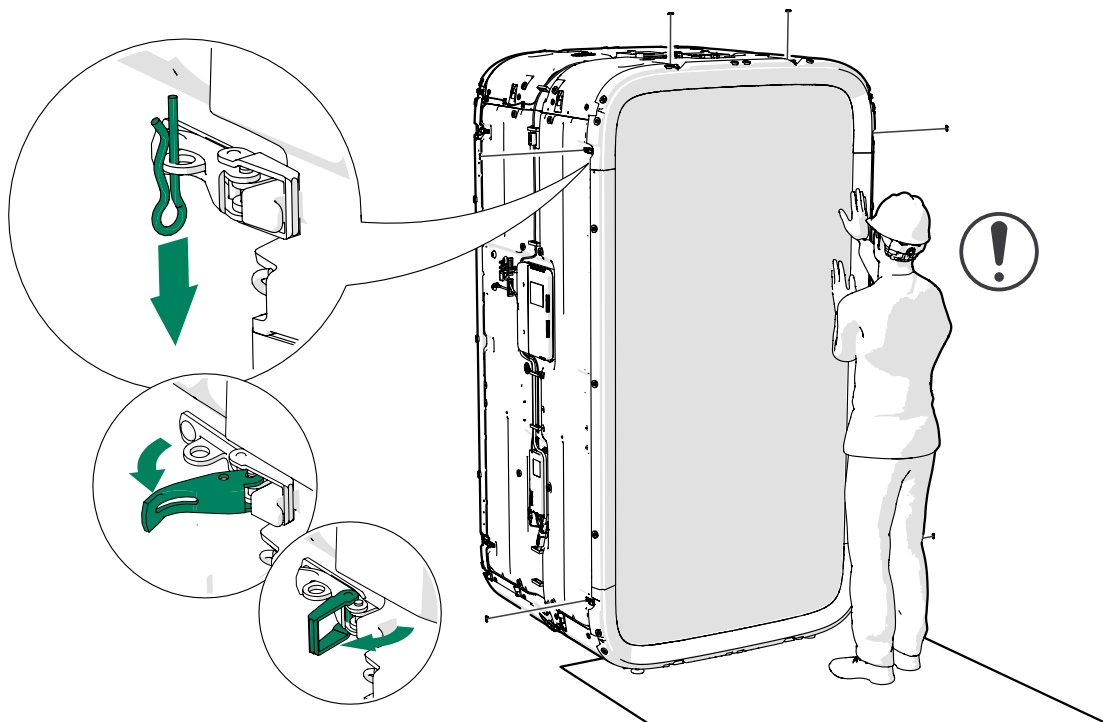


16. Carefully lower the glass wall onto the carpet.


⚠ **Note:** Make sure that the guide pin at the upper edge of the frame stays in place.

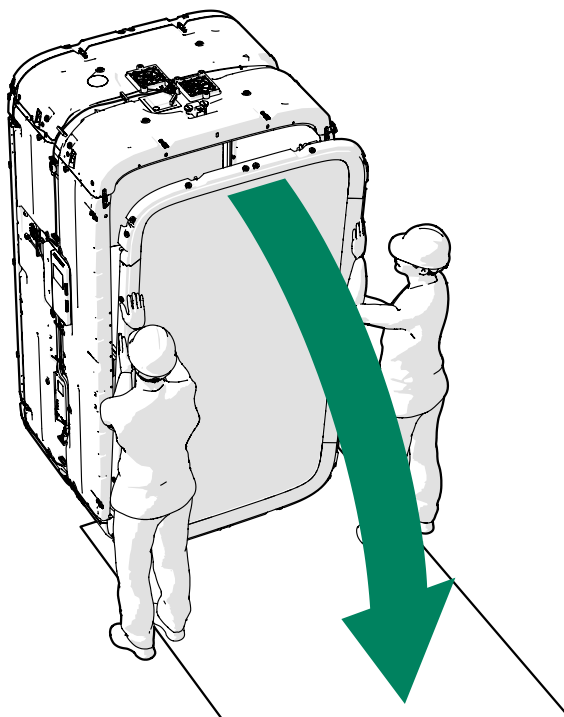


17. Disconnect the fan cords from the control hub.

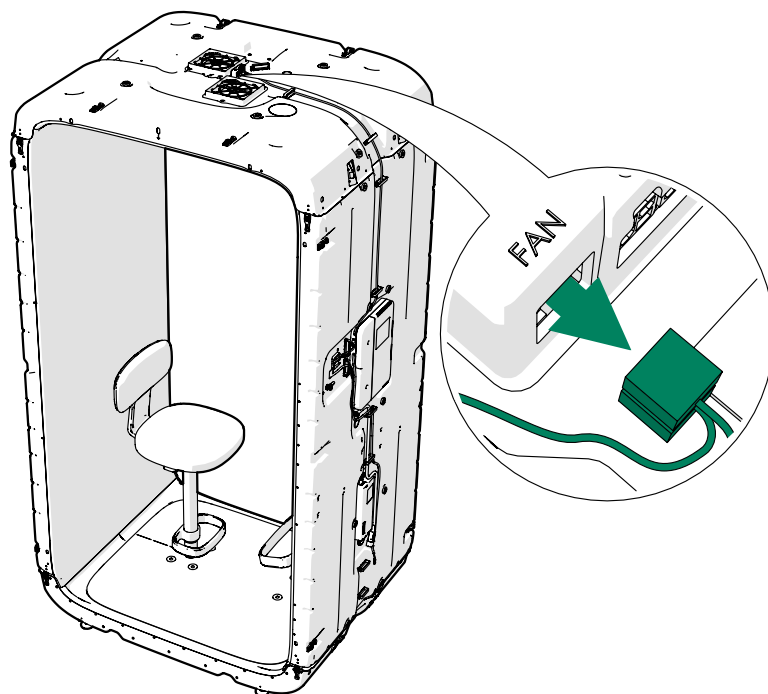

18. Disconnect the long CAN cord from the control hub and lead the cord out of the way down to the power unit.

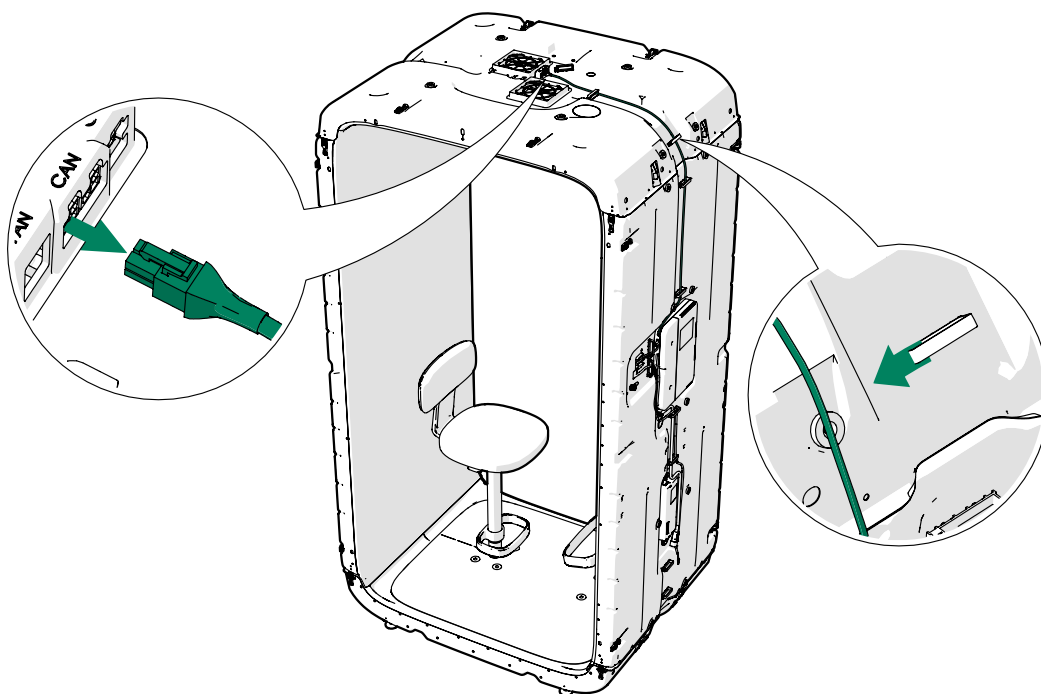

19. Remove the light with the control hub from the ceiling.

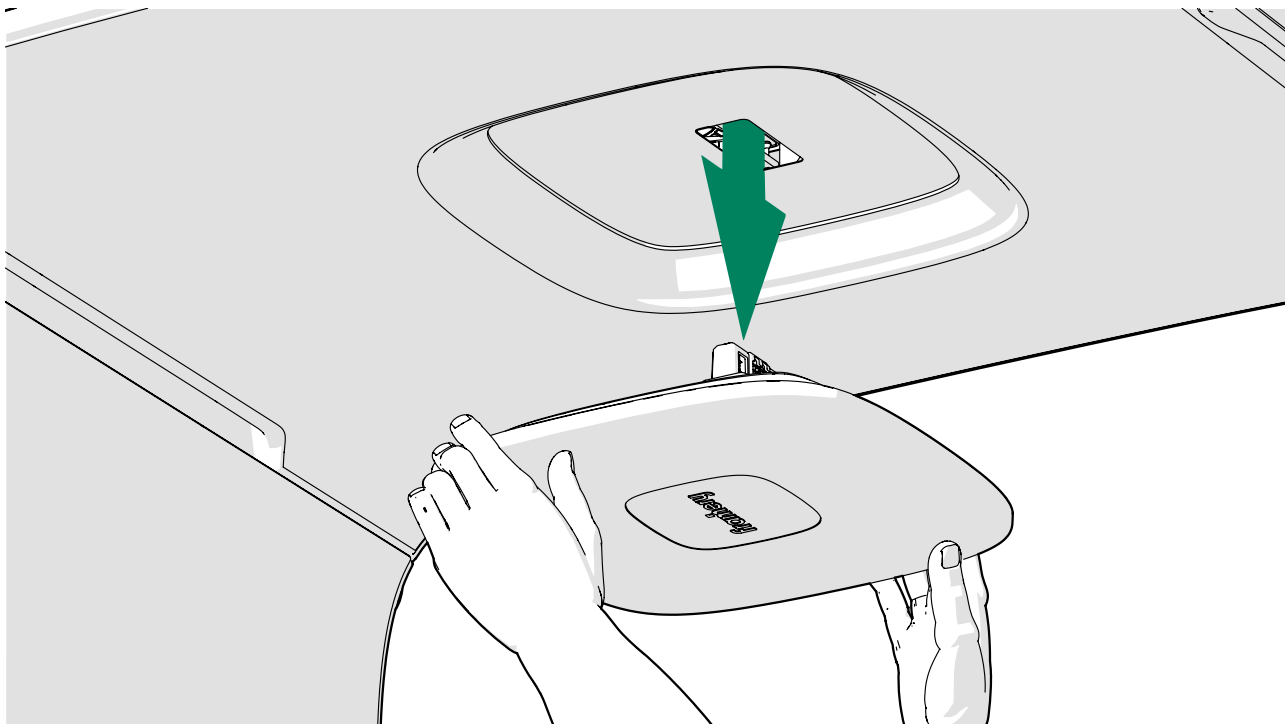

20. Remove the screws from the power unit cover and open the cover.

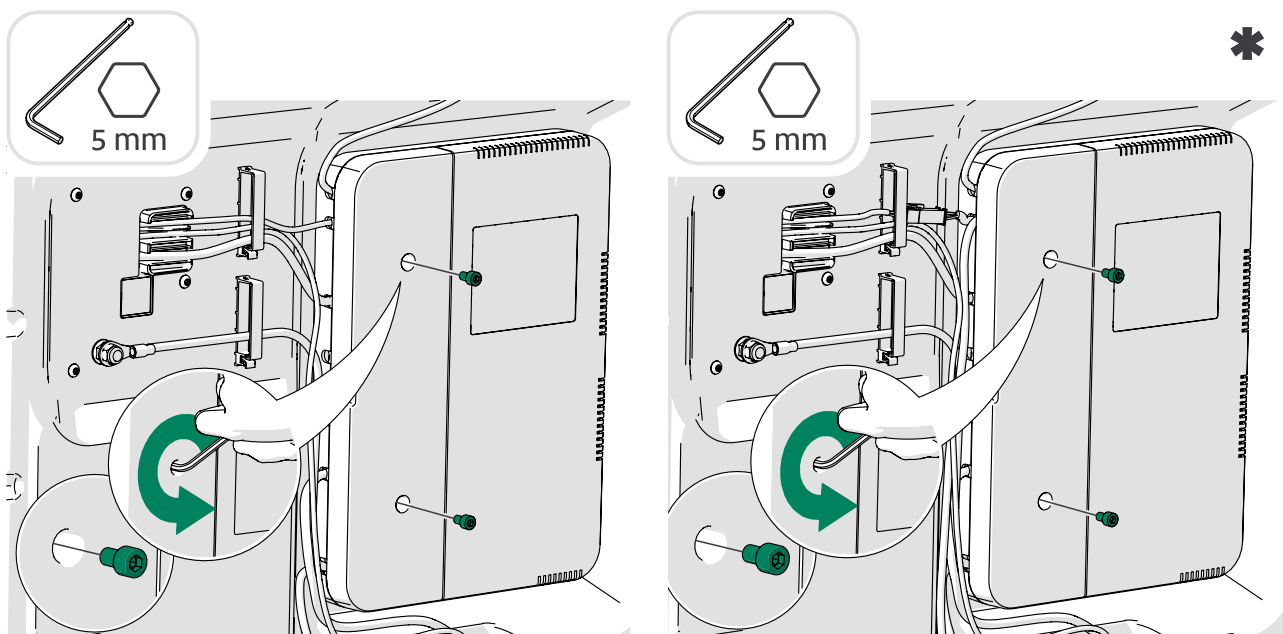


Figure 35: \* = With the optional wireless charger

21. Disconnect the CAN cord from the power unit.

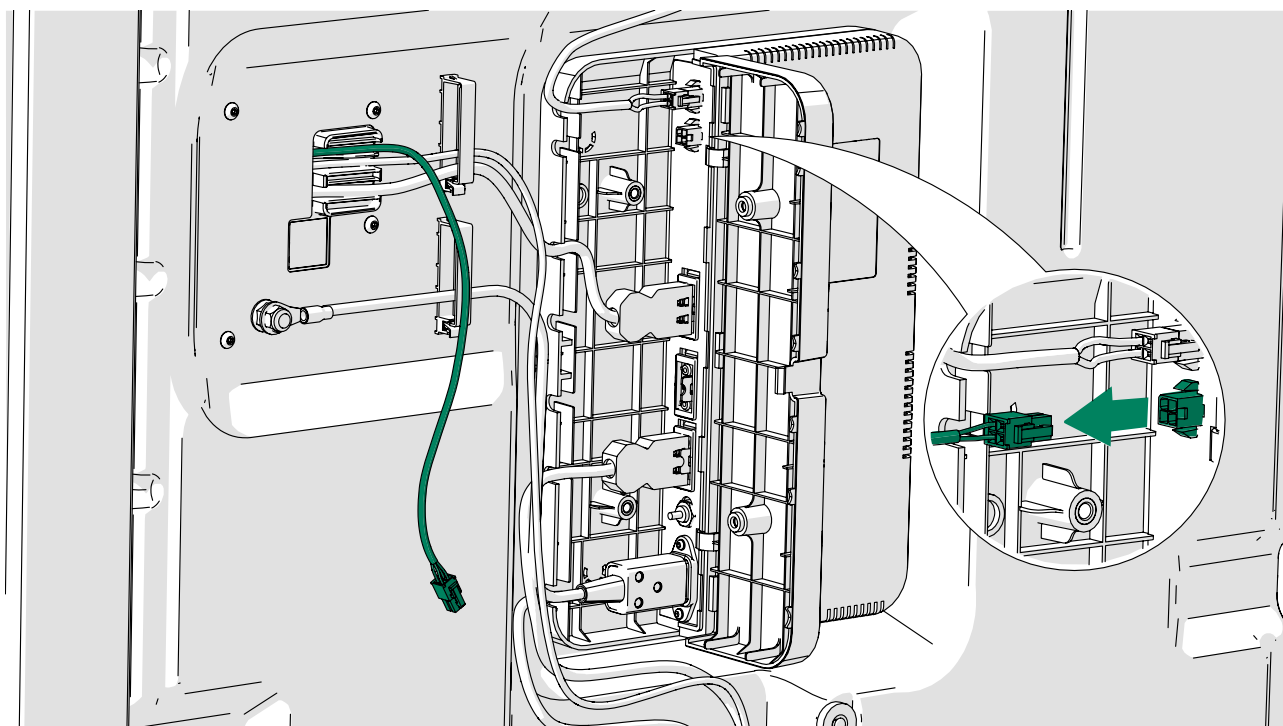


Figure 36: Without the optional wireless charger



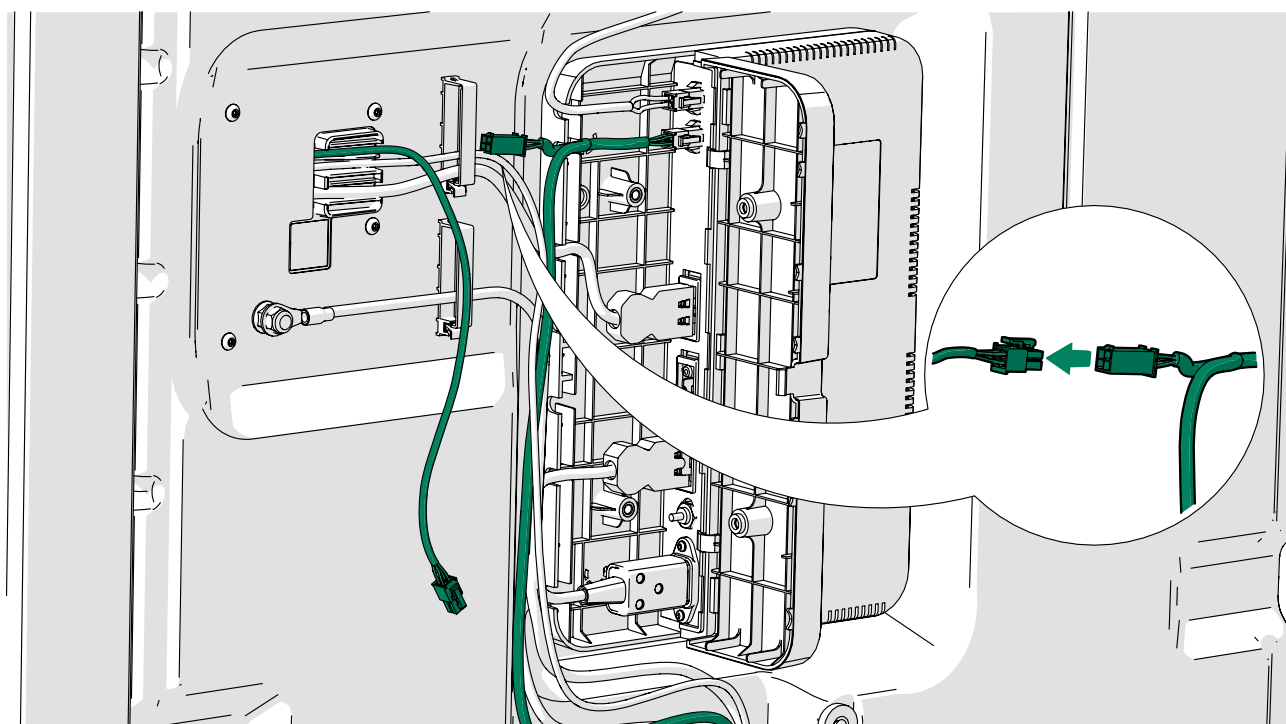


Figure 37: With the optional wireless charger

**22.** Disconnect the power outlet cord from the power unit.

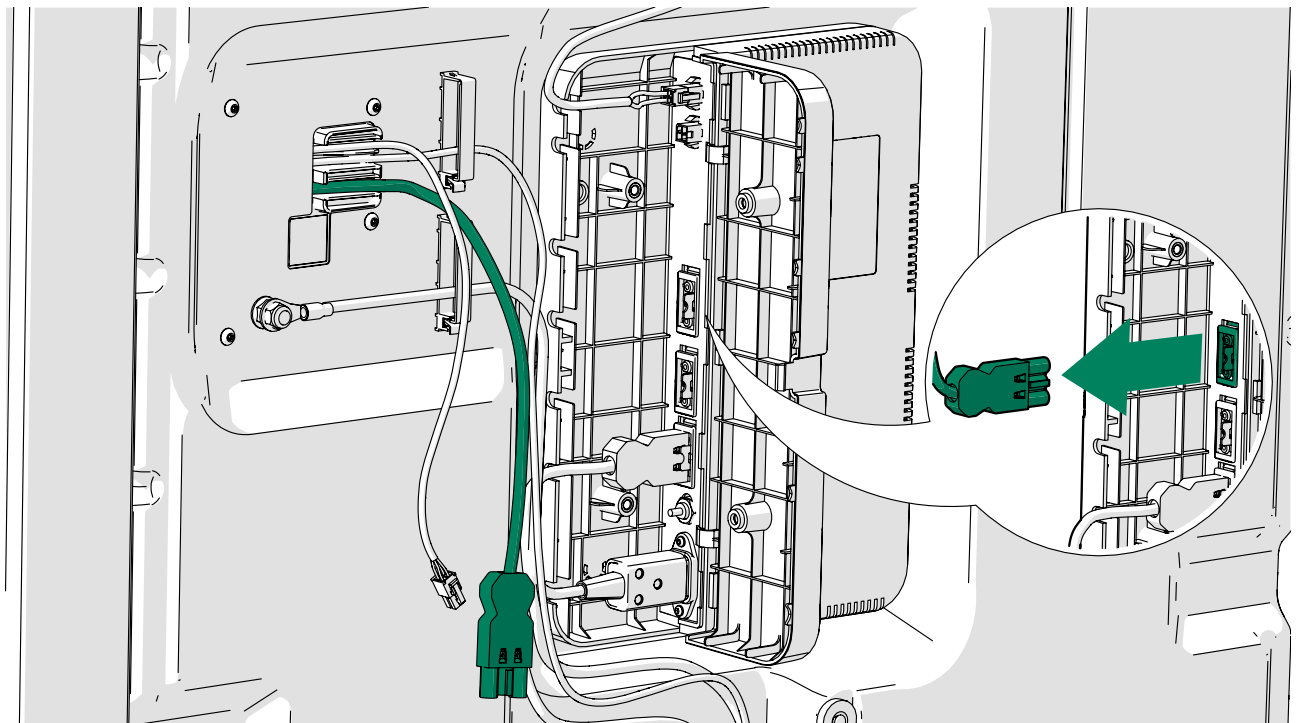

**Figure 38: Without the optional wireless charger**

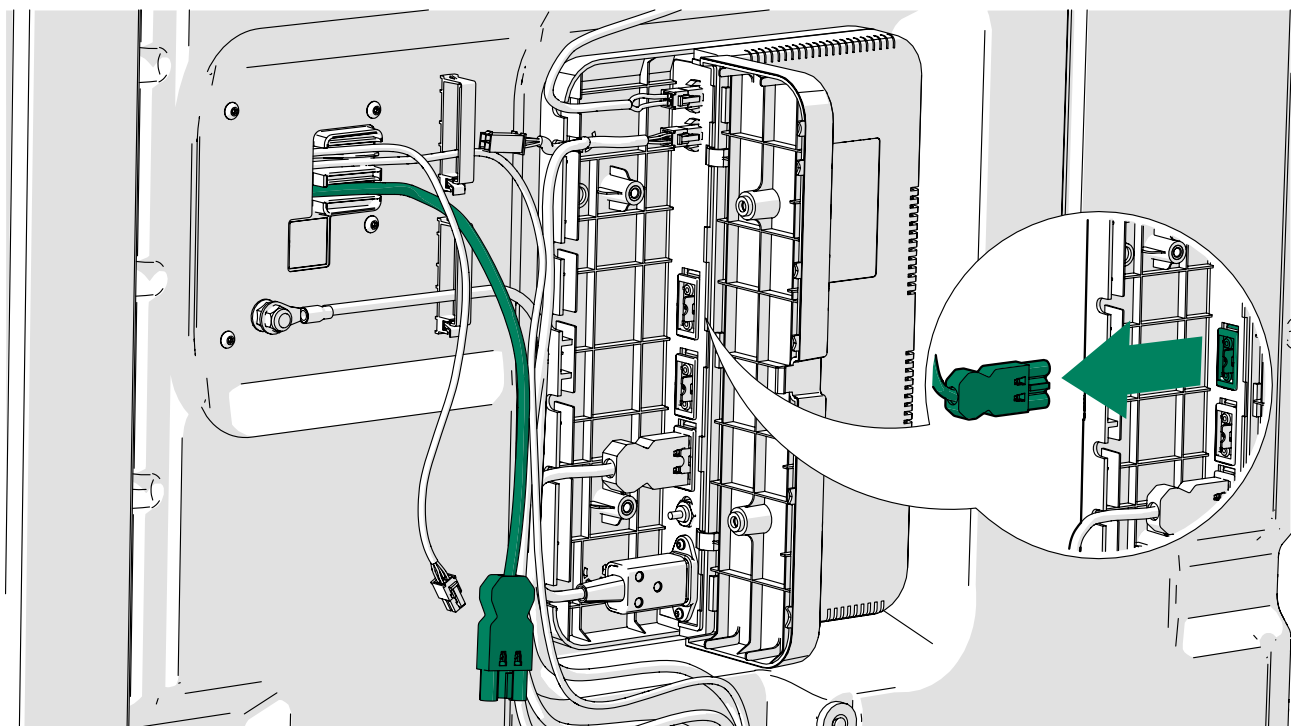

**Figure 39: With the optional wireless charger**



23. Remove the screws from the back of the control panel.

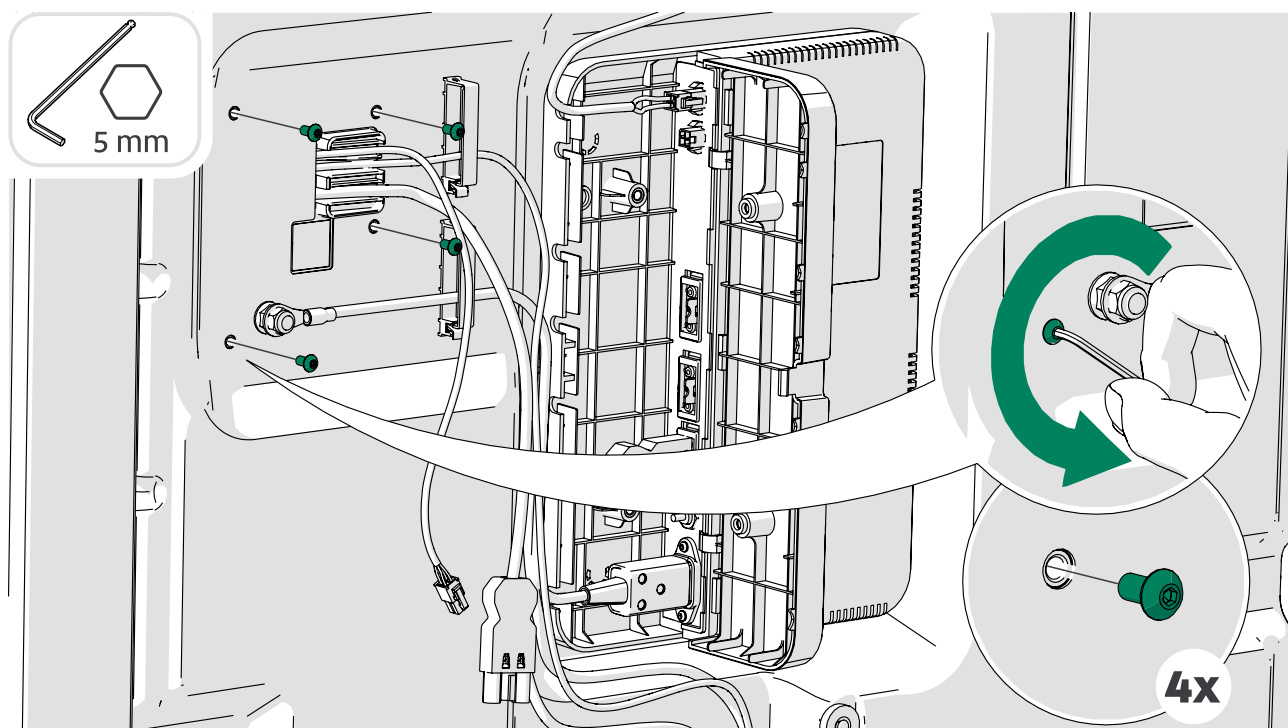


Figure 40: Without the optional wireless charger

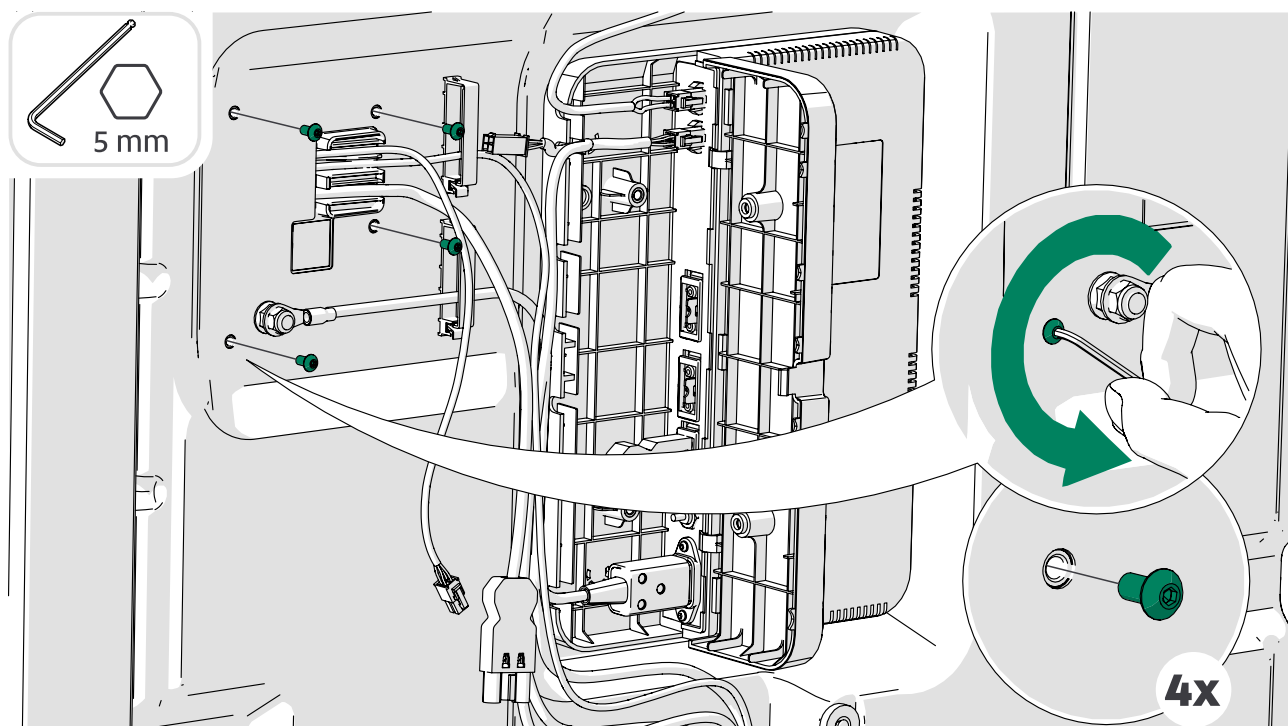


Figure 41: With the optional wireless charger

24. Remove the control panel from the techwall.


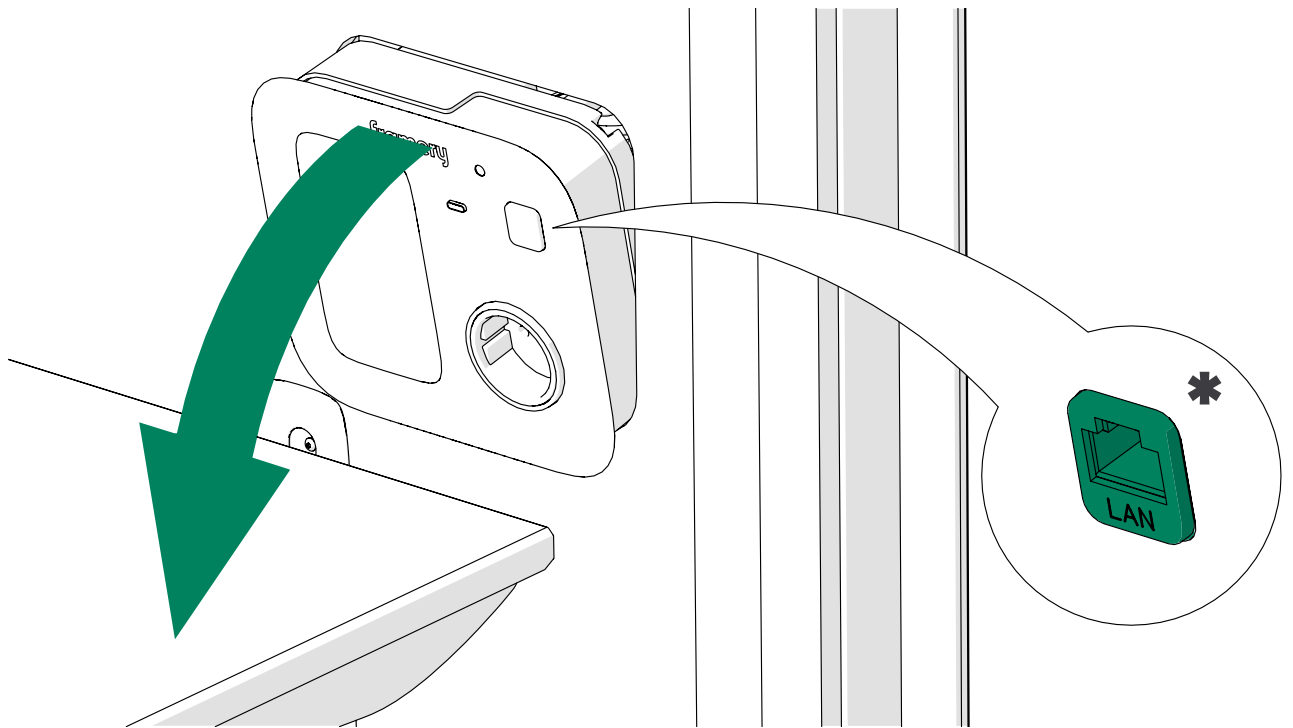


Figure 42: \* = optional LAN

25. Remove the bottom felt from the table.

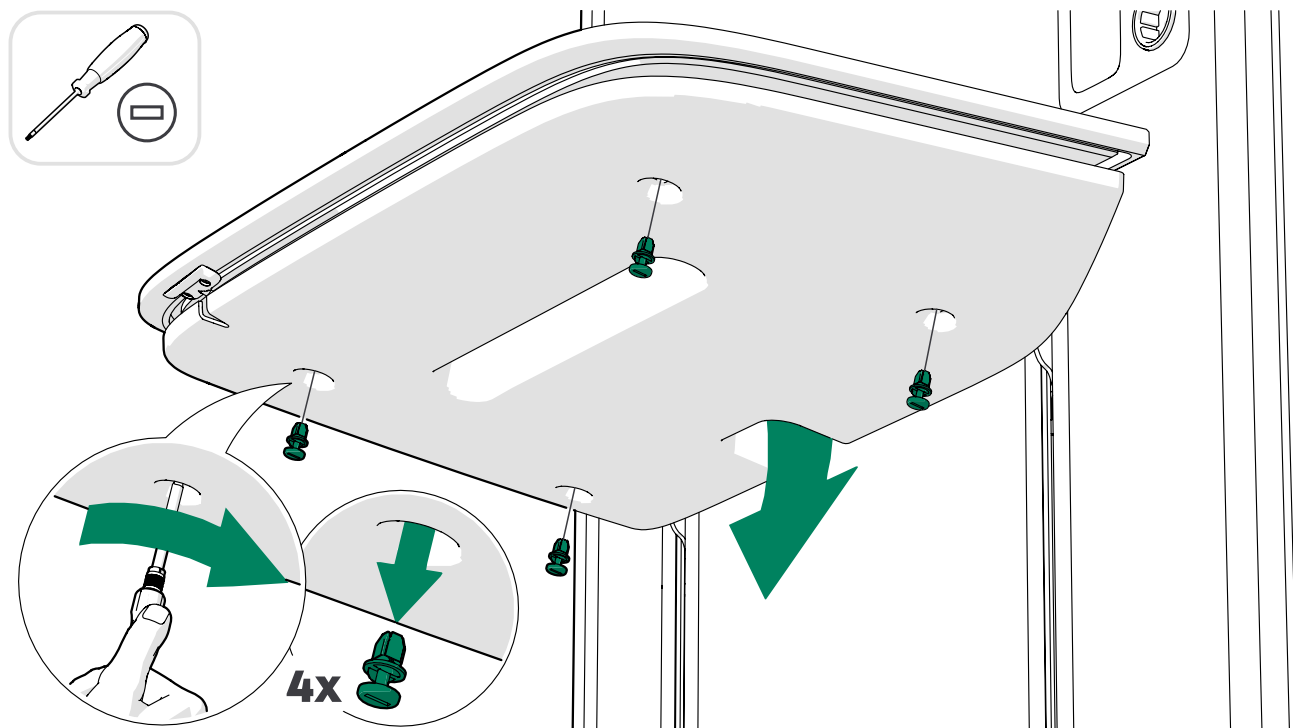

26. Disconnect the electrical connections in the table.

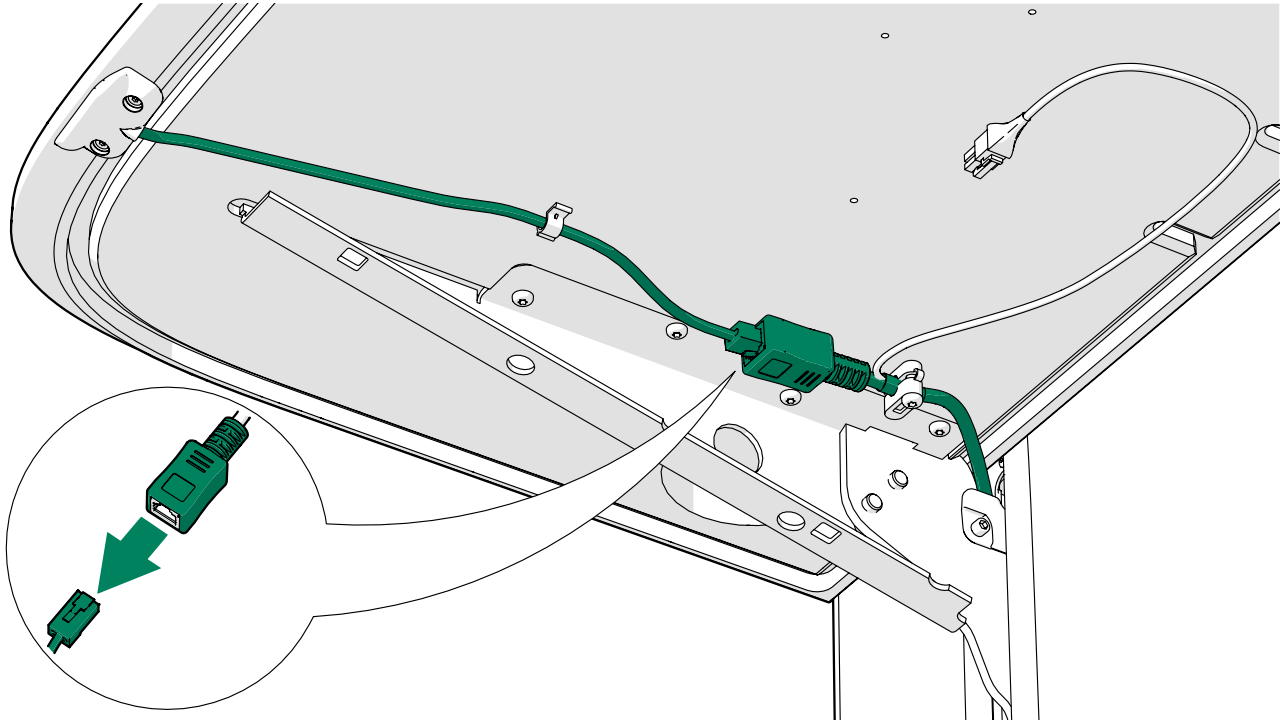


Figure 43: Without the optional wireless charger

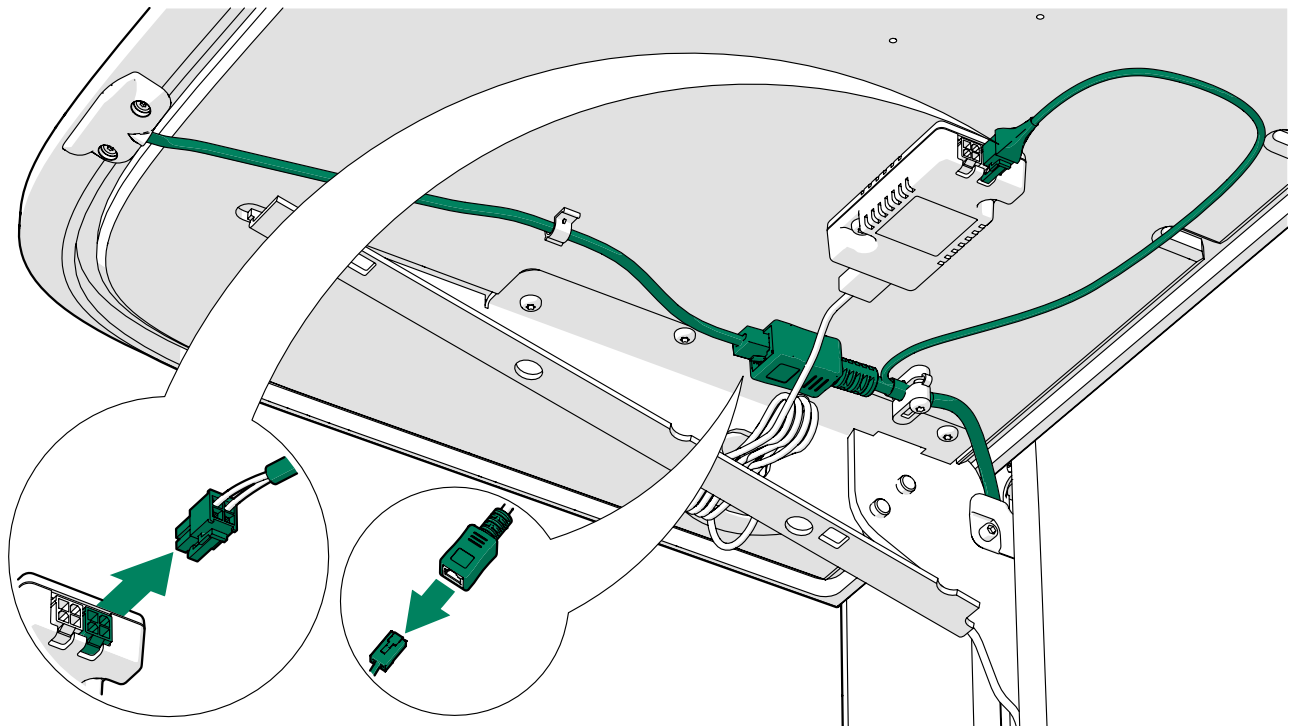


Figure 44: With the optional wireless charger

27. Remove the strain relief for the spiral cord.

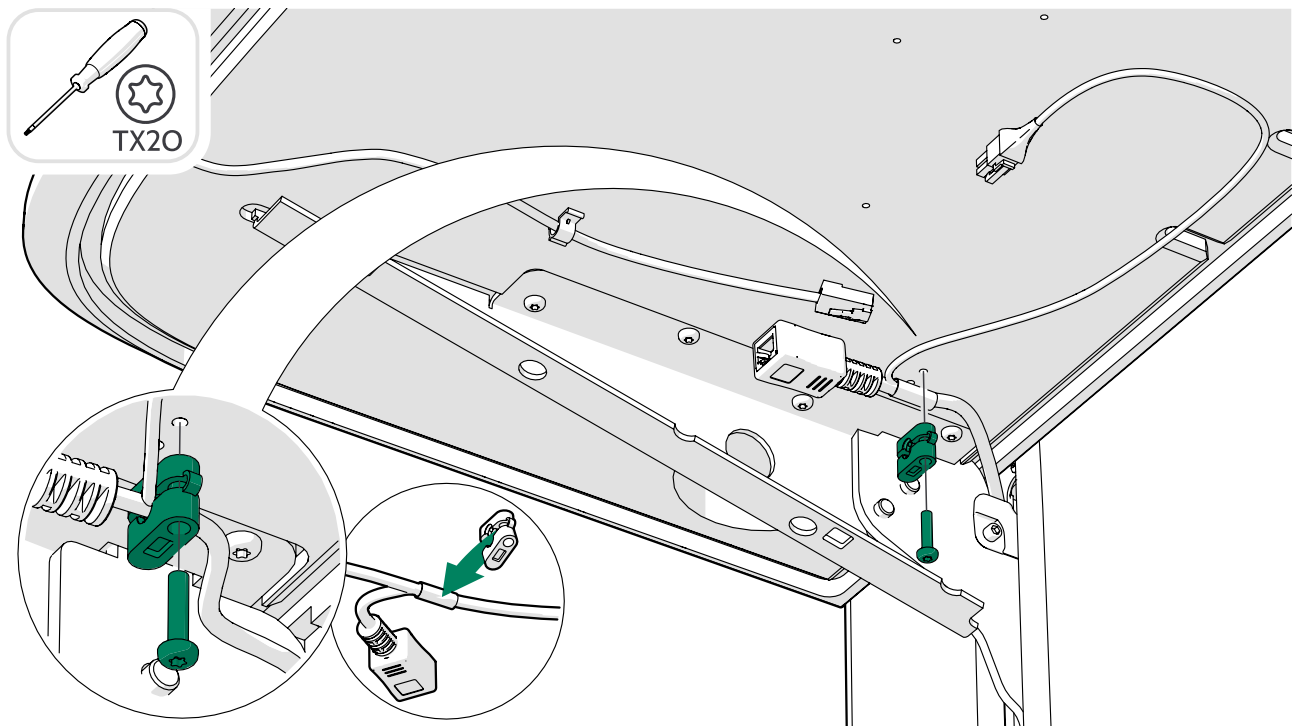


Figure 45: Without the optional wireless charger

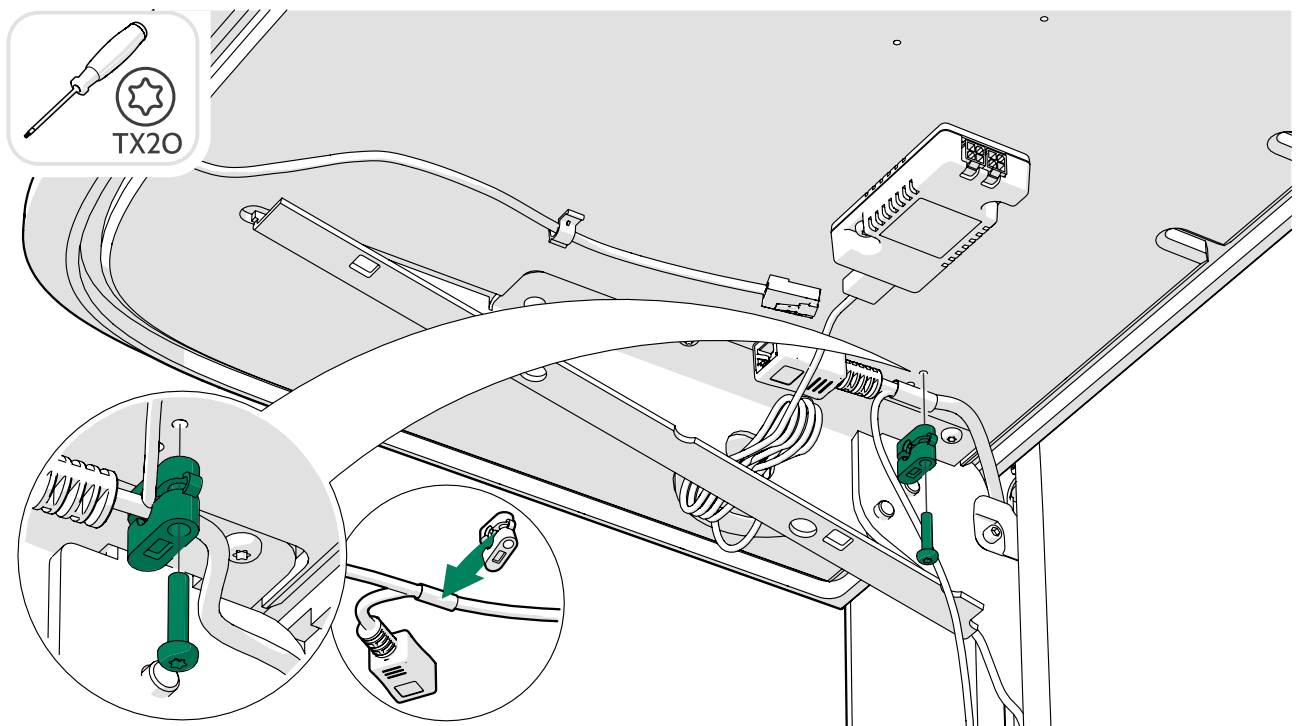


Figure 46: With the optional wireless charger

28. Remove the screws from under the table.

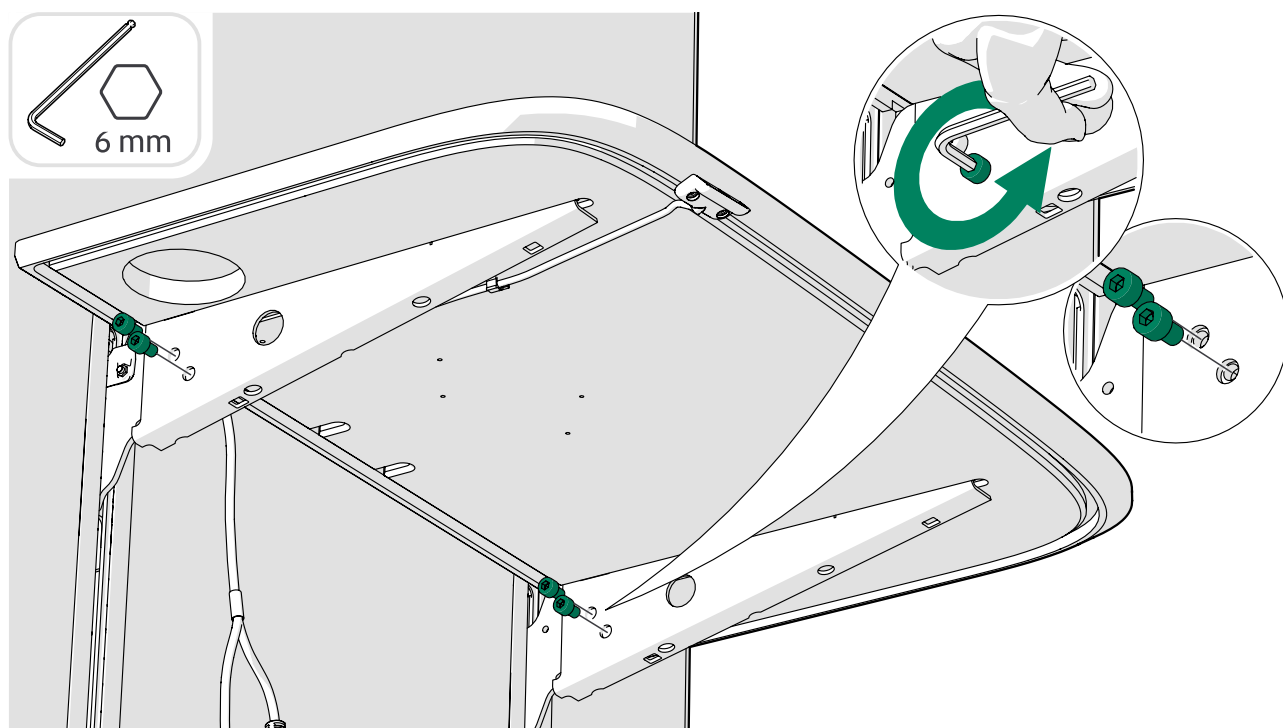


Figure 47: Without the optional wireless charger



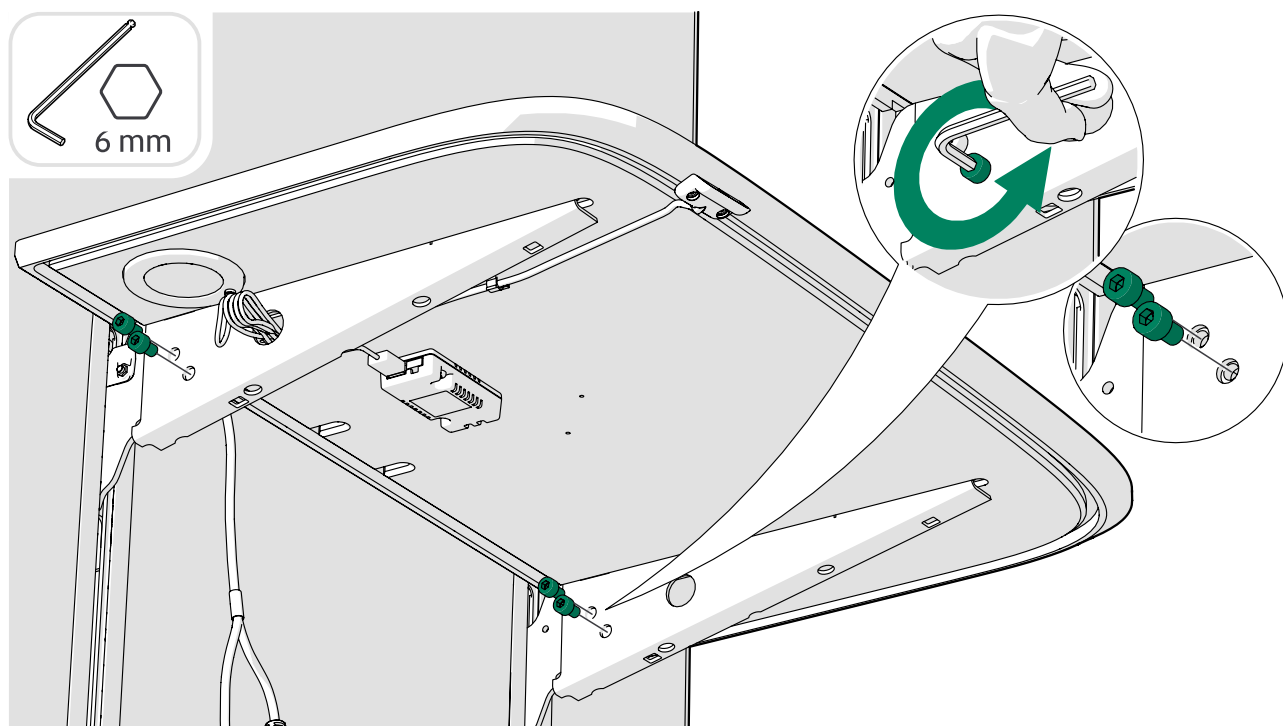


Figure 48: With the optional wireless charger

**29.** Remove the table from the bracket.

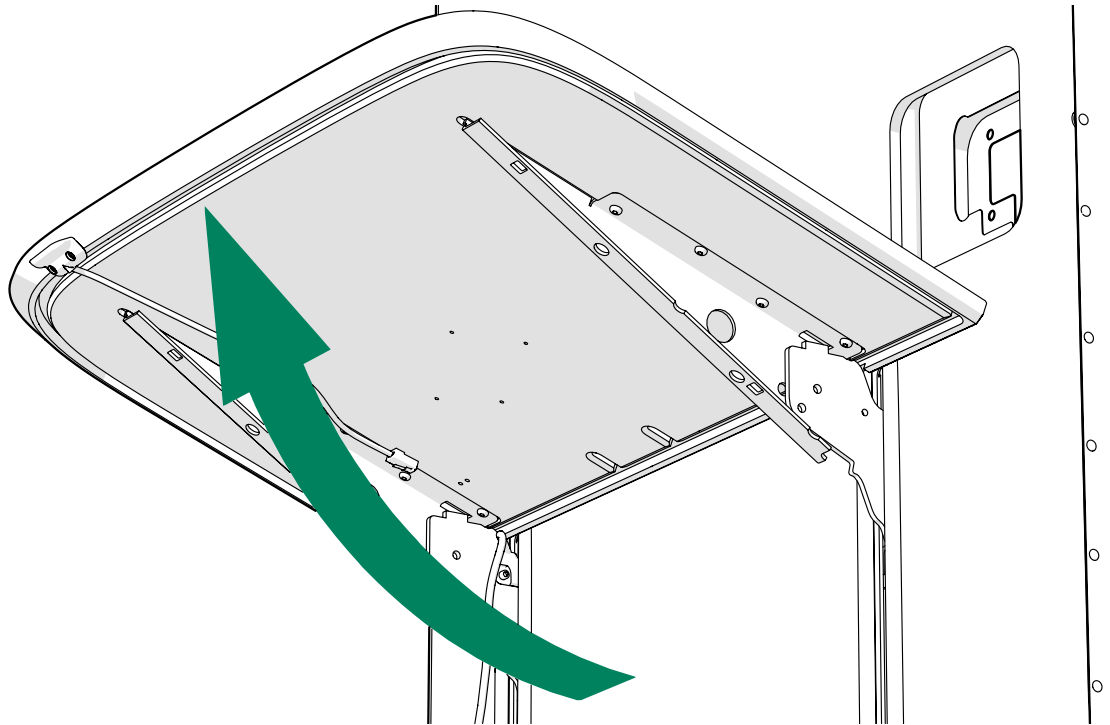

**Figure 49: Without the optional wireless charger**

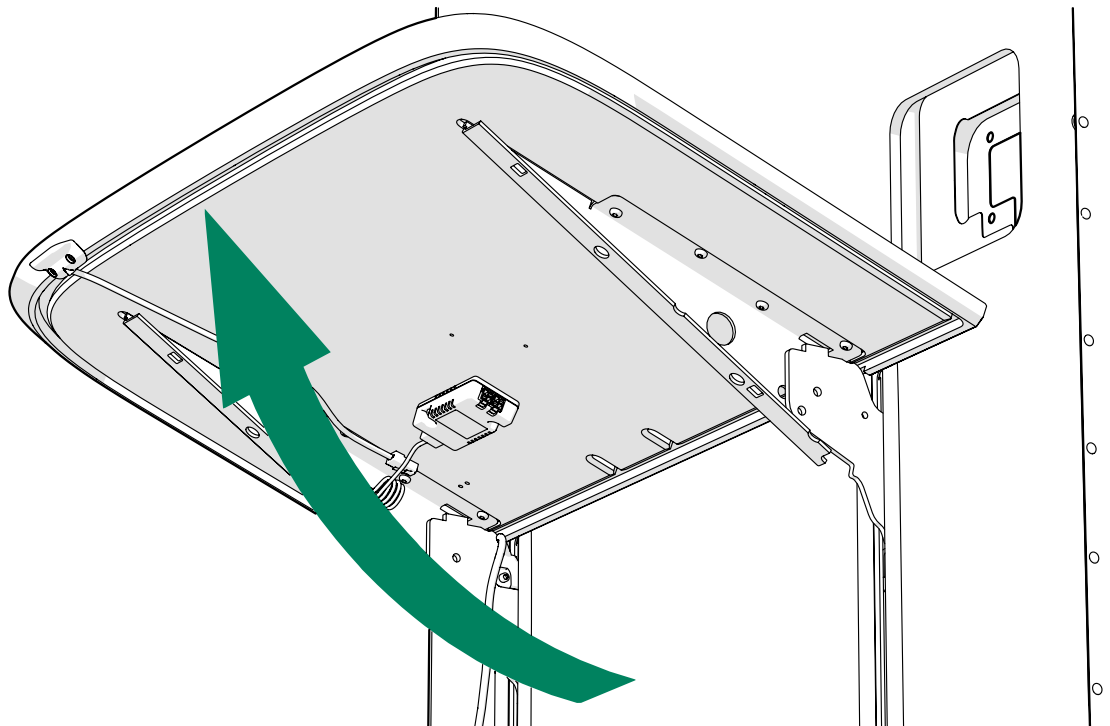


**Figure 50: With the optional wireless charger**


30. Remove the screw from the top end of both slit trims and loosen the screw of the hammer nut at the lower end.



**Note:** Do not remove the screw of the hammer nut. Only loosen it enough to turn the hammer nut vertical.

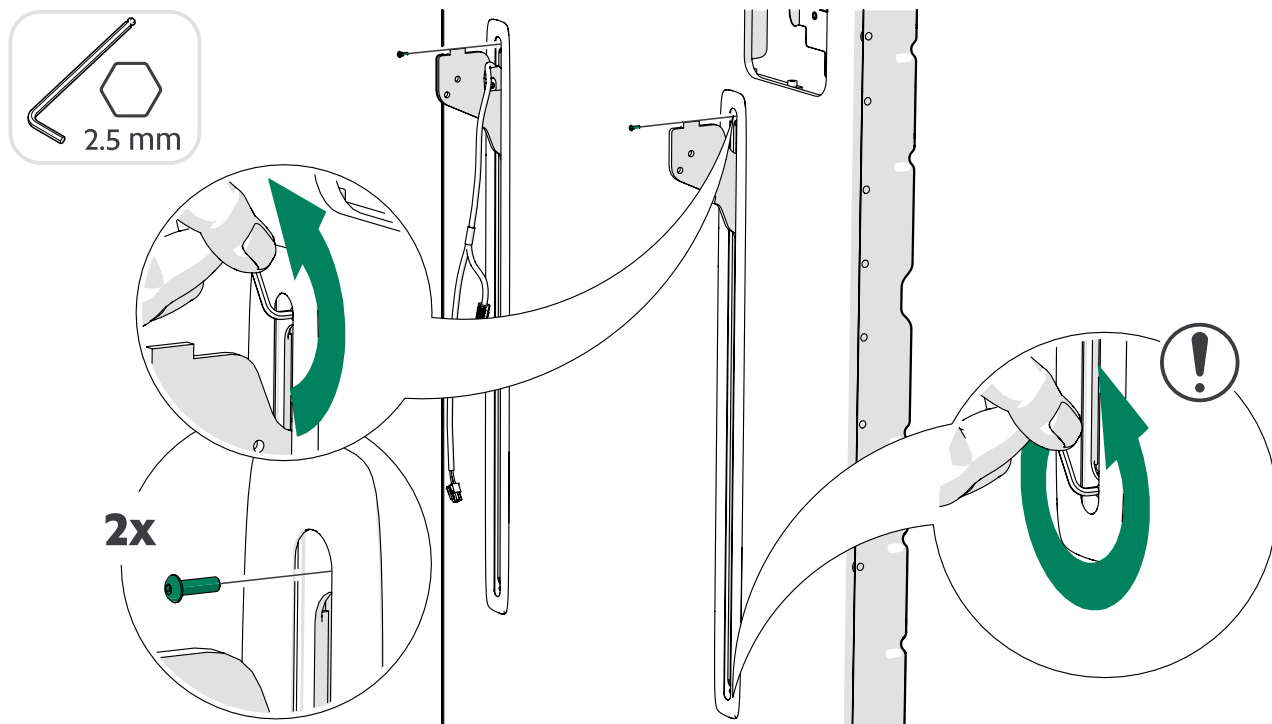


31. Remove the slit trims.

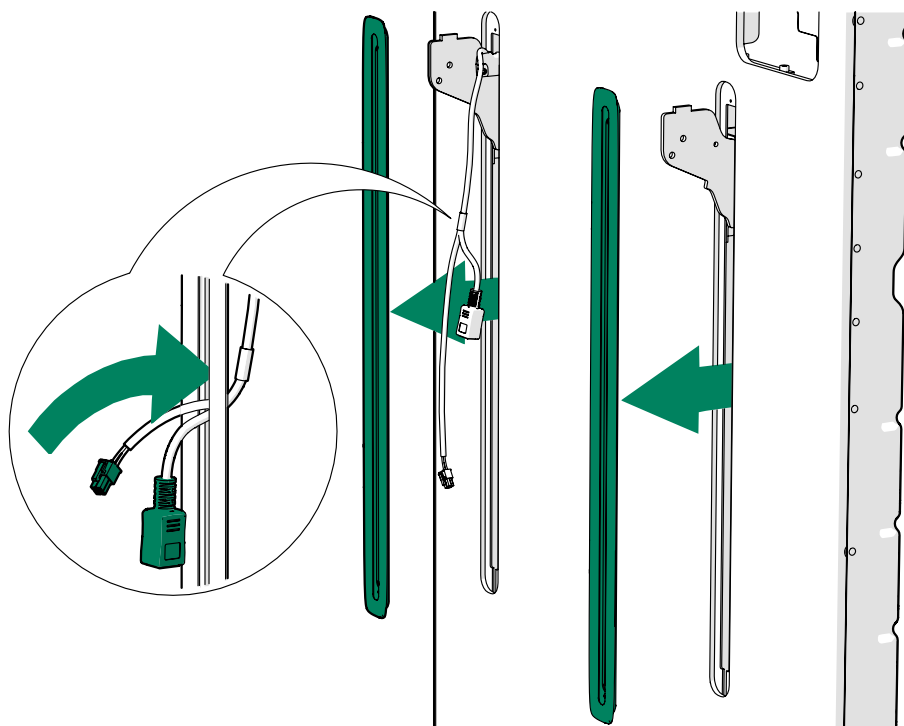


**32. Remove the techwall panel.**

- ⚠ **Note:** The interior panels are sensitive to dirt. Make sure that you use clean gloves to handle the panels and store them in a clean place.

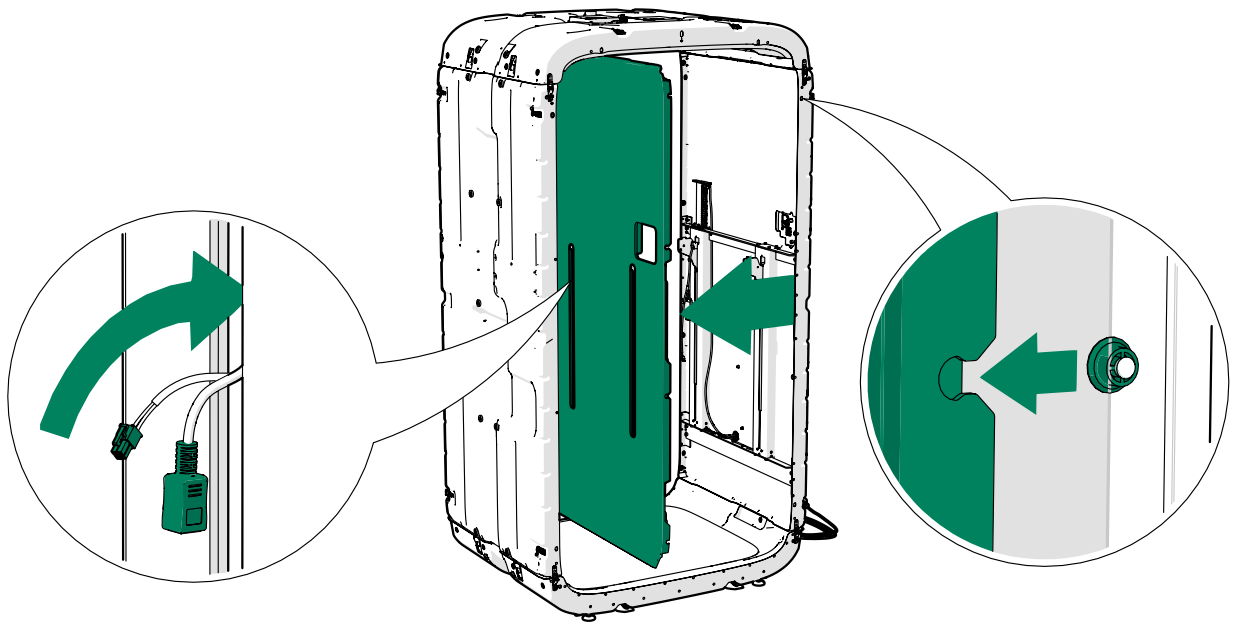**33. Remove the coat hook from the blank wall.**

Loosen the set screw to remove the coat hook.


- ⚠ **Note:** Do not remove the set screw.

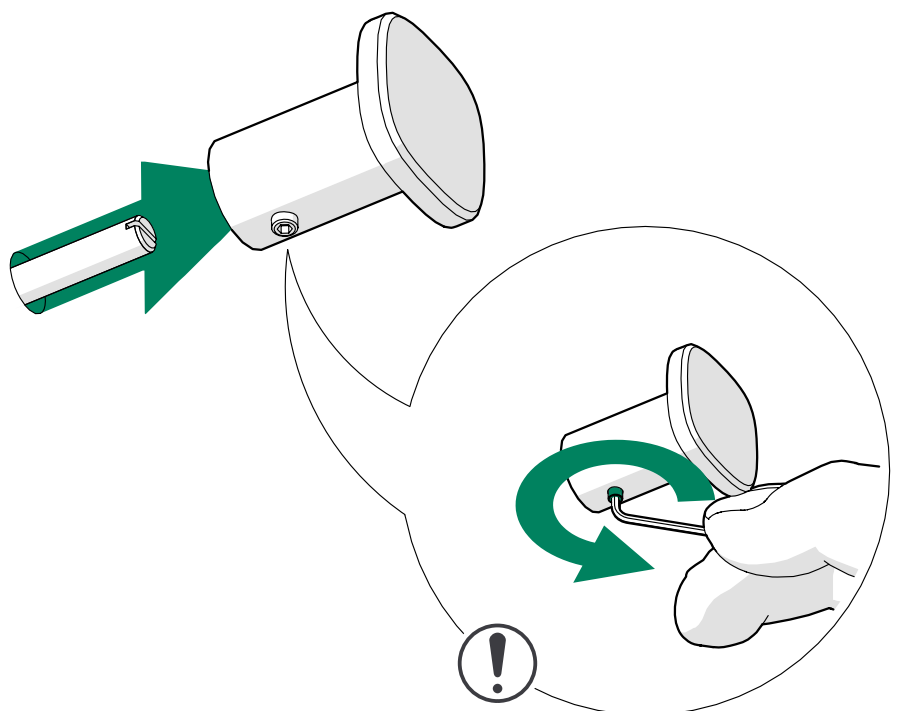




### 34. Remove the blank wall panel.

- ⚠ **Note:** The interior panels are sensitive to dirt. Make sure that you use clean gloves to handle the panels and store them in a clean place.

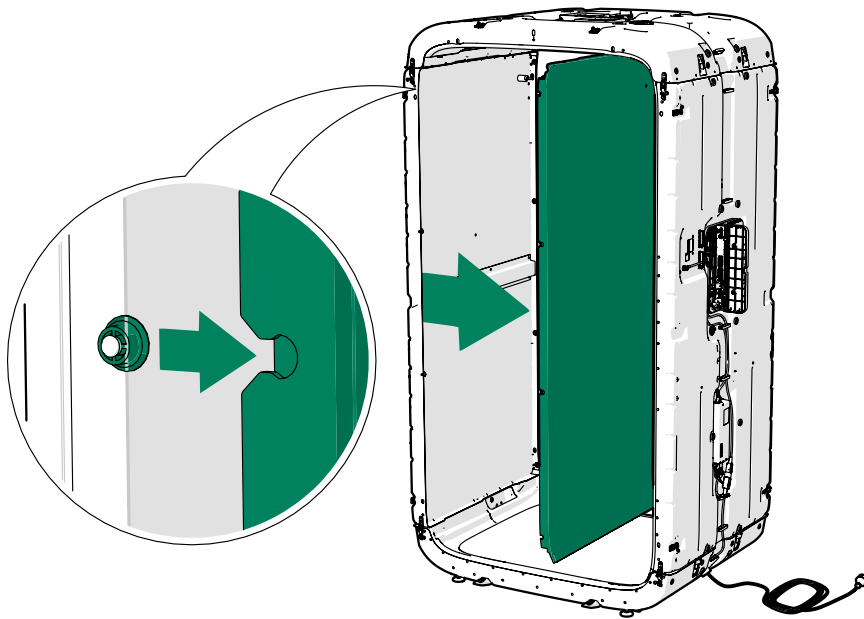

### 35. Remove the ceiling panel.


- ⚠ **Note:** The interior panels are sensitive to dirt. Make sure that you use clean gloves to handle the panels and store them in a clean place.

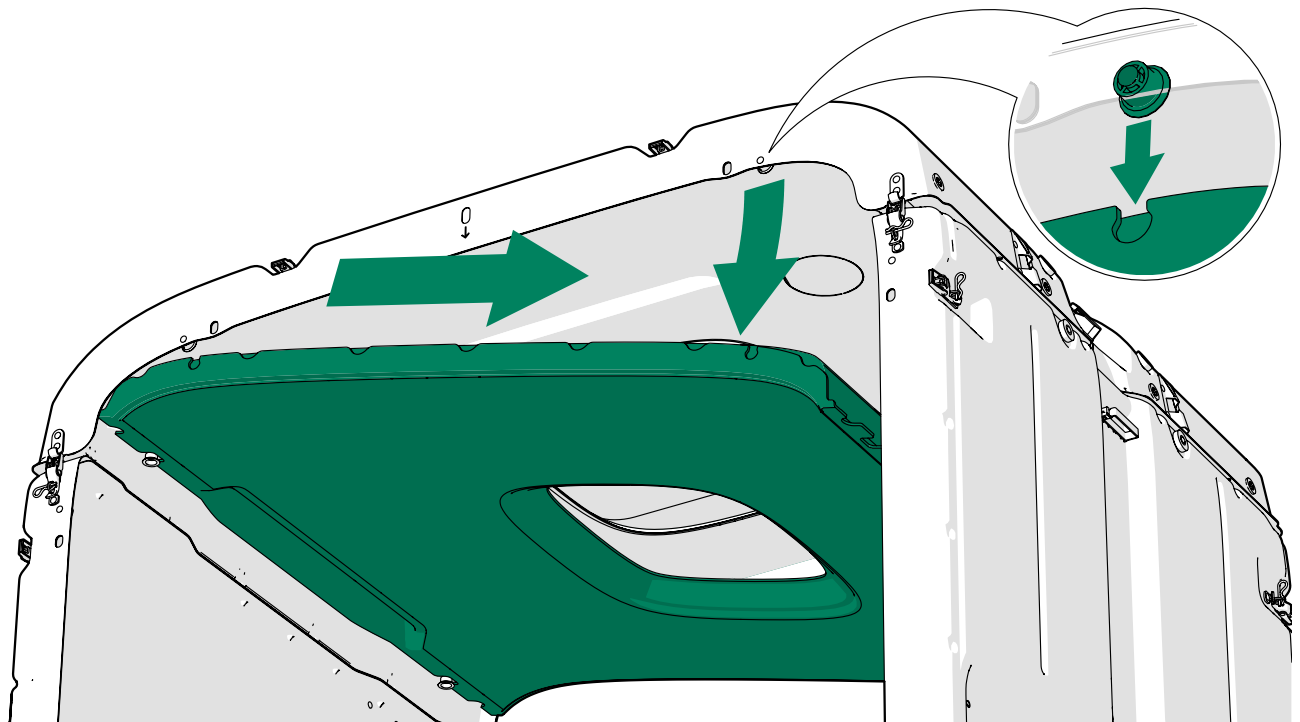

### 6.1.2 Install the removed parts (ceiling panel replacement)


1. Install the new ceiling panel.

- ⓘ **Note:** The interior panels are sensitive to dirt. Make sure that you use clean gloves to handle the panels.
- ⓘ **Note:** Make sure that the ceiling panel is the right way around.

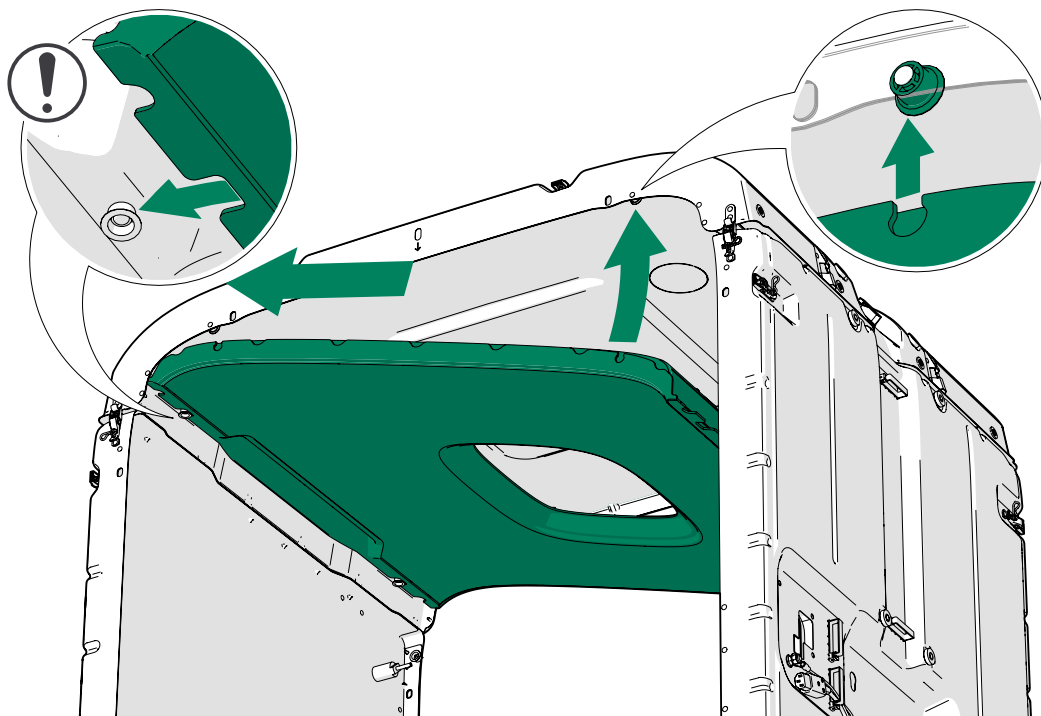


2. Install the blank wall panel.

- ⓘ **Note:** Make sure that the opening for the coat hook is in the upper right corner.

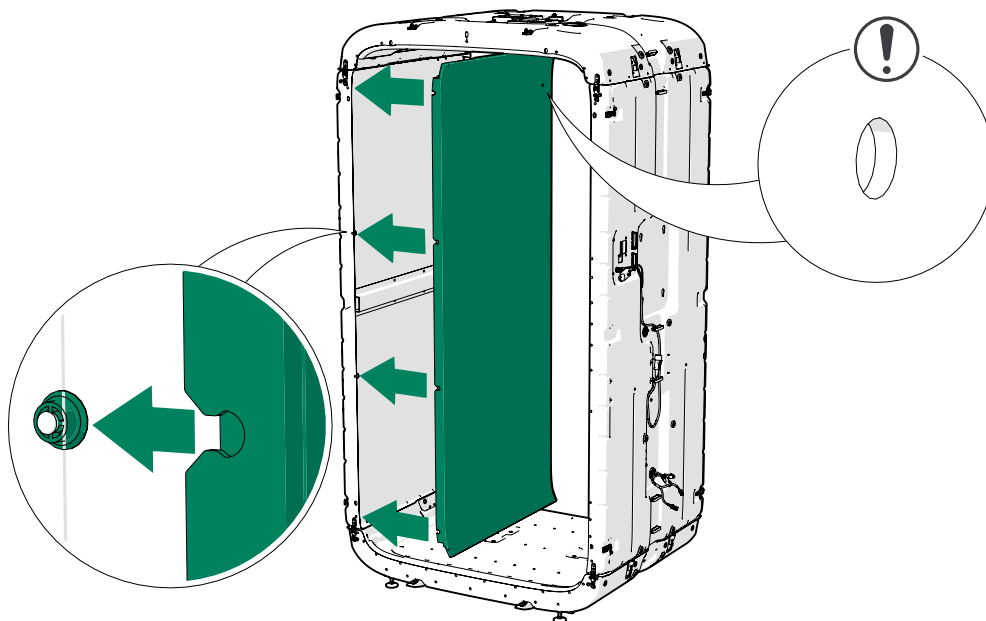


3. Install the coat hook.

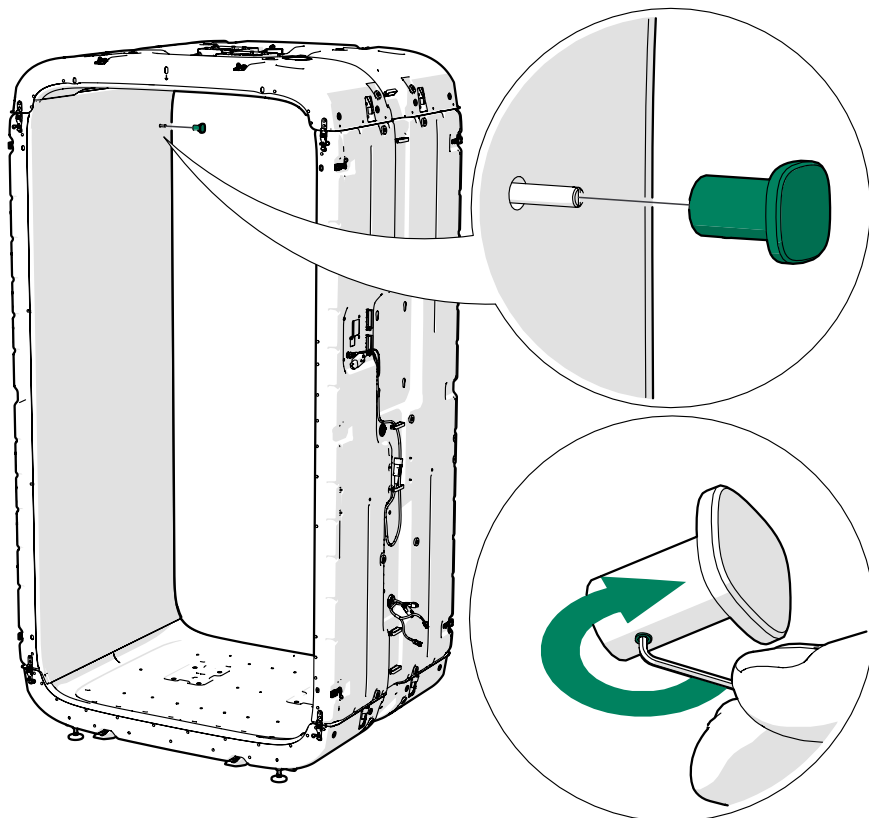

4. Install the techwall panel.




**Note:** Lead the spiral cord through the slit in the wall panel.

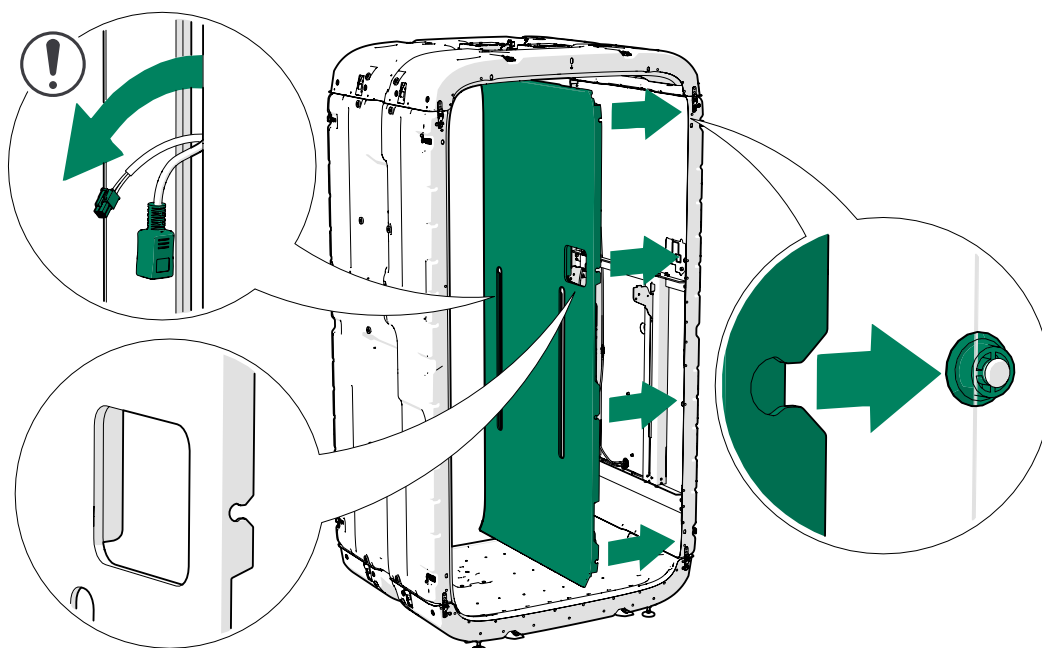

**5. Install the slit trims.**

**Note:** Make sure that the hammer nut is in the vertical position.

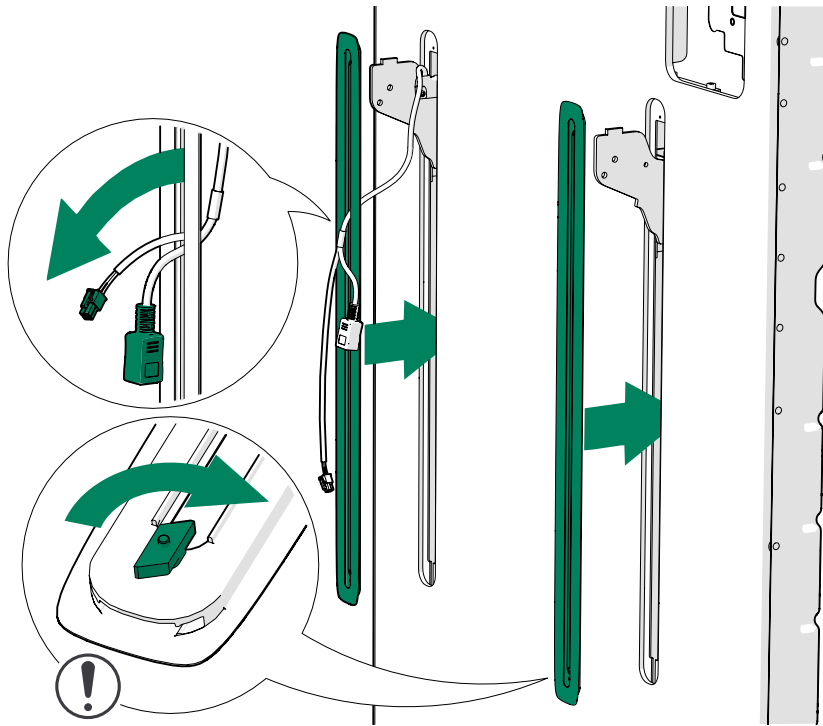


6. Install the screws to the top ends of the slit trims and at the lower ends of the slit trims, turn the hammer nuts to the horizontal position.




**Note:** Do not overtighten the screw at the top end of the slit trim.




**Tip:** Insert the long end of the hex key into the top of the screw and rotate the short end to avoid overtightening.

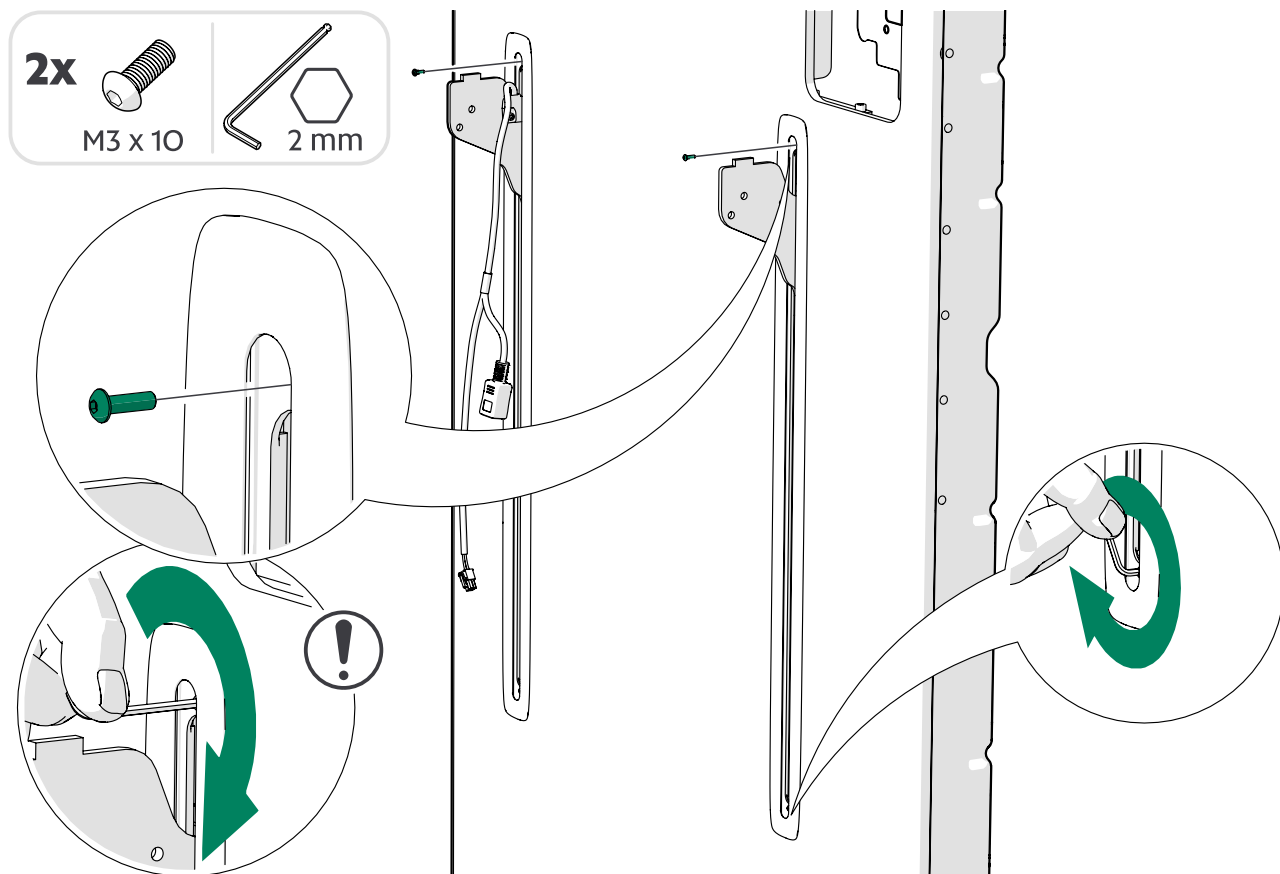


7. Install the light with the control hub to the ceiling.

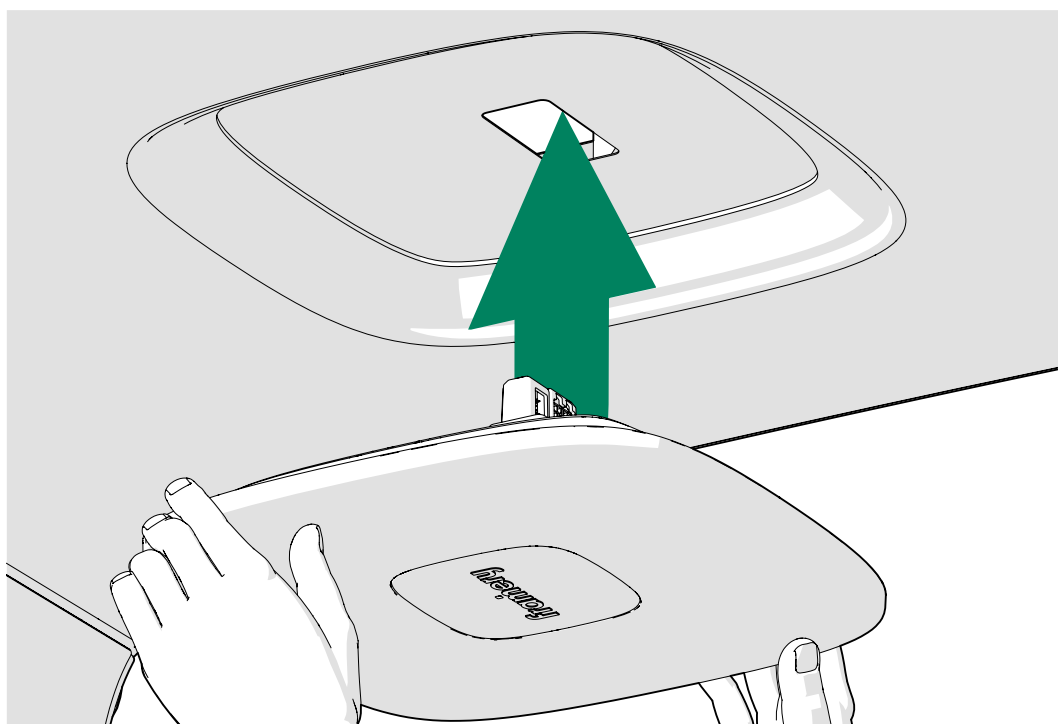

8. Place the tabletop onto the table bracket.

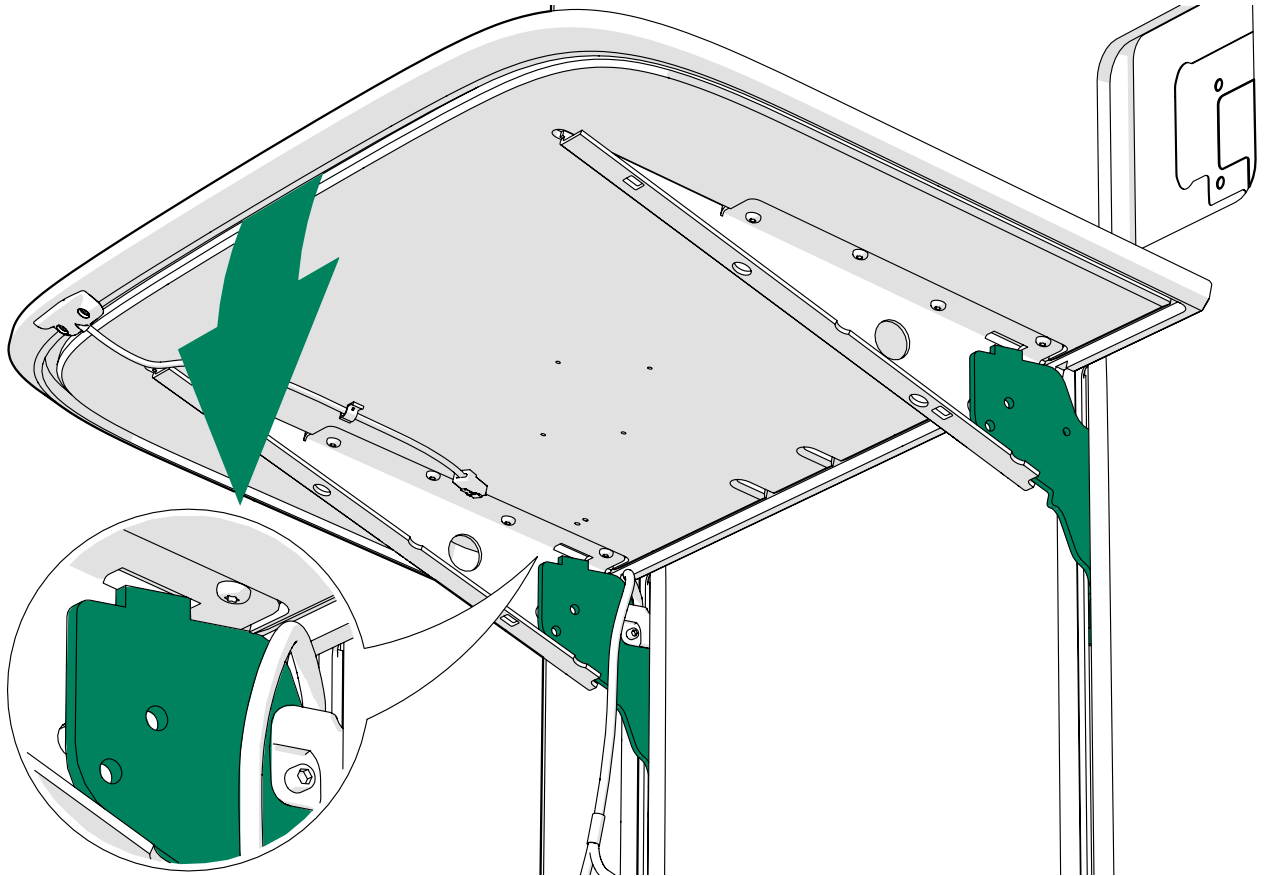

**Figure 51: Without the optional wireless charger**

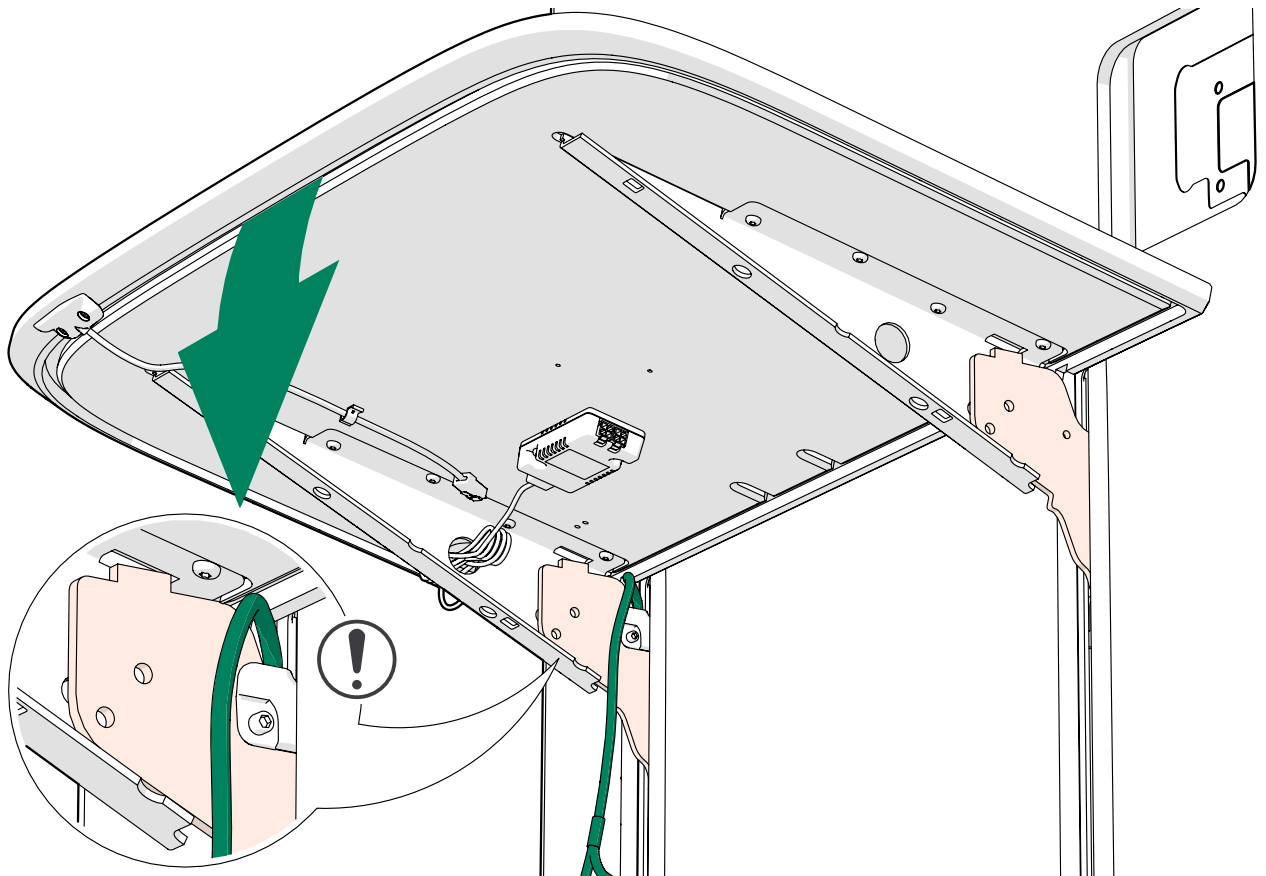

**Figure 52: With the optional wireless charger**

9. Install the tabletop to the table bracket with screws.

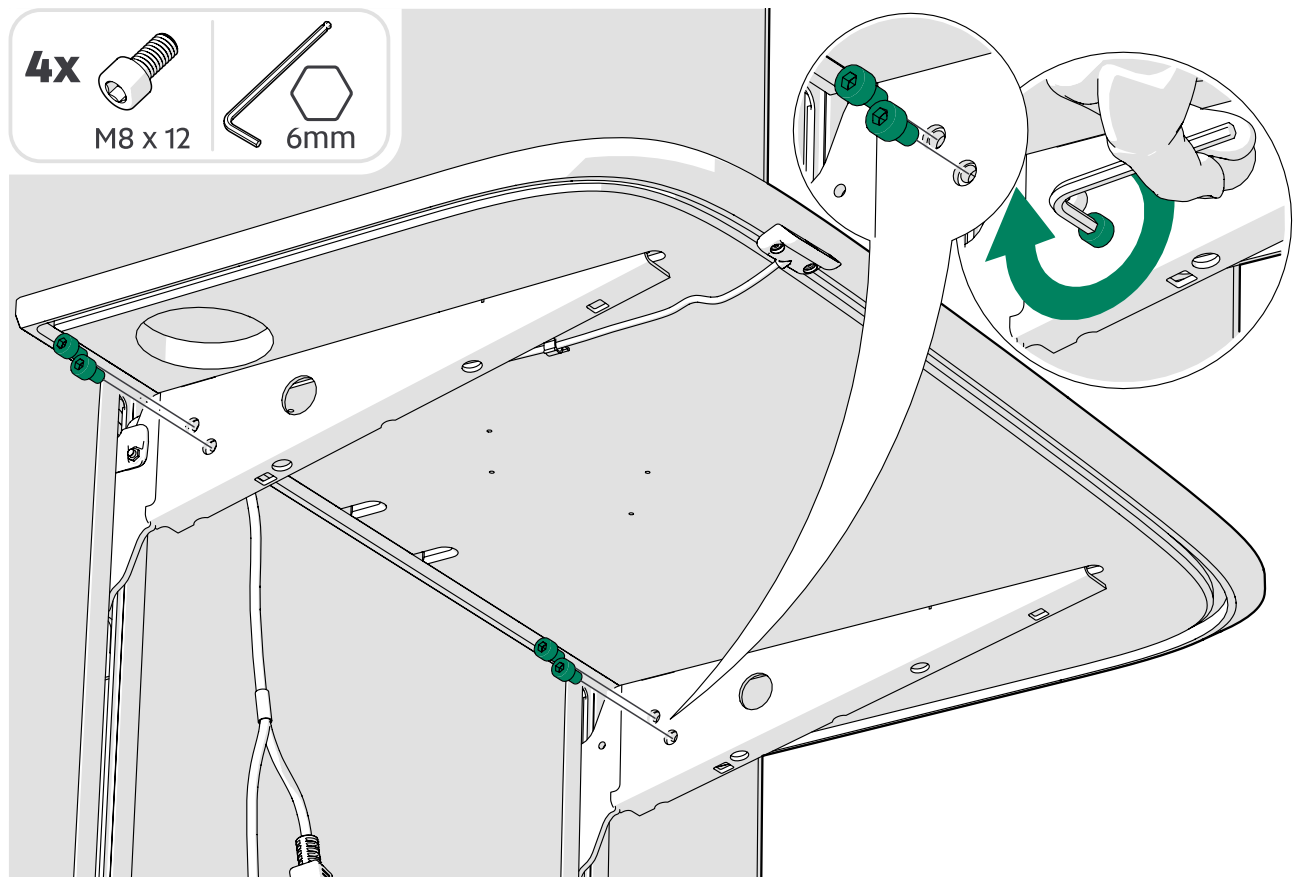


Figure 53: Without the optional wireless charger



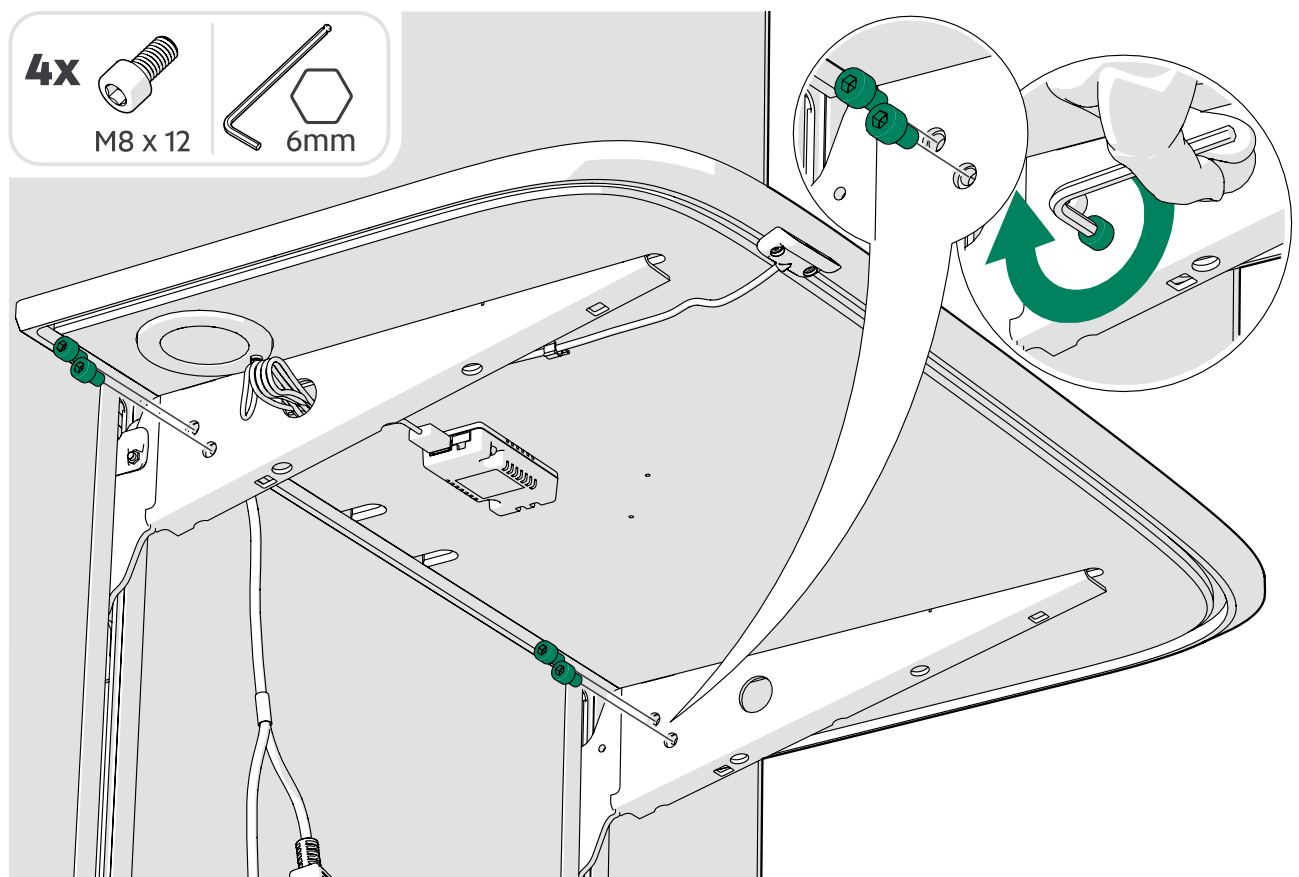


Figure 54: With the optional wireless charger

10. Connect the spiral cord to the electrical equipment in the table.

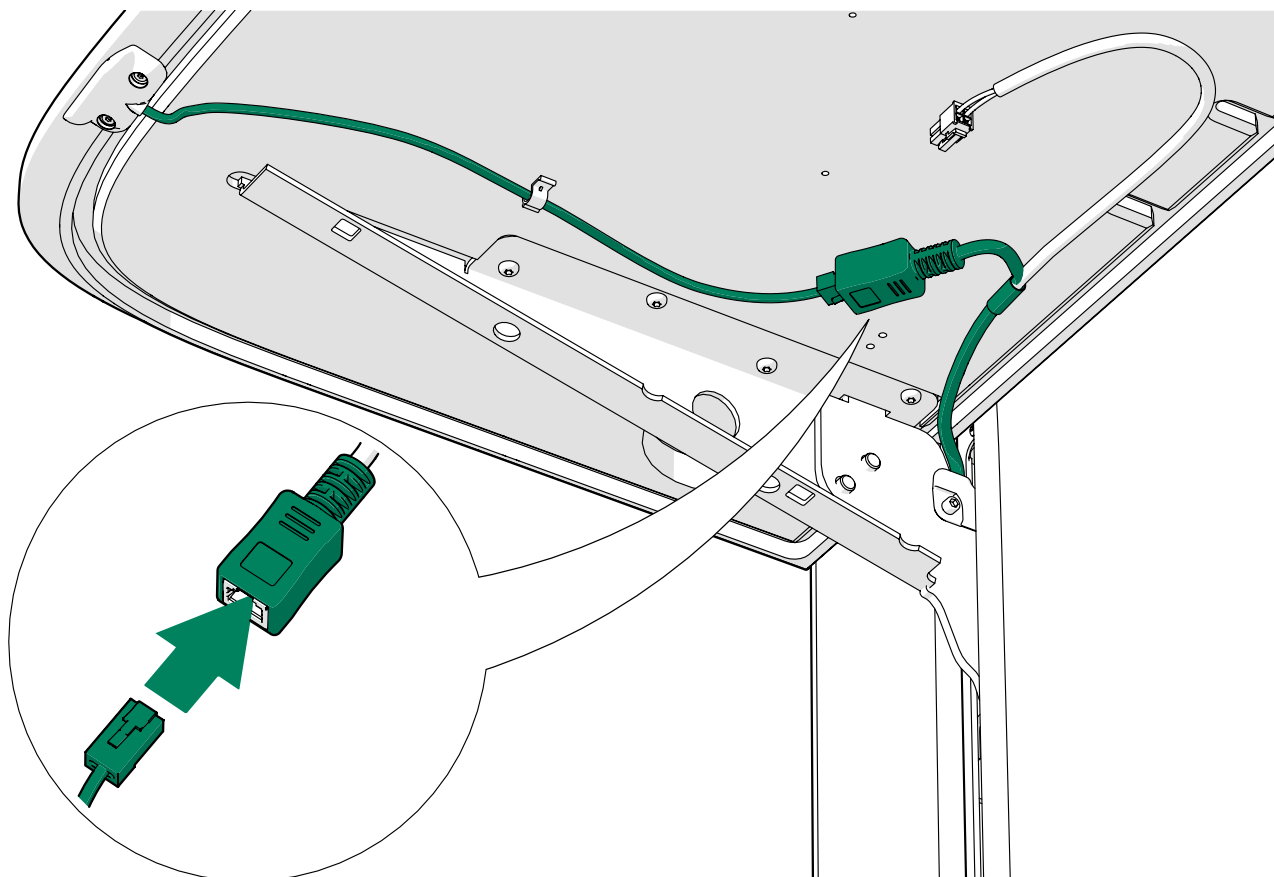

**Figure 55: Without the optional wireless charger**

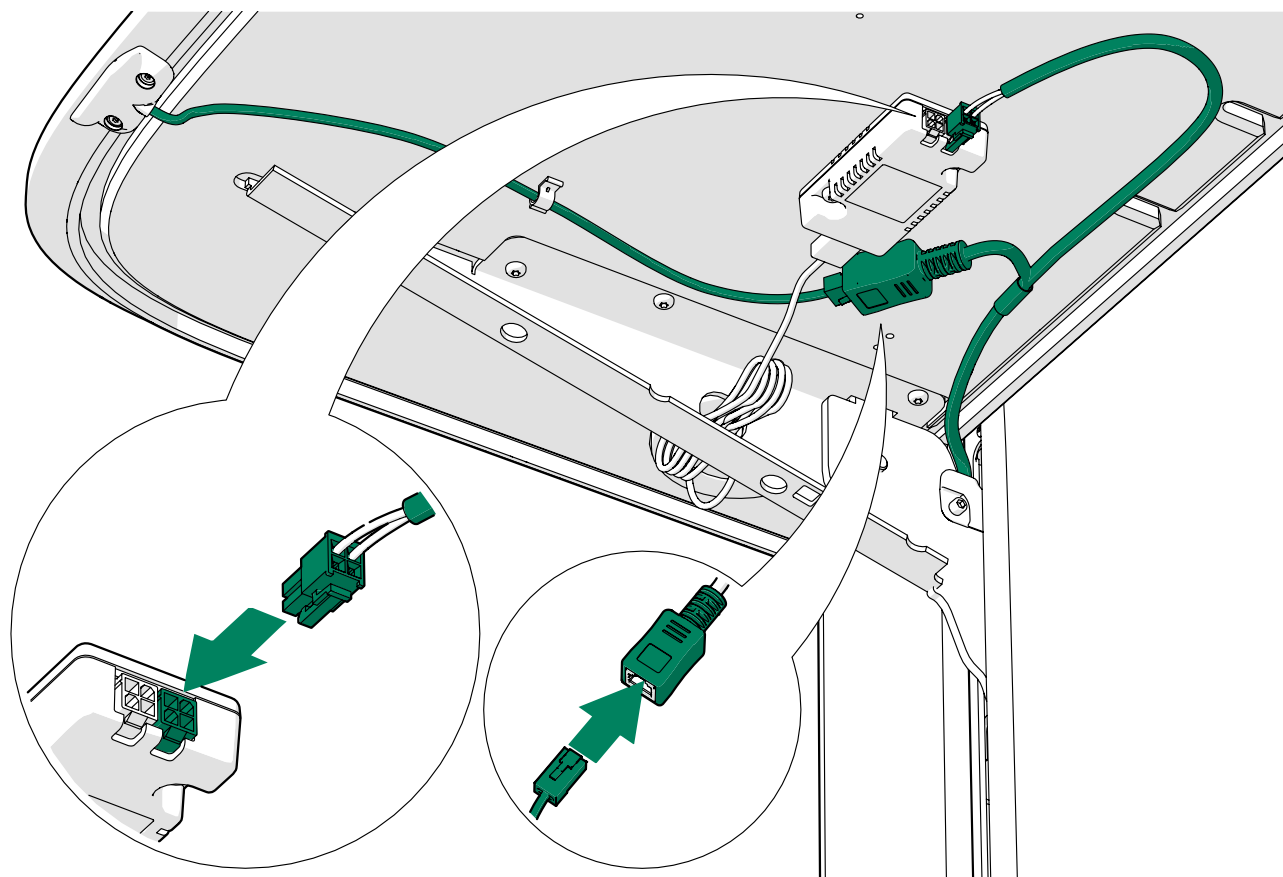

**Figure 56: With the optional wireless charger**



11. Install the strain relief for the spiral cord.

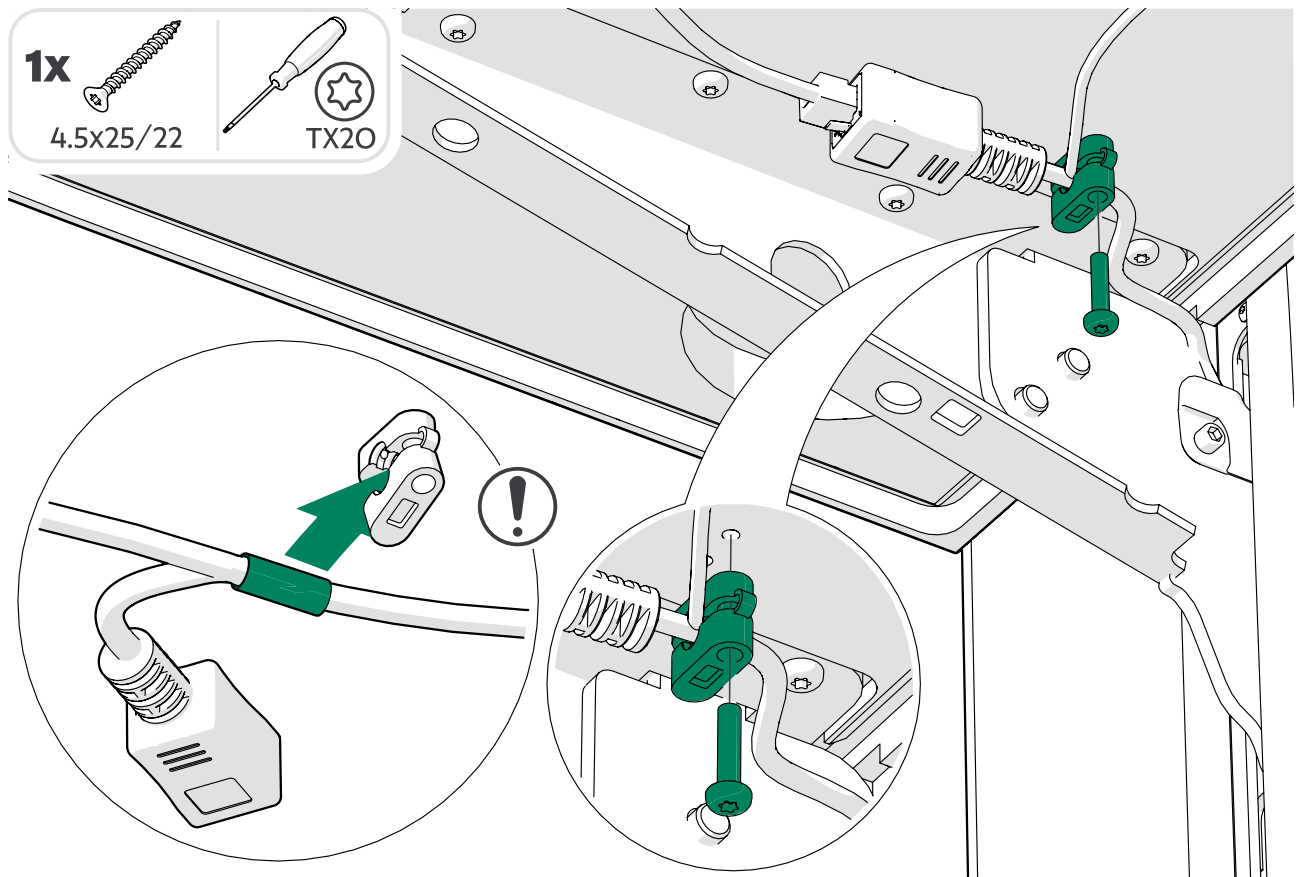


Figure 57: Without the optional wireless charger



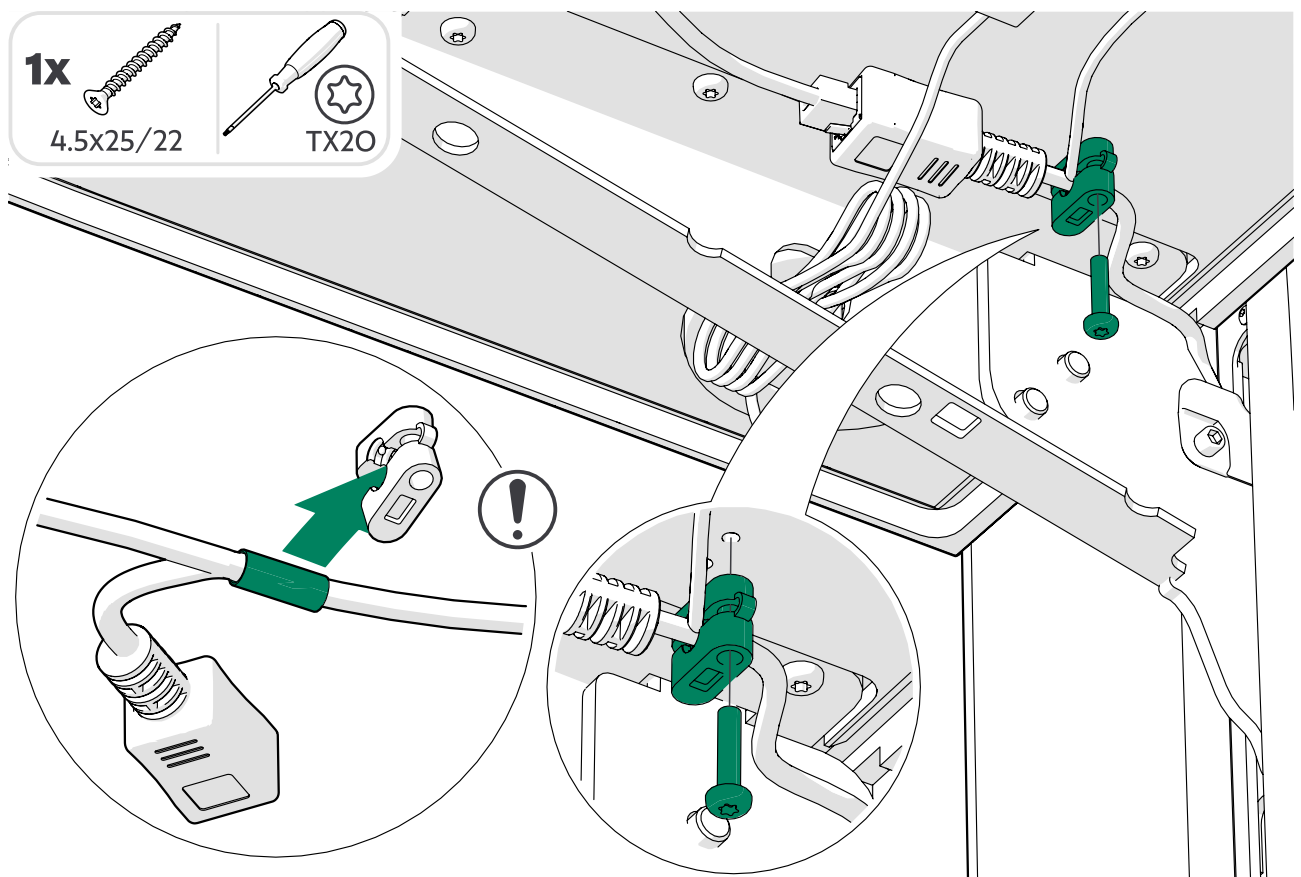


Figure 58: With the optional wireless charger


**12.** Install the table bottom felt.

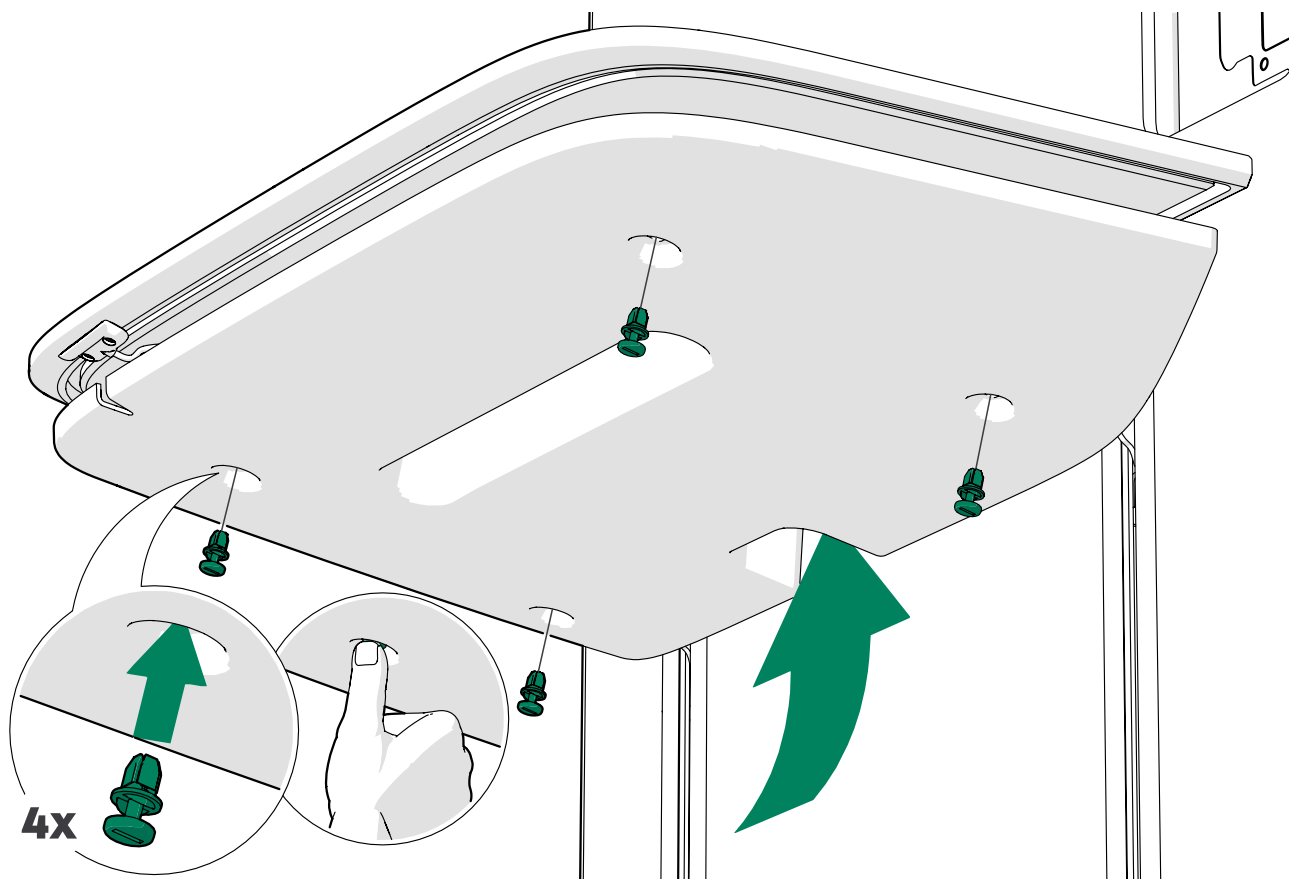

**13.** Install the control panel to the techwall.

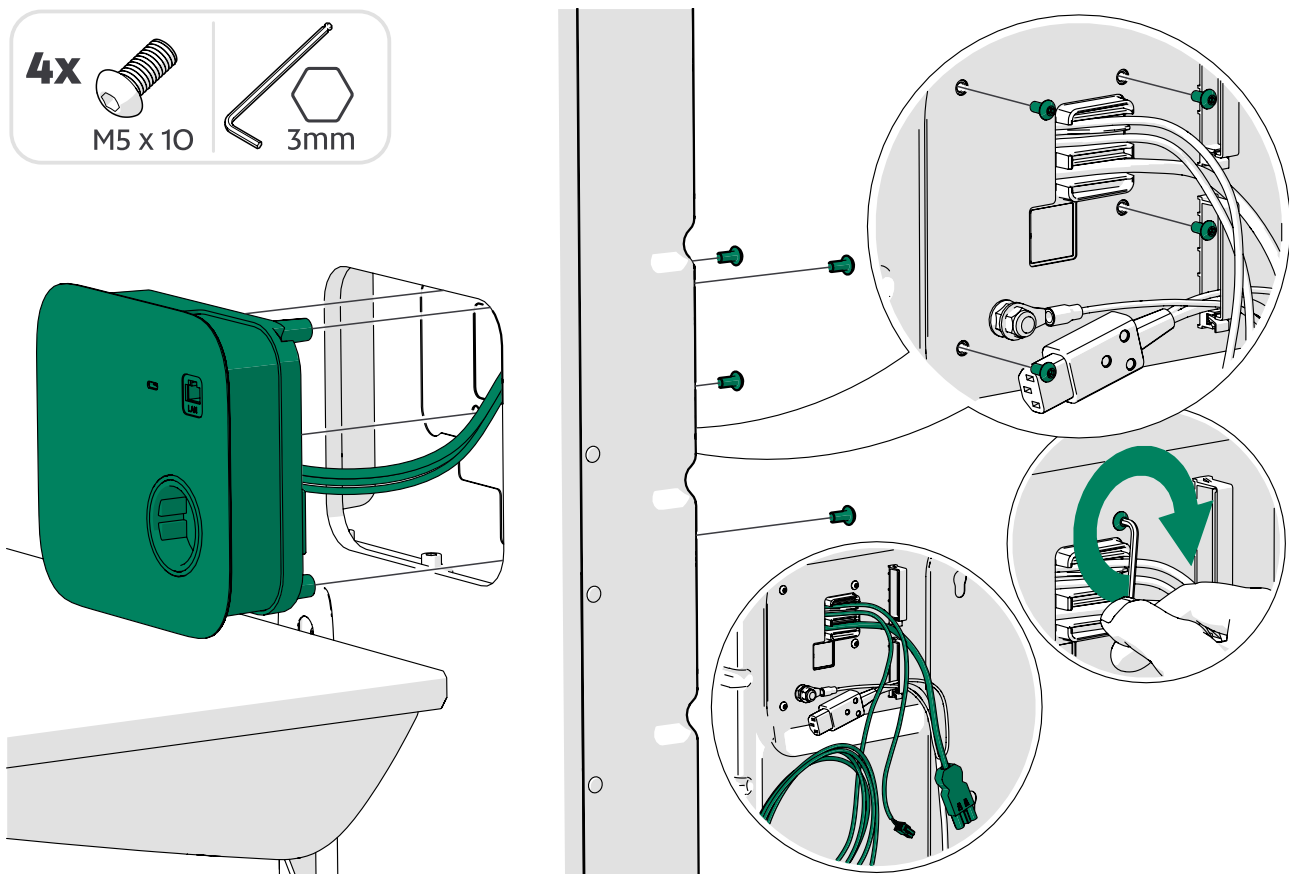

**14. Connect the power outlet cord to the power unit.**

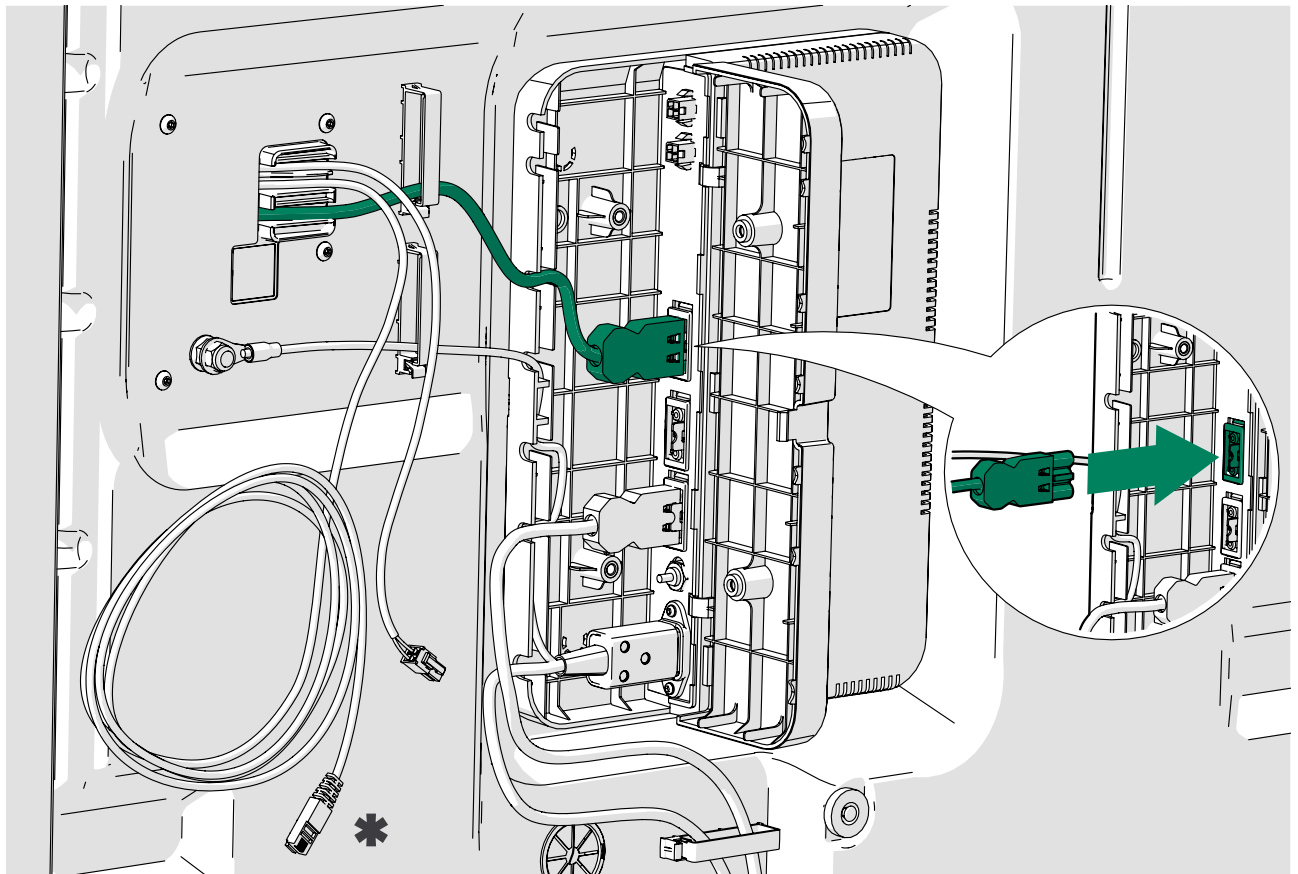

**Figure 59: \* = optional LAN**

15. Connect the CAN cord to the power unit.

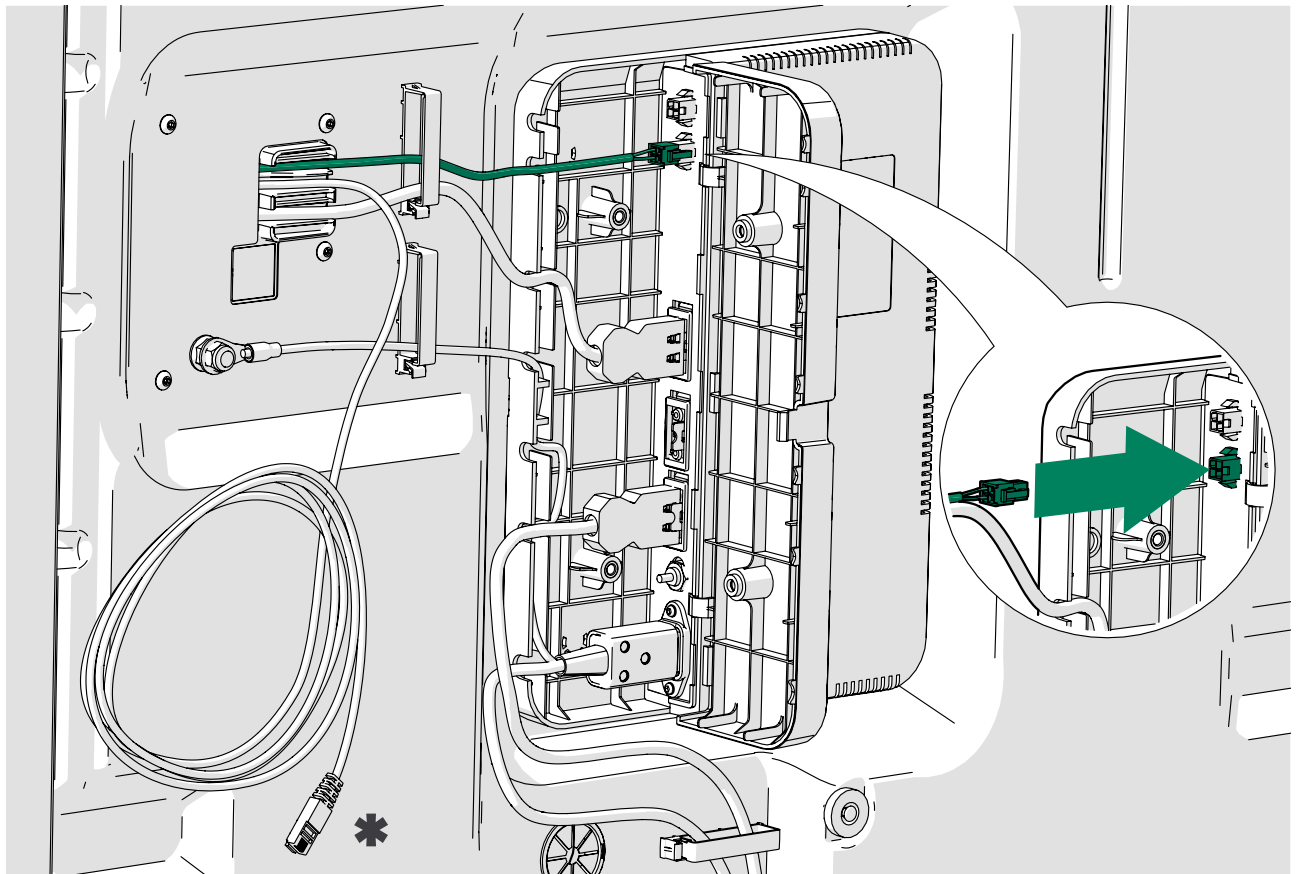


Figure 60: Without the optional wireless charger (\* = optional LAN cord)

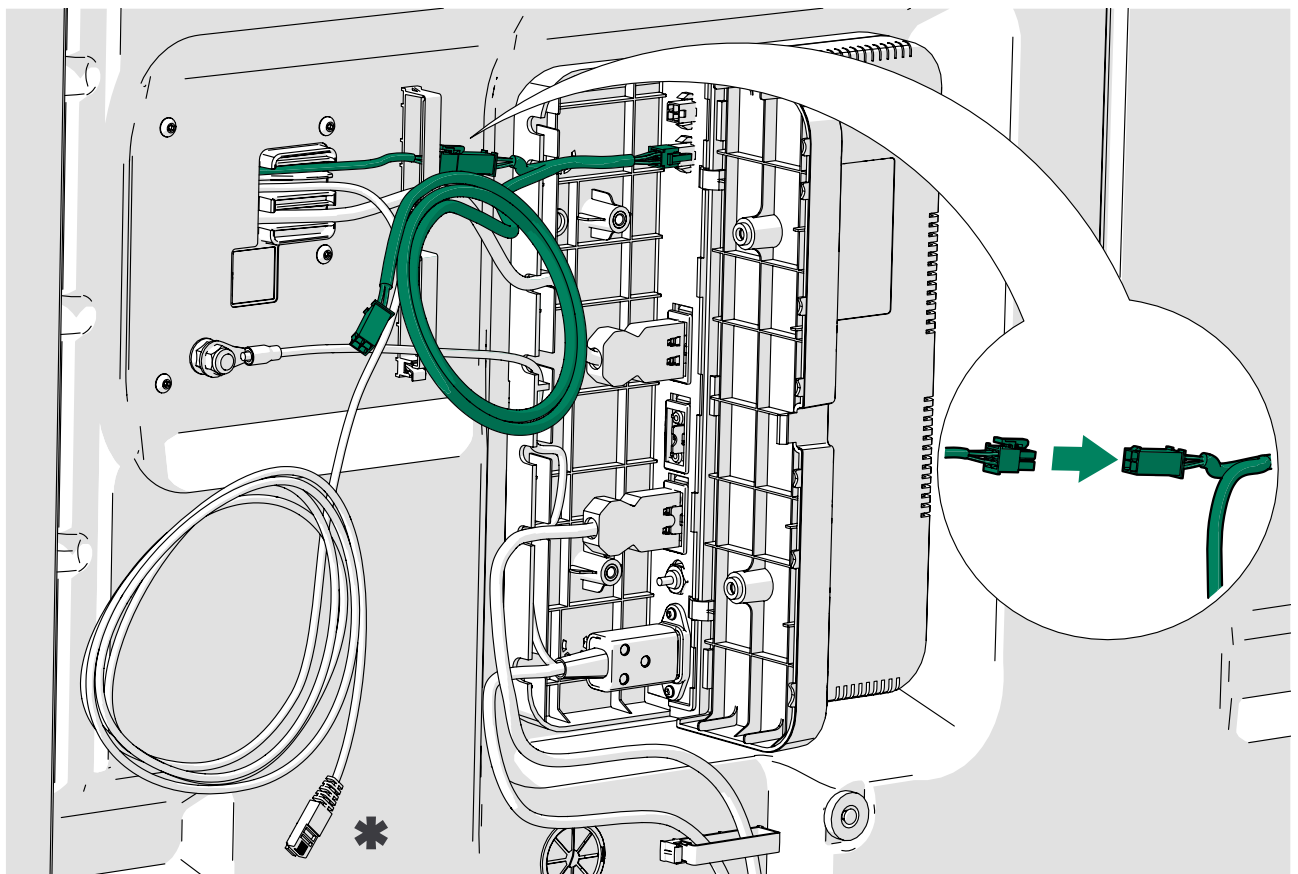


Figure 61: With the optional wireless charger (\* = optional LAN cord)

16. Close the power unit cover and install the screws.

⚠ **Note:** Make sure that the cords are not pinched or damaged.


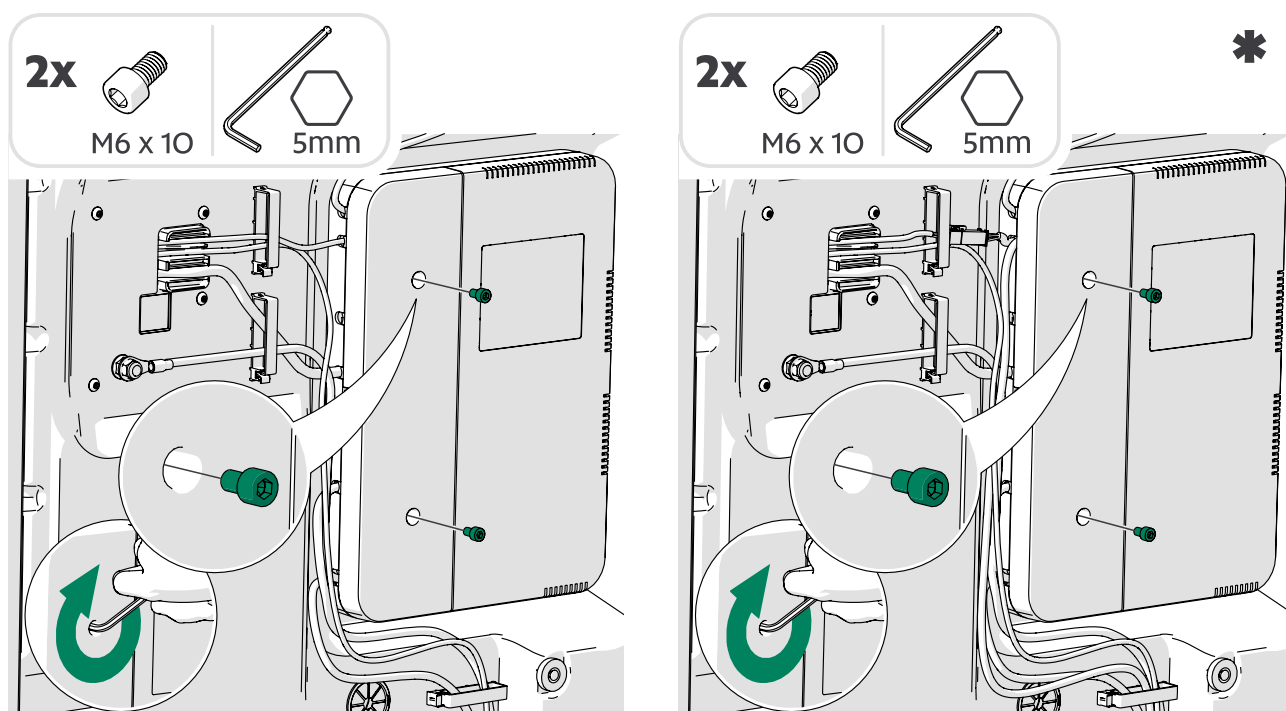



Figure 62: \* = With the optional wireless charger

17. Position the glass wall close to the back of the pod so that the hooks on the frame are directly above the slots in the floor.

⚠ **Note:** Make sure that the guide pin at the upper edge of the frame is in place.

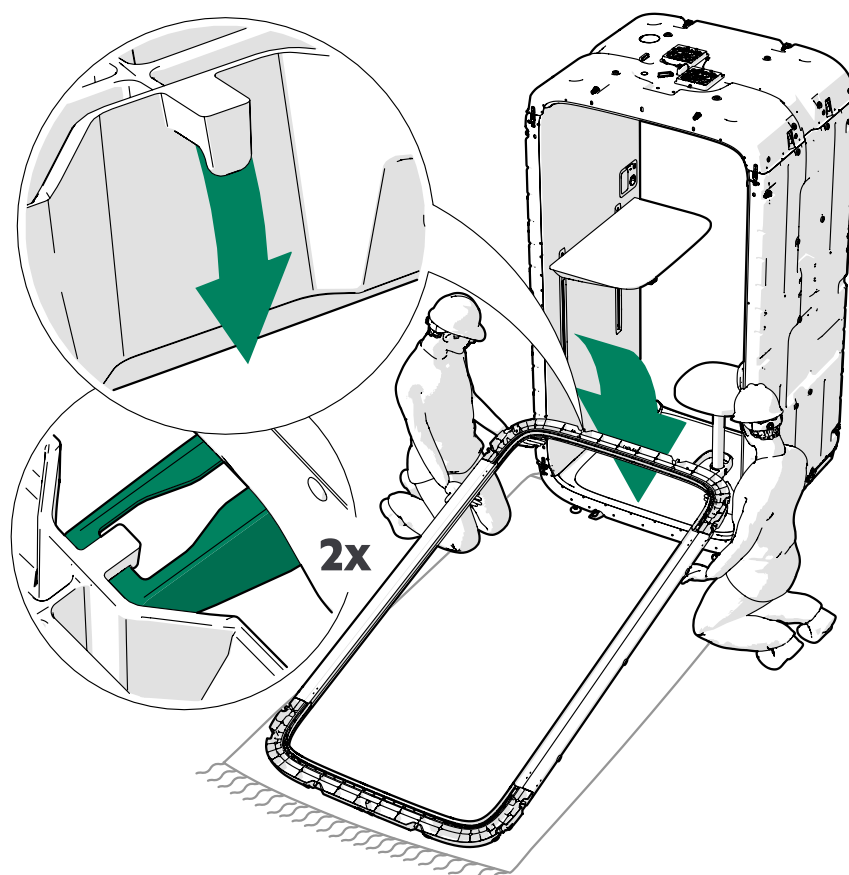


18. Lift the glass wall into place.

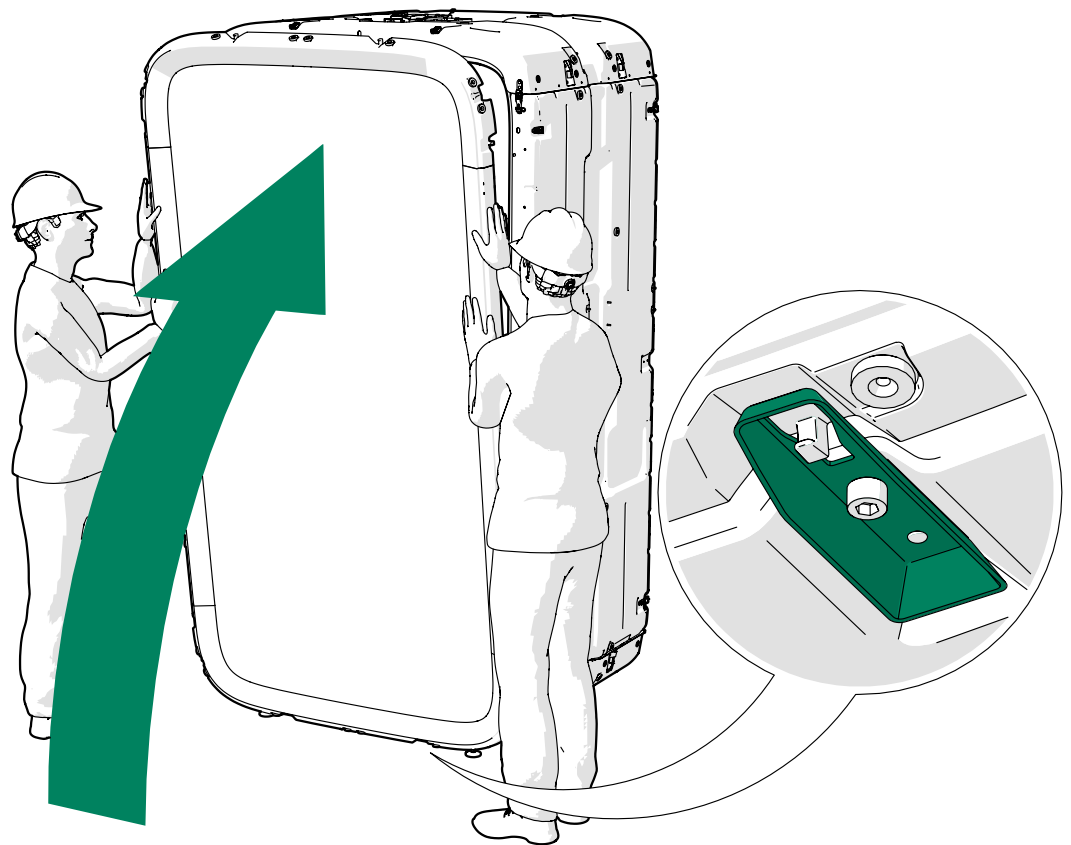

19. Close the latches (6 pcs) and insert the pins (6 pcs) around the glass wall frame.




**Note:** Support the glass wall until all latches are secured.

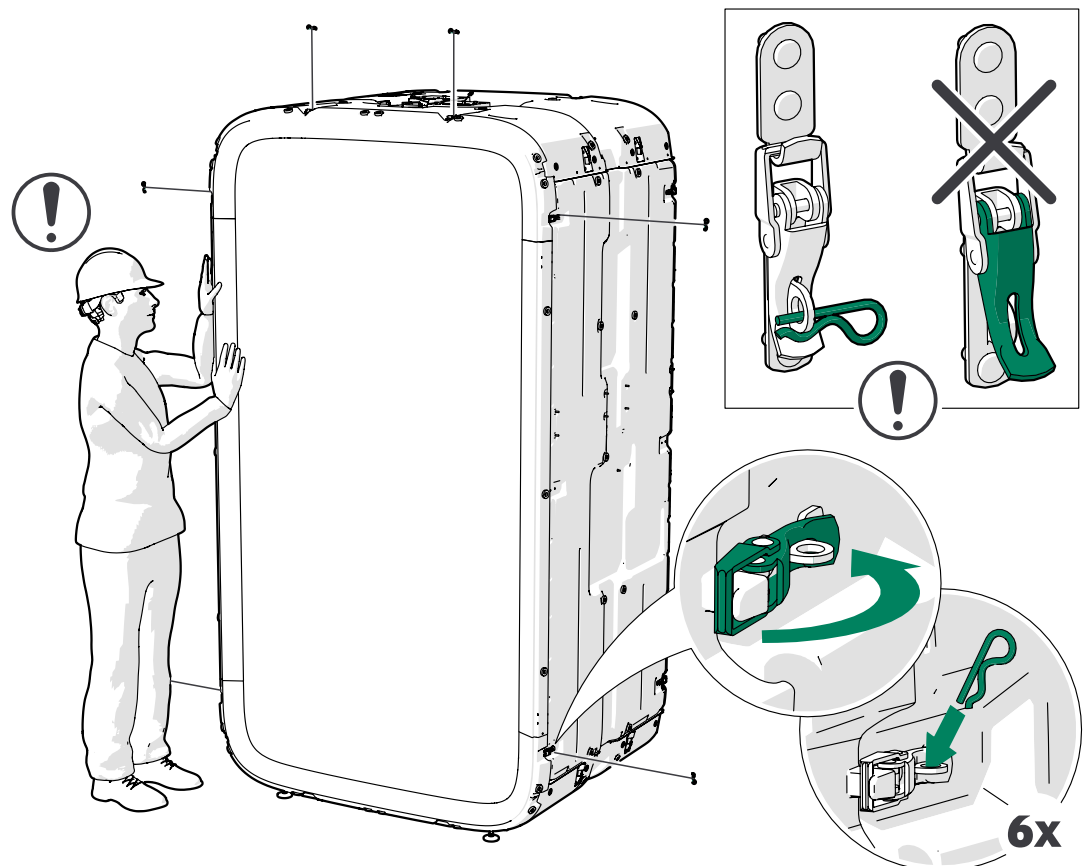




20. Position the front frame with door close to the front of the pod so that the hooks on the frame are directly above the slots in the floor.

⚠ **Note:** Make sure that the guide pin at the upper edge of the frame is in place.

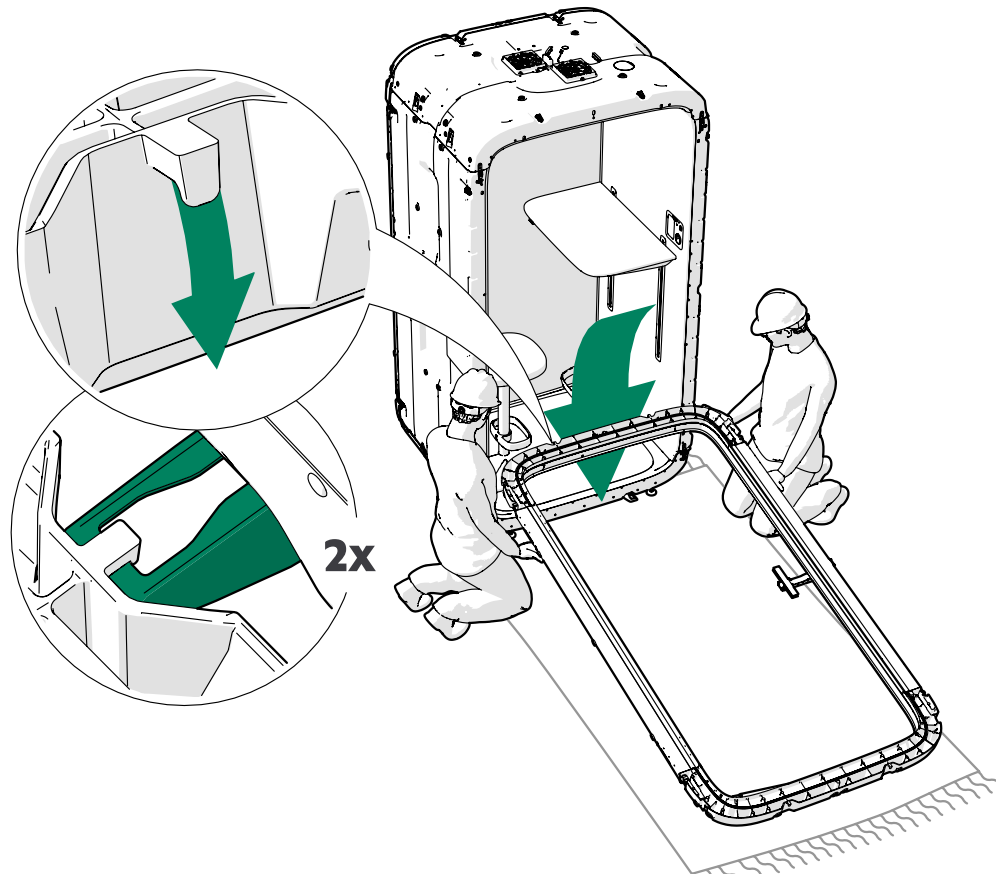


21. Lift the front frame with door into place.

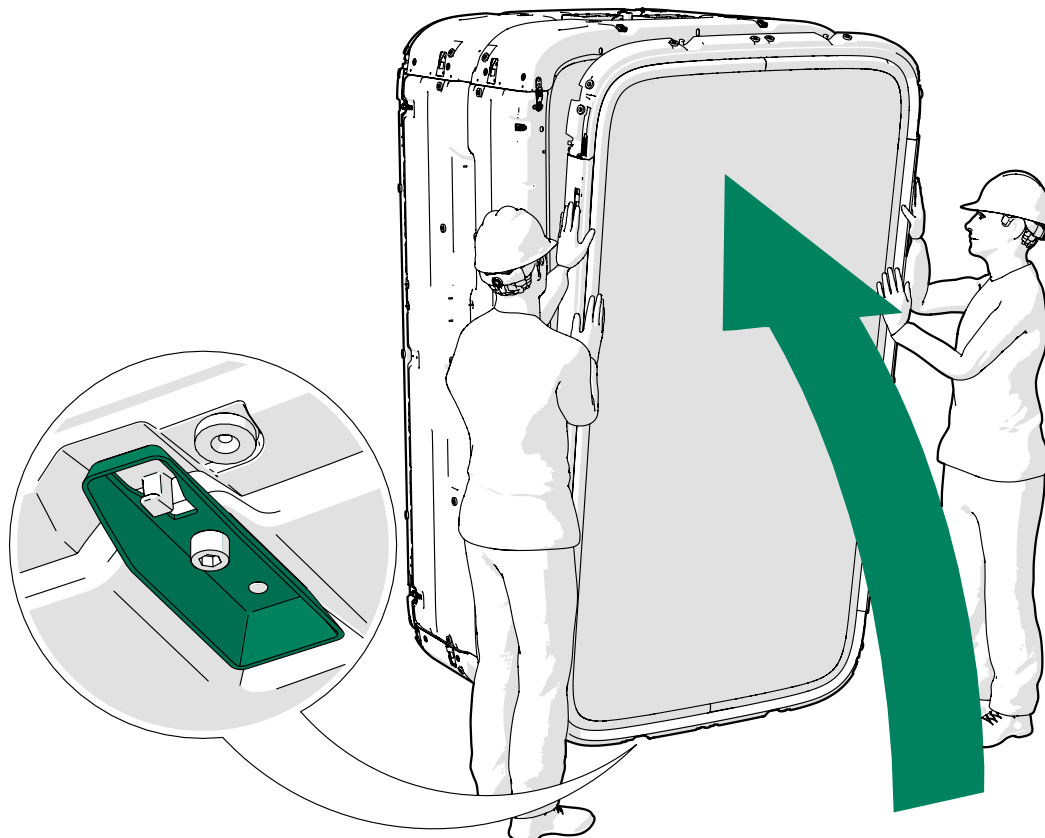


22. Close the latches (6 pcs) and insert the pins (6 pcs) around the front frame.

⚠ **Note:** Support the front frame with door until all latches are secured.

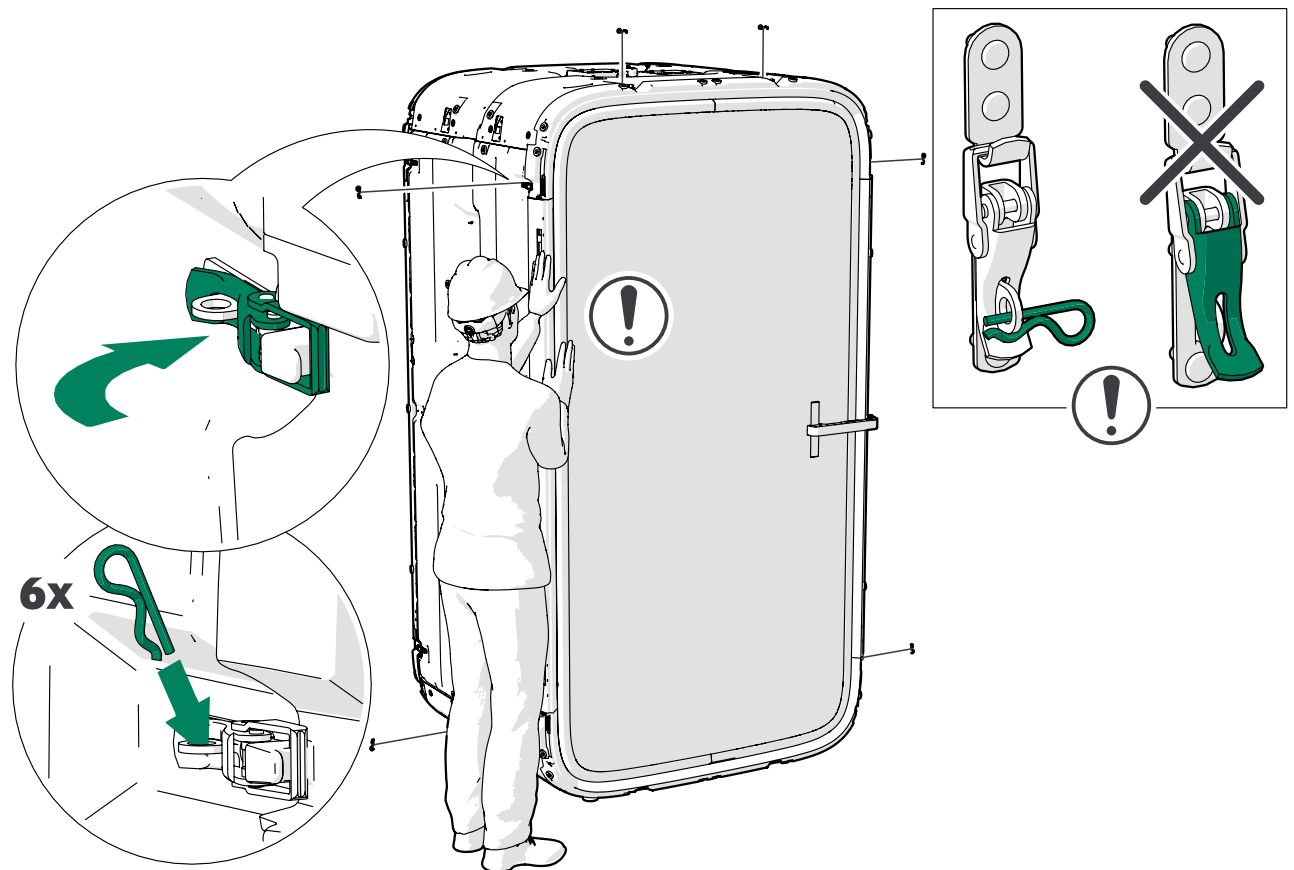

23. Remove the door brace and install the outside door handle.


⚠ **Note:** Make sure that the set screw is at the bottom.

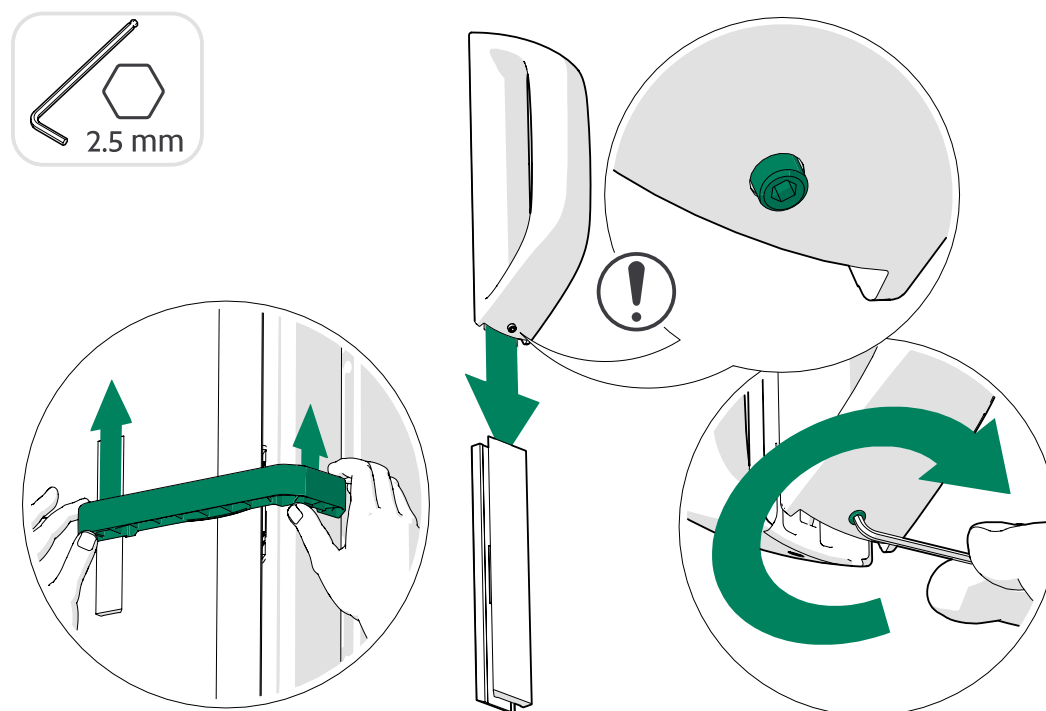




24. Install the occupancy indicator lights to the pod and connect the cords to the OCC connectors of the control hub.


Install the occupancy indicator lights to the same corners from which they were removed.

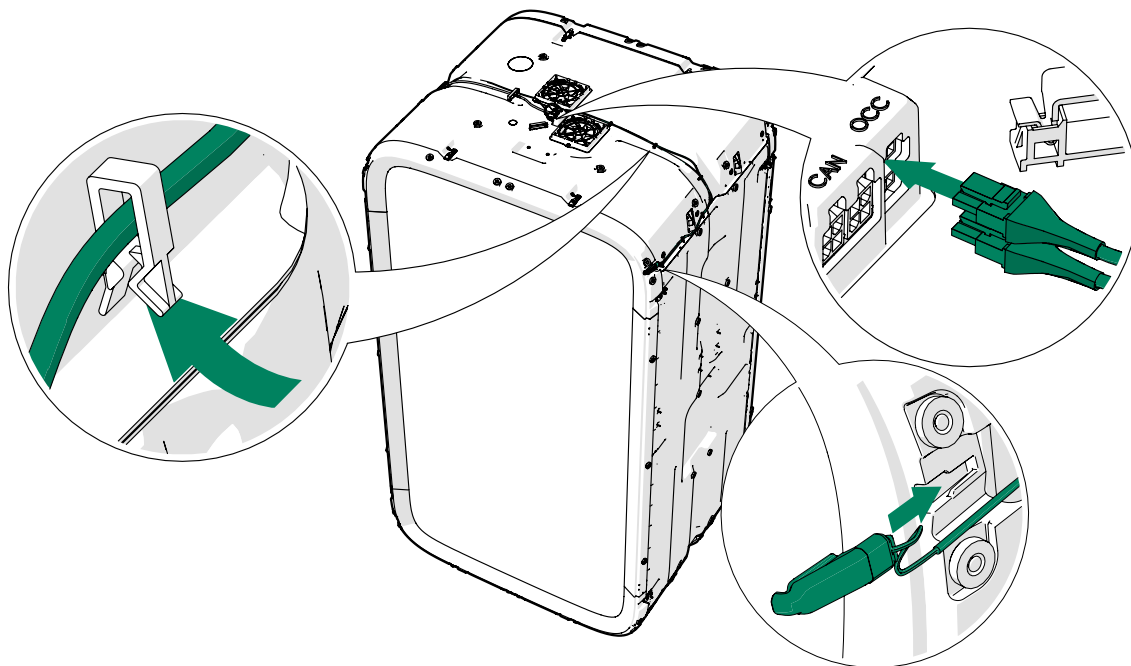

25. Lead the long CAN cord up to the roof from the power unit and connect it to the CAN connector of the control hub.

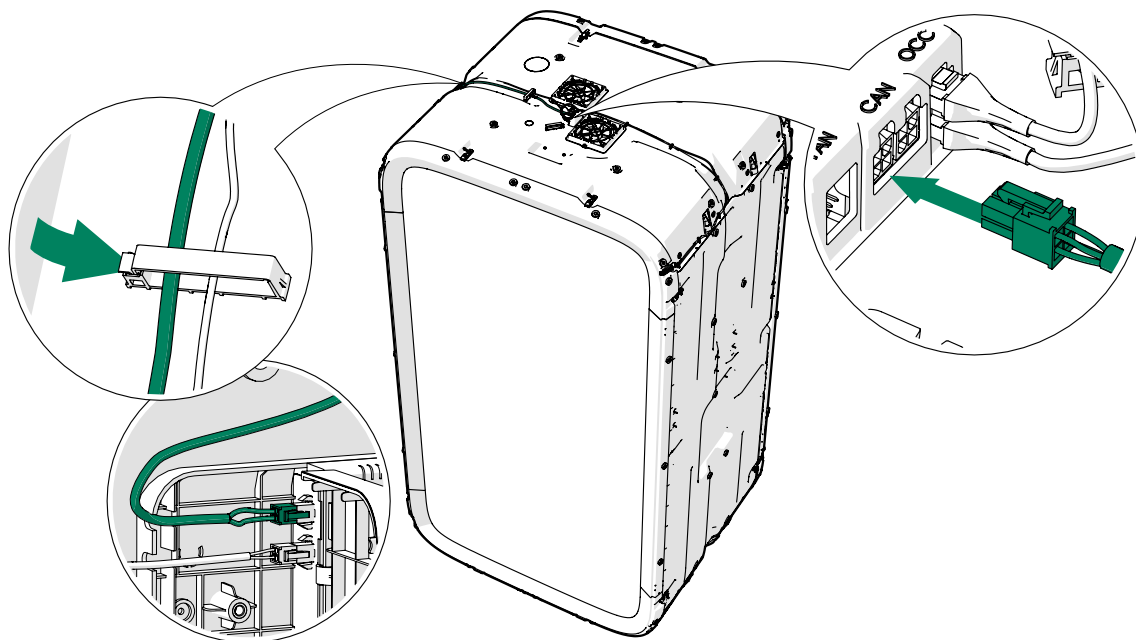

26. Connect the fan cords to the FAN connectors of the control hub.

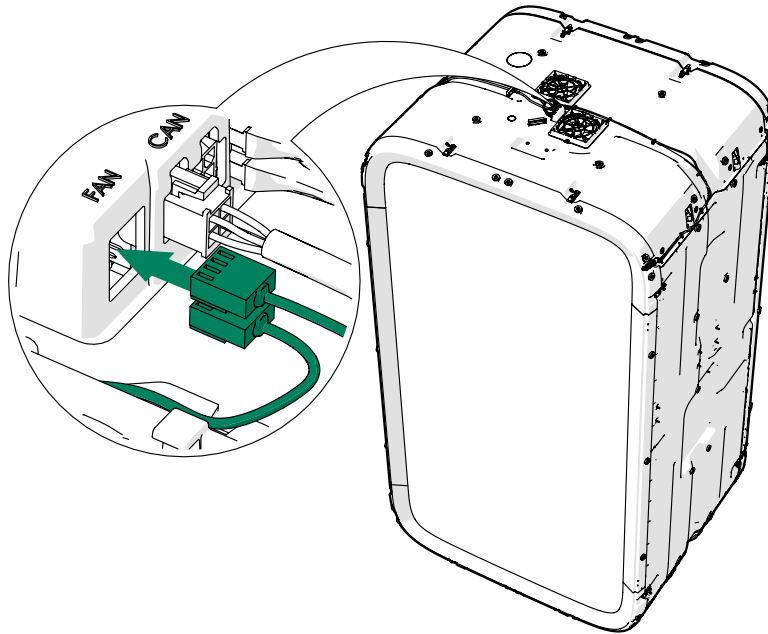

27. Install the body covers, plastic trims, and fan cover in the reverse order.  
 28. Connect the power cord to the power outlet.  
 If equipped with the optional LAN, also connect the LAN cord to the outlet.

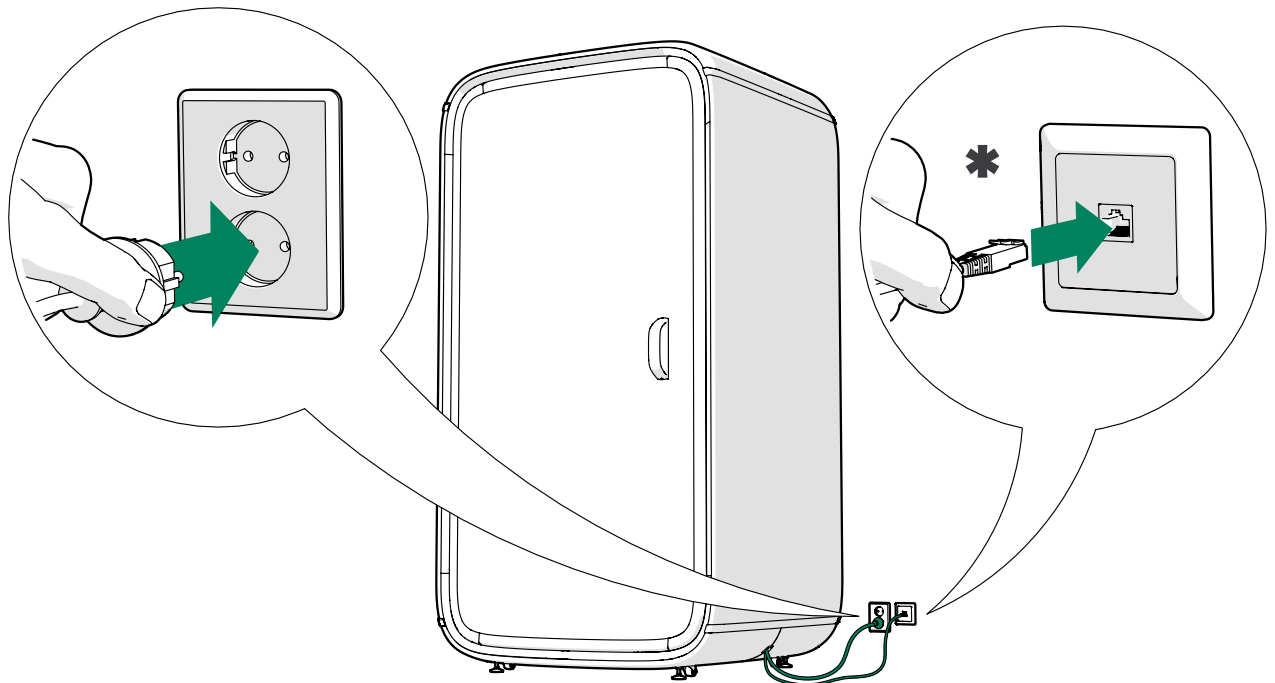


Figure 63: \* = optional LAN

## 6.2 Replace the techwall panel



**Note:** Set all removed parts aside carefully and neatly. All removed parts, excluding the one being replaced, will be needed for reassembly.

### 6.2.1 Disassemble the necessary parts (techwall panel)

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.



**DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

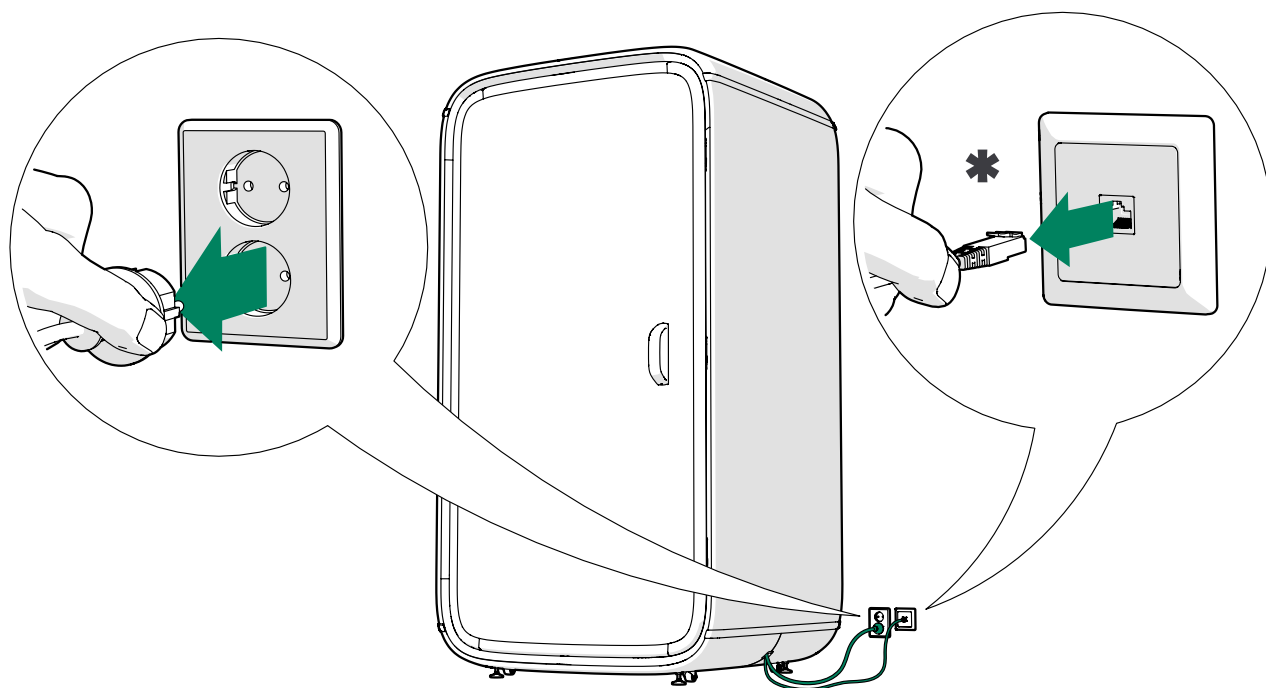


Figure 64: \* = optional LAN

2. Remove the fan cover.



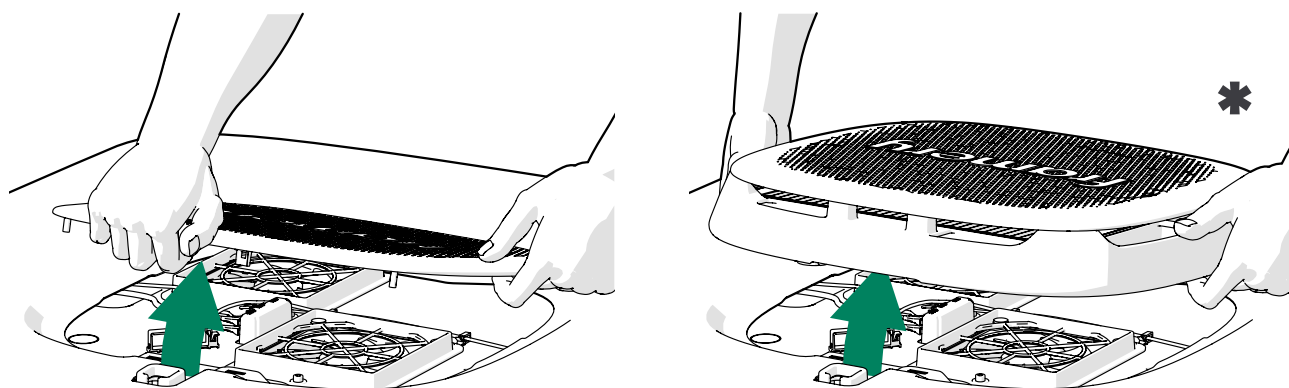


Figure 65: \* = With optional activated carbon filter


3. Remove the plastic trims.

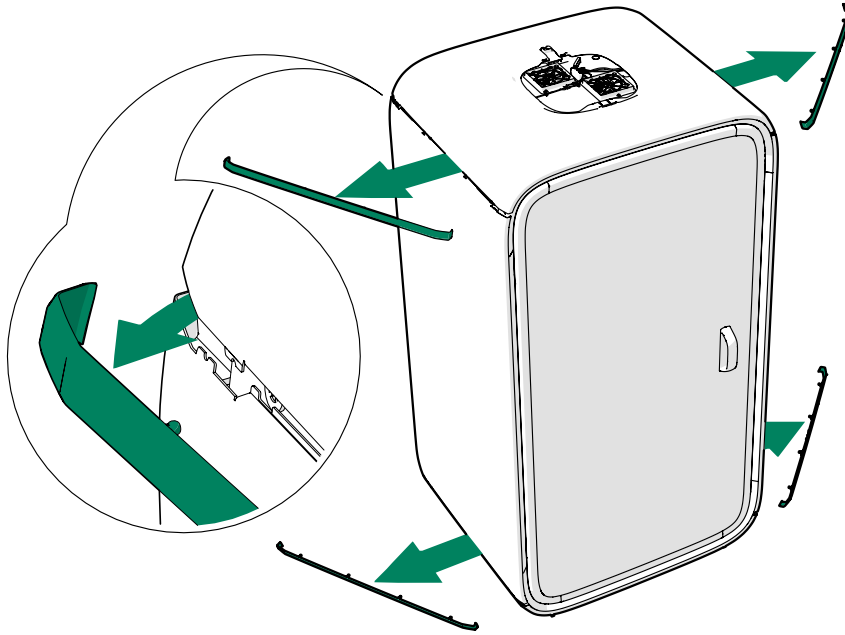


4. Remove the roof body cover.

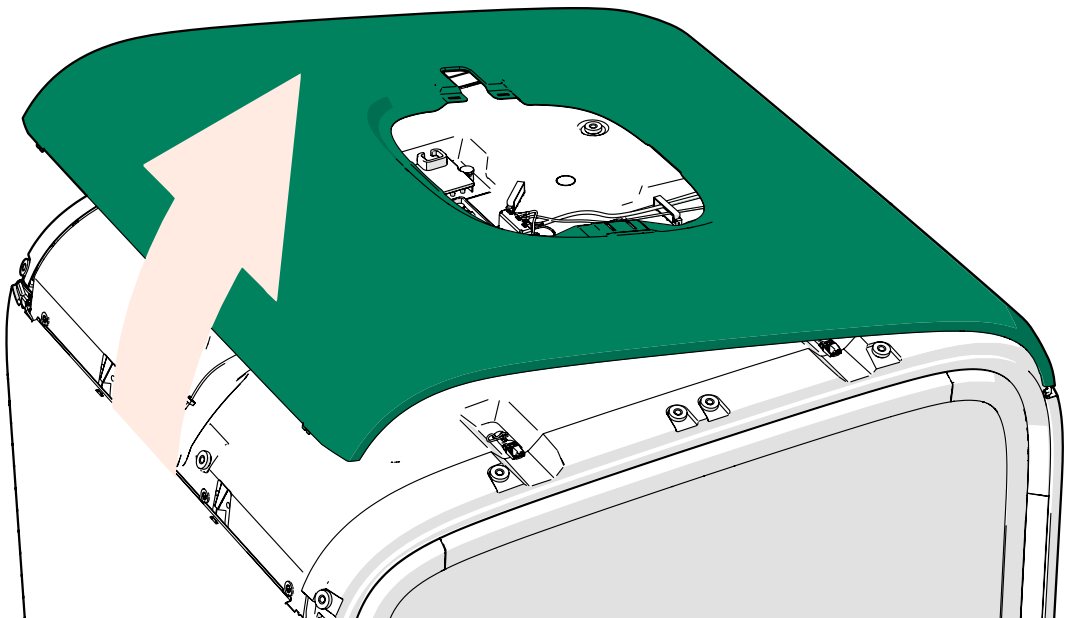

5. Remove the wall body covers.

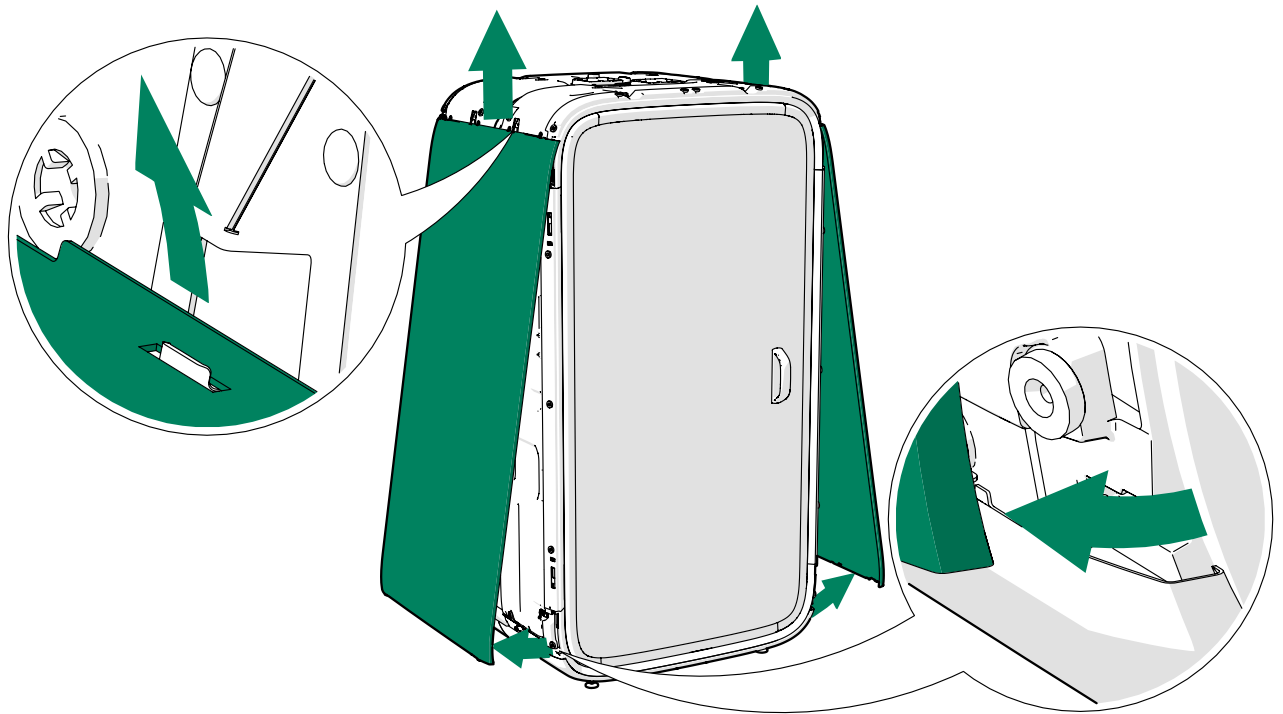

6. Remove the front floor body cover.

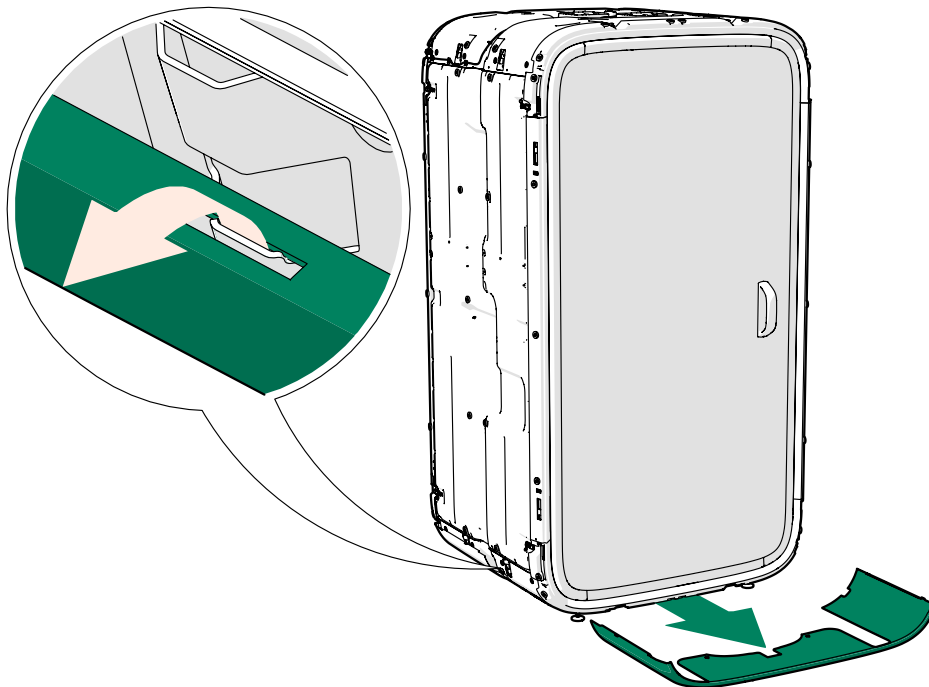


7. Remove the back floor body cover.



8. Remove the door handle from the outside of the door.  
Loosen the set screw to remove the handle.


⚠ **Note:** Do not remove the set screw.

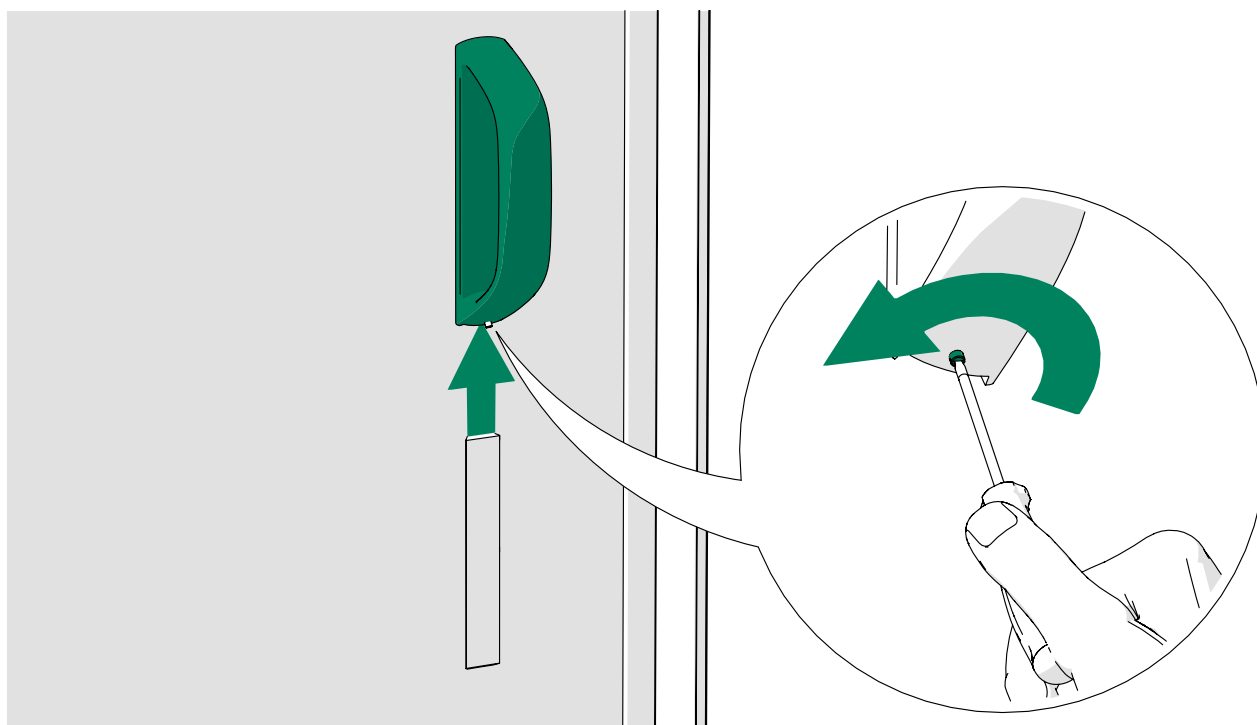

9. Install the door brace.




**Warning:** Risk of injury or damage to property. Make sure that the door brace is in place before detaching the front frame with the door.

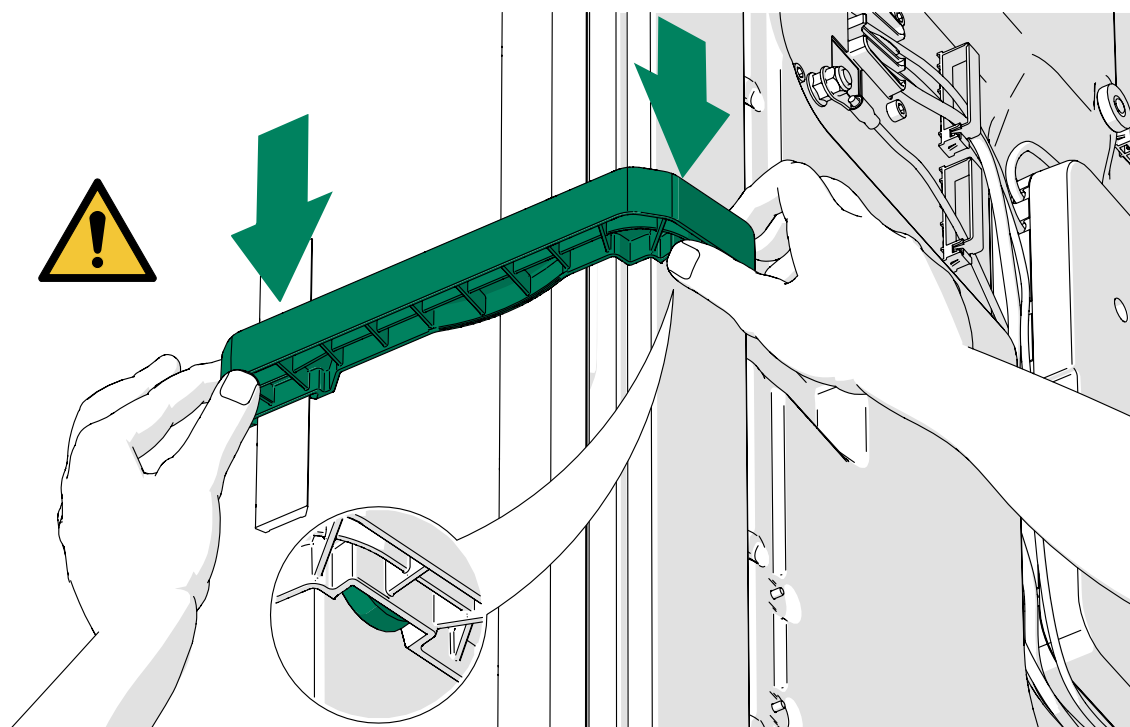

10. Disconnect all installed occupancy indicator lights from the control hub and remove them from the pod.




**Note:** For reassembly, make a note of which corners the lights were removed from.

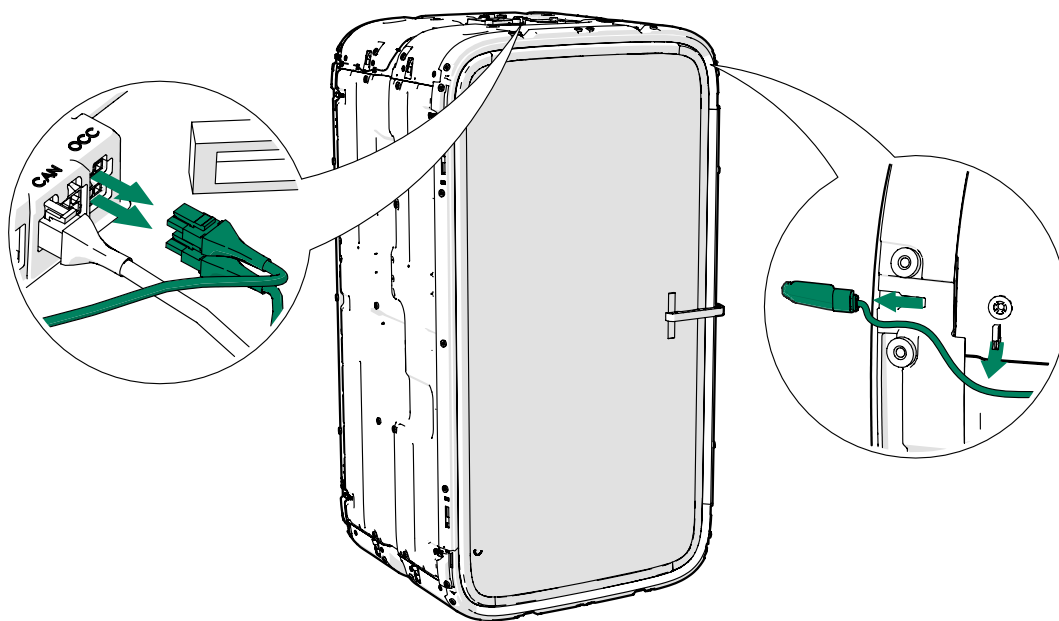


11. Lay a carpet on the floor in front of the pod.

⚠ **Note:** The carpet is needed to protect the frame from scratches.

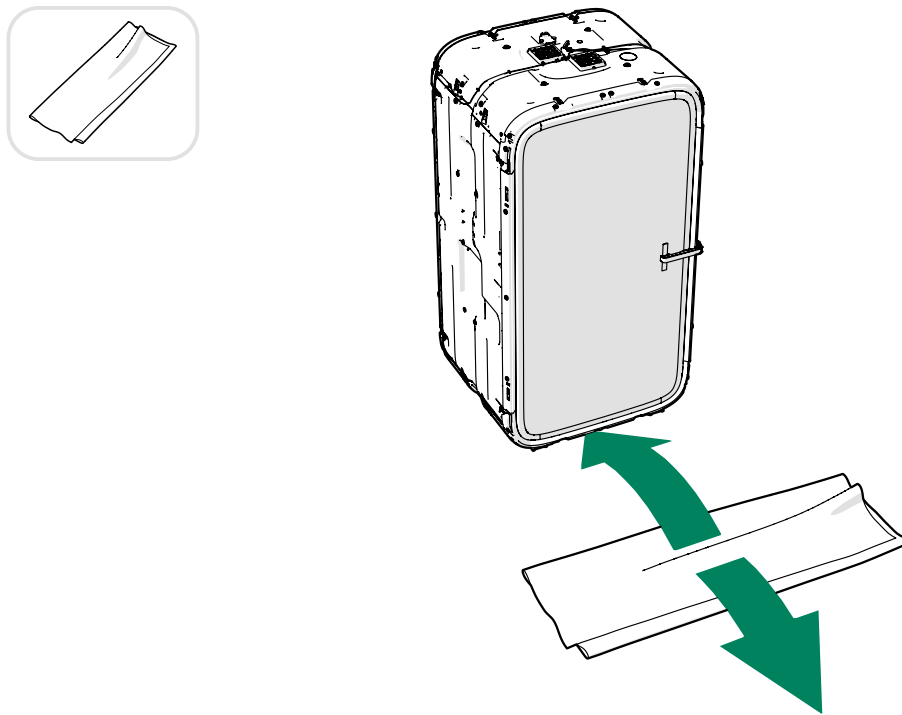

12. Remove the pins (6 pcs) and open the latches (6 pcs) around the front frame.

⚠ **Note:** Support the frame while opening the latches.

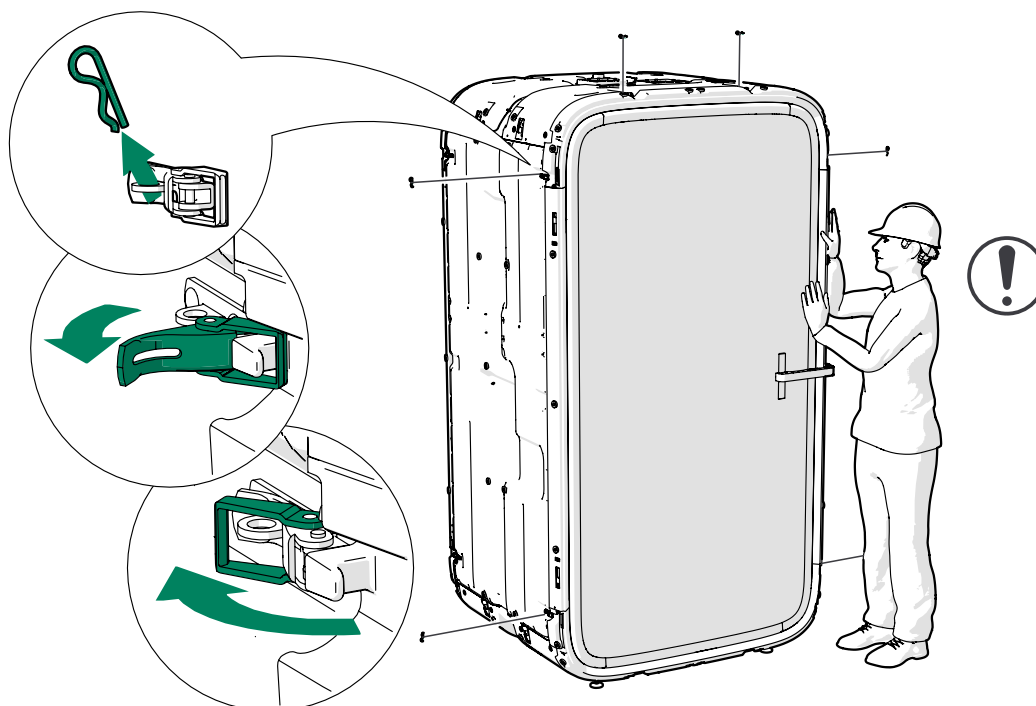




13. Carefully lower the front frame with door onto the carpet.





**Note:** Make sure that the guide pin at the upper edge of the frame stays in place.

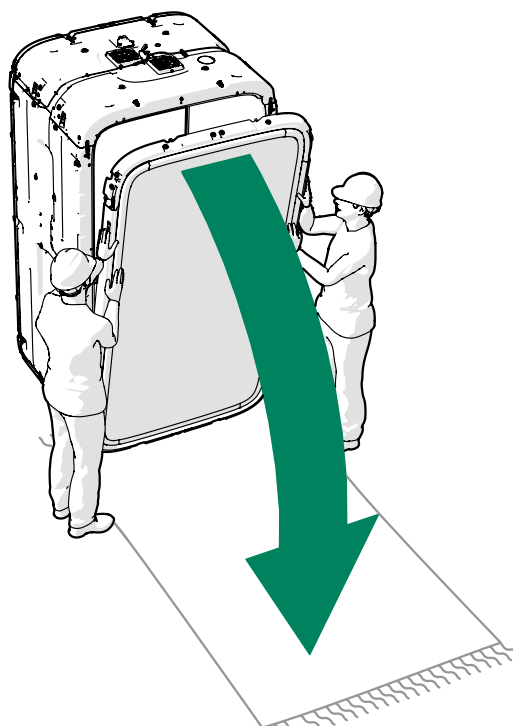

14. Lay a carpet on the floor behind the pod.




**Note:** The carpet is needed to protect the frame from scratches.

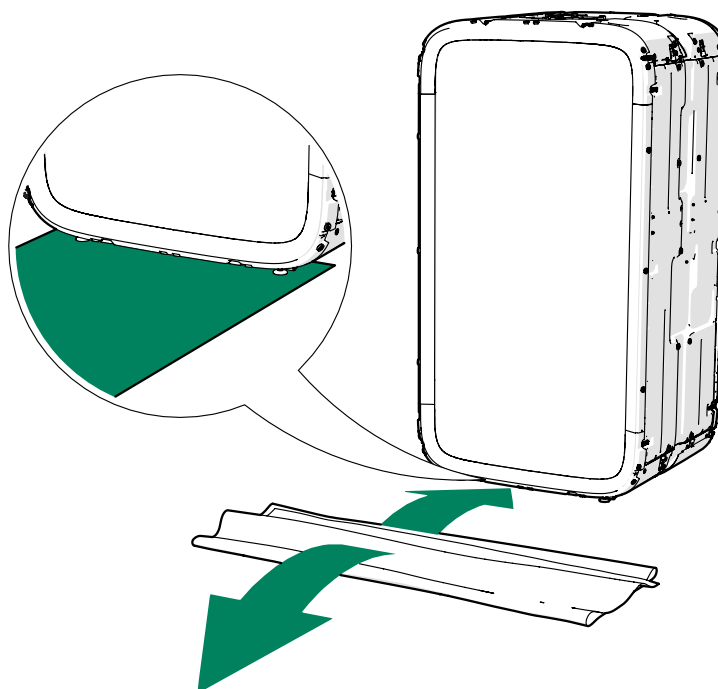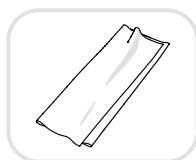


15. Remove the pins (6 pcs) and open the latches (6 pcs) around the glass wall.

⚠ **Note:** Support the glass wall while opening the latches.

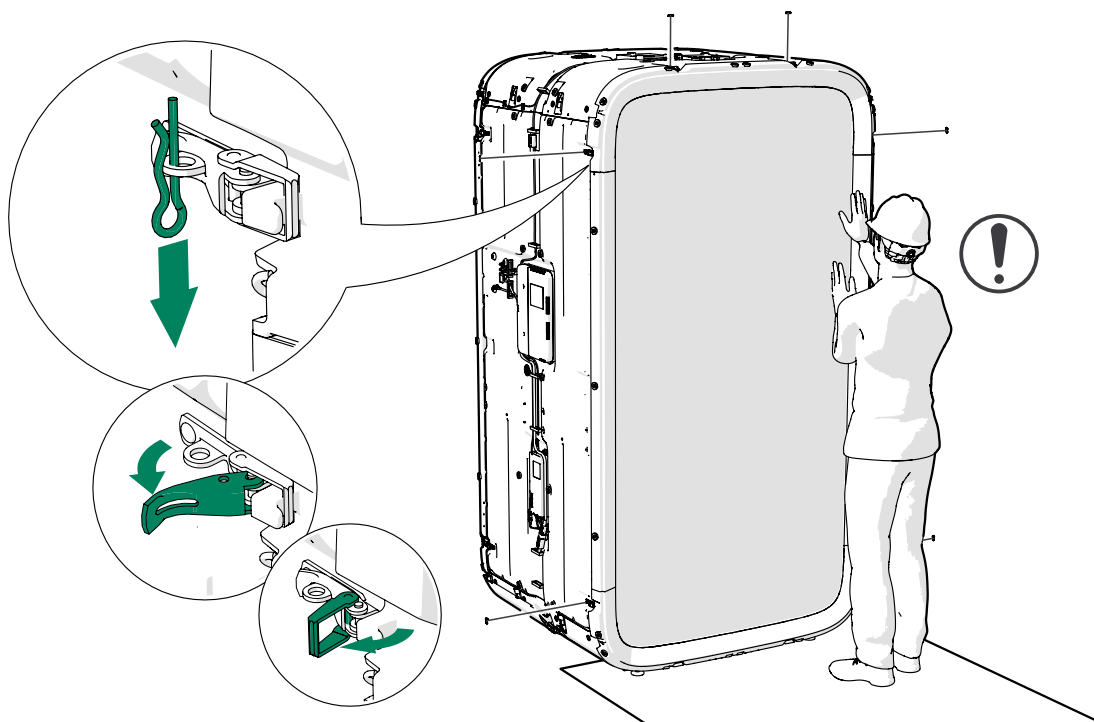

16. Carefully lower the glass wall onto the carpet.

⚠ **Note:** Make sure that the guide pin at the upper edge of the frame stays in place.

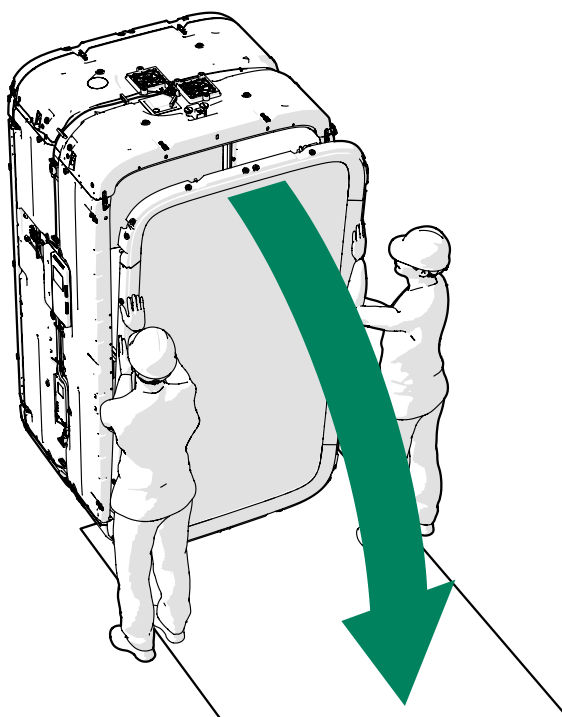

17. Remove the screws from the power unit cover and open the cover.



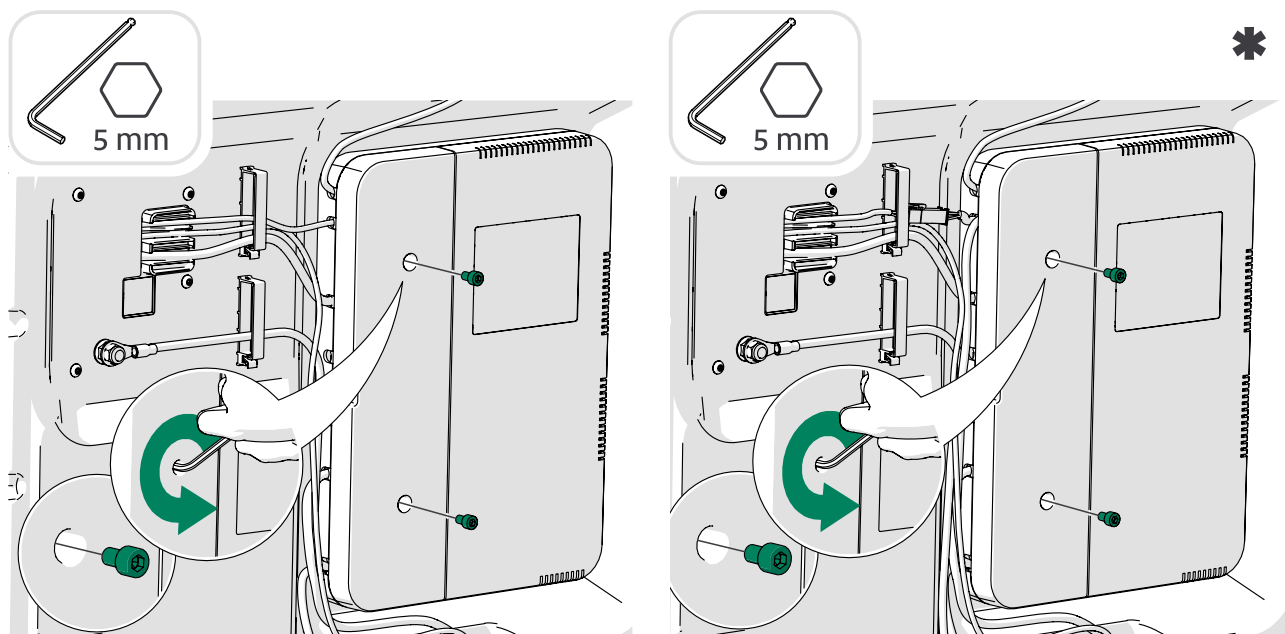


Figure 66: \* = With the optional wireless charger

**18. Disconnect the CAN cord from the power unit.**

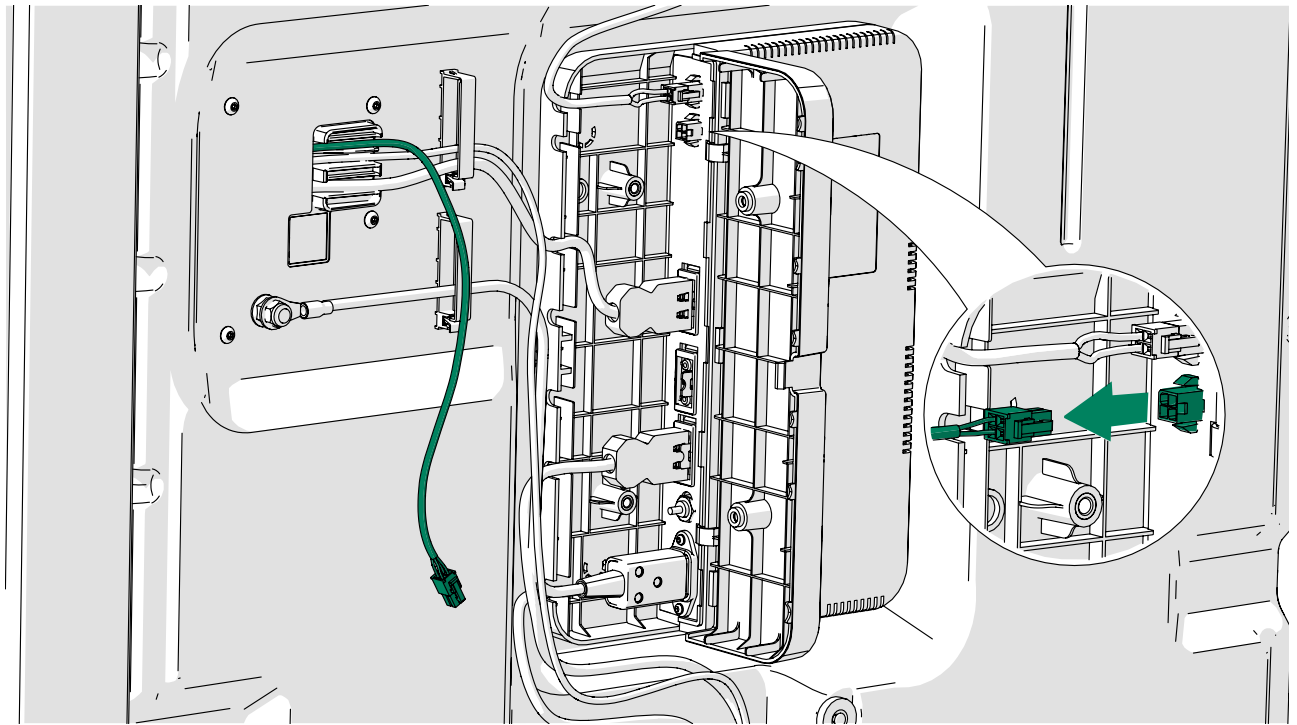


**Figure 67: Without the optional wireless charger**

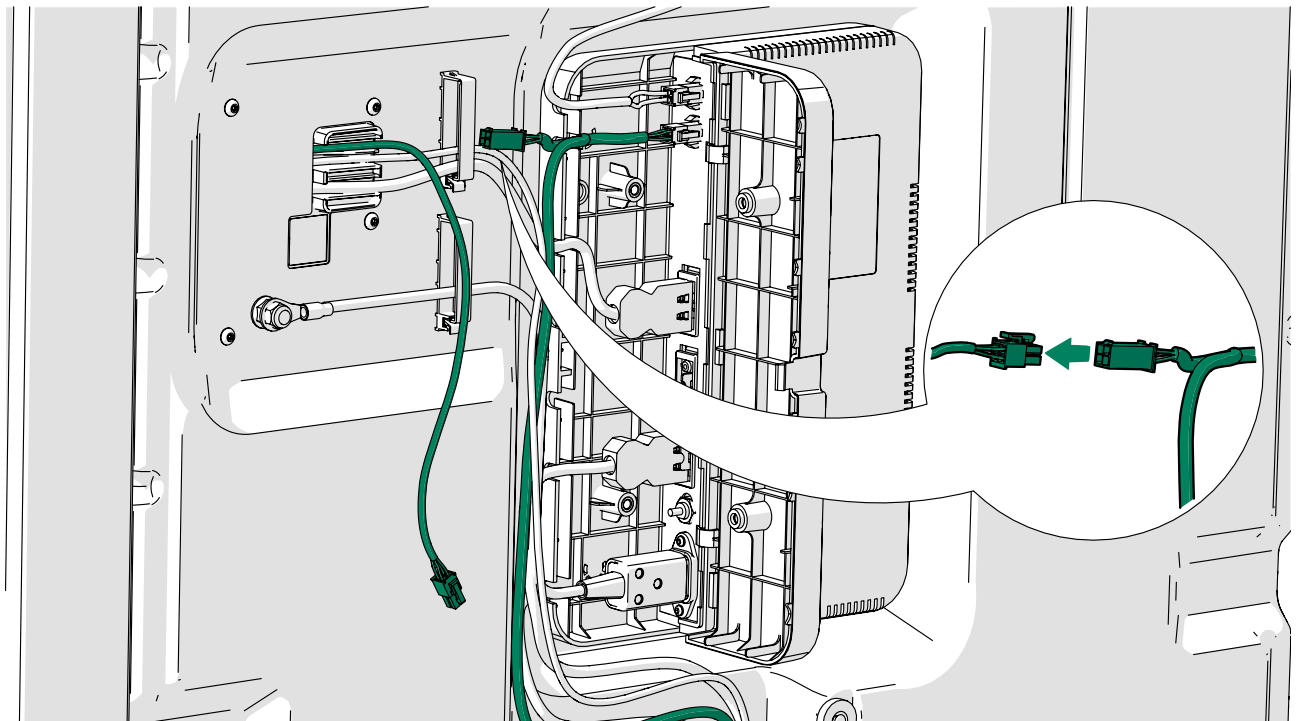


**Figure 68: With the optional wireless charger**



19. Disconnect the power outlet cord from the power unit.

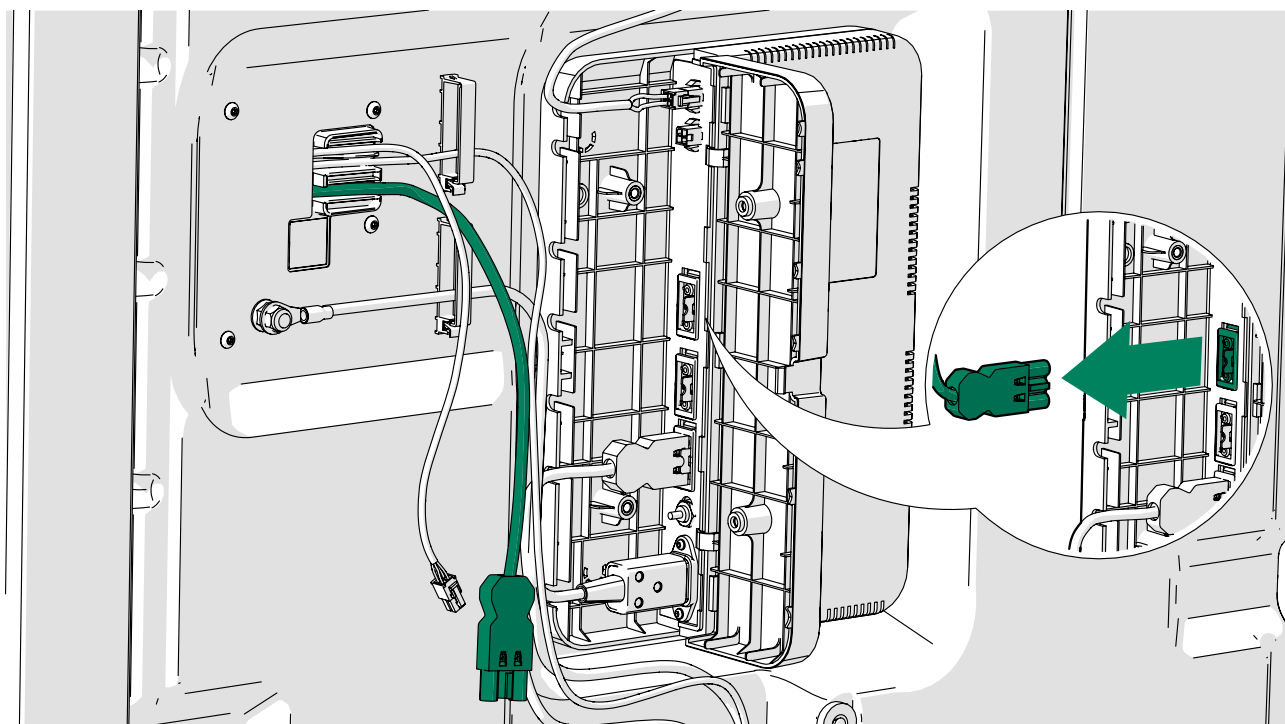

**Figure 69: Without the optional wireless charger**

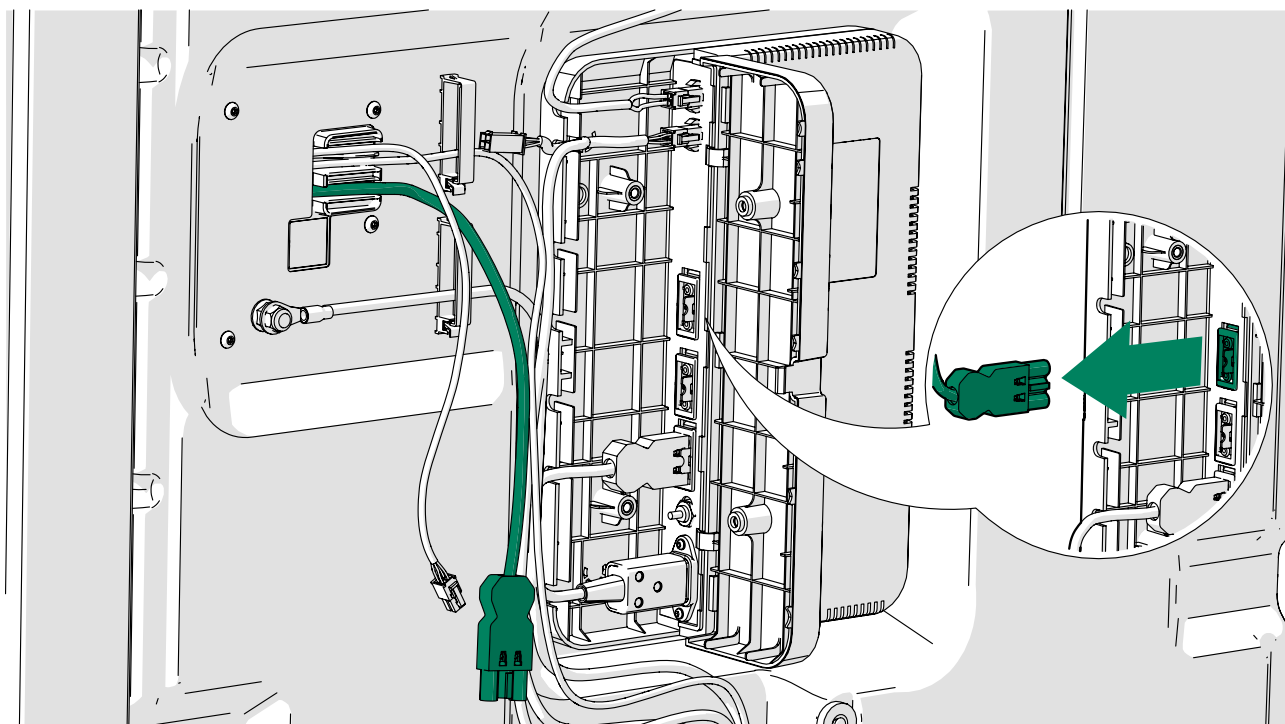

**Figure 70: With the optional wireless charger**

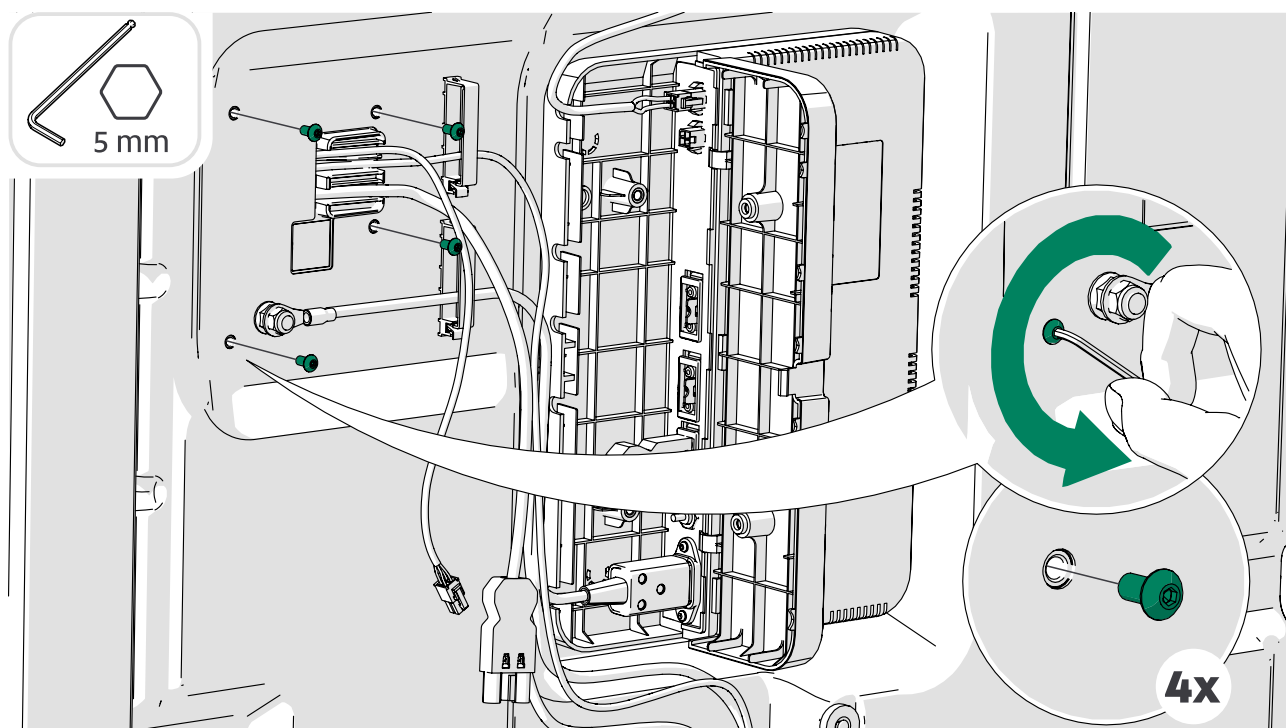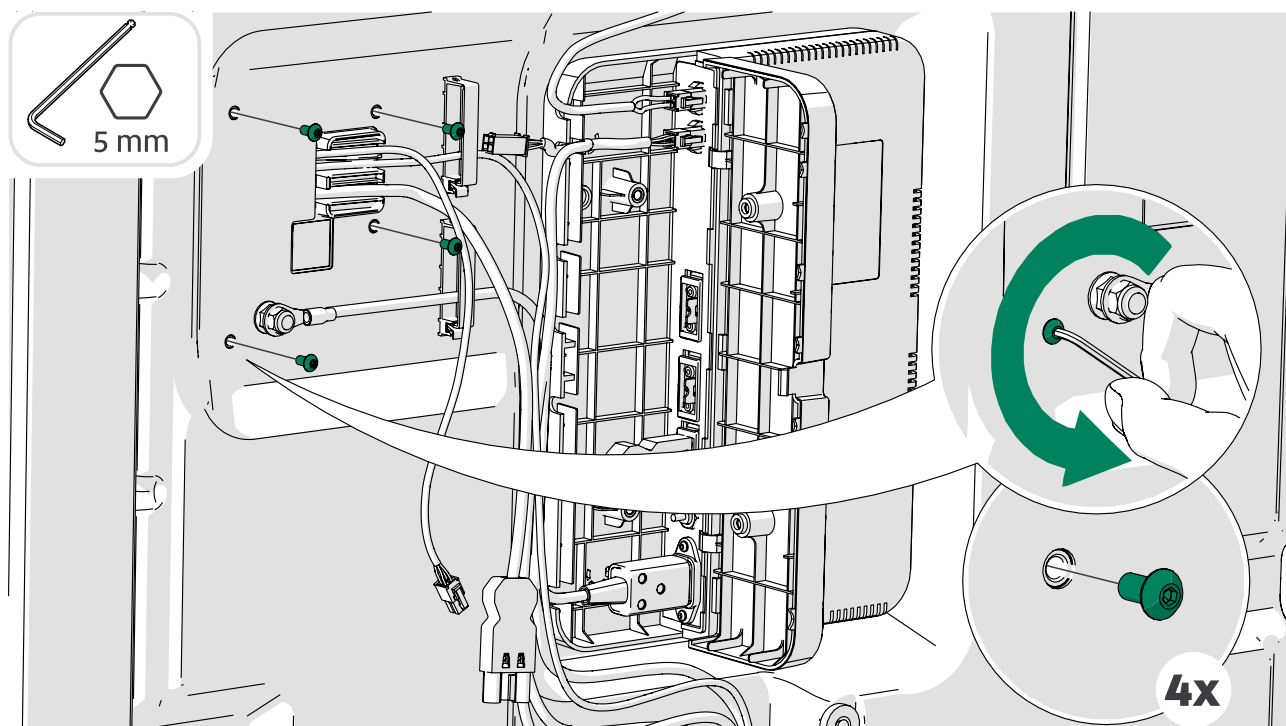**20. Remove the screws from the back of the control panel.****Figure 71: Without the optional wireless charger****Figure 72: With the optional wireless charger**

21. Remove the control panel from the techwall.


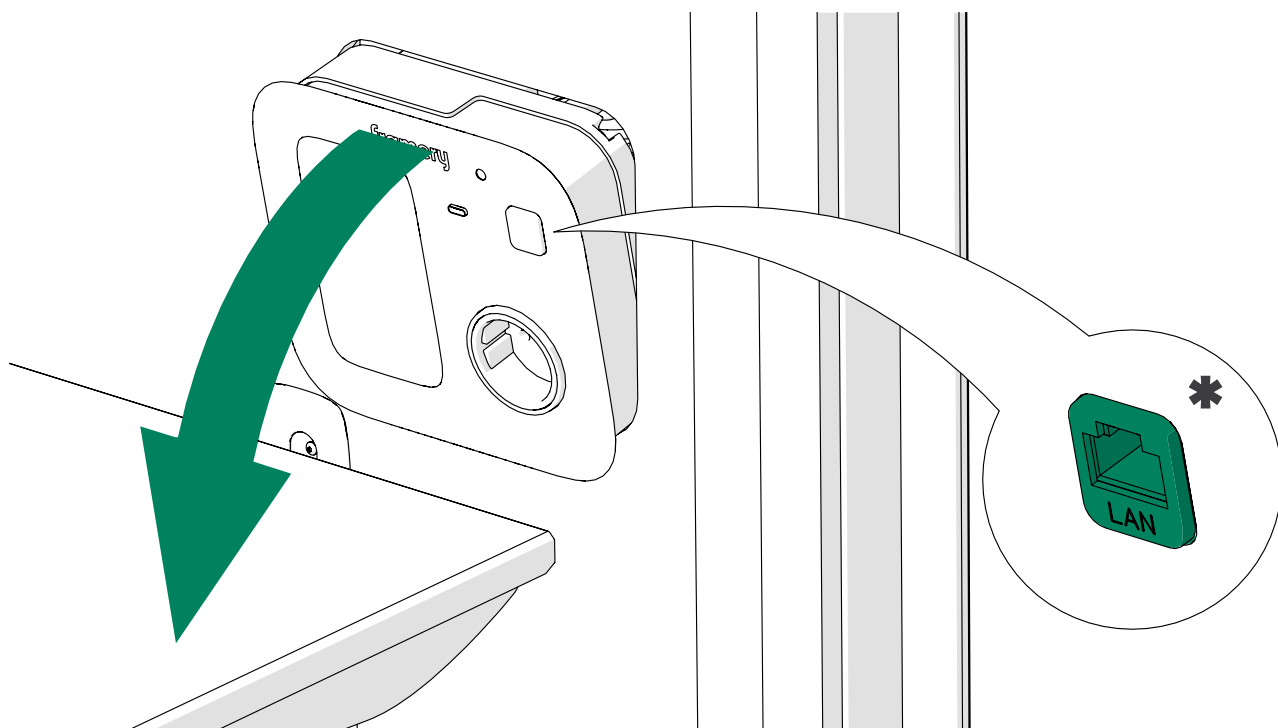



Figure 73: \* = optional LAN

22. Remove the bottom felt from the table.




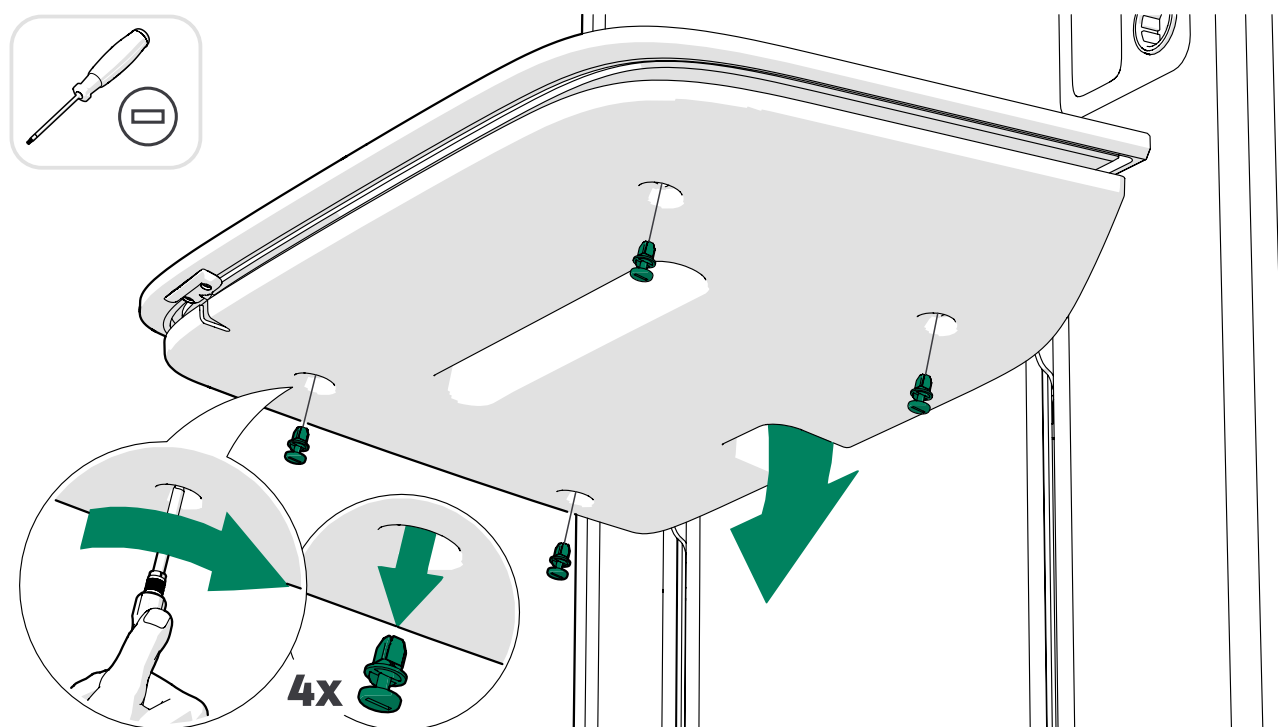

**23. Disconnect the electrical connections in the table.**


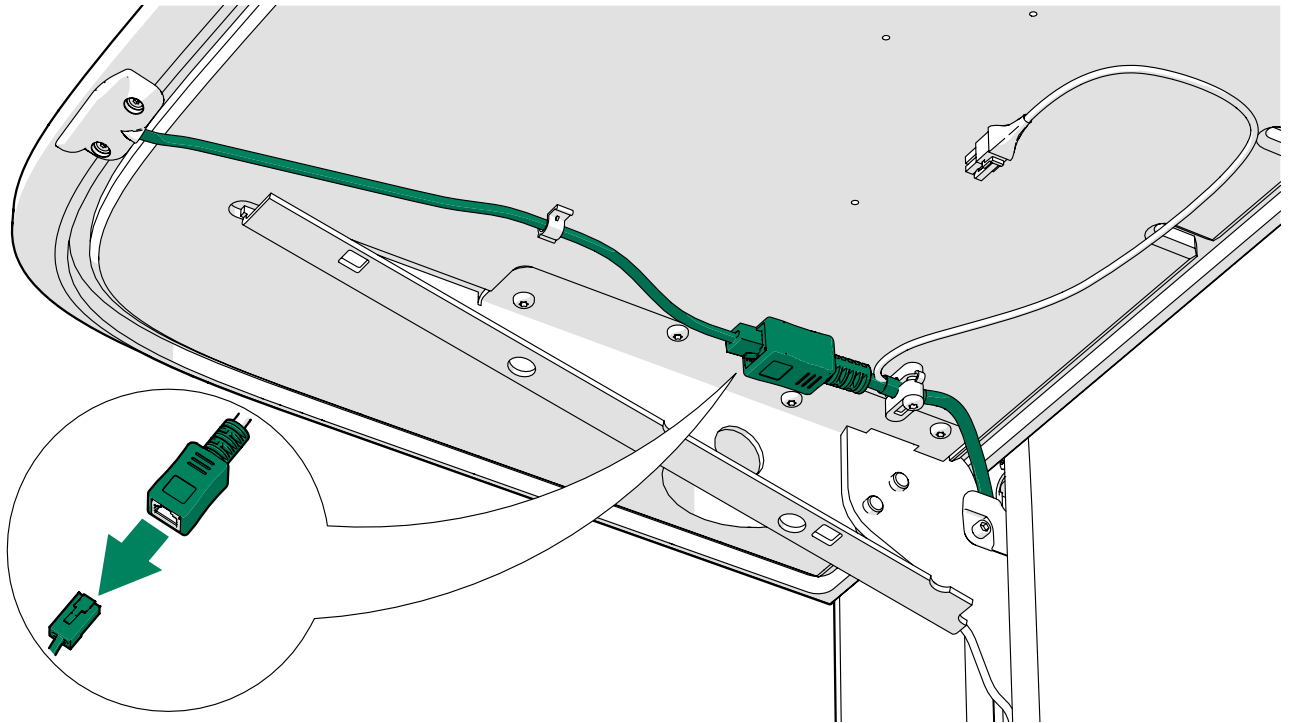


**Figure 74: Without the optional wireless charger**

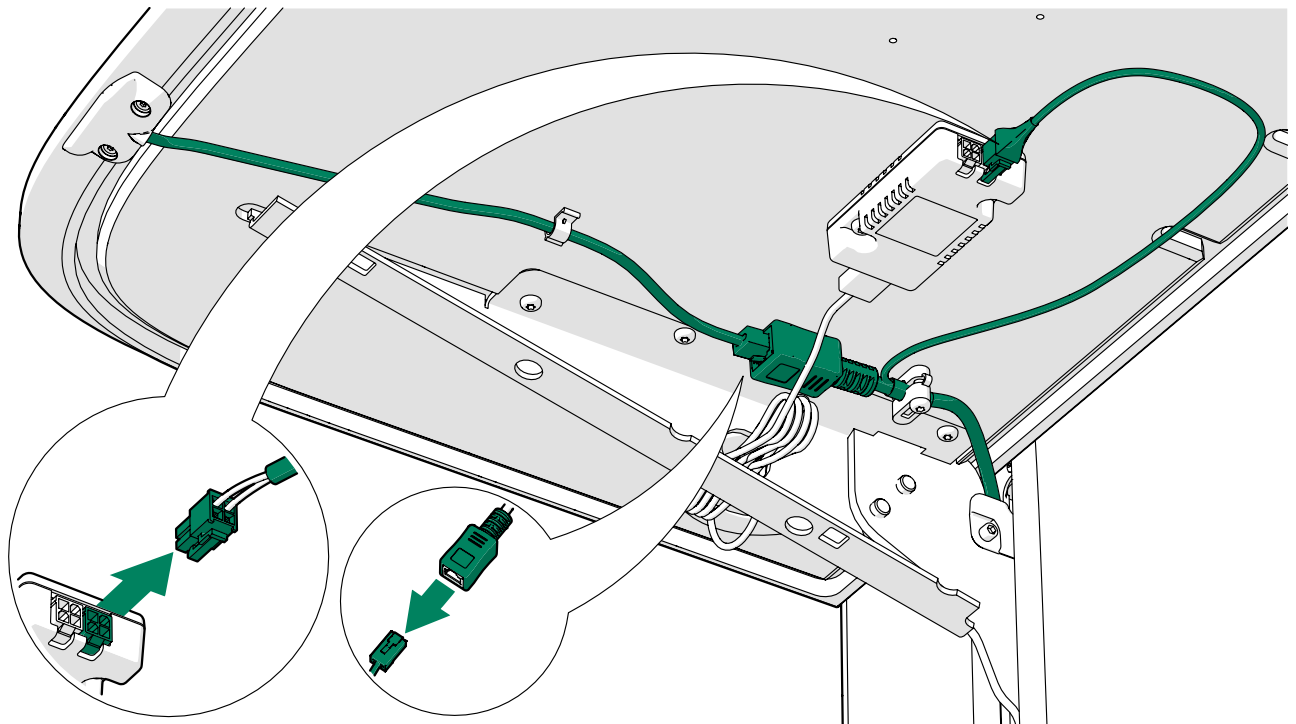

**Figure 75: With the optional wireless charger**

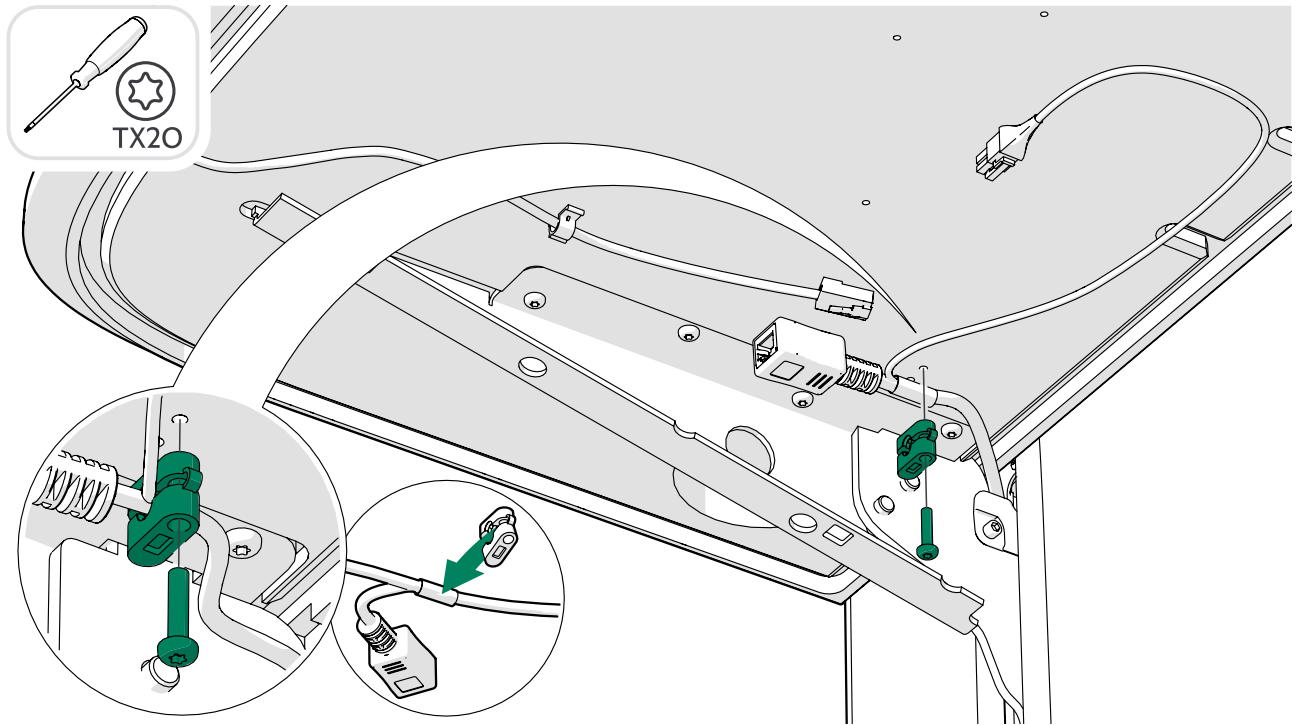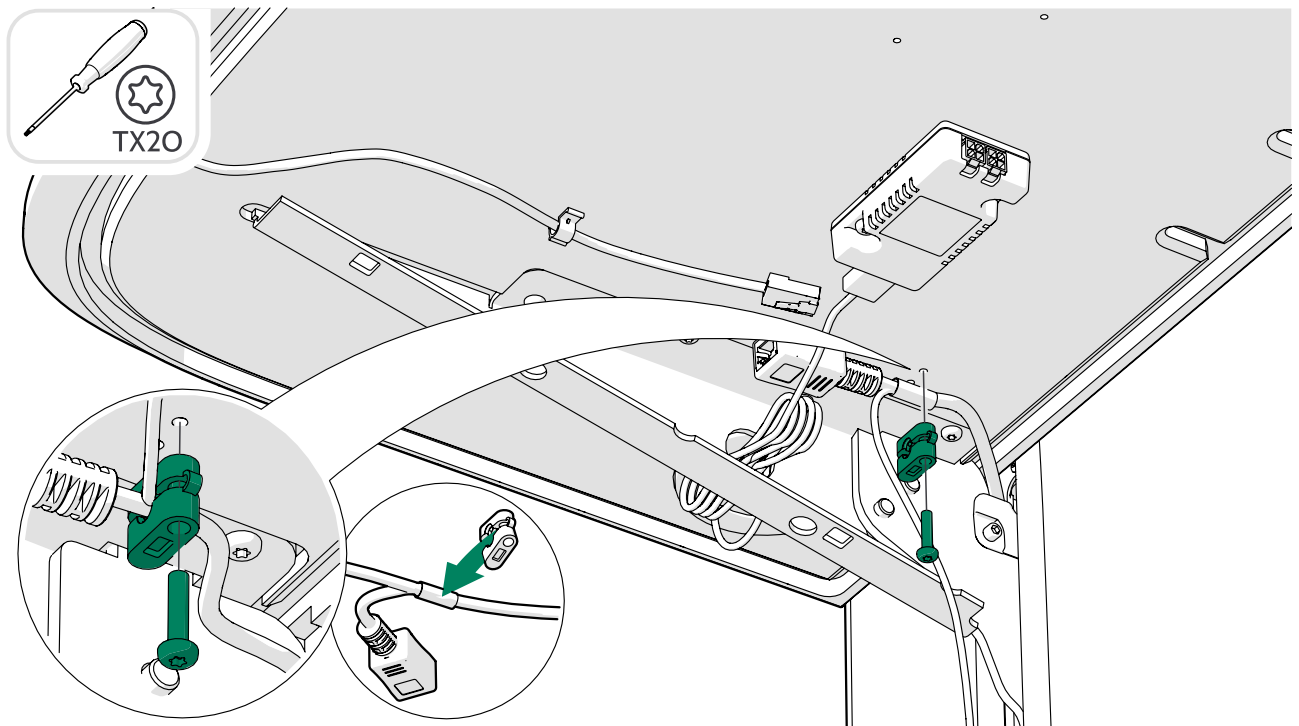

**24. Remove the strain relief for the spiral cord.****Figure 76: Without the optional wireless charger****Figure 77: With the optional wireless charger**

25. Remove the screws from under the table.

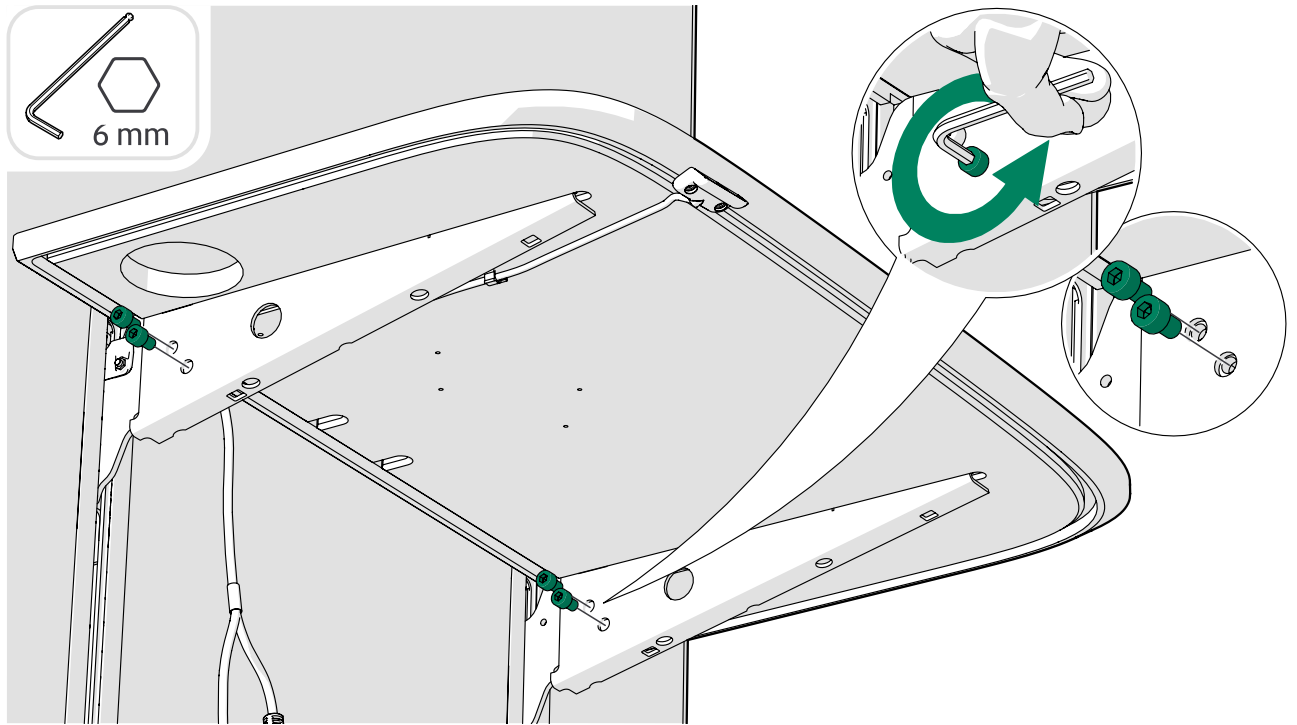


Figure 78: Without the optional wireless charger



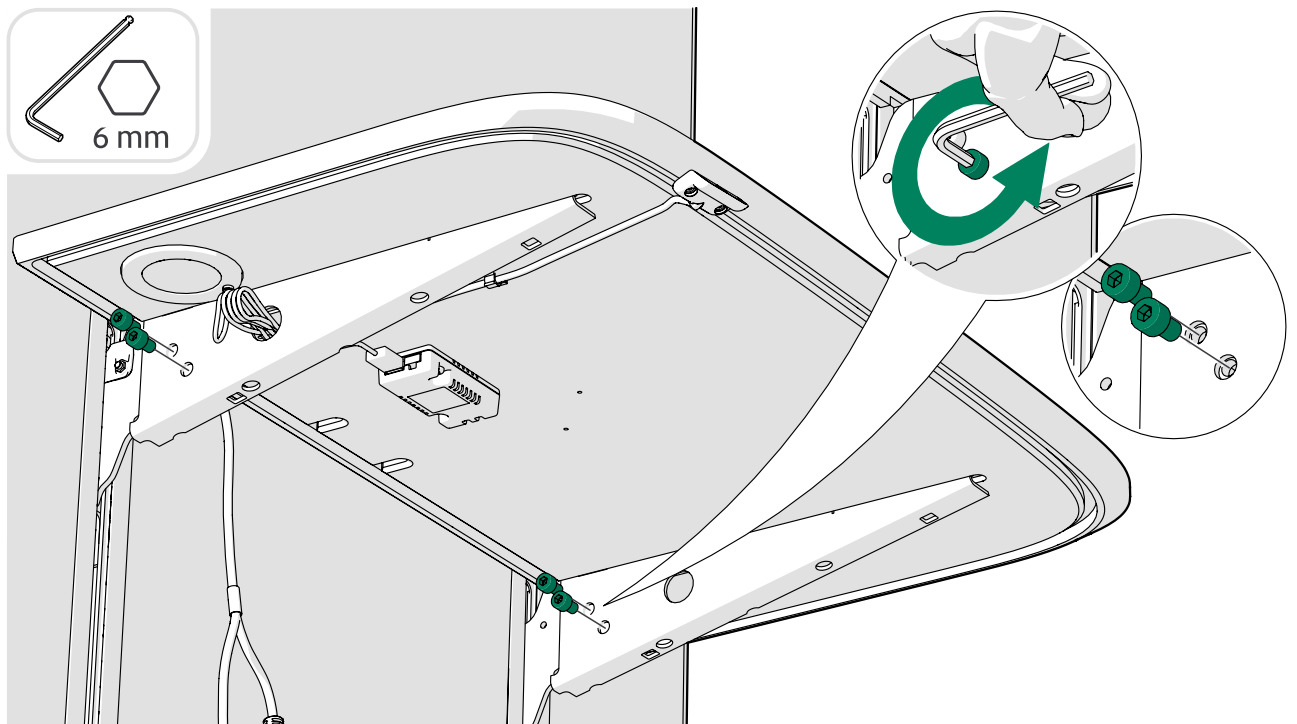


Figure 79: With the optional wireless charger

**26.** Remove the table from the bracket.

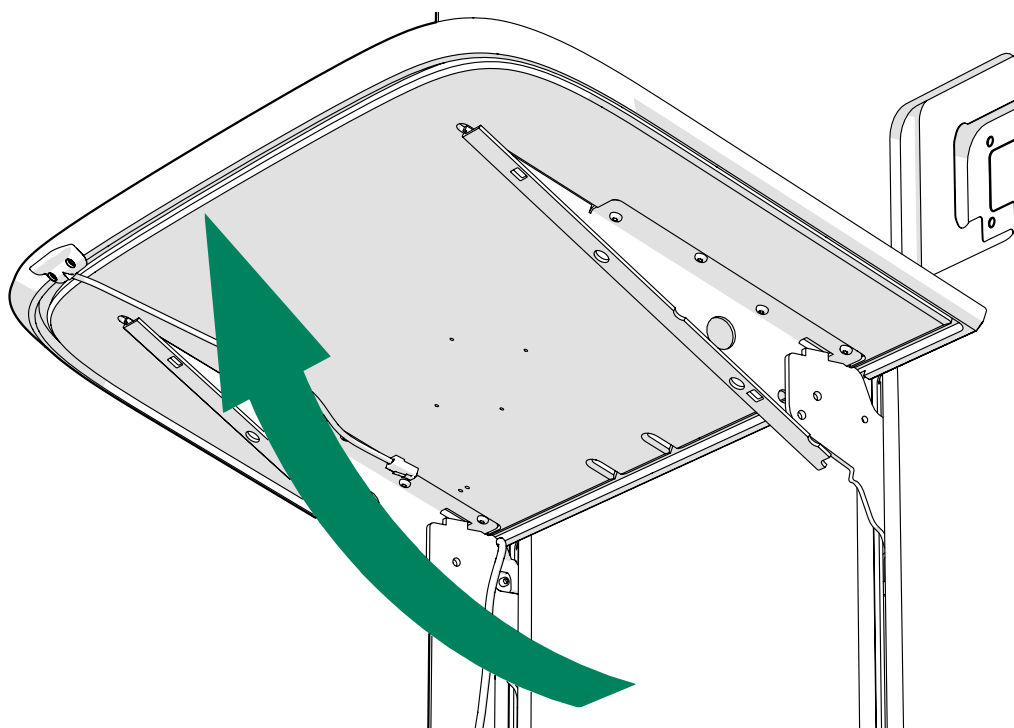

**Figure 80: Without the optional wireless charger**

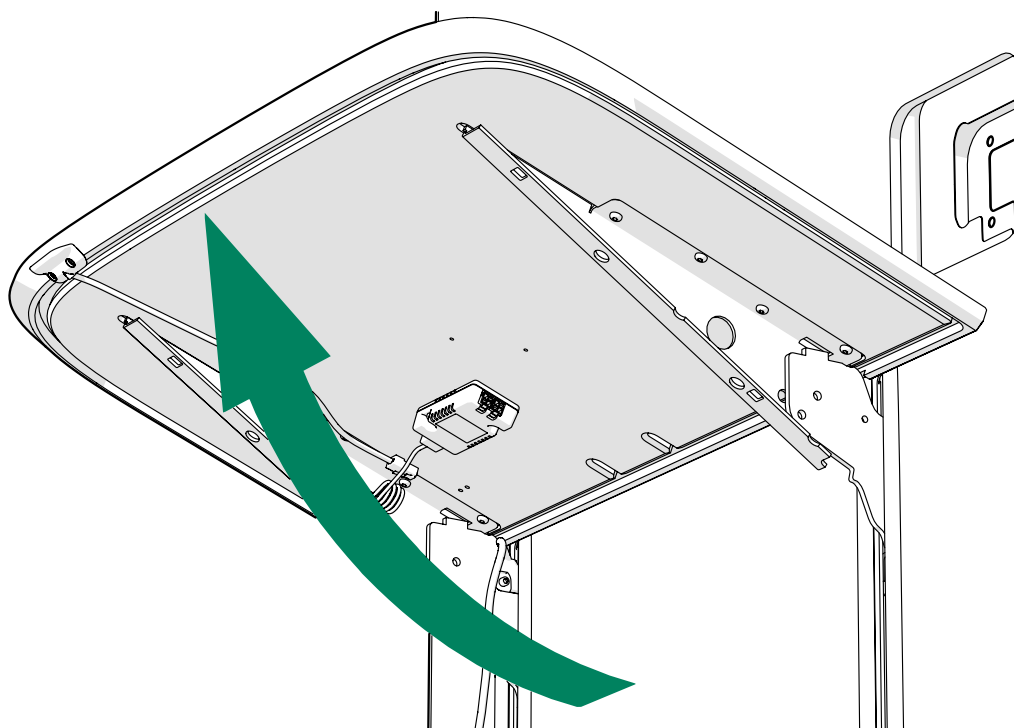


**Figure 81: With the optional wireless charger**


27. Remove the screw from the top end of both slit trims and loosen the screw of the hammer nut at the lower end.




**Note:** Do not remove the screw of the hammer nut. Only loosen it enough to turn the hammer nut vertical.

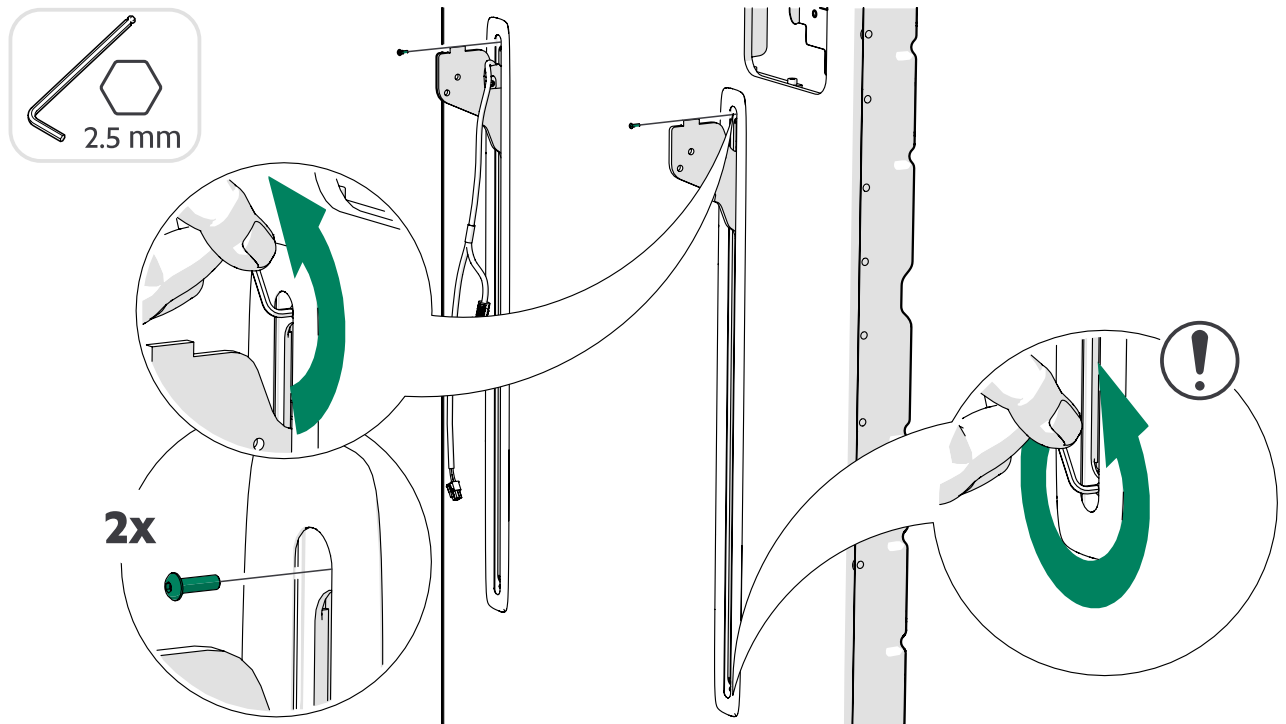

28. Remove the slit trims.

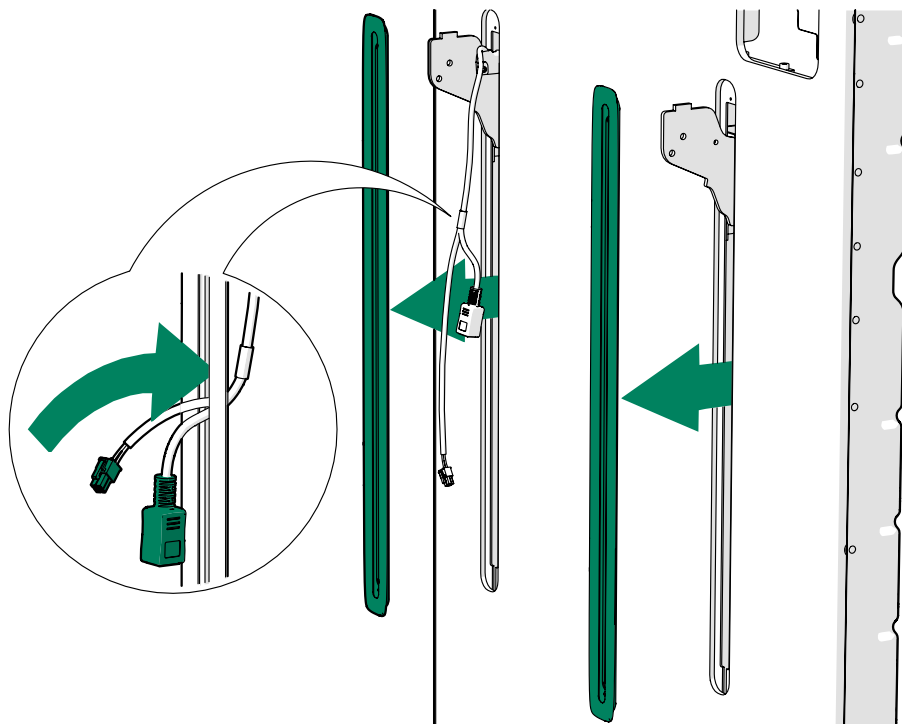


## 29. Remove the old techwall panel.

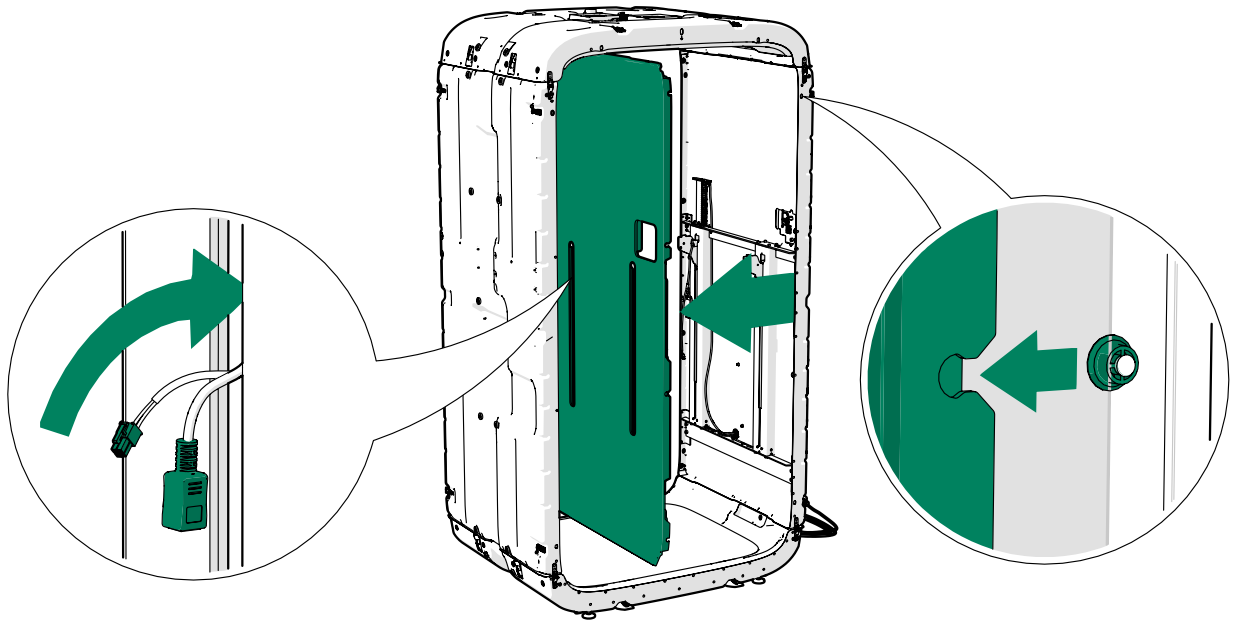

### 6.2.2 Install the removed parts (techwall panel)

#### 1. Install the new techwall panel.


- ⚠ **Note:** The interior panels are sensitive to dirt. Make sure that you use clean gloves to handle the panels.
- ⚠ **Note:** Lead the spiral cord through the slit in the wall panel.

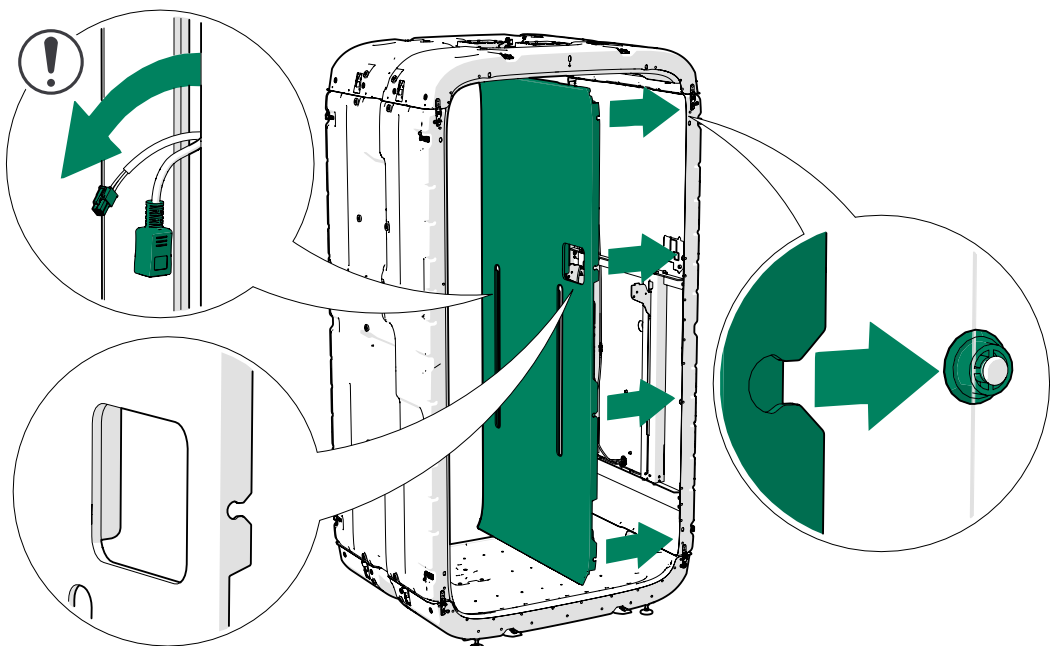

2. Install the slit trims.



**Note:** Make sure that the hammer nut is in the vertical position.

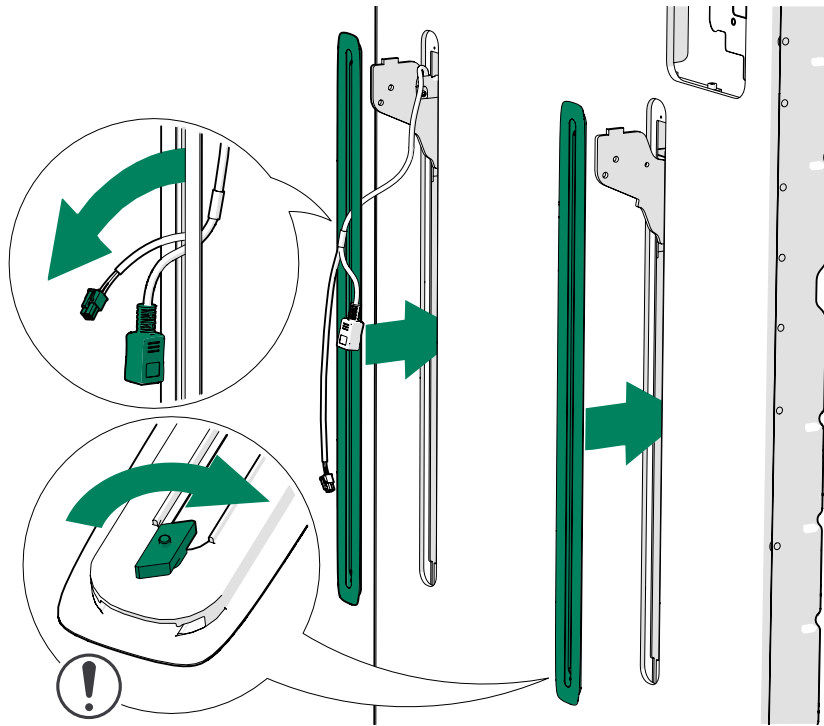


3. Install the screws to the top ends of the slit trims and at the lower ends of the slit trims, turn the hammer nuts to the horizontal position.




**Note:** Do not overtighten the screw at the top end of the slit trim.




**Tip:** Insert the long end of the hex key into the top of the screw and rotate the short end to avoid overtightening.

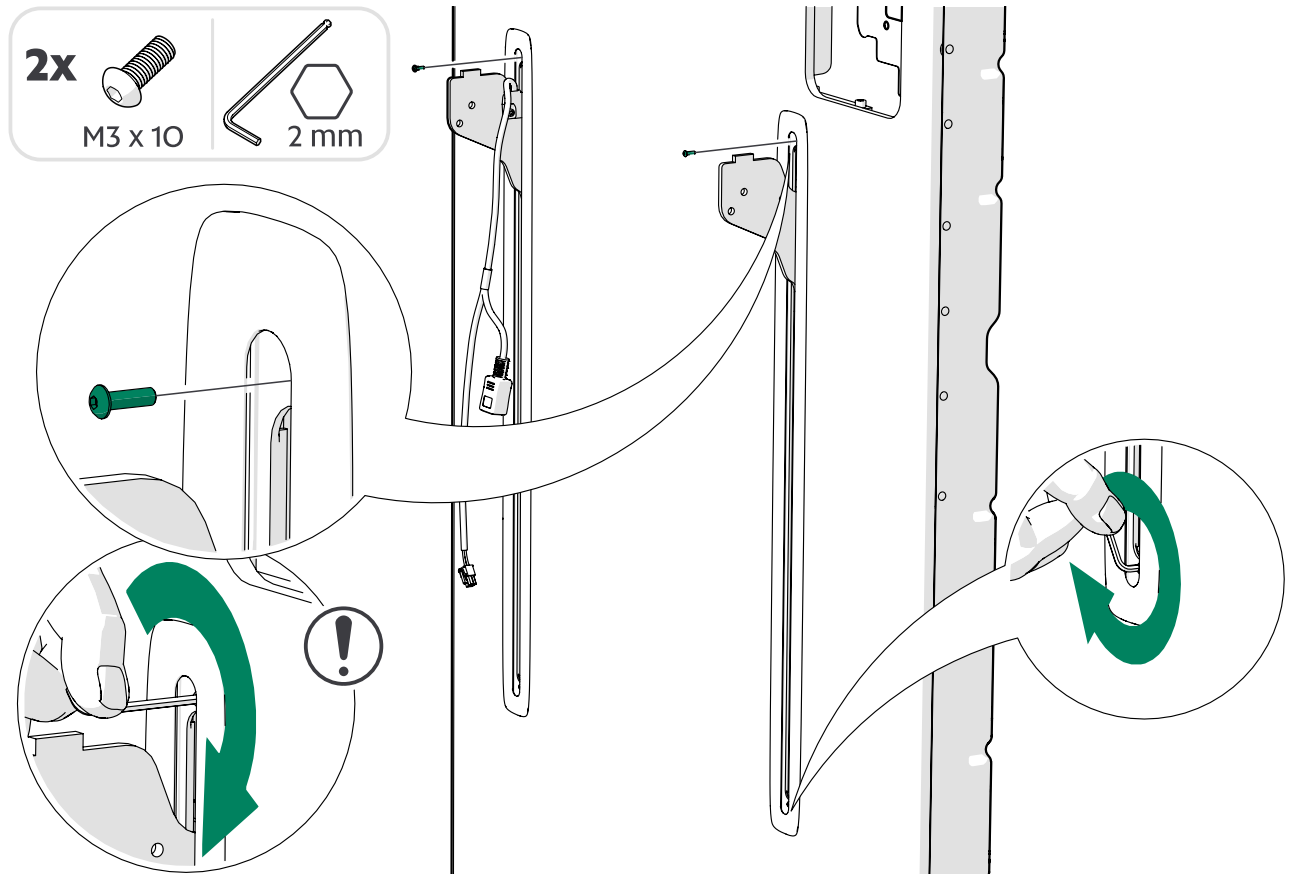

4. Place the tabletop onto the table bracket.

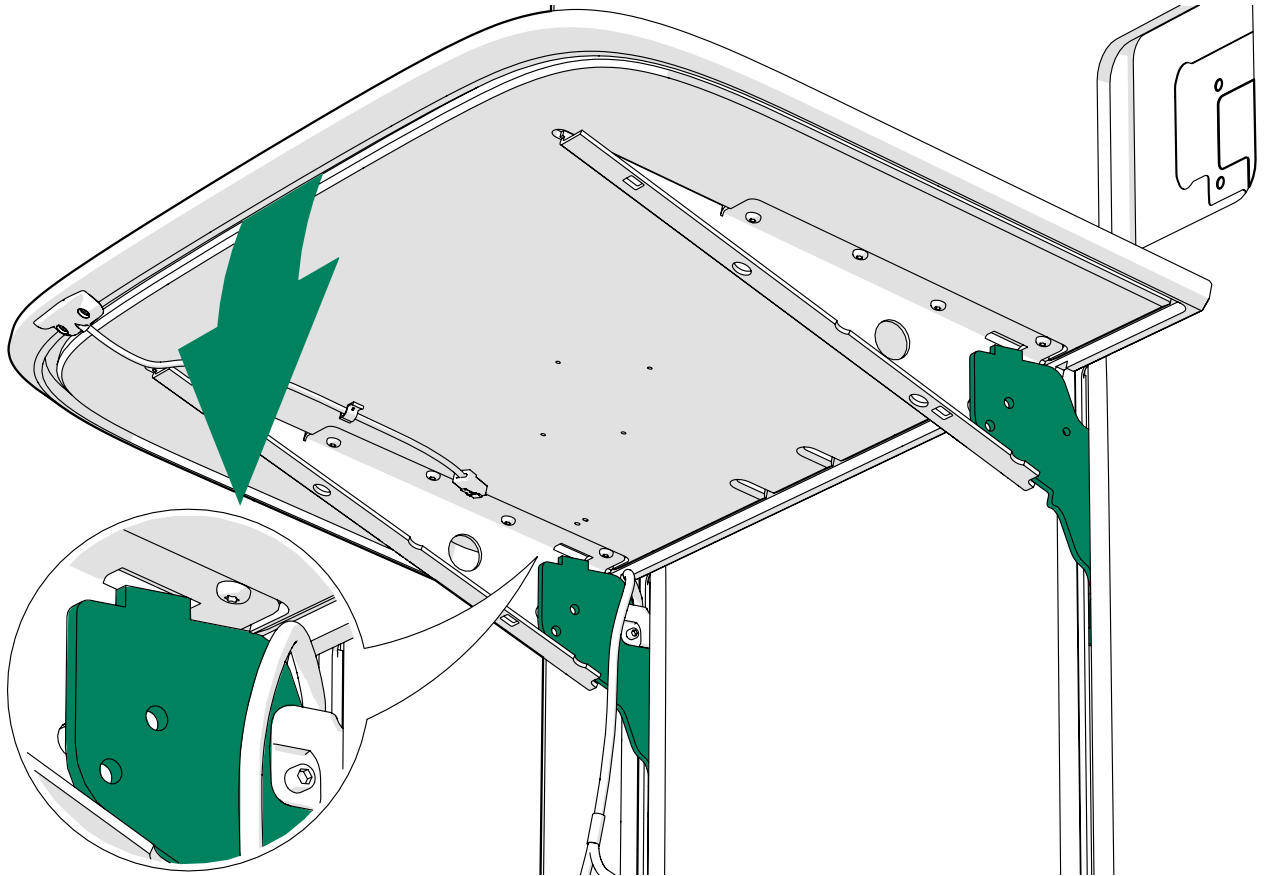

**Figure 82: Without the optional wireless charger**

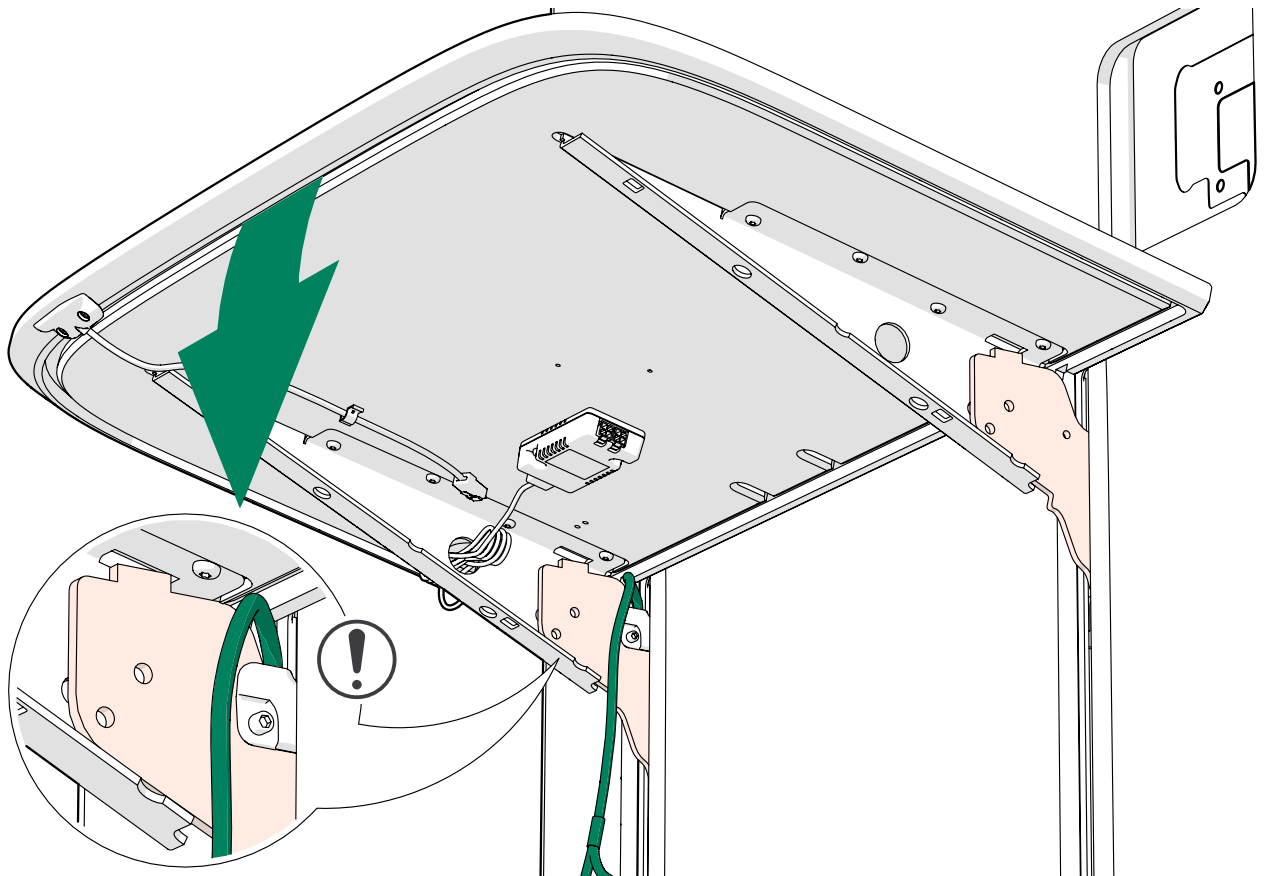

**Figure 83: With the optional wireless charger**



5. Install the tabletop to the table bracket with screws.

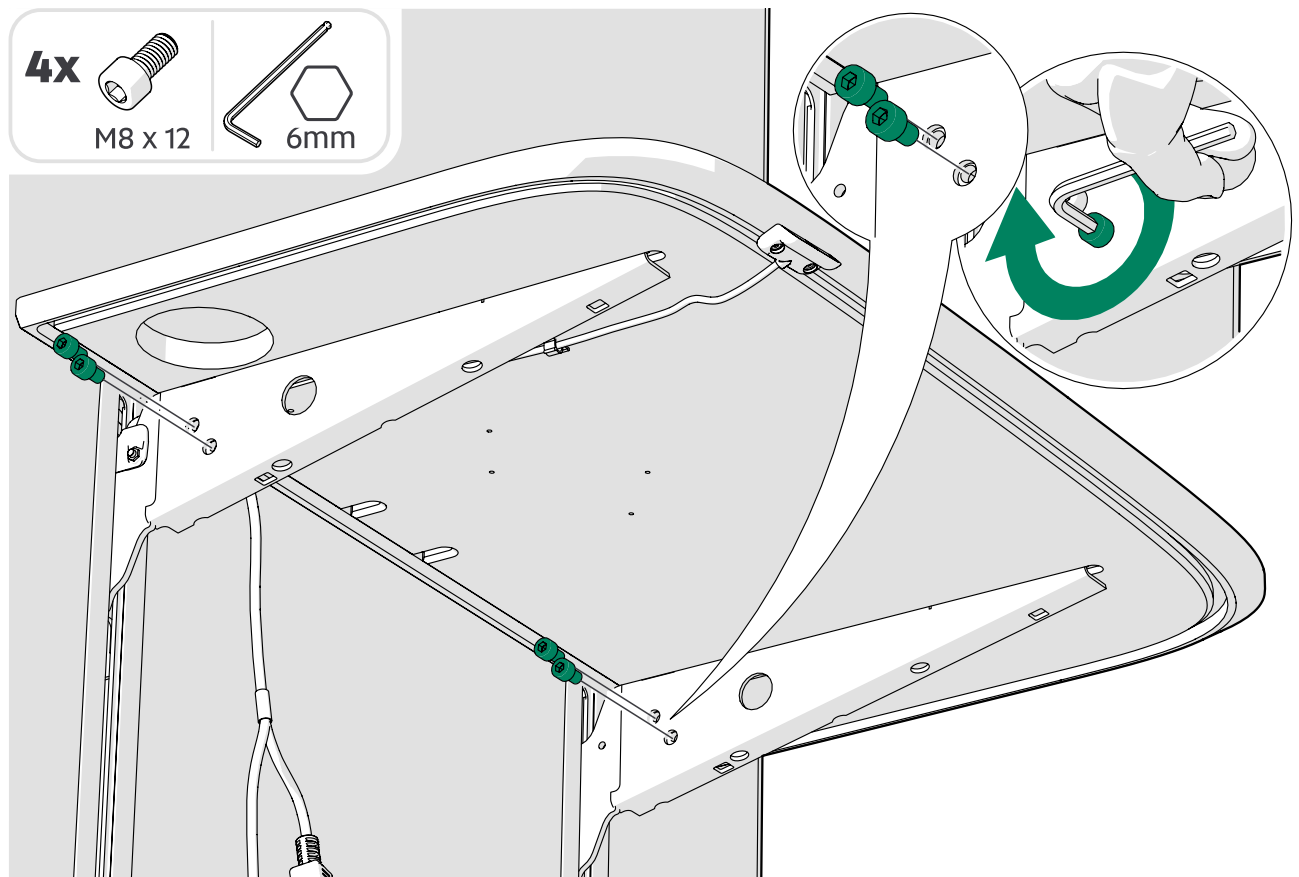


Figure 84: Without the optional wireless charger



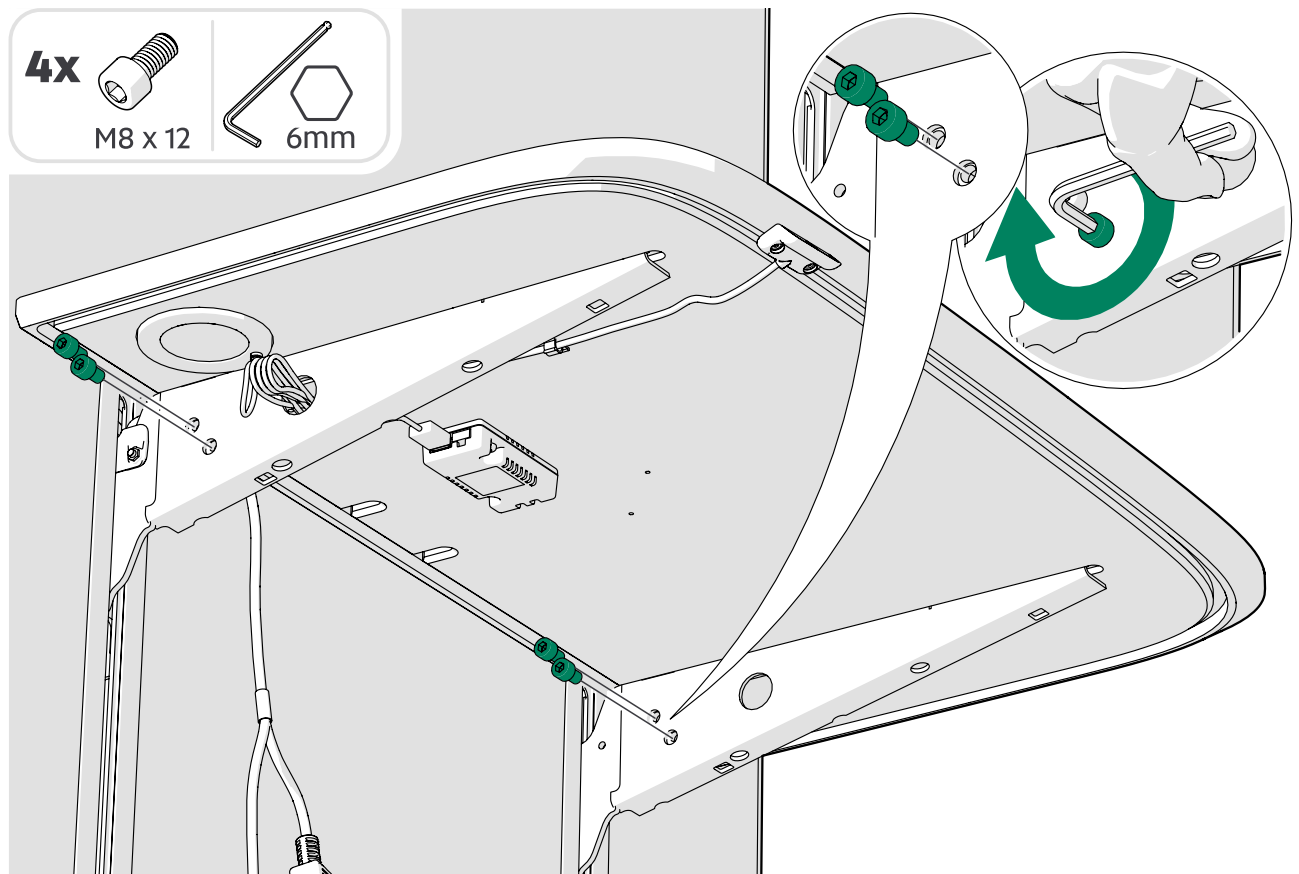


Figure 85: With the optional wireless charger

6. Connect the spiral cord to the electrical equipment in the table.

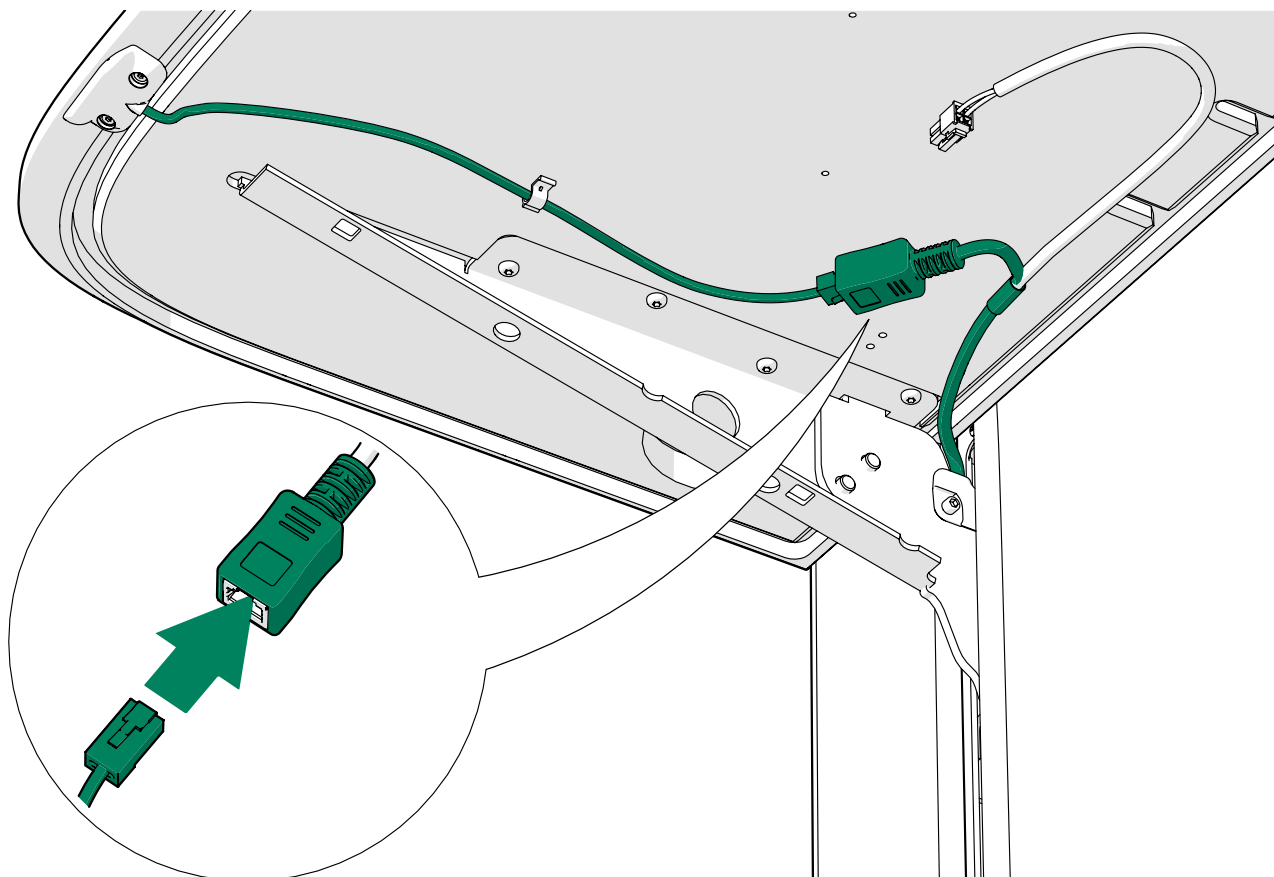

**Figure 86: Without the optional wireless charger**

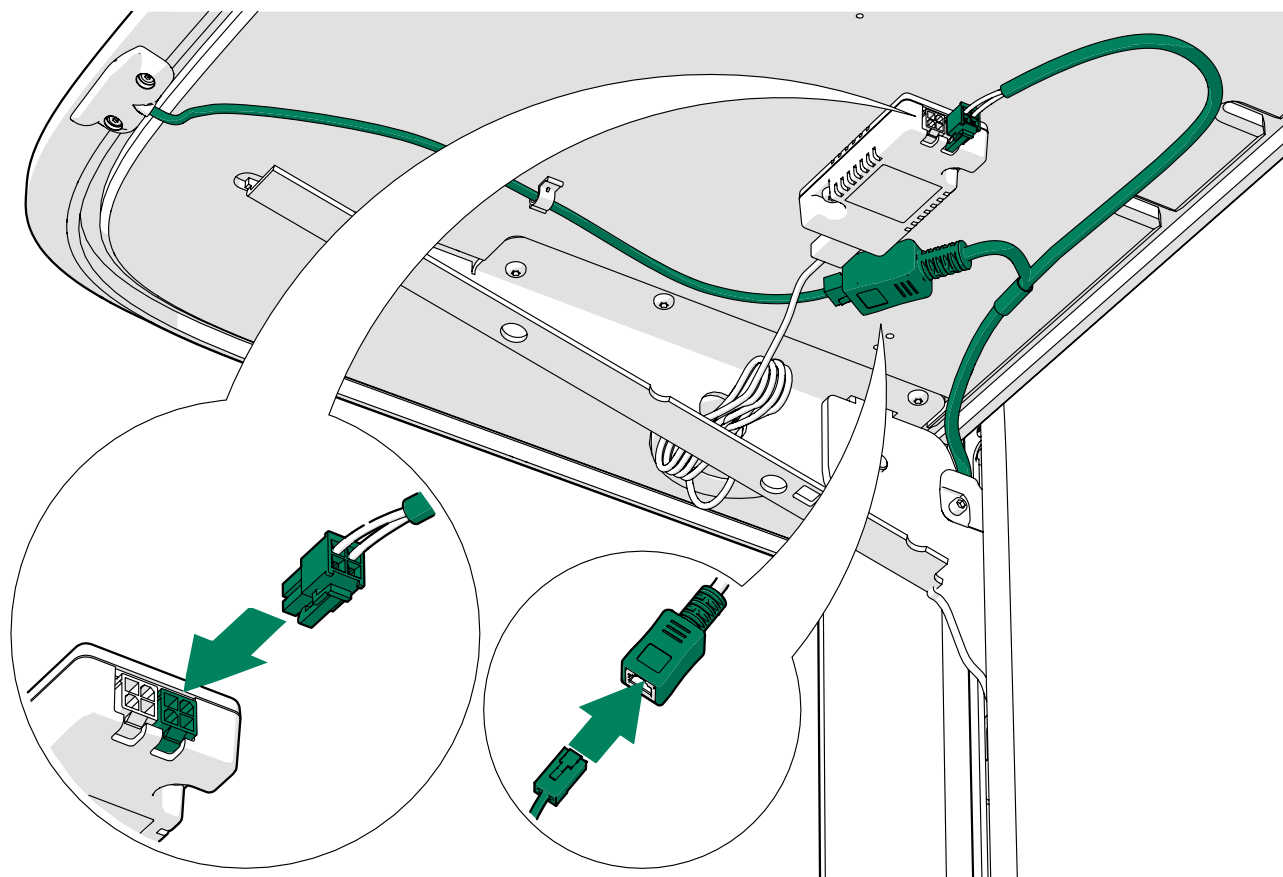

**Figure 87: With the optional wireless charger**

7. Install the strain relief for the spiral cord.

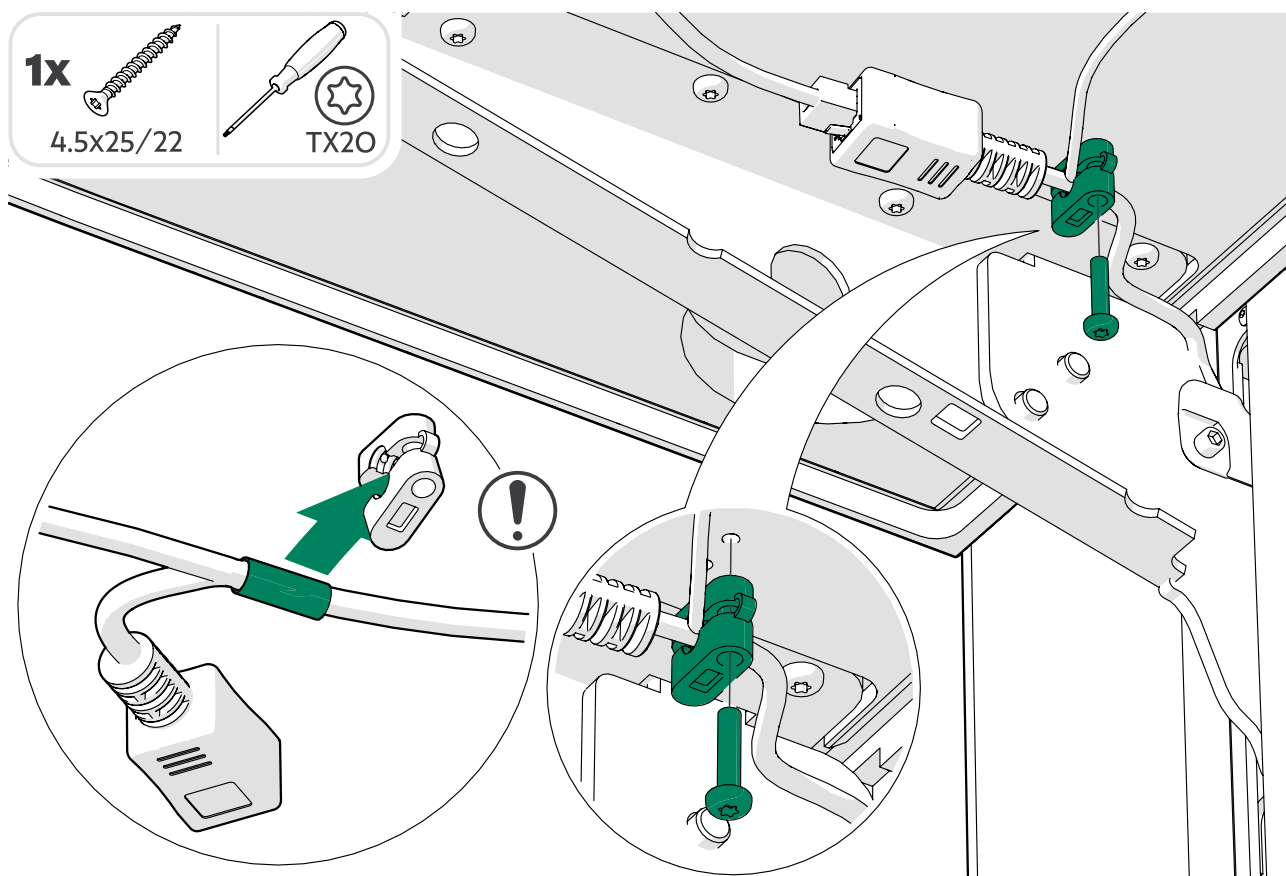


Figure 88: Without the optional wireless charger



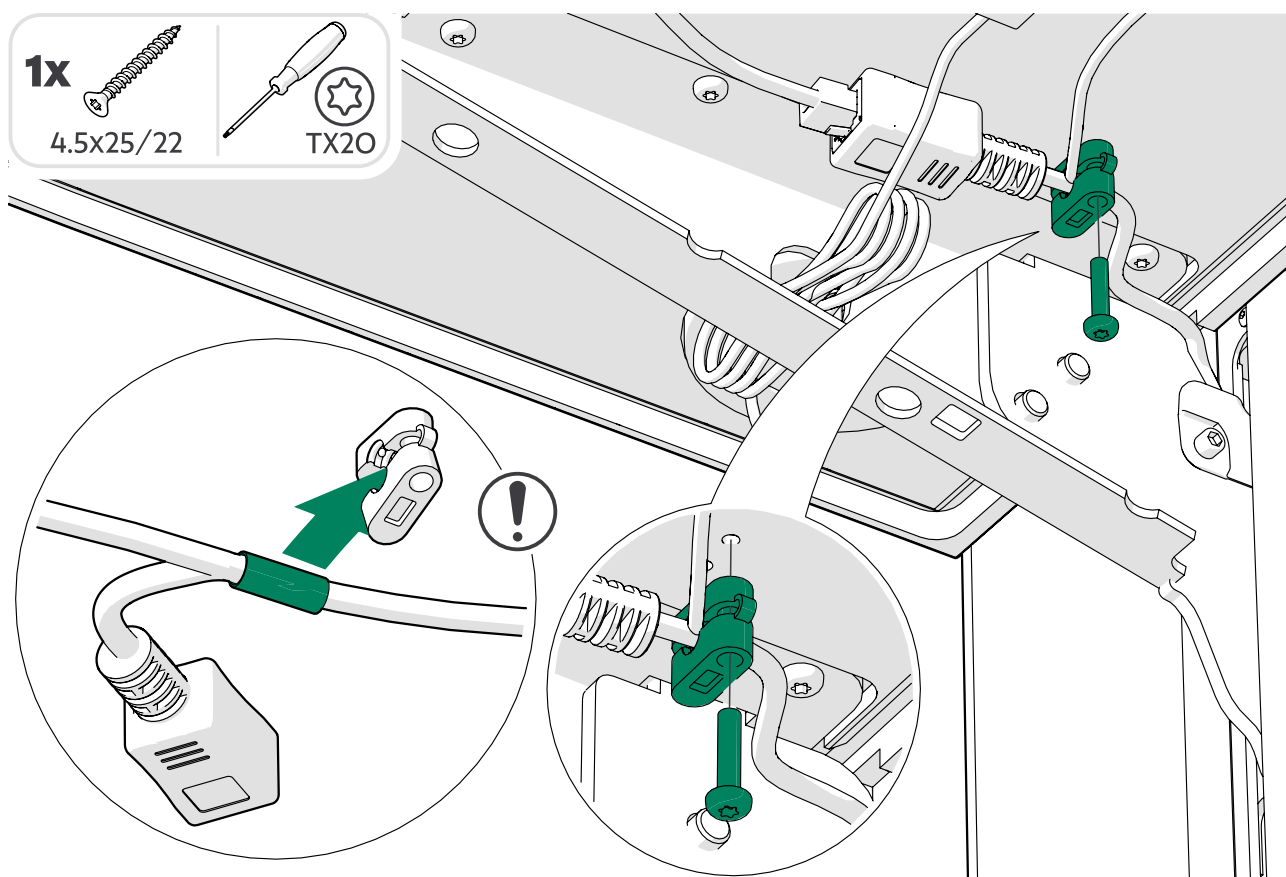


Figure 89: With the optional wireless charger


- 8.** Install the table bottom felt.

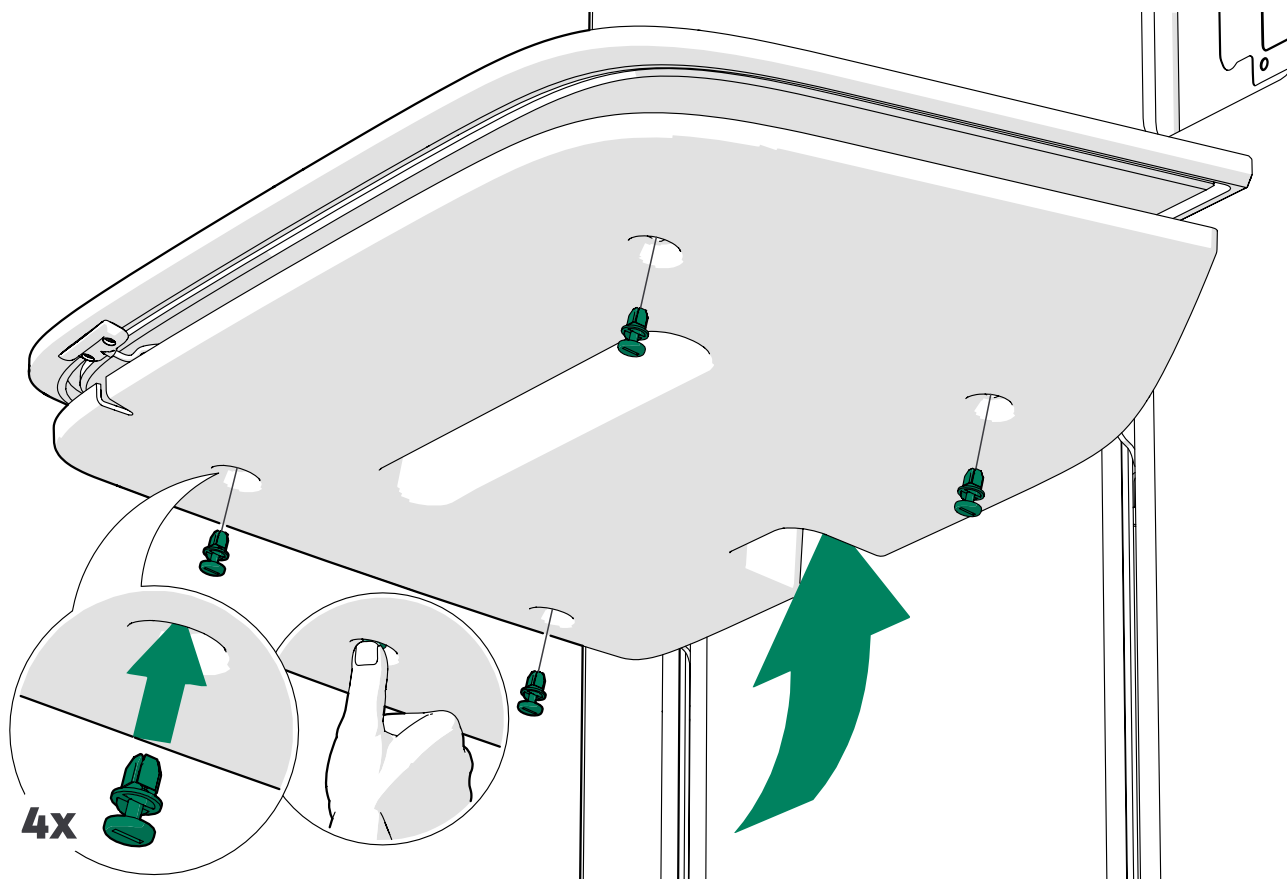

- 9.** Install the control panel to the techwall.

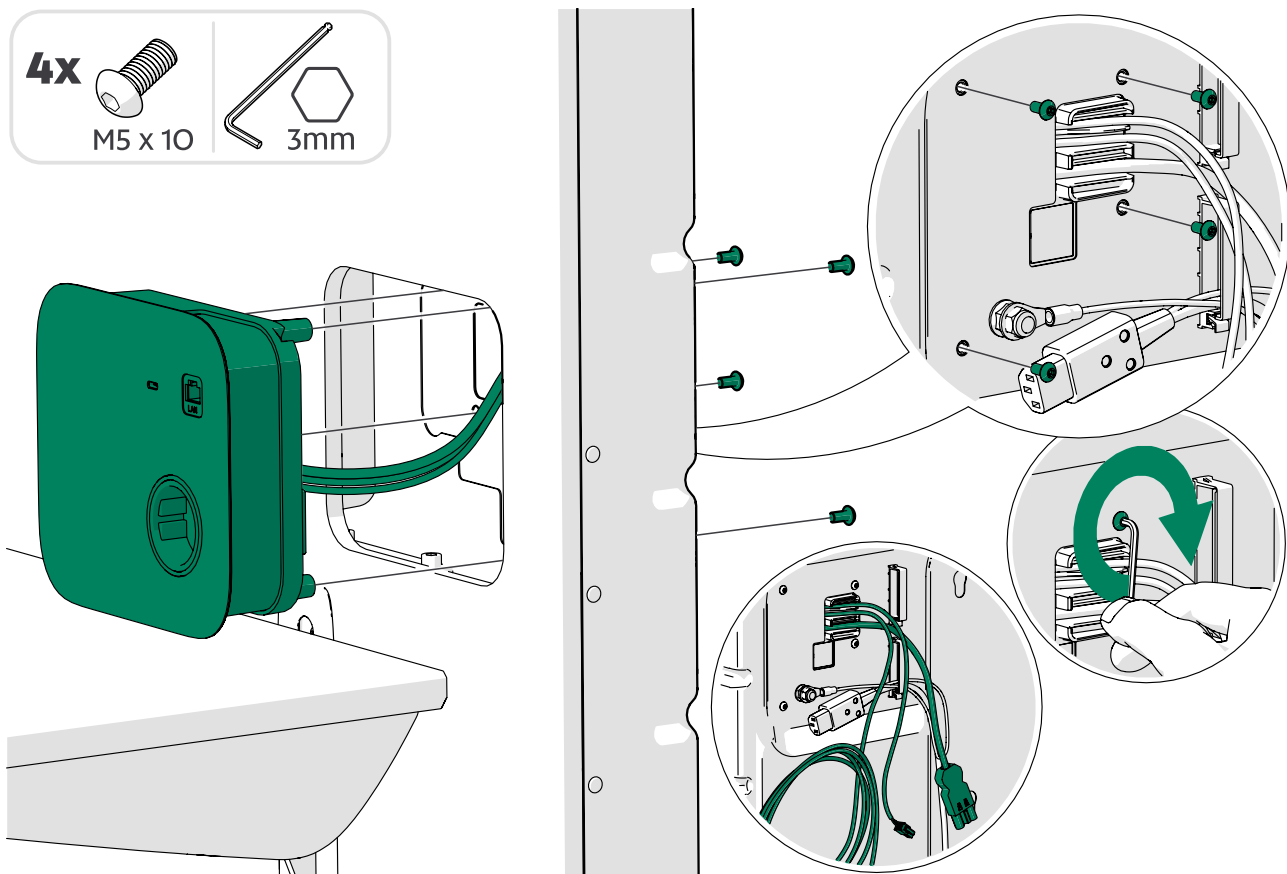

**10. Connect the power outlet cord to the power unit.**

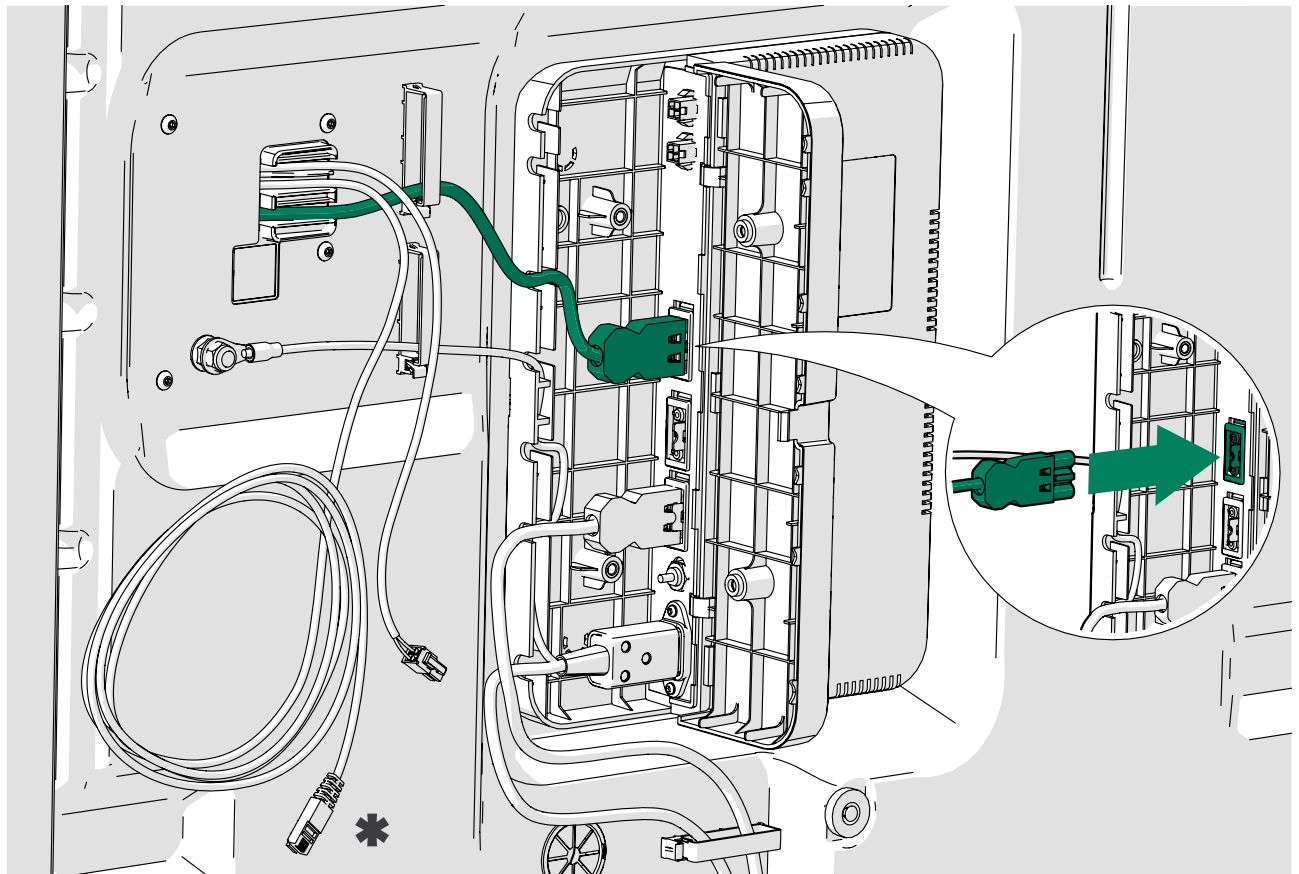

**Figure 90: \* = optional LAN**

11. Connect the CAN cord to the power unit.

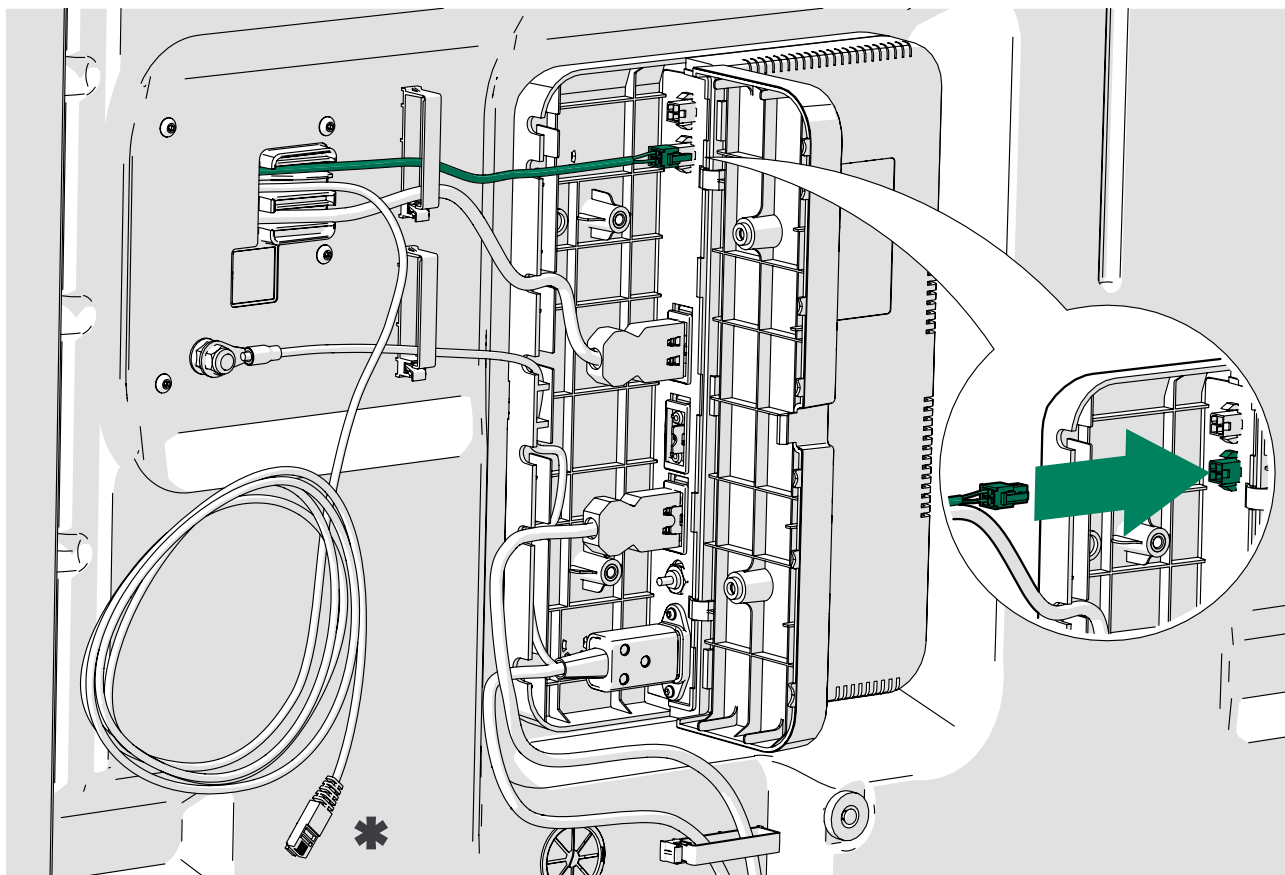


Figure 91: Without the optional wireless charger (\* = optional LAN cord)

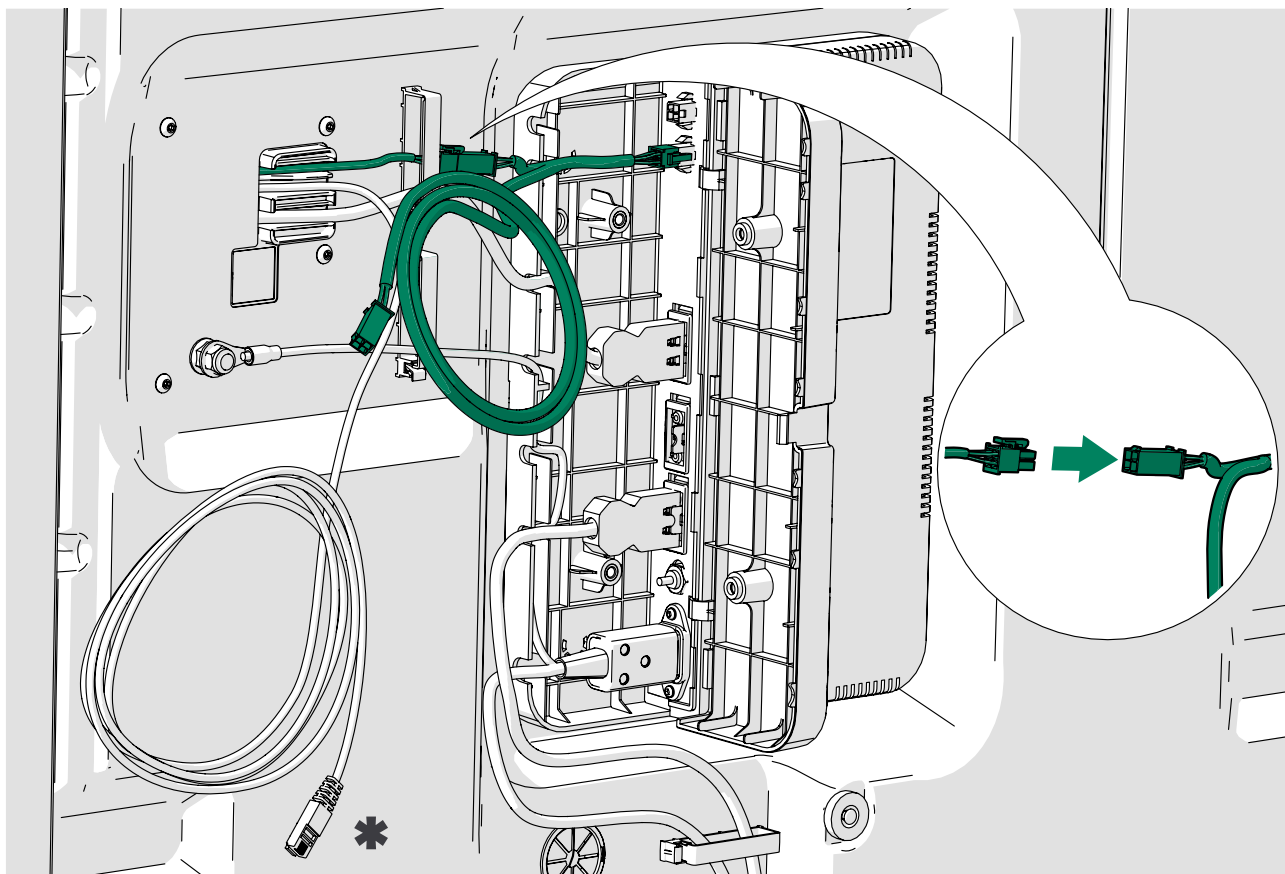


Figure 92: With the optional wireless charger (\* = optional LAN cord)



12. Close the power unit cover and install the screws.

⚠ **Note:** Make sure that the cords are not pinched or damaged.


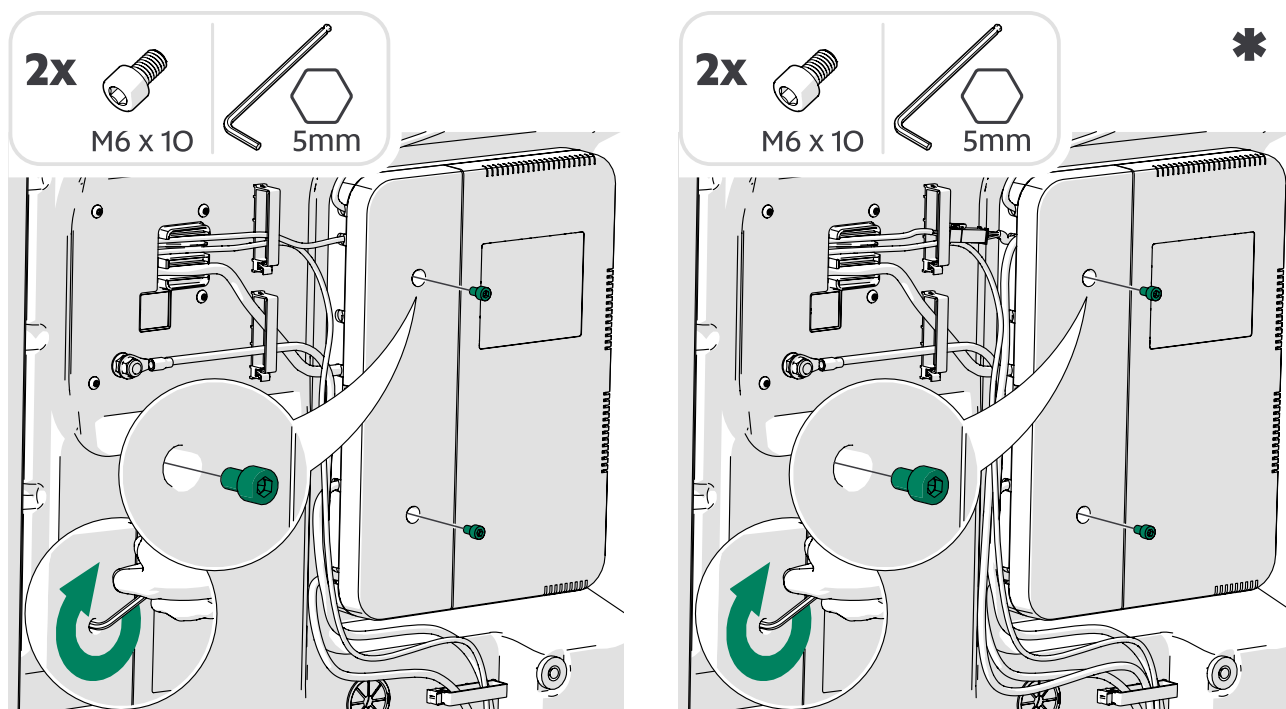



Figure 93: \* = With the optional wireless charger

13. Position the glass wall close to the back of the pod so that the hooks on the frame are directly above the slots in the floor.

⚠ **Note:** Make sure that the guide pin at the upper edge of the frame is in place.

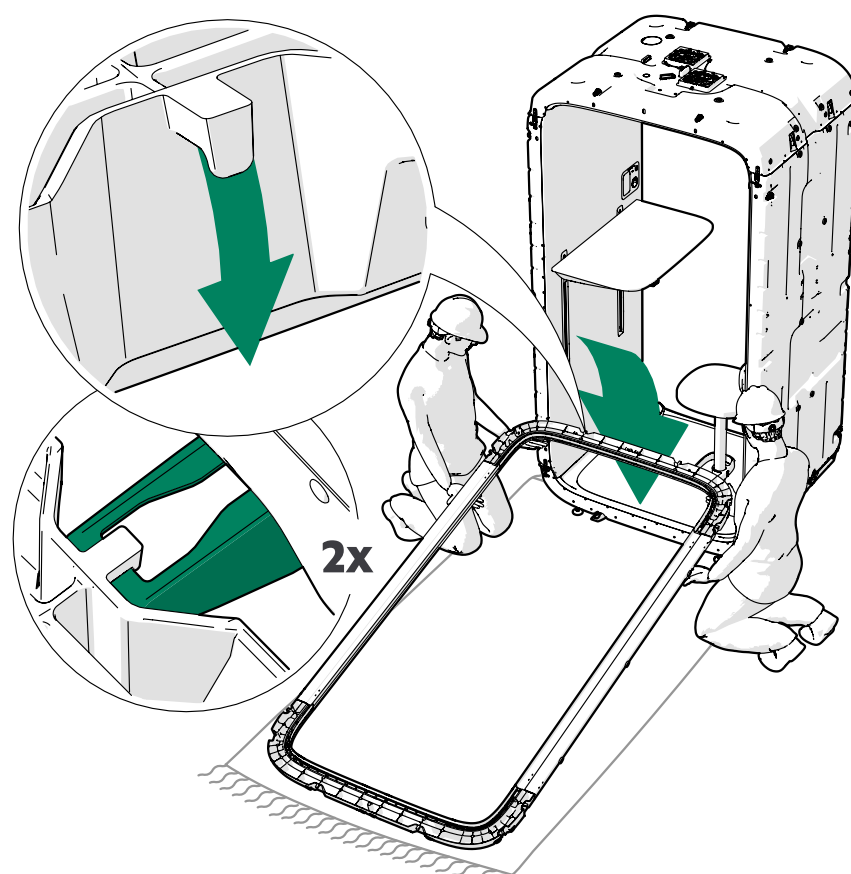


14. Lift the glass wall into place.

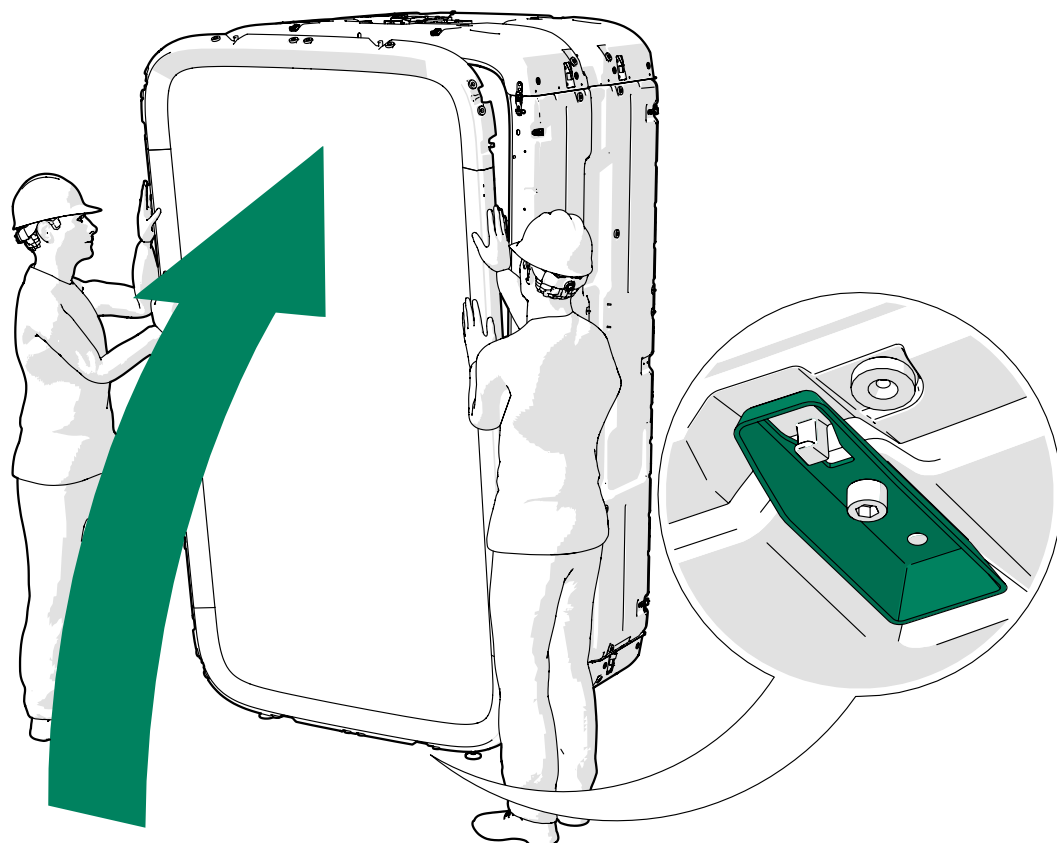

15. Close the latches (6 pcs) and insert the pins (6 pcs) around the glass wall frame.


⚠ **Note:** Support the glass wall until all latches are secured.

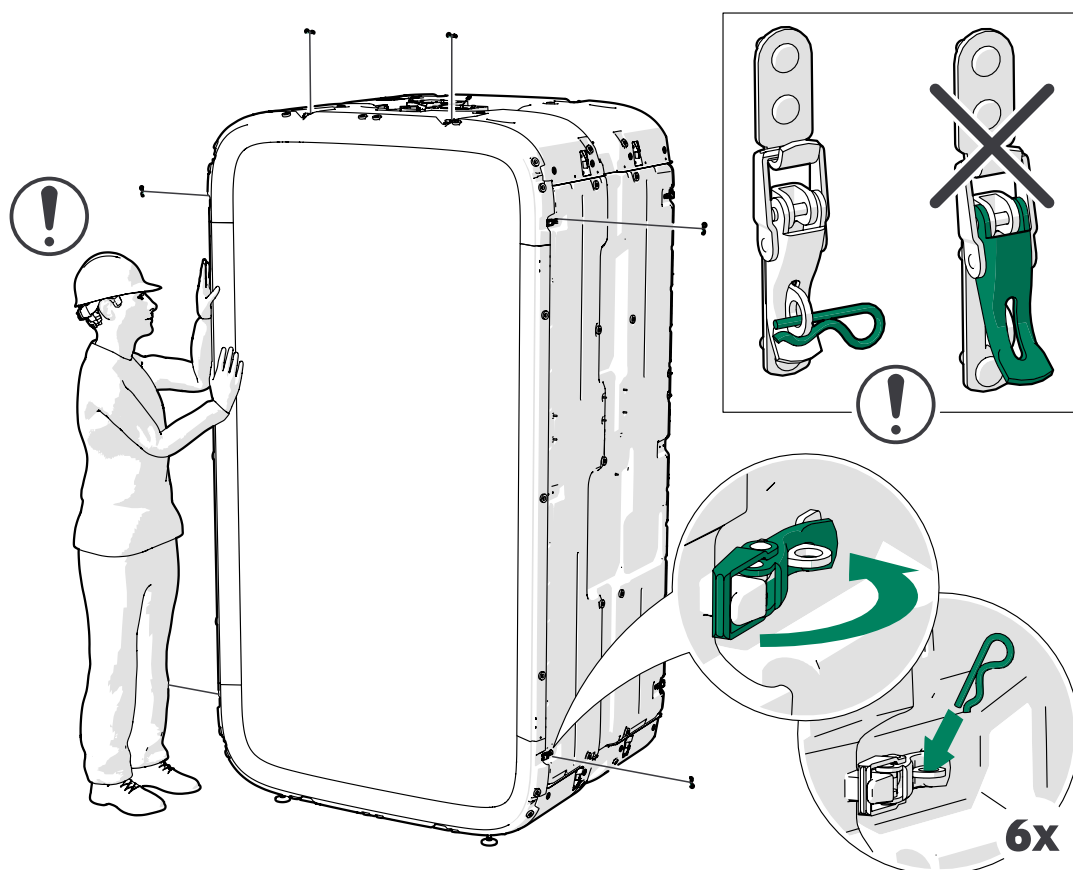




16. Position the front frame with door close to the front of the pod so that the hooks on the frame are directly above the slots in the floor.

⚠ **Note:** Make sure that the guide pin at the upper edge of the frame is in place.

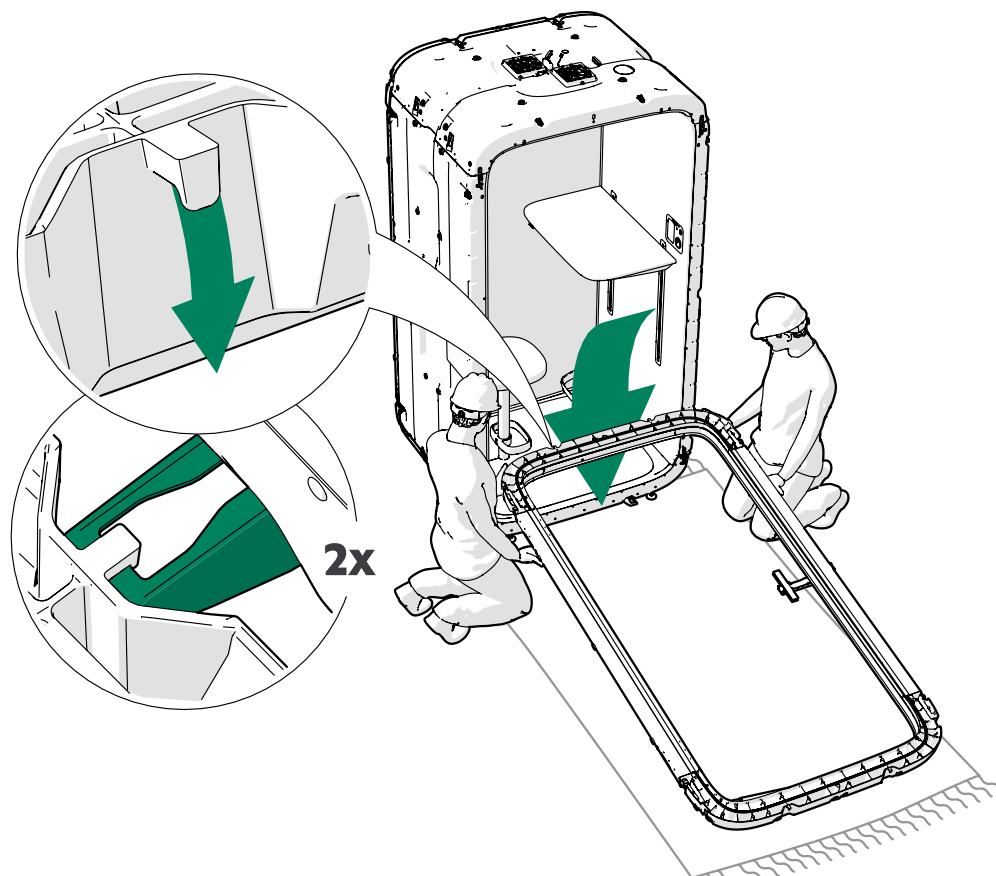


17. Lift the front frame with door into place.

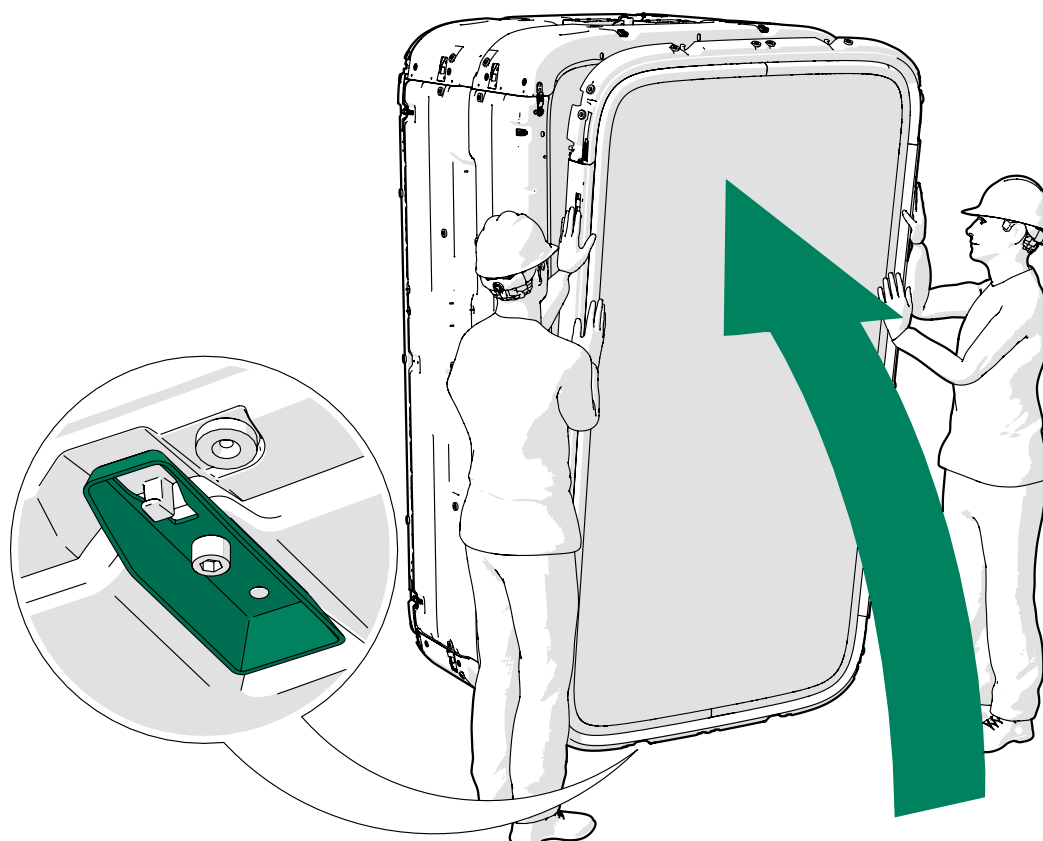


18. Close the latches (6 pcs) and insert the pins (6 pcs) around the front frame.

⚠ **Note:** Support the front frame with door until all latches are secured.

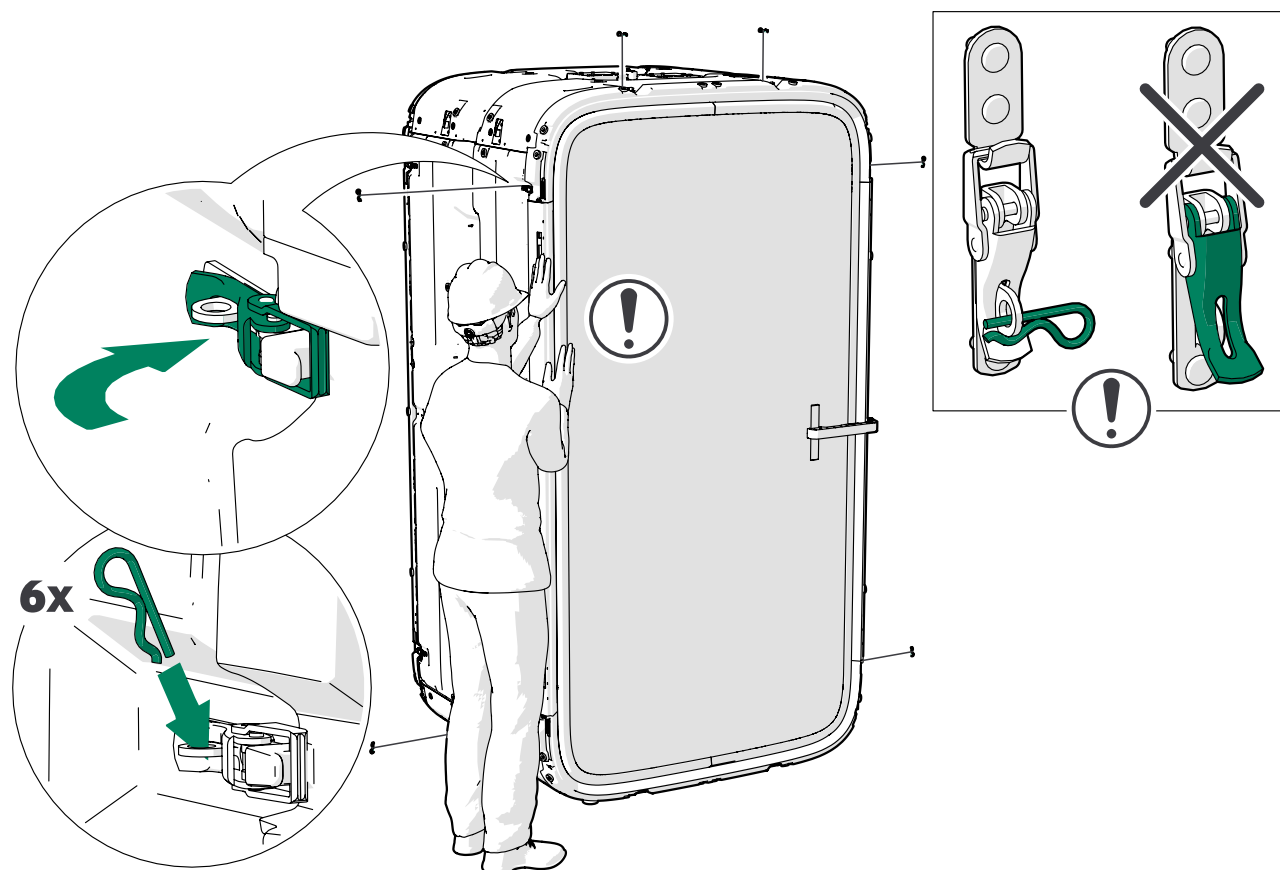


19. Remove the door brace and install the outside door handle.

⚠ **Note:** Make sure that the set screw is at the bottom.

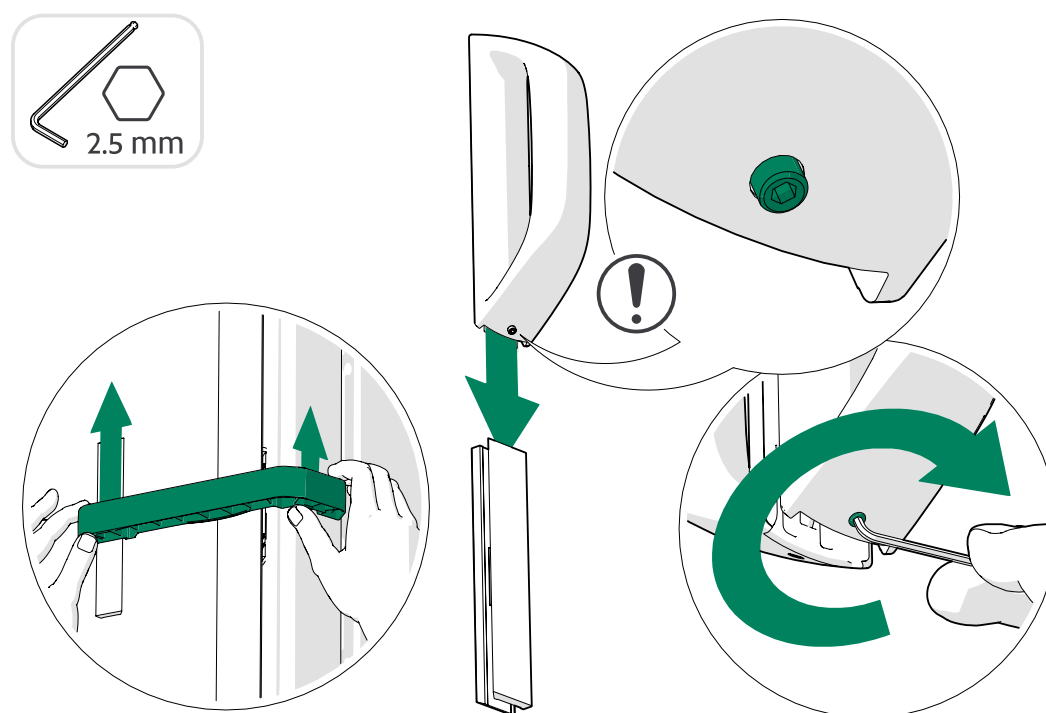

20. Install the occupancy indicator lights to the pod and connect the cords to the OCC connectors of the control hub.

Install the occupancy indicator lights to the same corners from which they were removed.

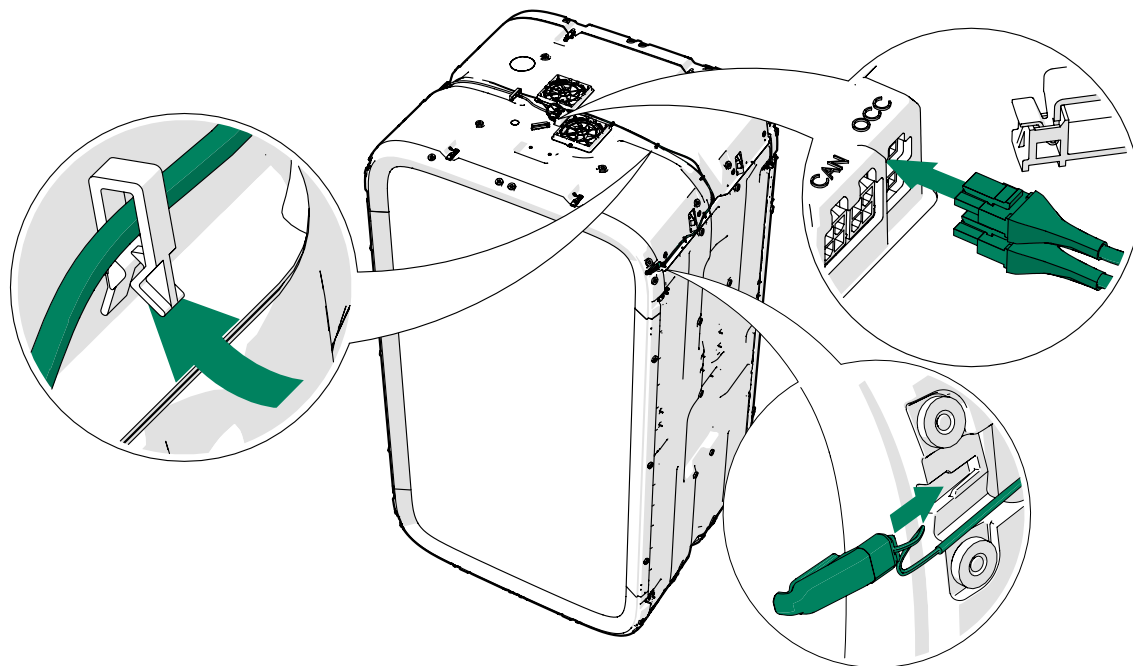

21. Install the body covers, plastic trims, and fan cover in the reverse order.
  22. Connect the power cord to the power outlet.
- If equipped with the optional LAN, also connect the LAN cord to the outlet.

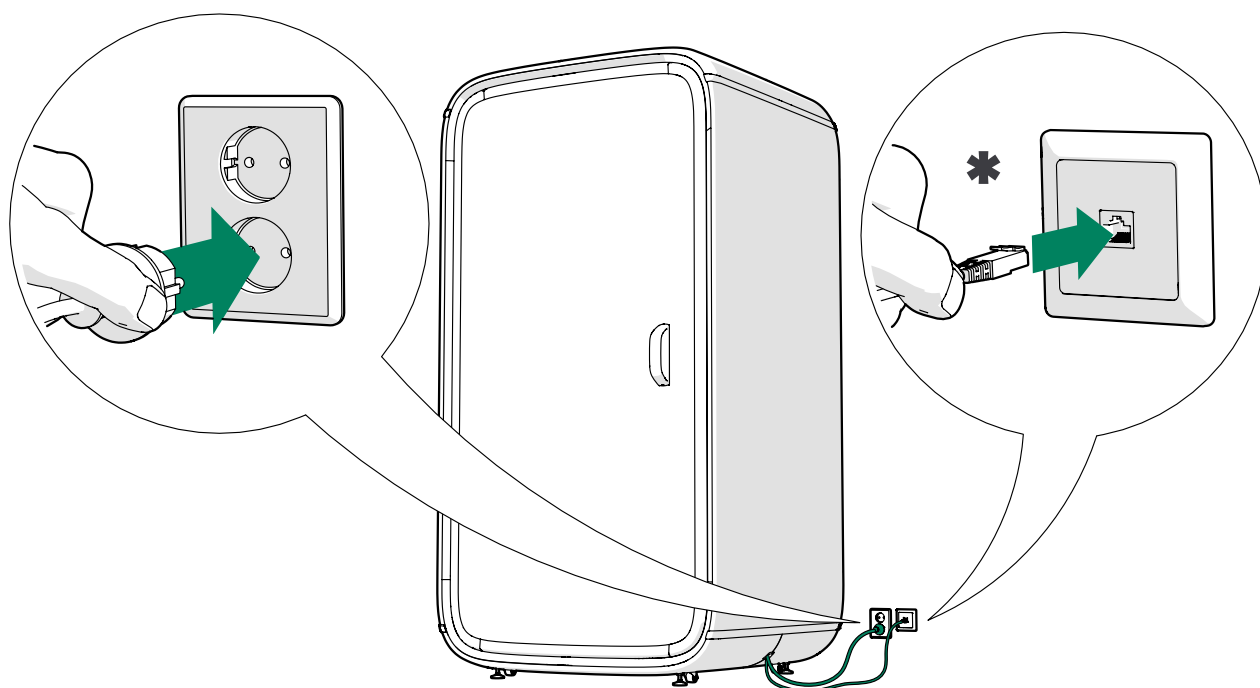


Figure 94: \* = optional LAN

## 6.3 Replace the blank wall panel

- ⚠ **Note:** Set all removed parts aside carefully and neatly. All removed parts, excluding the one being replaced, will be needed for reassembly.

### 6.3.1 Disassemble the necessary parts (blank wall panel)

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.

- ⚠ **DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.

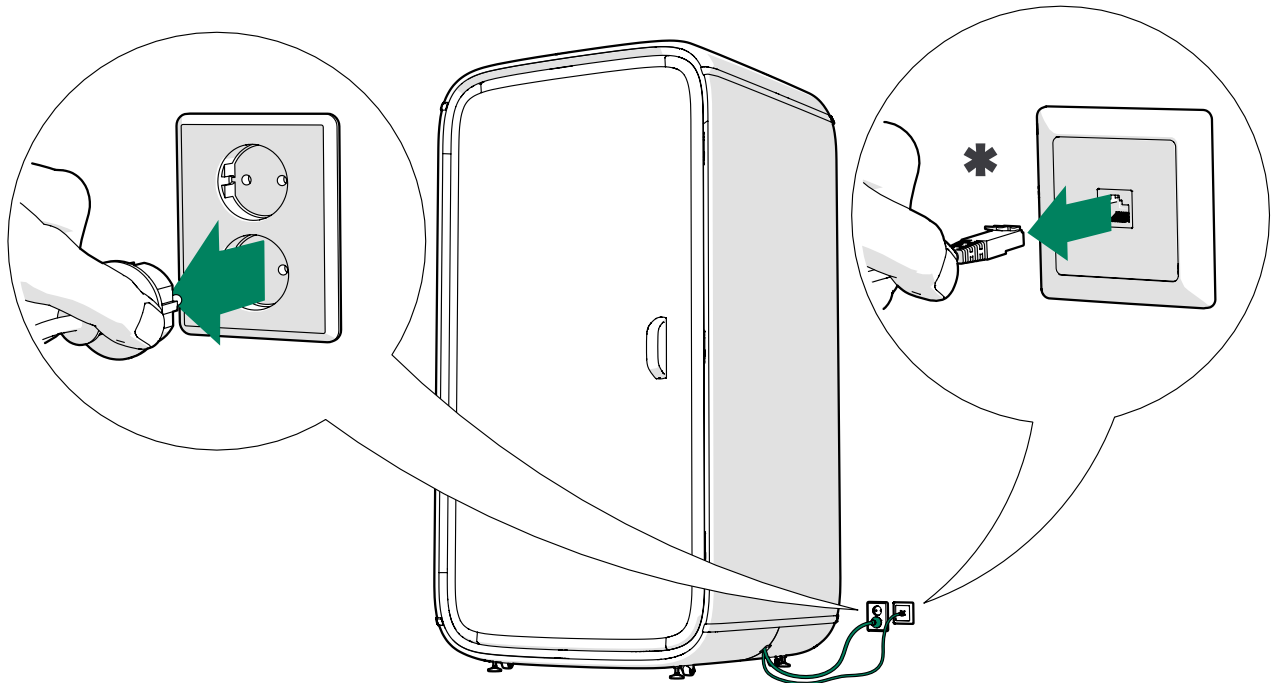


Figure 95: \* = optional LAN

2. Remove the fan cover.



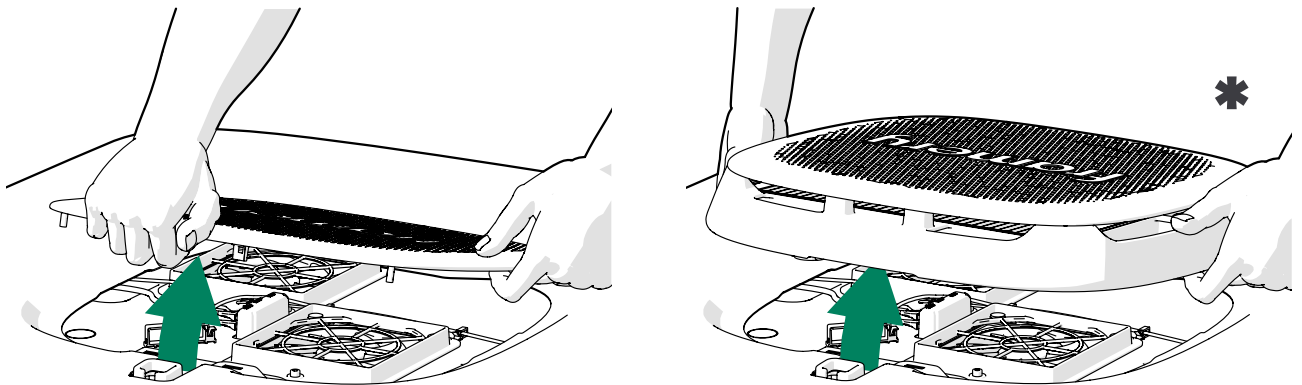


Figure 96: \* = With optional activated carbon filter


3. Remove the plastic trims.

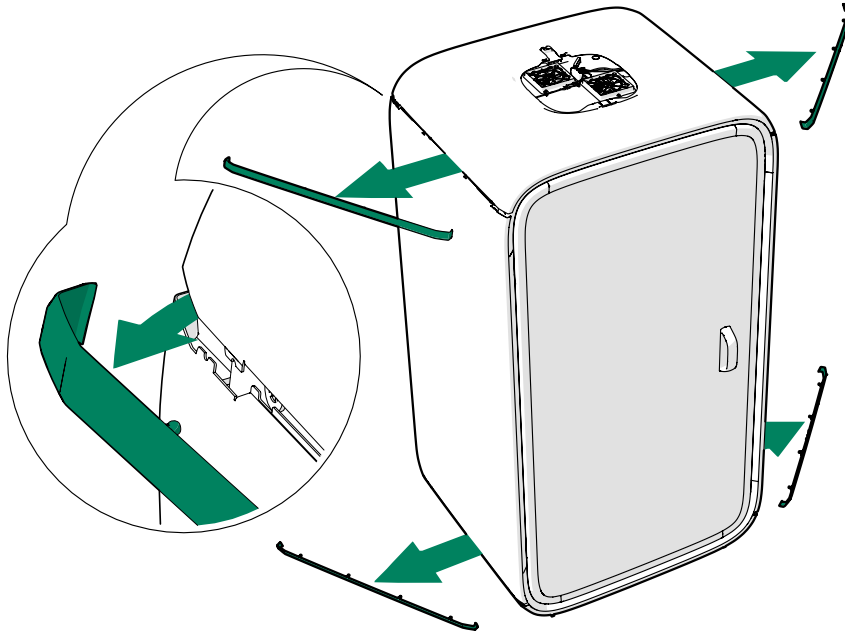


4. Remove the roof body cover.

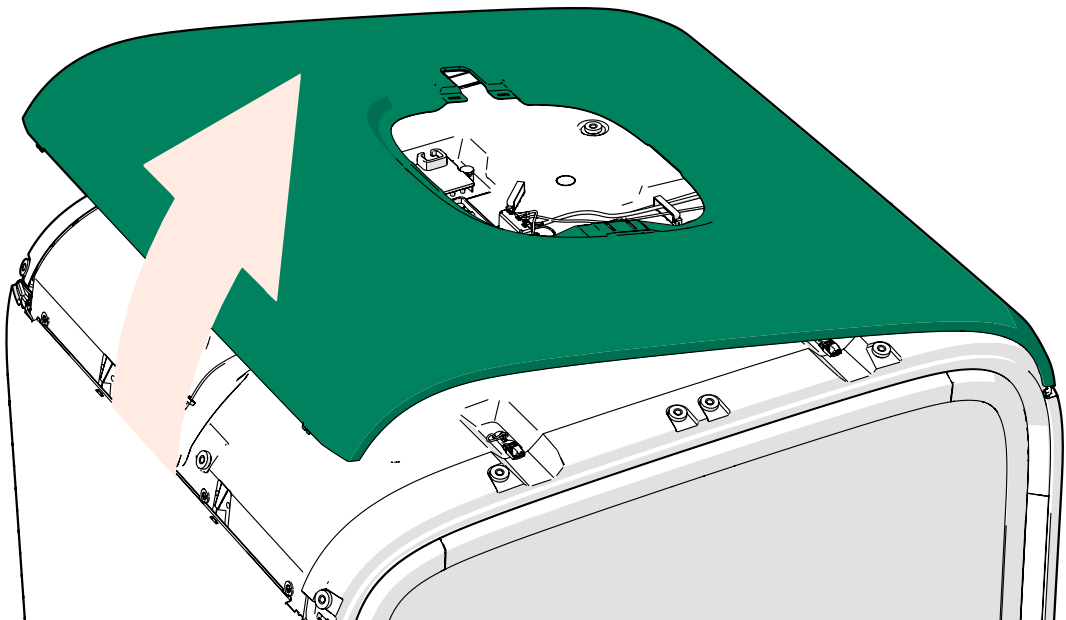

5. Remove the wall body covers.

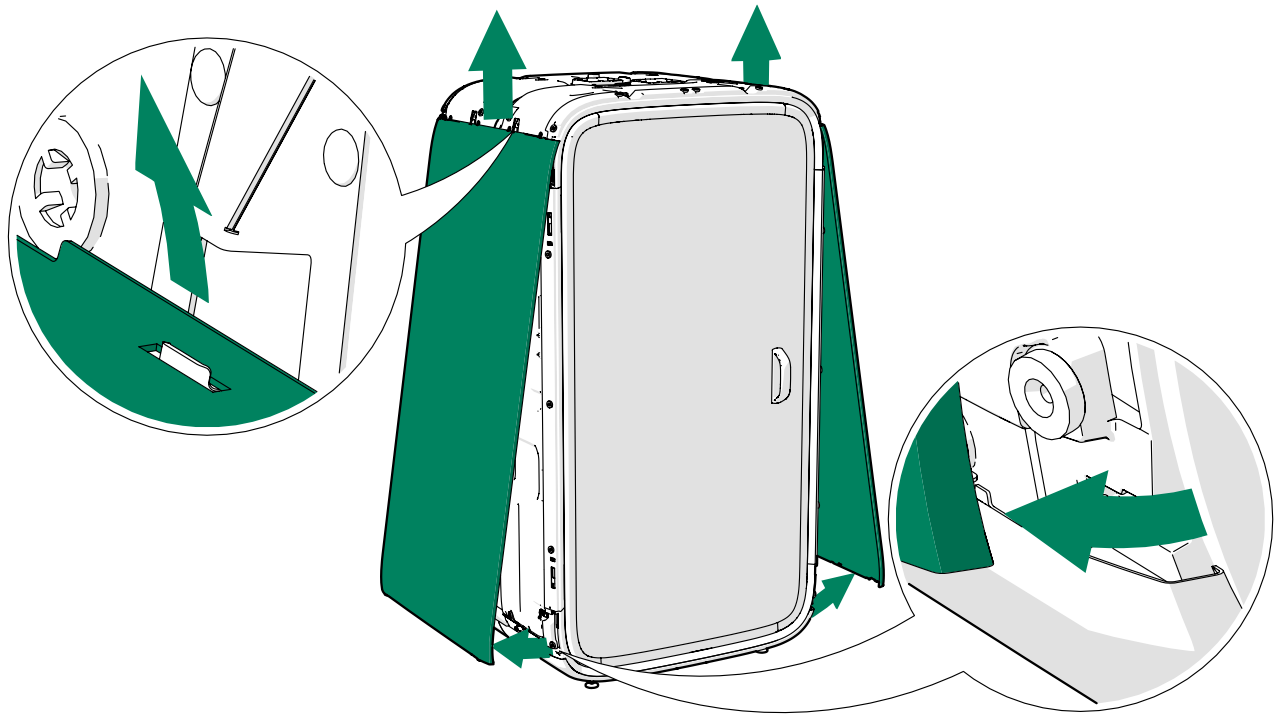

6. Remove the front floor body cover.

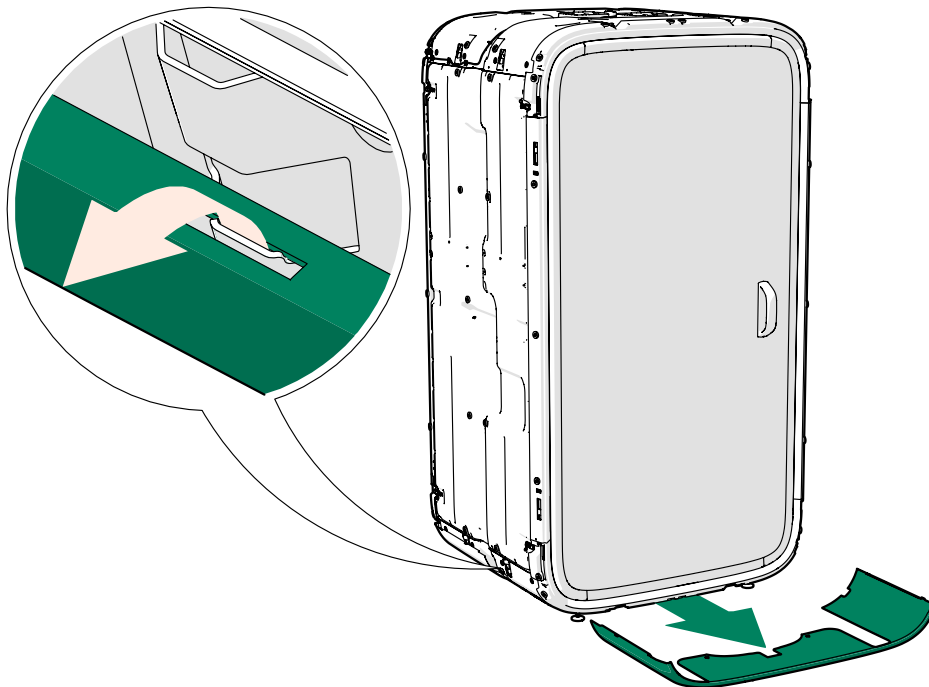


7. Remove the back floor body cover.



8. Remove the door handle from the outside of the door.  
Loosen the set screw to remove the handle.




**Note:** Do not remove the set screw.

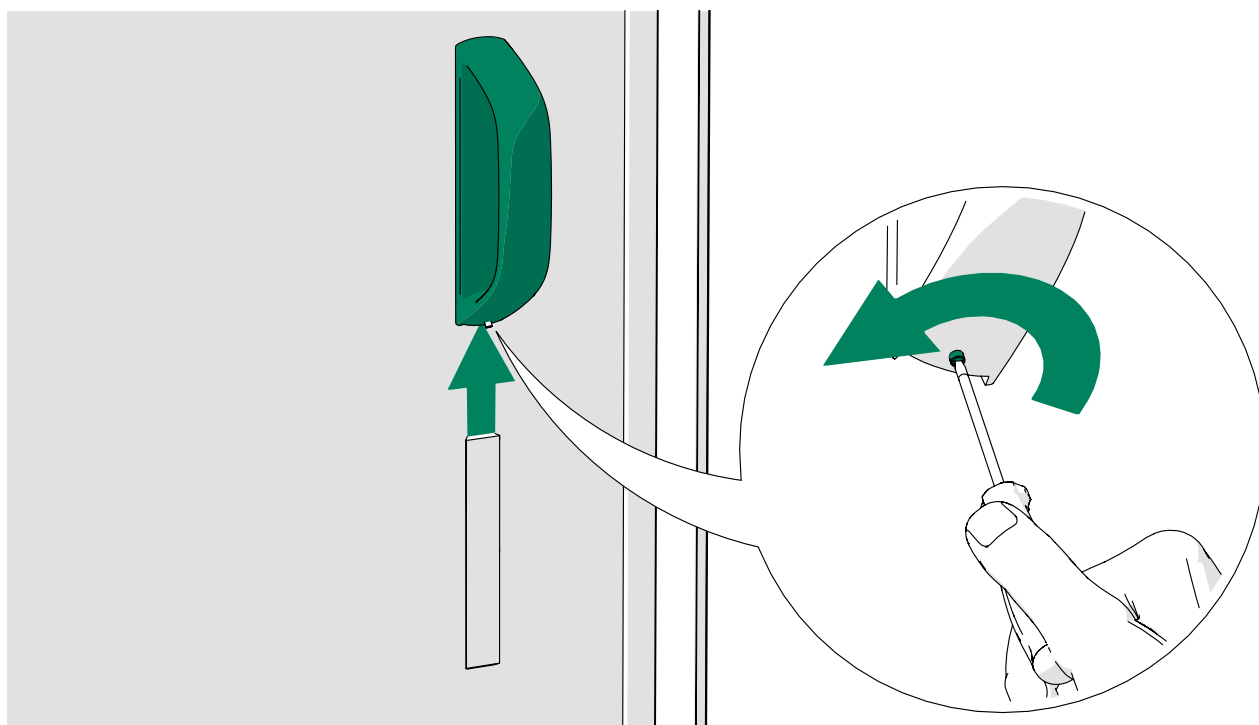

9. Install the door brace.




**Warning:** Risk of injury or damage to property. Make sure that the door brace is in place before detaching the front frame with the door.

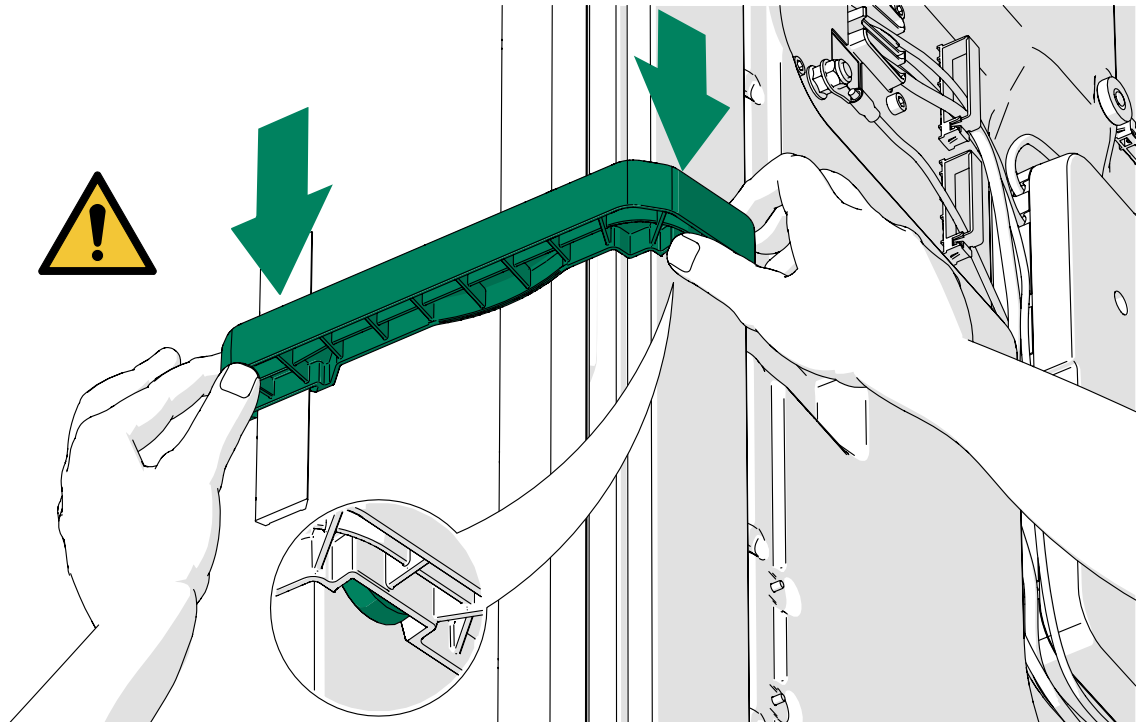

10. Disconnect all installed occupancy indicator lights from the control hub and remove them from the pod.




**Note:** For reassembly, make a note of which corners the lights were removed from.

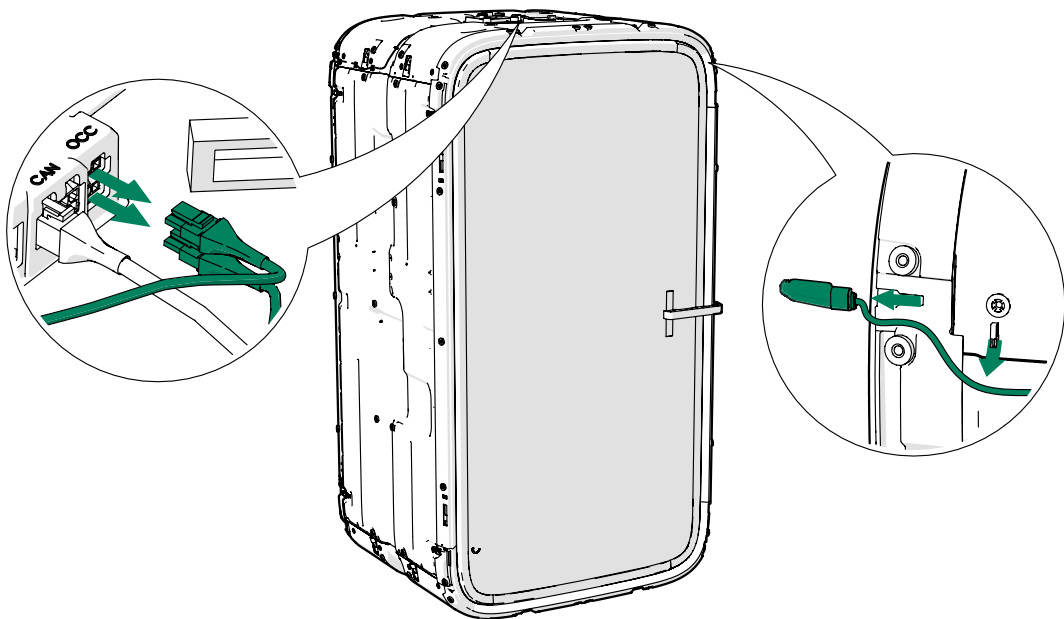




11. Lay a carpet on the floor in front of the pod.

⚠ **Note:** The carpet is needed to protect the frame from scratches.

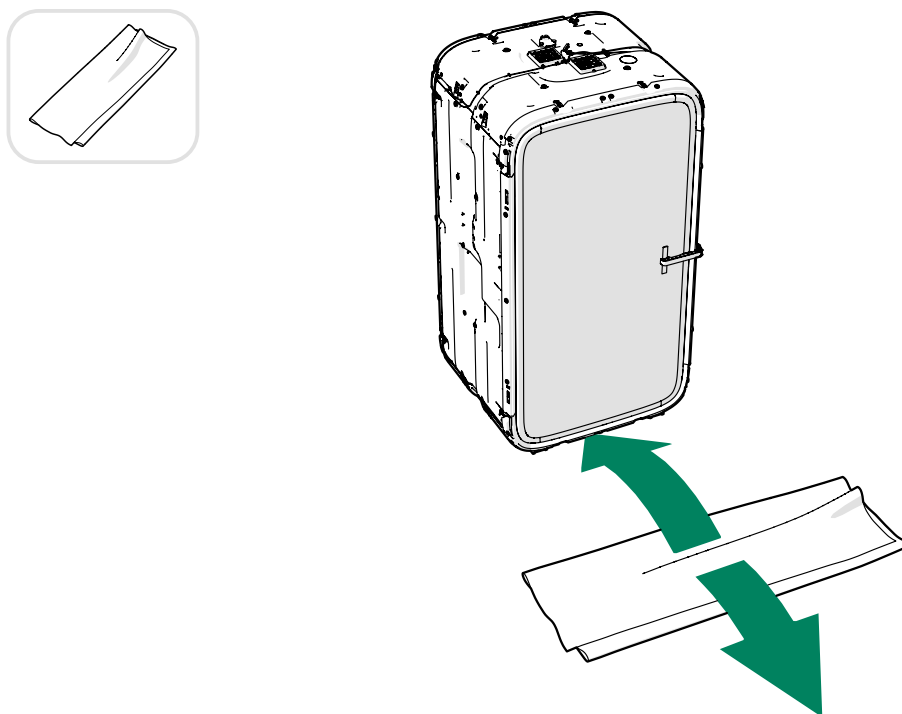

12. Remove the pins (6 pcs) and open the latches (6 pcs) around the front frame.


⚠ **Note:** Support the frame while opening the latches.

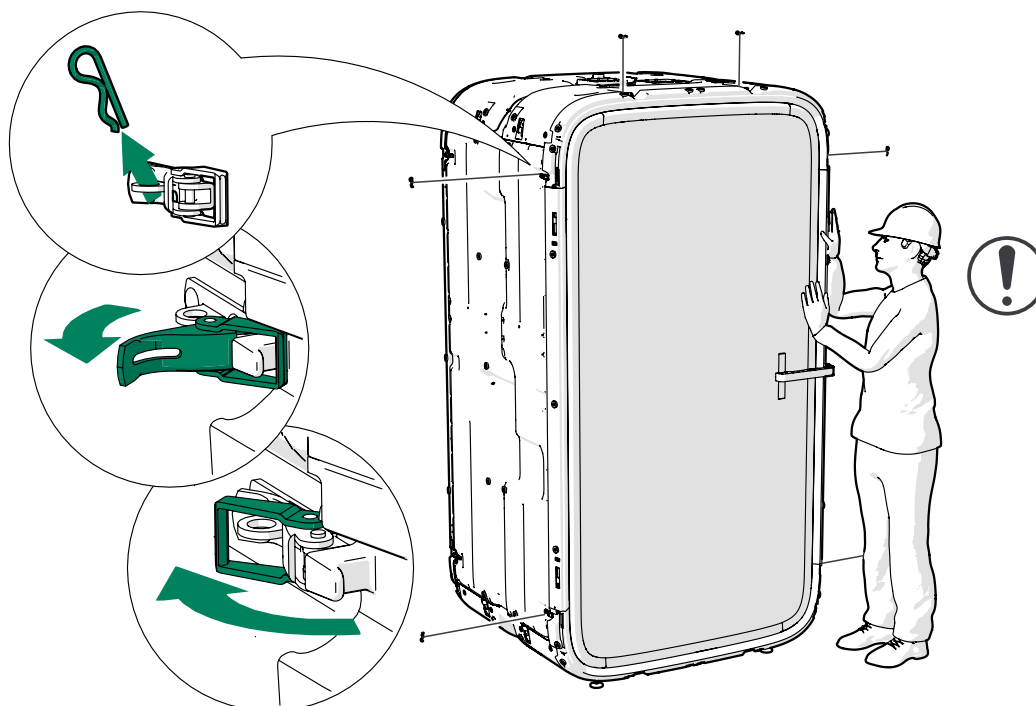

13. Carefully lower the front frame with door onto the carpet.





**Note:** Make sure that the guide pin at the upper edge of the frame stays in place.

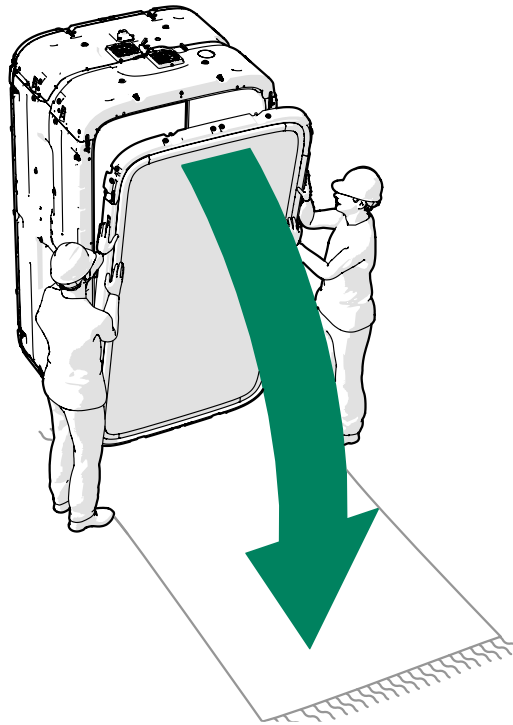

14. Lay a carpet on the floor behind the pod.




**Note:** The carpet is needed to protect the frame from scratches.

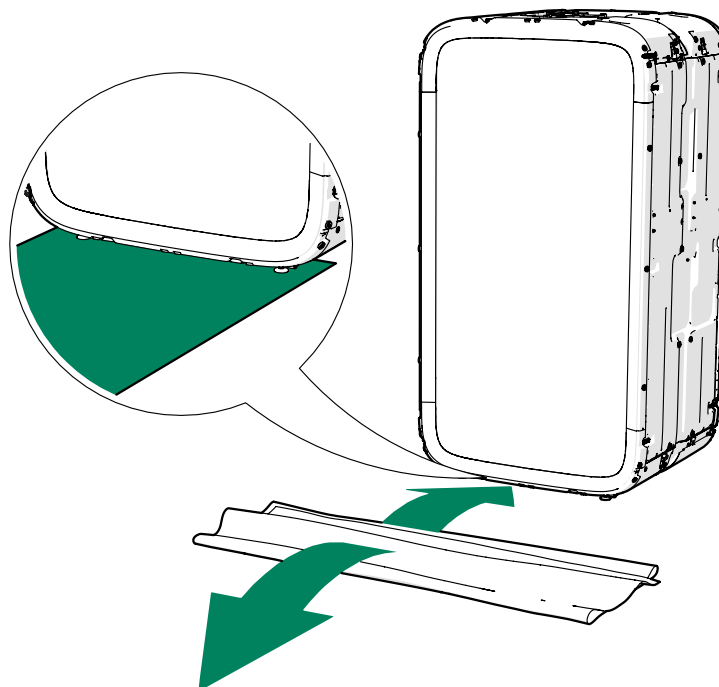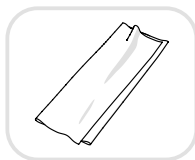

15. Remove the pins (6 pcs) and open the latches (6 pcs) around the glass wall.




**Note:** Support the glass wall while opening the latches.

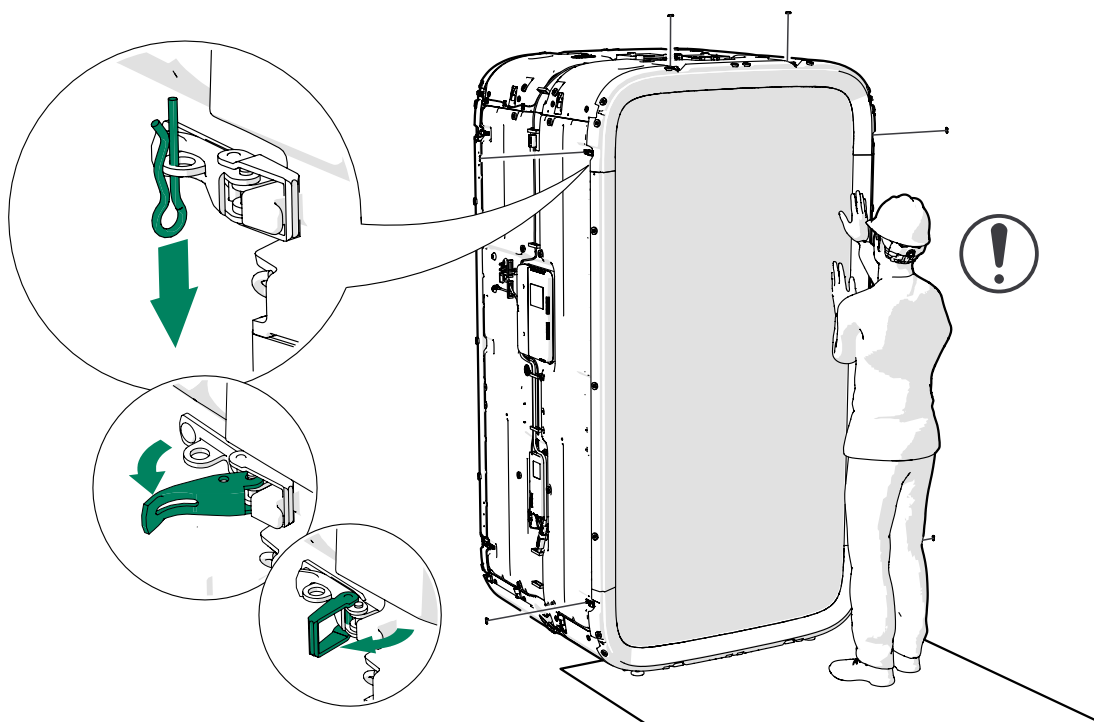

16. Carefully lower the glass wall onto the carpet.




**Note:** Make sure that the guide pin at the upper edge of the frame stays in place.

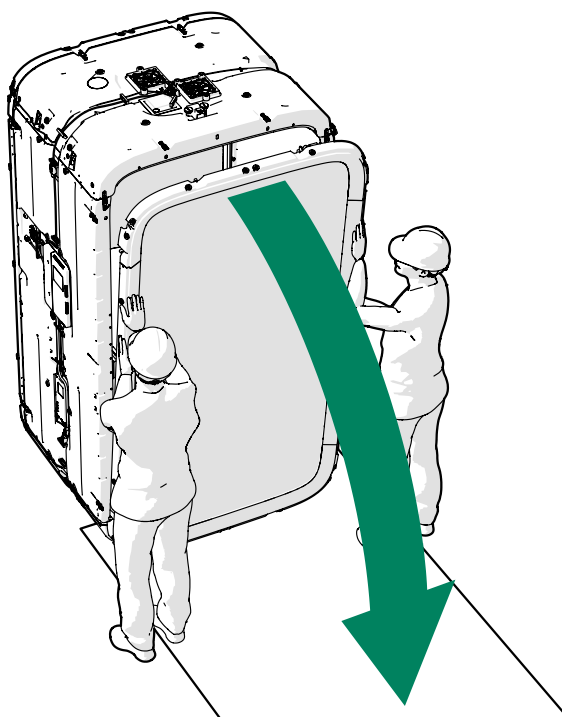


17. Remove the coat hook from the blank wall.  
Loosen the set screw to remove the coat hook.

⚠ **Note:** Do not remove the set screw.

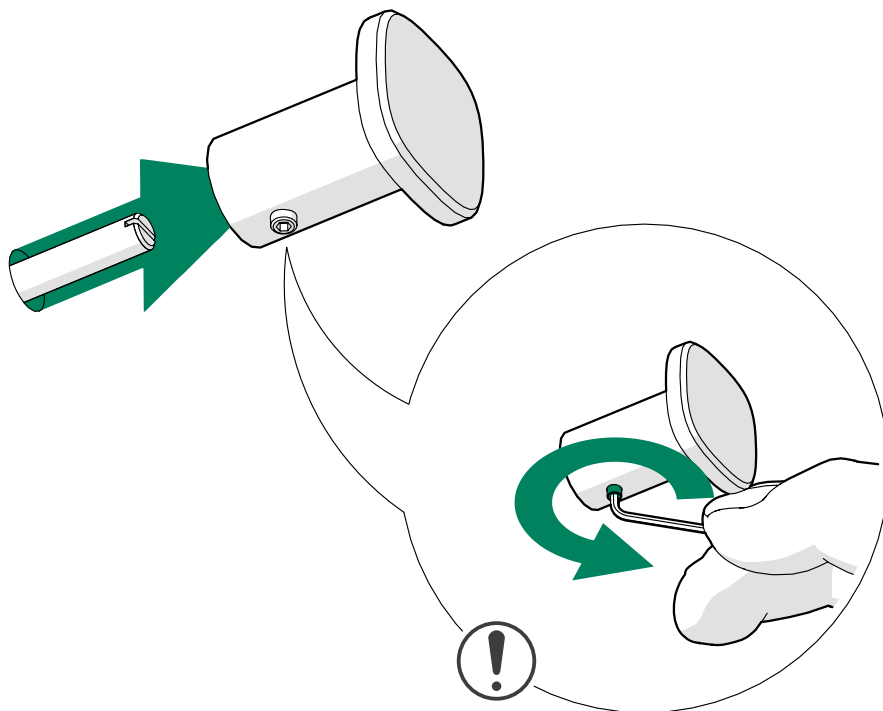


18. Remove the old blank wall panel.

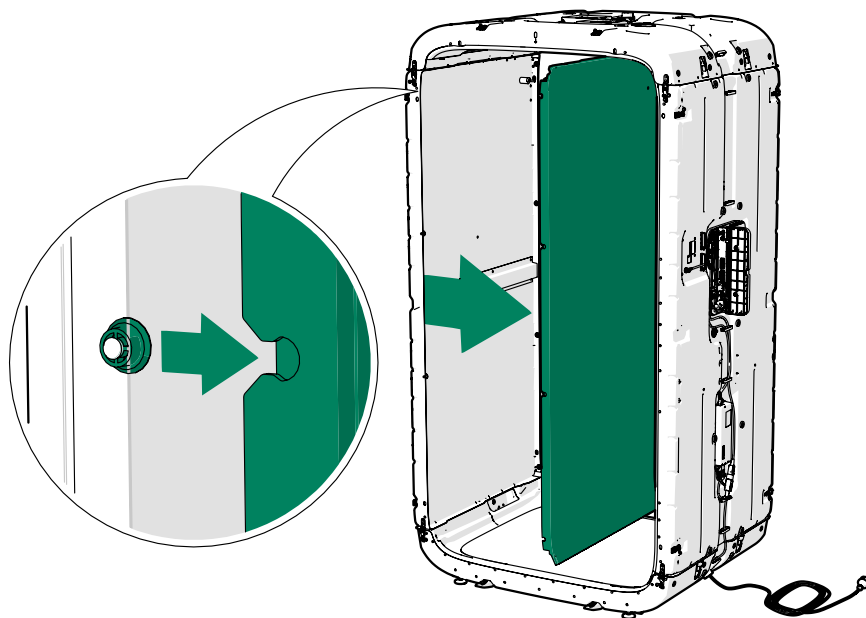


### 6.3.2 Install the removed parts (blank wall panel)

1. Install the new blank wall panel.

- ⚠ **Note:** The interior panels are sensitive to dirt. Make sure that you use clean gloves to handle the panels.
- ⚠ **Note:** Make sure that the opening for the coat hook is in the upper right corner.

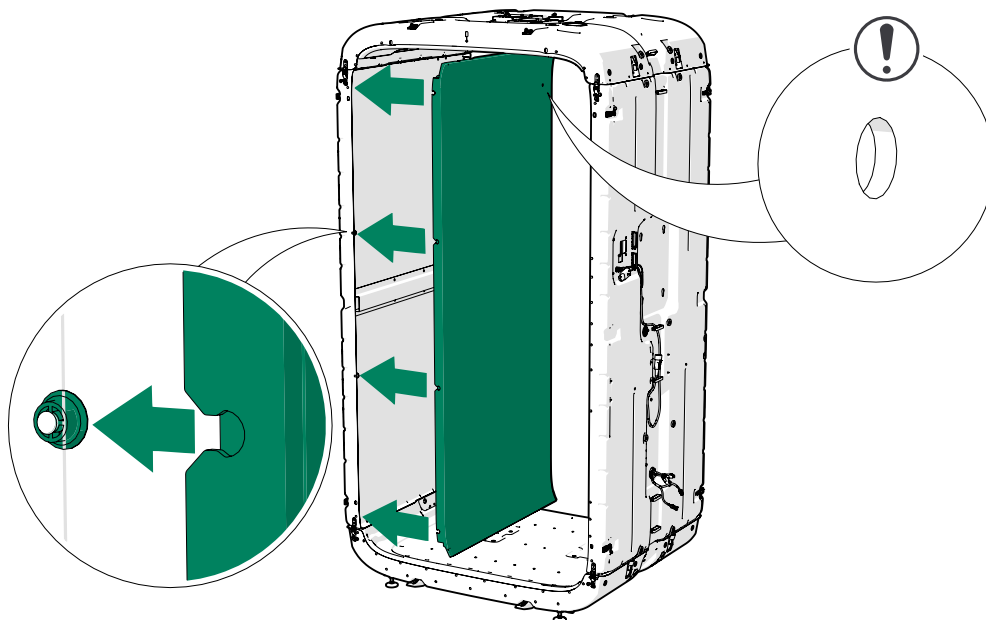


2. Install the coat hook.

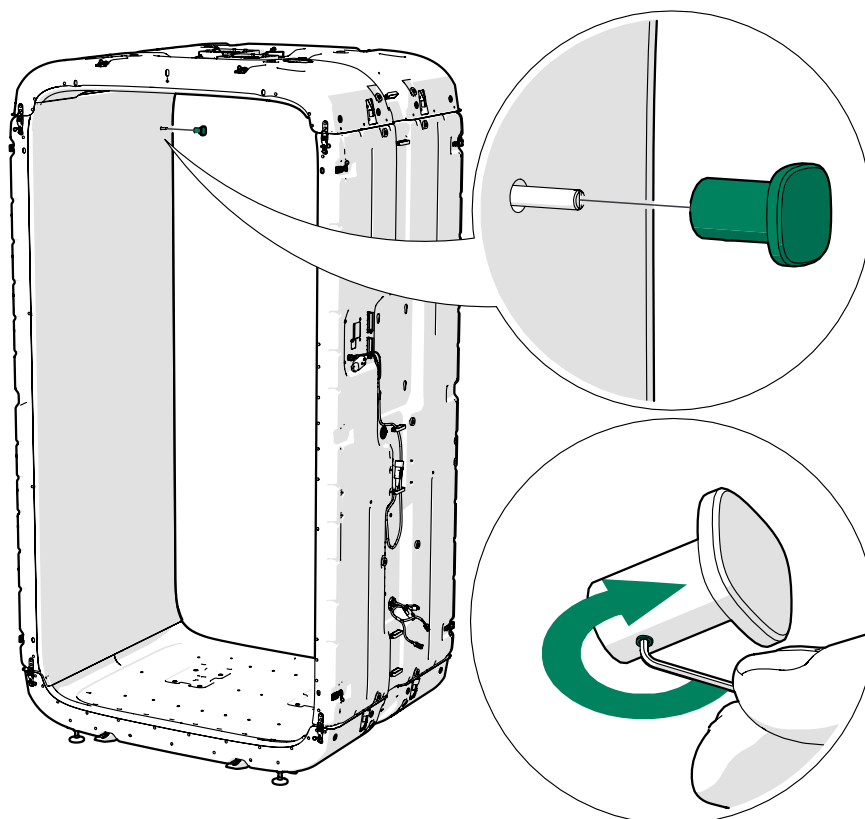


3. Position the glass wall close to the back of the pod so that the hooks on the frame are directly above the slots in the floor.

⚠ **Note:** Make sure that the guide pin at the upper edge of the frame is in place.

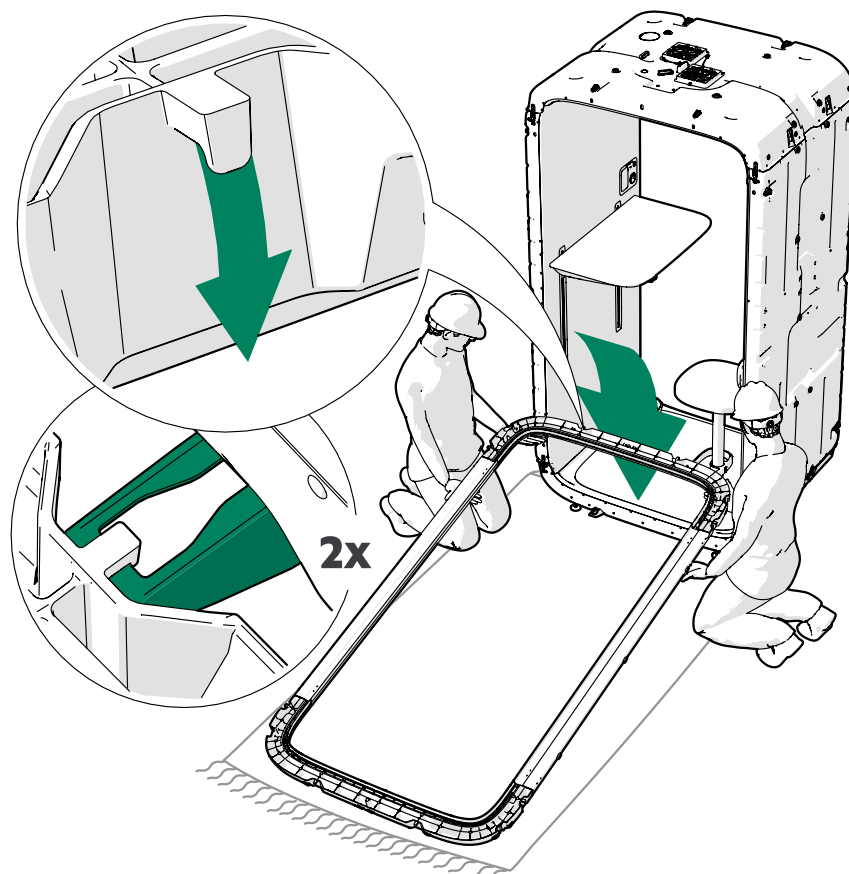


4. Lift the glass wall into place.

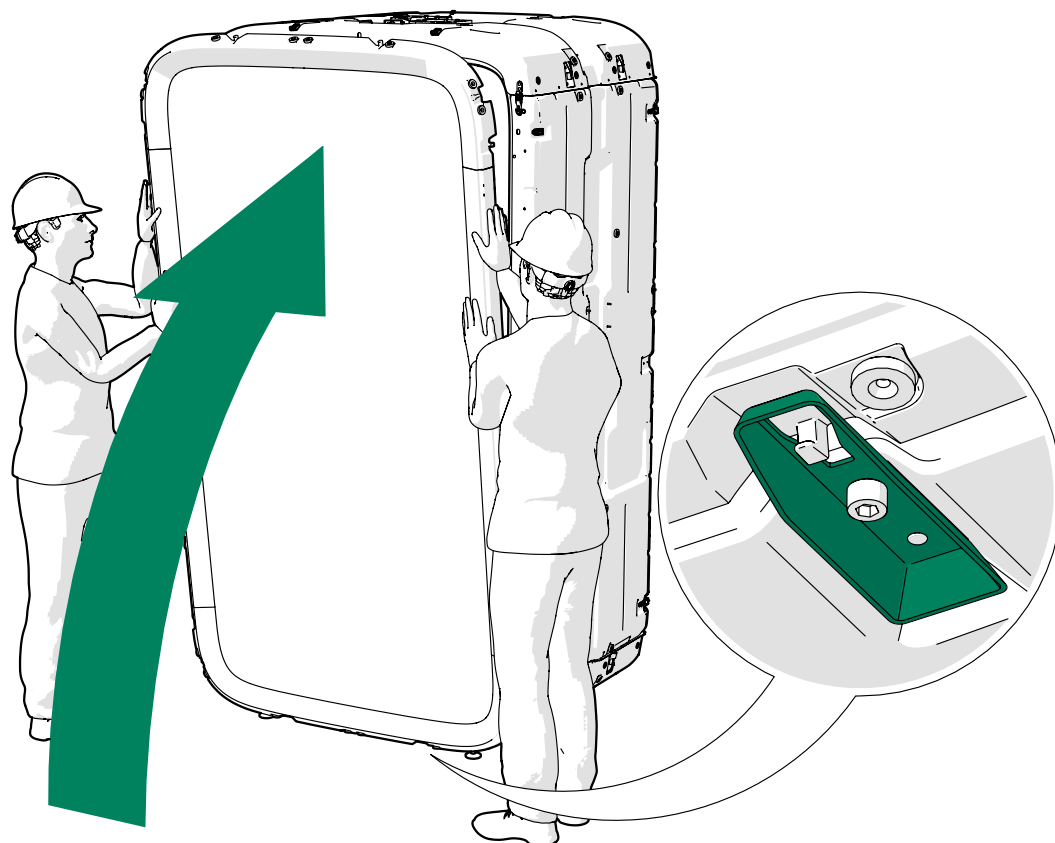

5. Close the latches (6 pcs) and insert the pins (6 pcs) around the glass wall frame.


⚠ **Note:** Support the glass wall until all latches are secured.

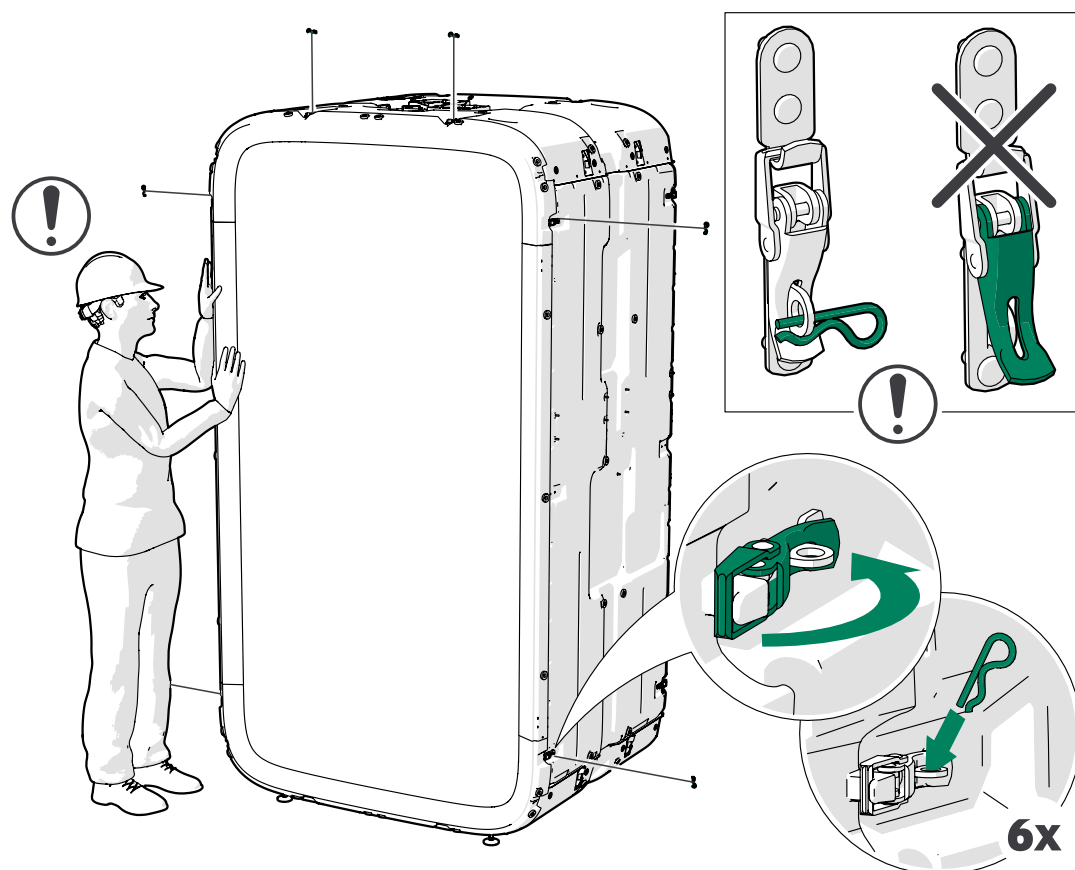


6. Position the front frame with door close to the front of the pod so that the hooks on the frame are directly above the slots in the floor.



**Note:** Make sure that the guide pin at the upper edge of the frame is in place.

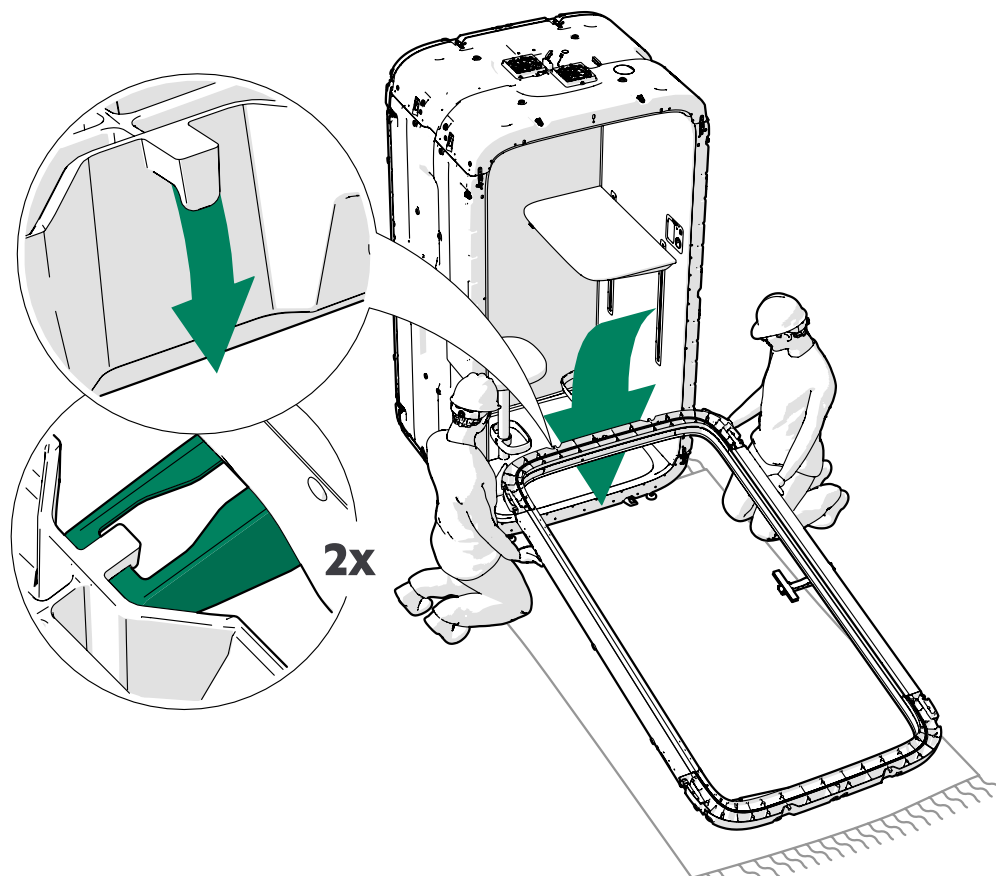


7. Lift the front frame with door into place.

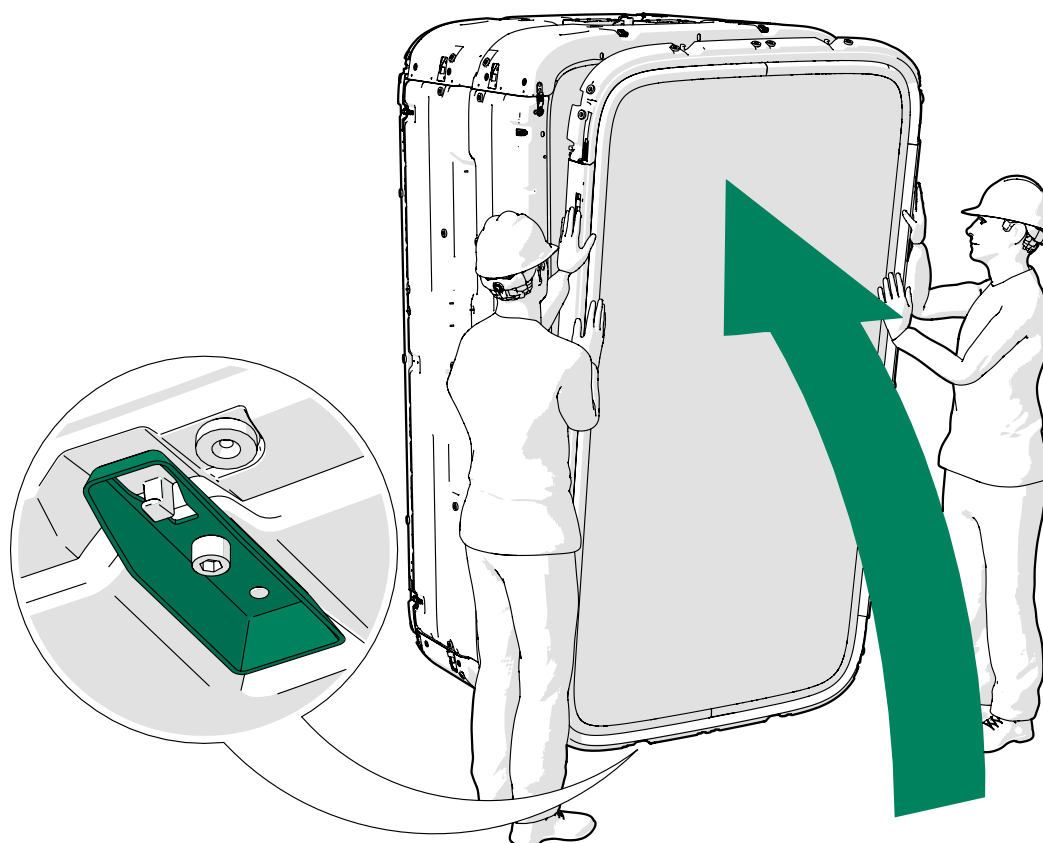




8. Close the latches (6 pcs) and insert the pins (6 pcs) around the front frame.

⚠ **Note:** Support the front frame with door until all latches are secured.

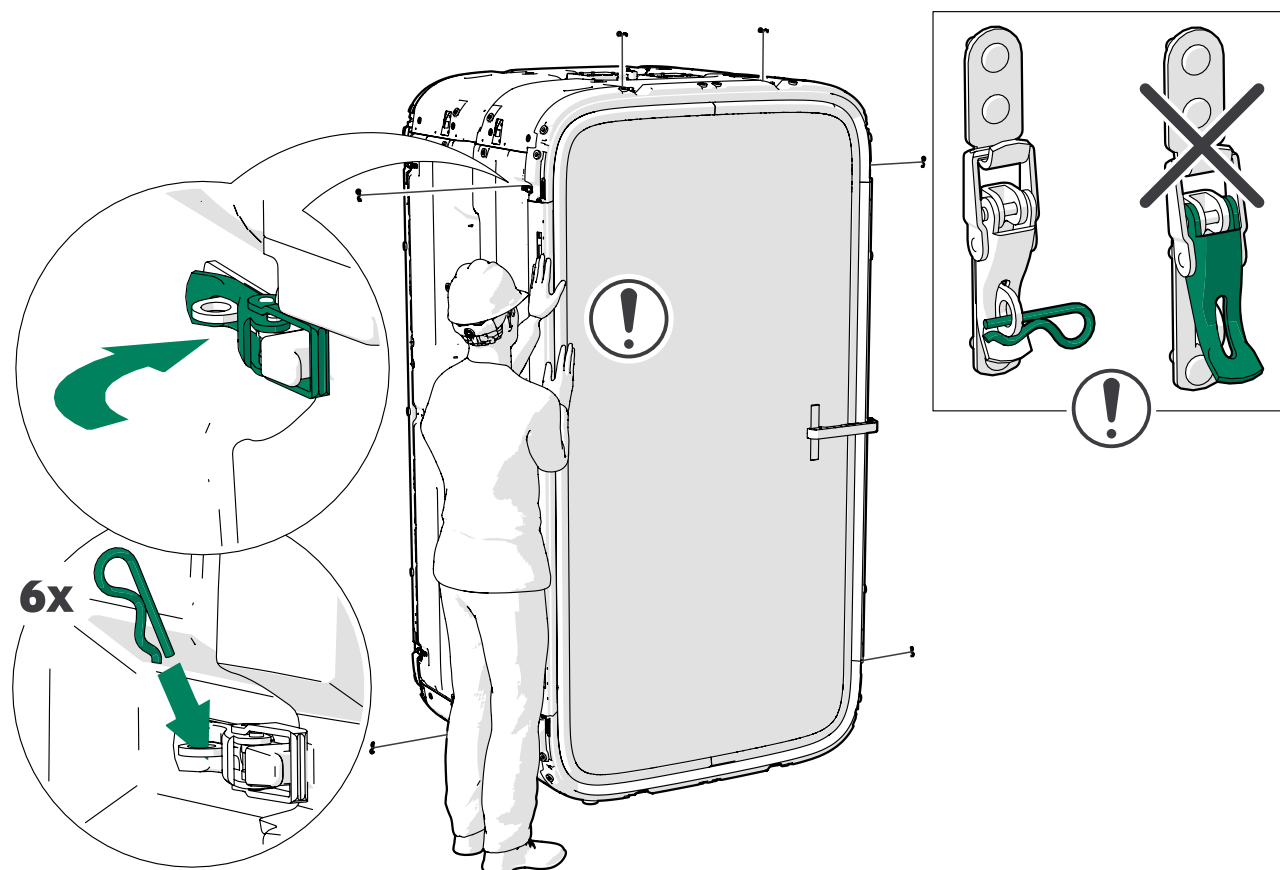


9. Remove the door brace and install the outside door handle.

⚠ **Note:** Make sure that the set screw is at the bottom.

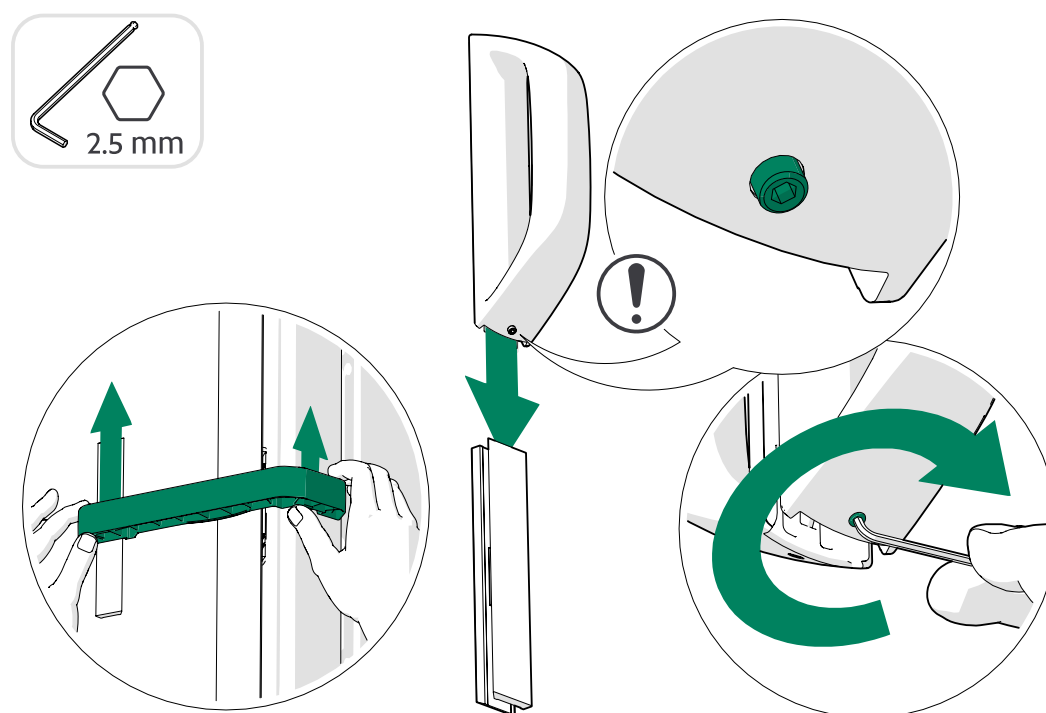

10. Install the occupancy indicator lights to the pod and connect the cords to the OCC connectors of the control hub.

Install the occupancy indicator lights to the same corners from which they were removed.

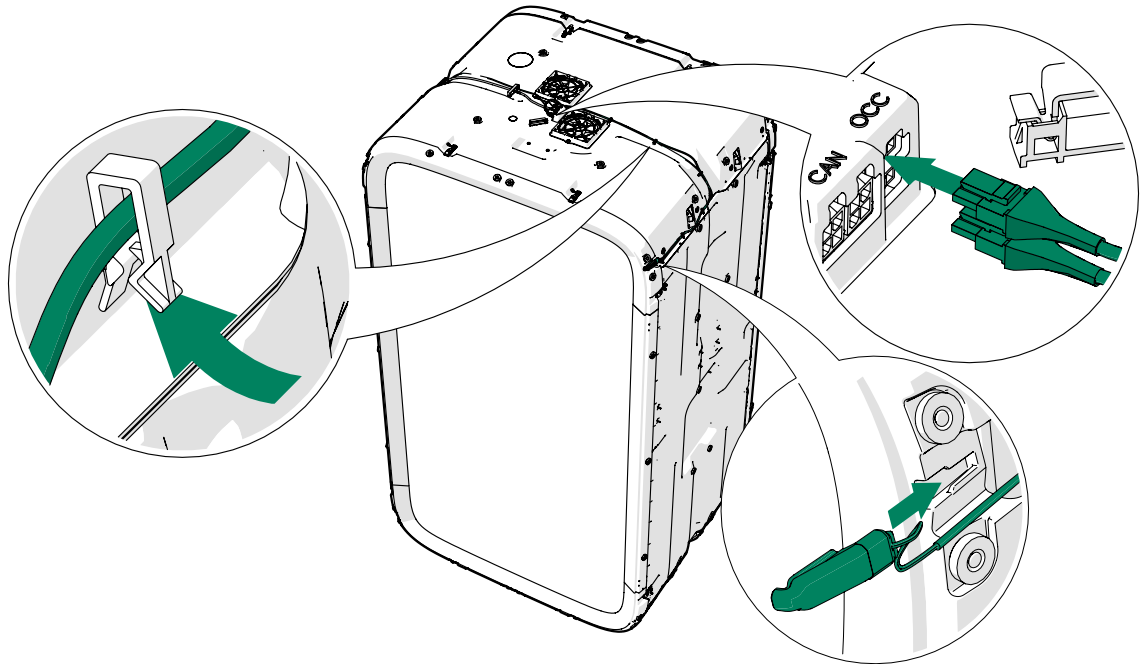

11. Install the body covers, plastic trims, and fan cover in the reverse order.
  12. Connect the power cord to the power outlet.
- If equipped with the optional LAN, also connect the LAN cord to the outlet.

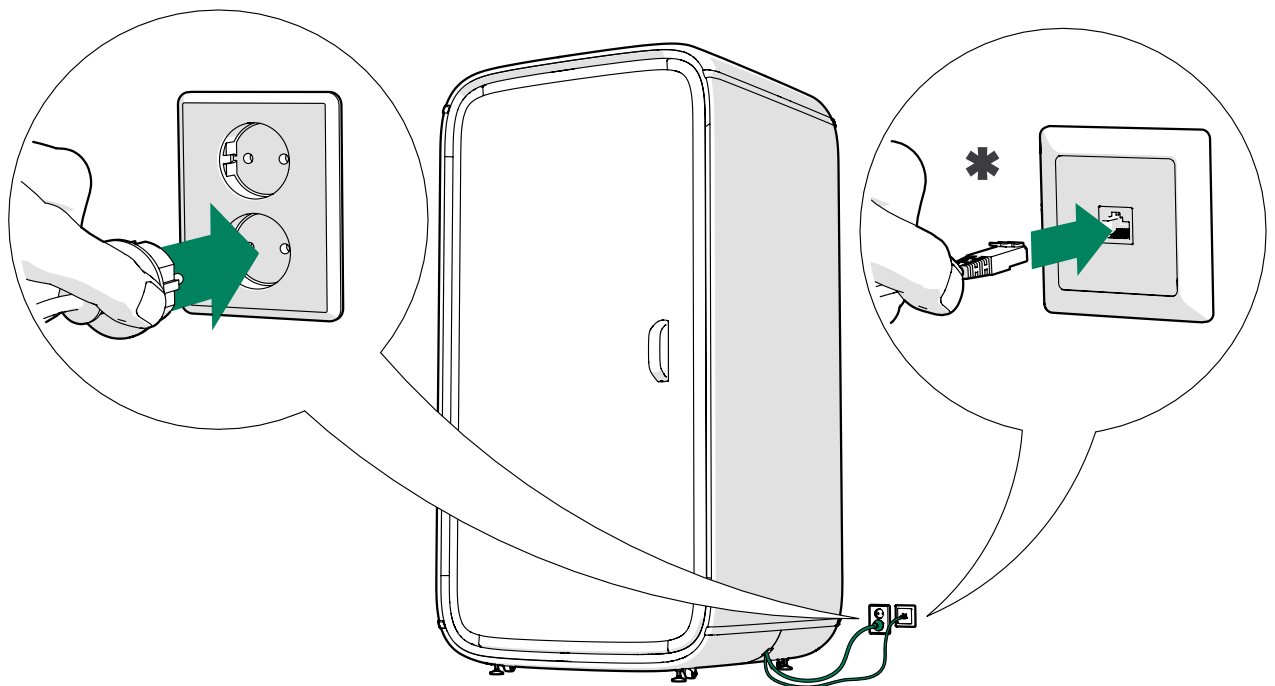


Figure 97: \* = optional LAN

## 7 Replace the furniture

### 7.1 Replace the table

- ⚠ **Note:** Set all removed parts aside carefully and neatly. All removed parts, excluding the one being replaced, will be needed for reassembly.

#### 7.1.1 Disassemble the necessary parts (table replacement)

1. Disconnect the power cord.

If equipped with the optional LAN, also disconnect the LAN cord from the outlet.

⚠ **DANGER:** Always disconnect the pod from the power outlet before you begin disassembly, maintenance, moving, or any other procedure.



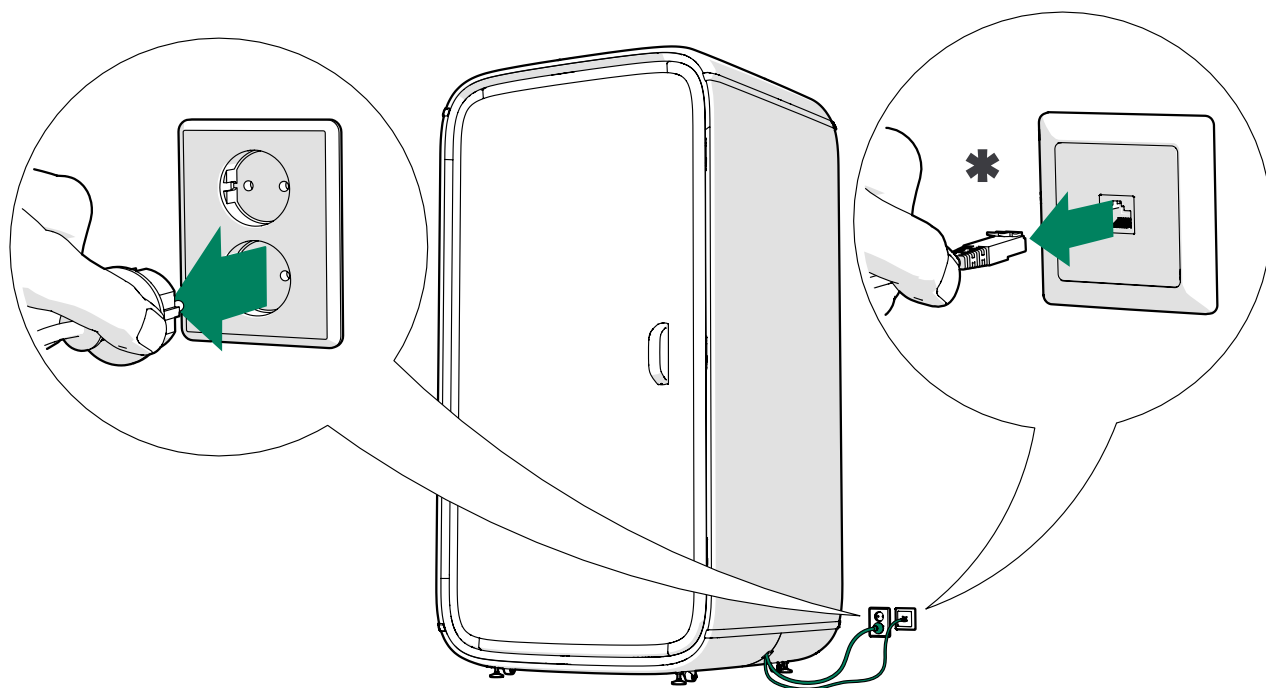


Figure 98: \* = optional LAN


2. Remove the bottom felt from the table.

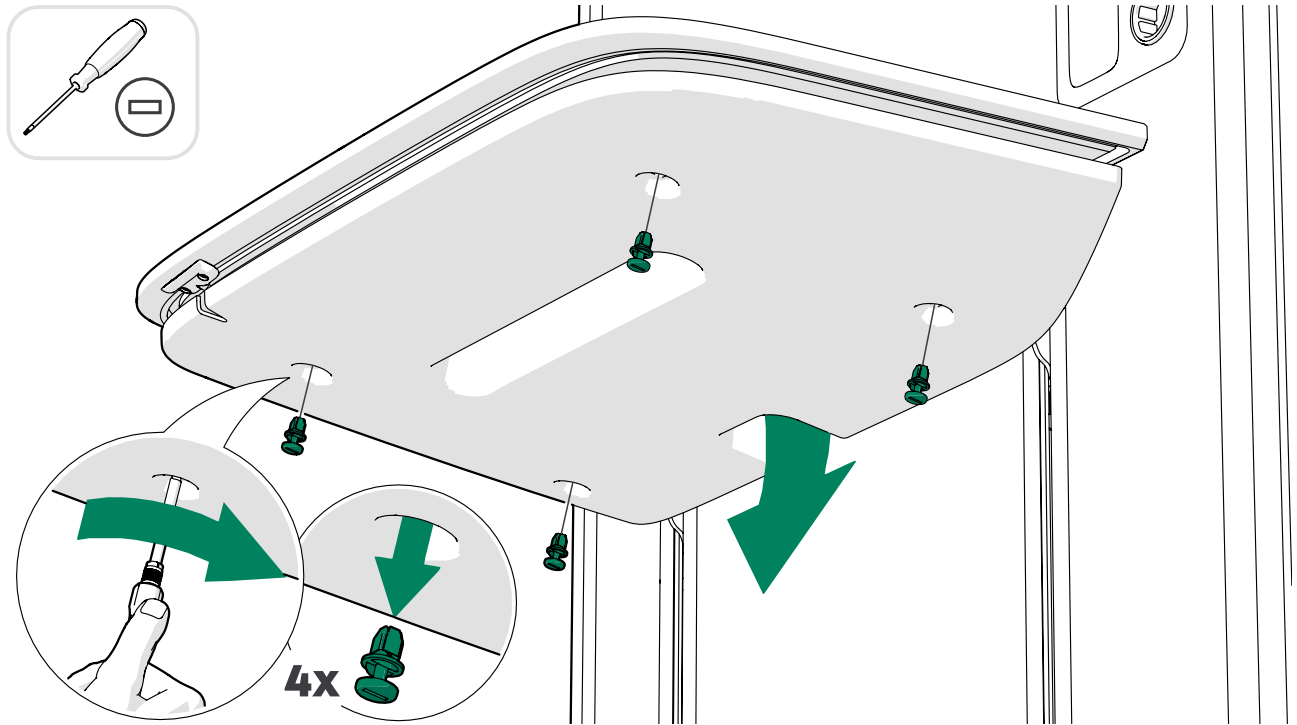

3. Disconnect the electrical connections in the table.

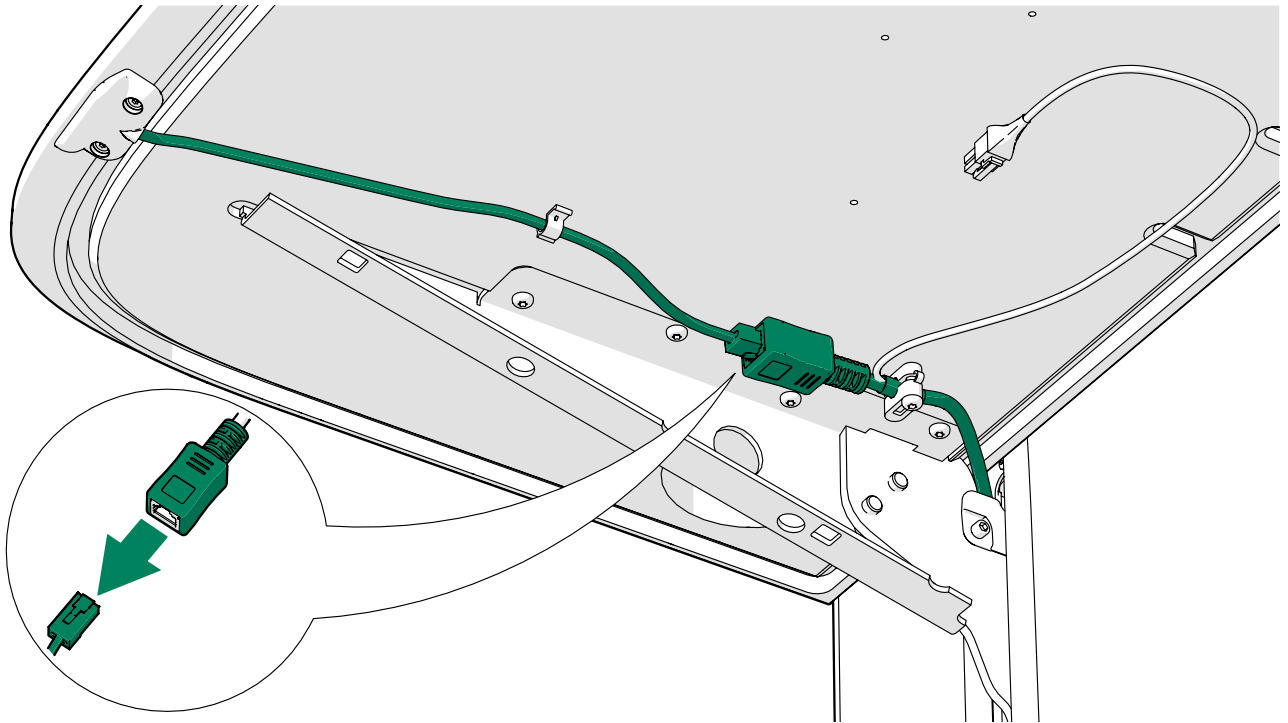

**Figure 99: Without the optional wireless charger**

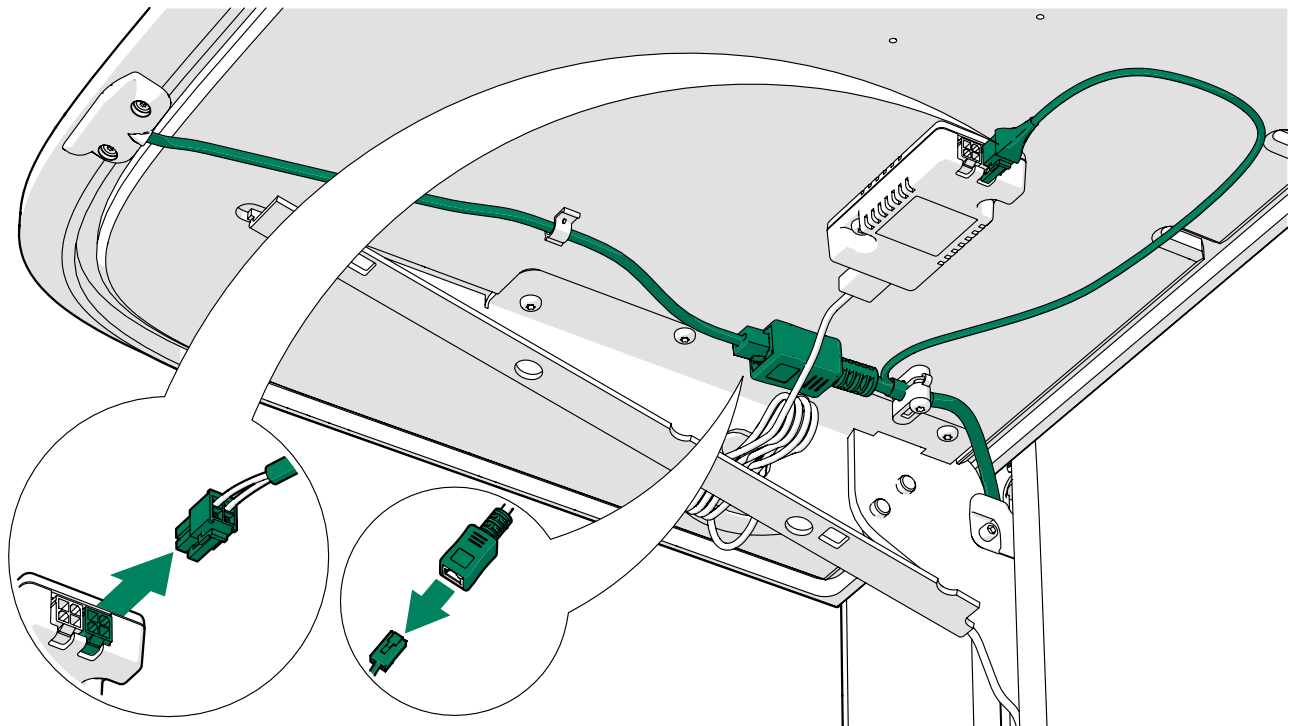

**Figure 100: With the optional wireless charger**

4. Remove the strain relief for the spiral cord.

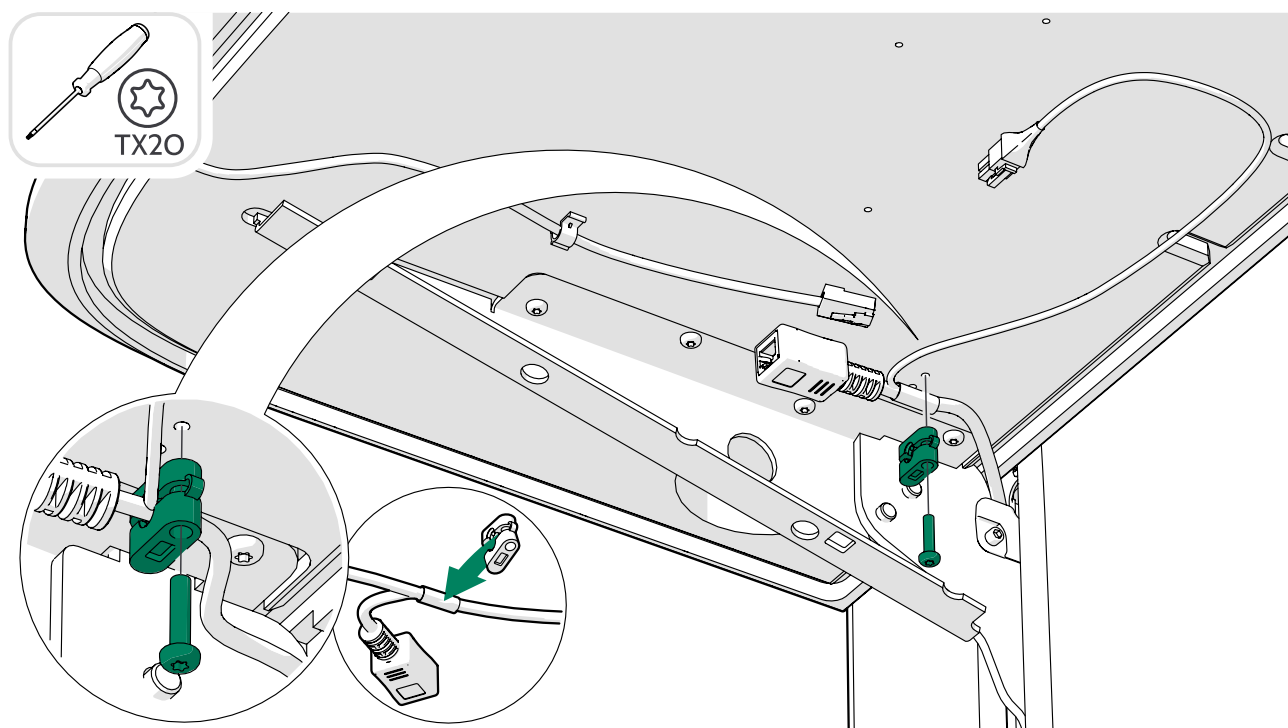


Figure 101: Without the optional wireless charger



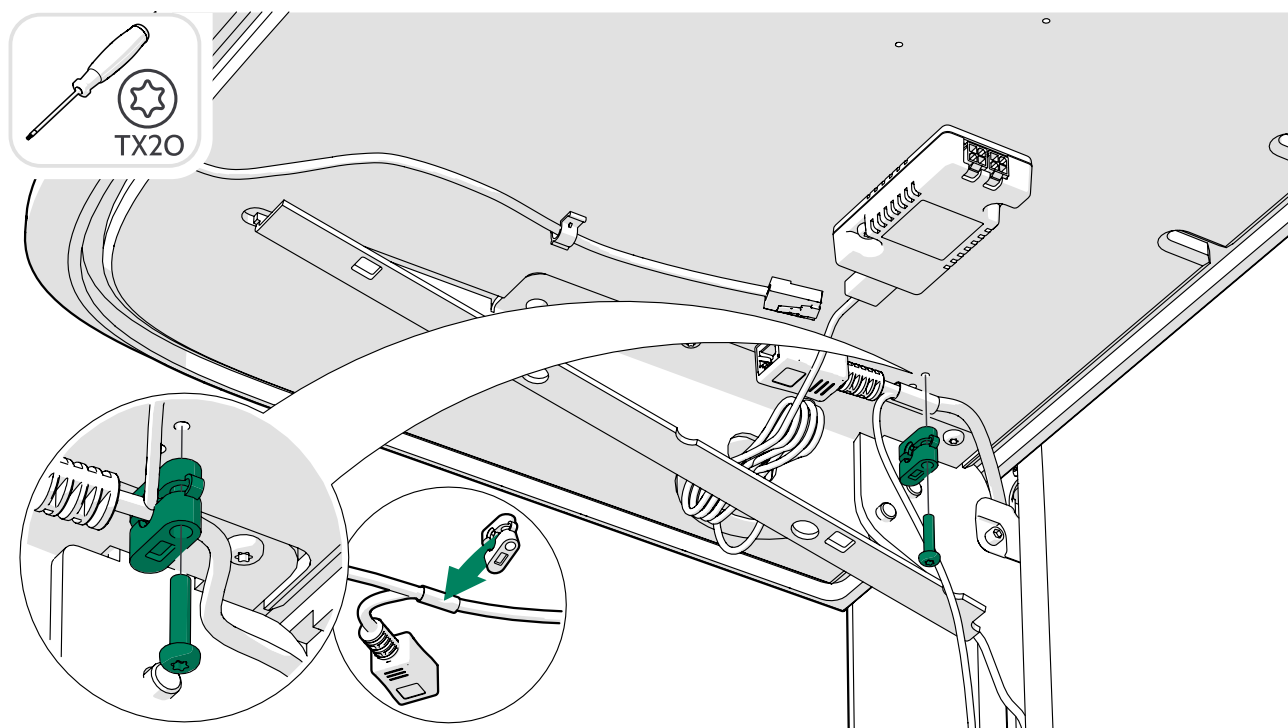


Figure 102: With the optional wireless charger

5. Remove the screws from under the table.

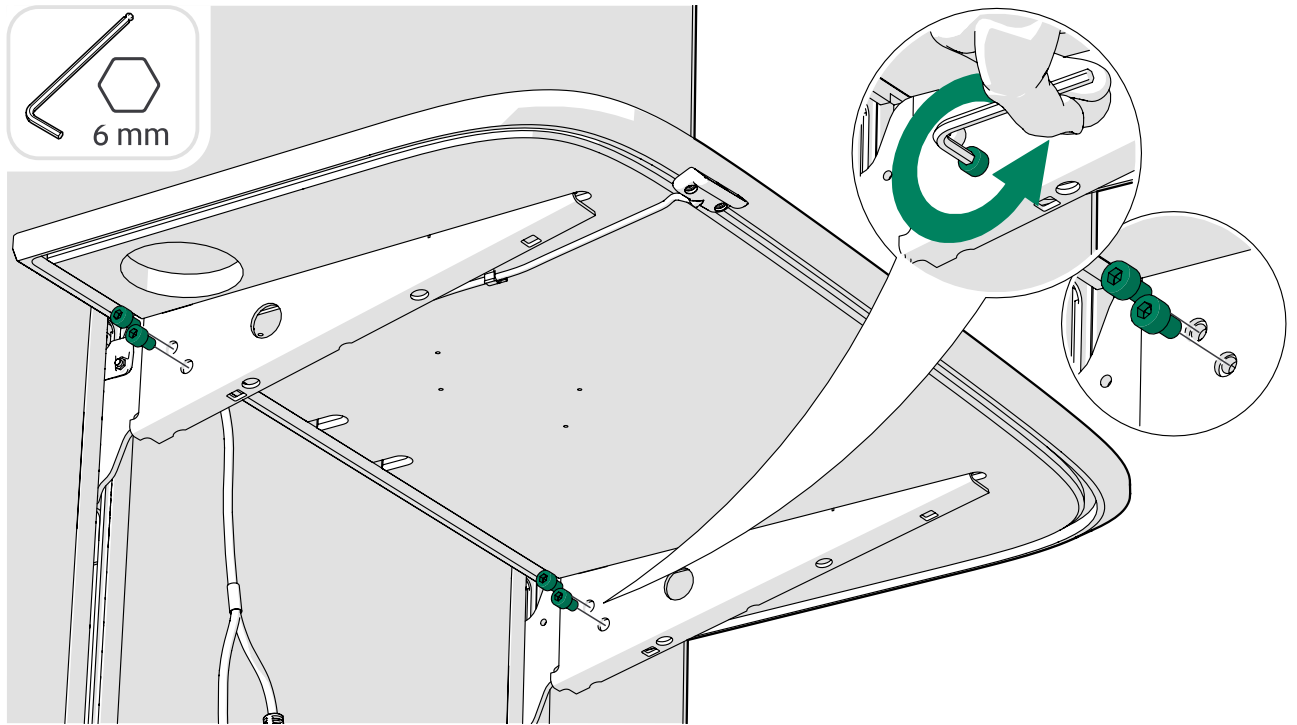


**Figure 103: Without the optional wireless charger**

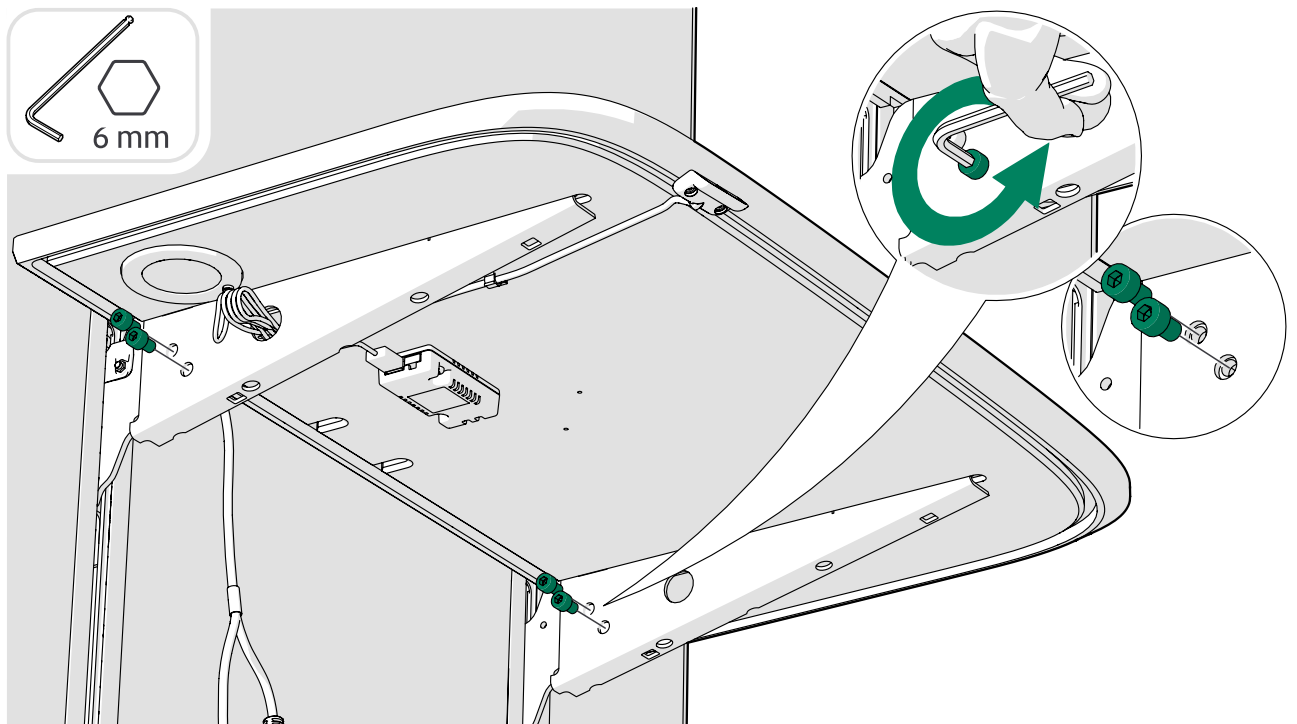


**Figure 104: With the optional wireless charger**

6. Remove the old table top from the bracket.

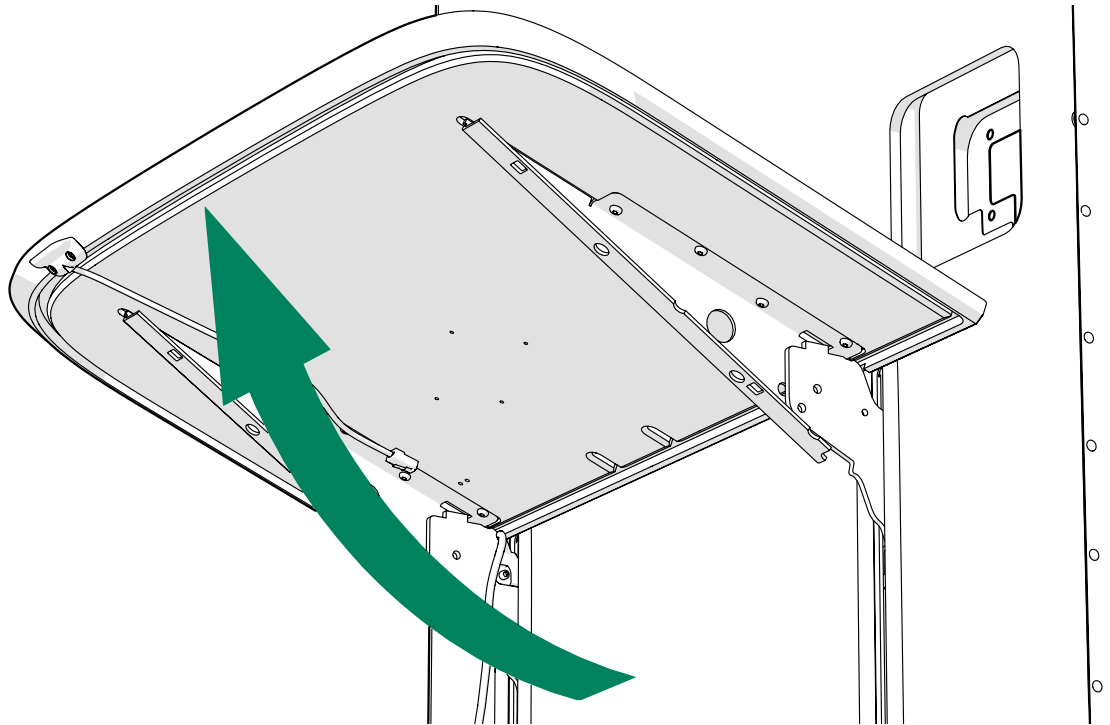

**Figure 105: Without the optional wireless charger**

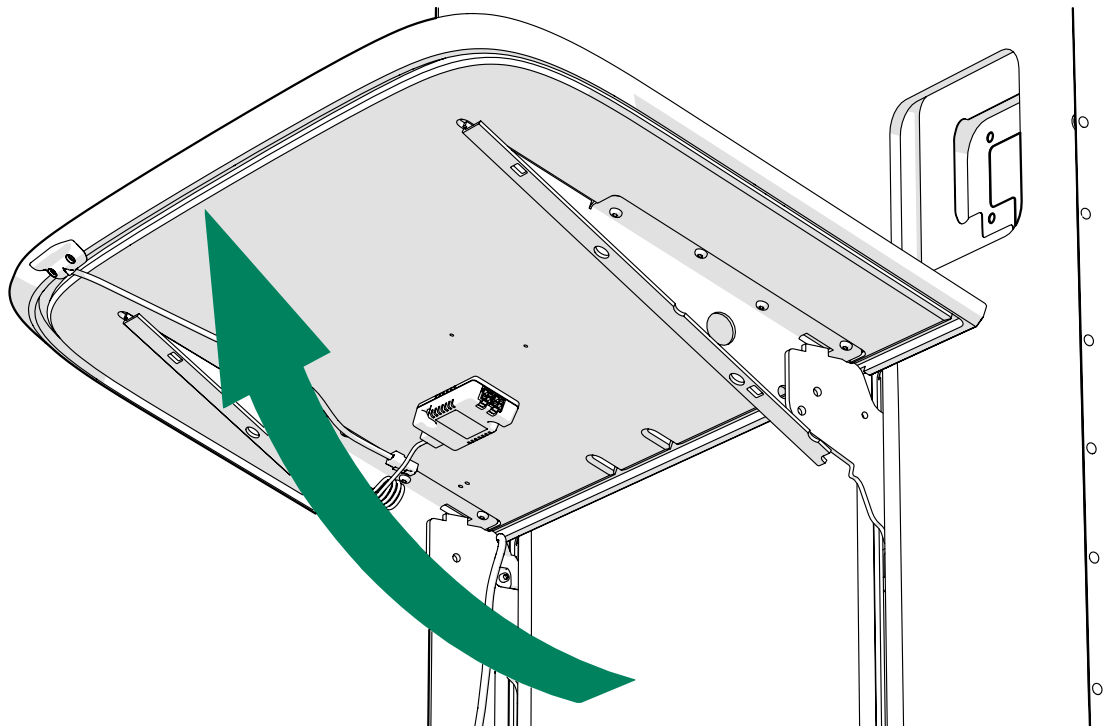


**Figure 106: With the optional wireless charger**




### 7.1.2 Install the removed parts (table replacement)

1. Place the new tabletop onto the table bracket.

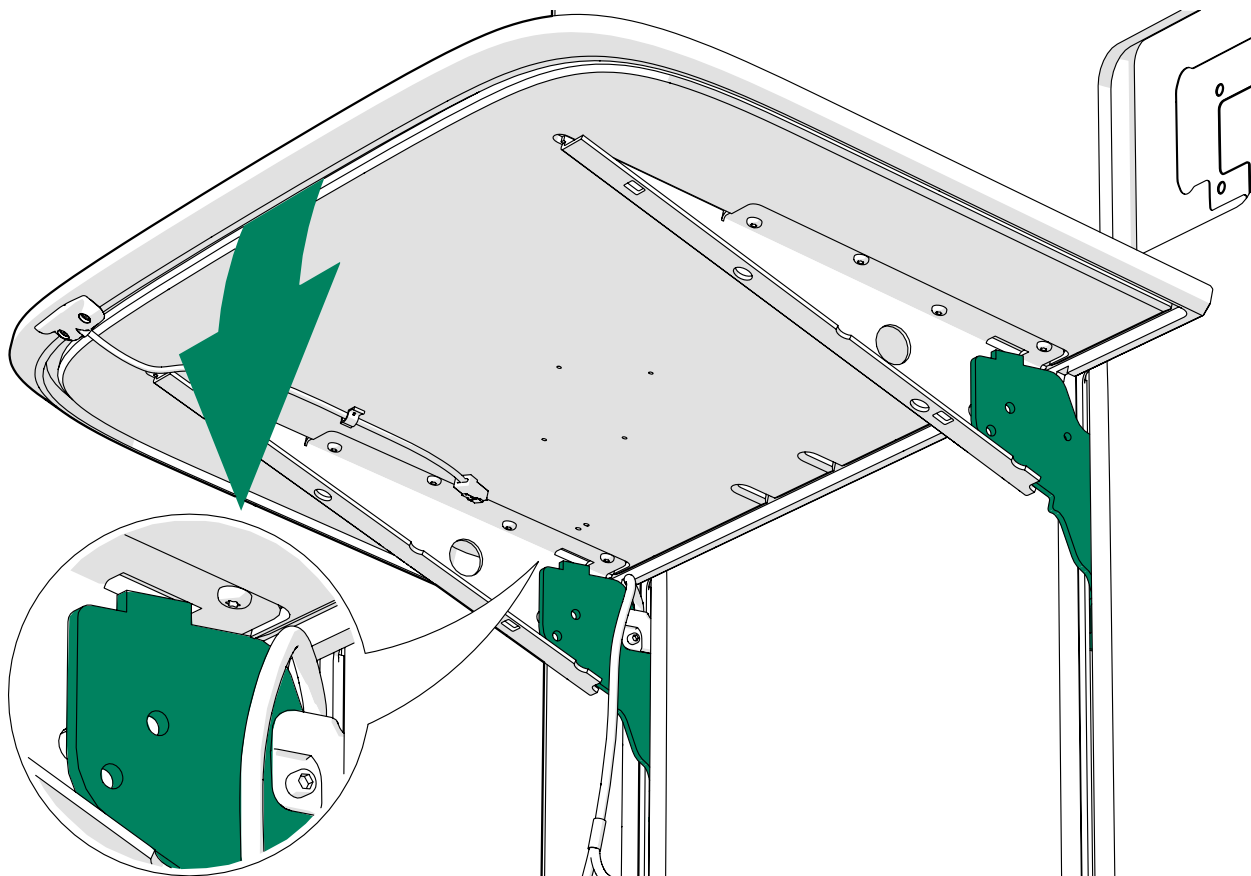

**Figure 107: Without the optional wireless charger**

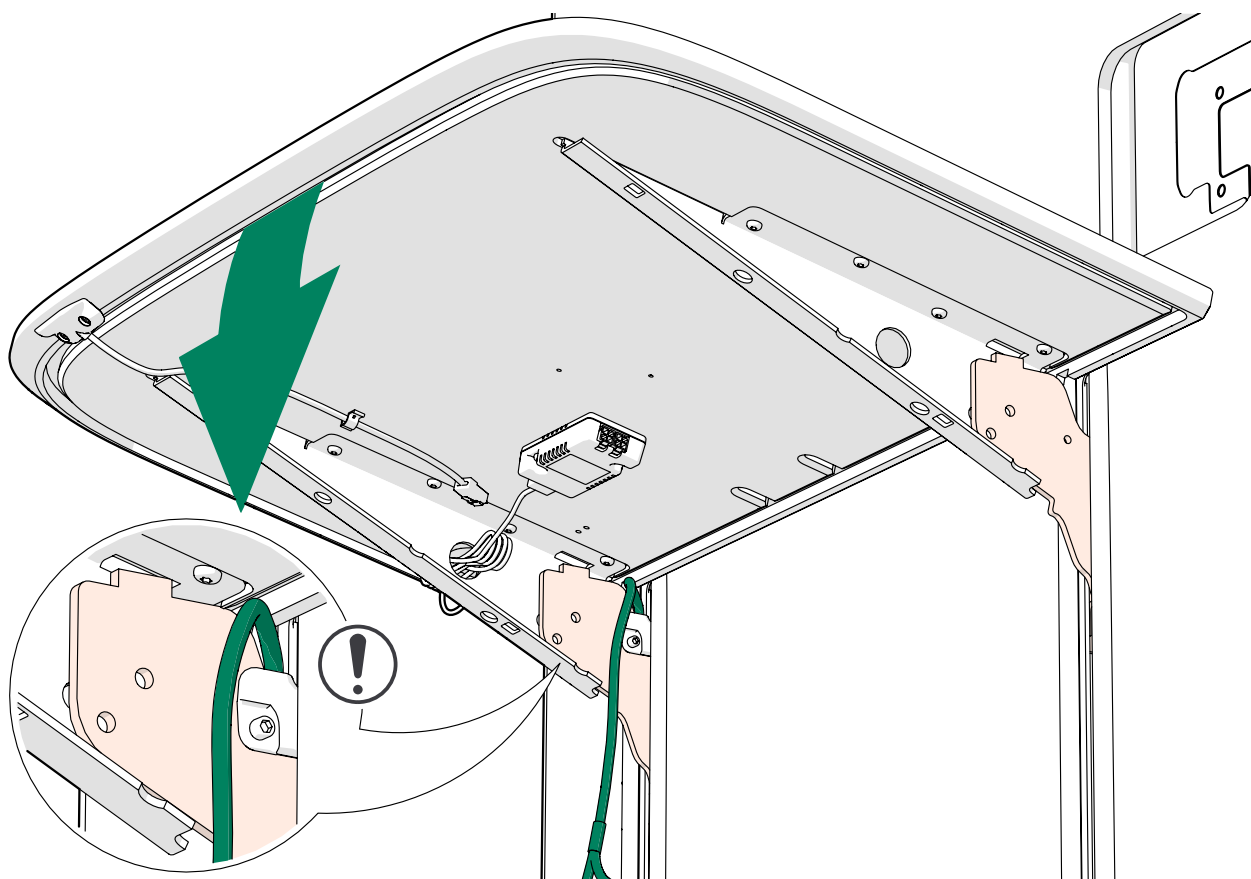

**Figure 108: With the optional wireless charger**

2. Install the tabletop to the table bracket with screws.

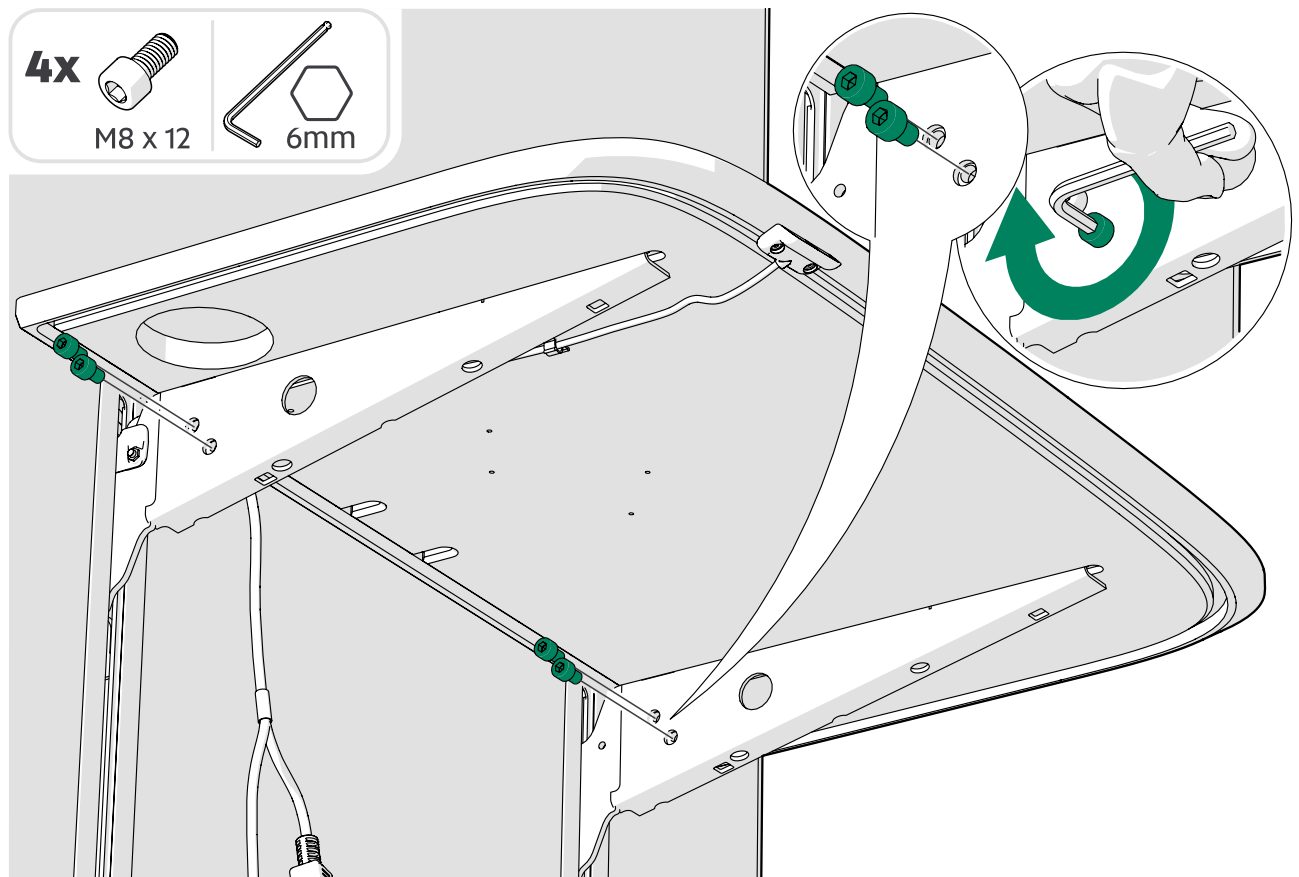


Figure 109: Without the optional wireless charger



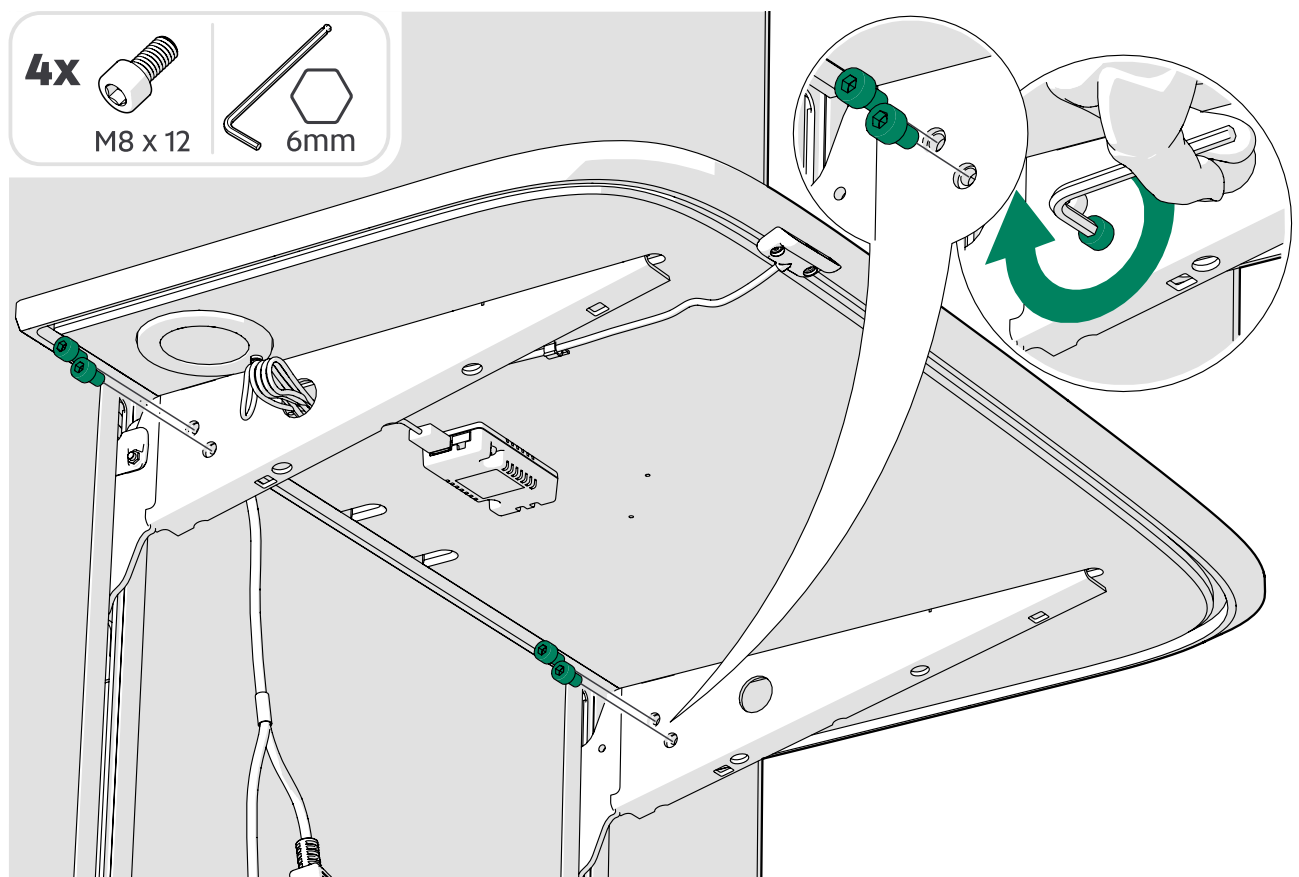


Figure 110: With the optional wireless charger

3. Connect the spiral cord to the electrical equipment in the table.

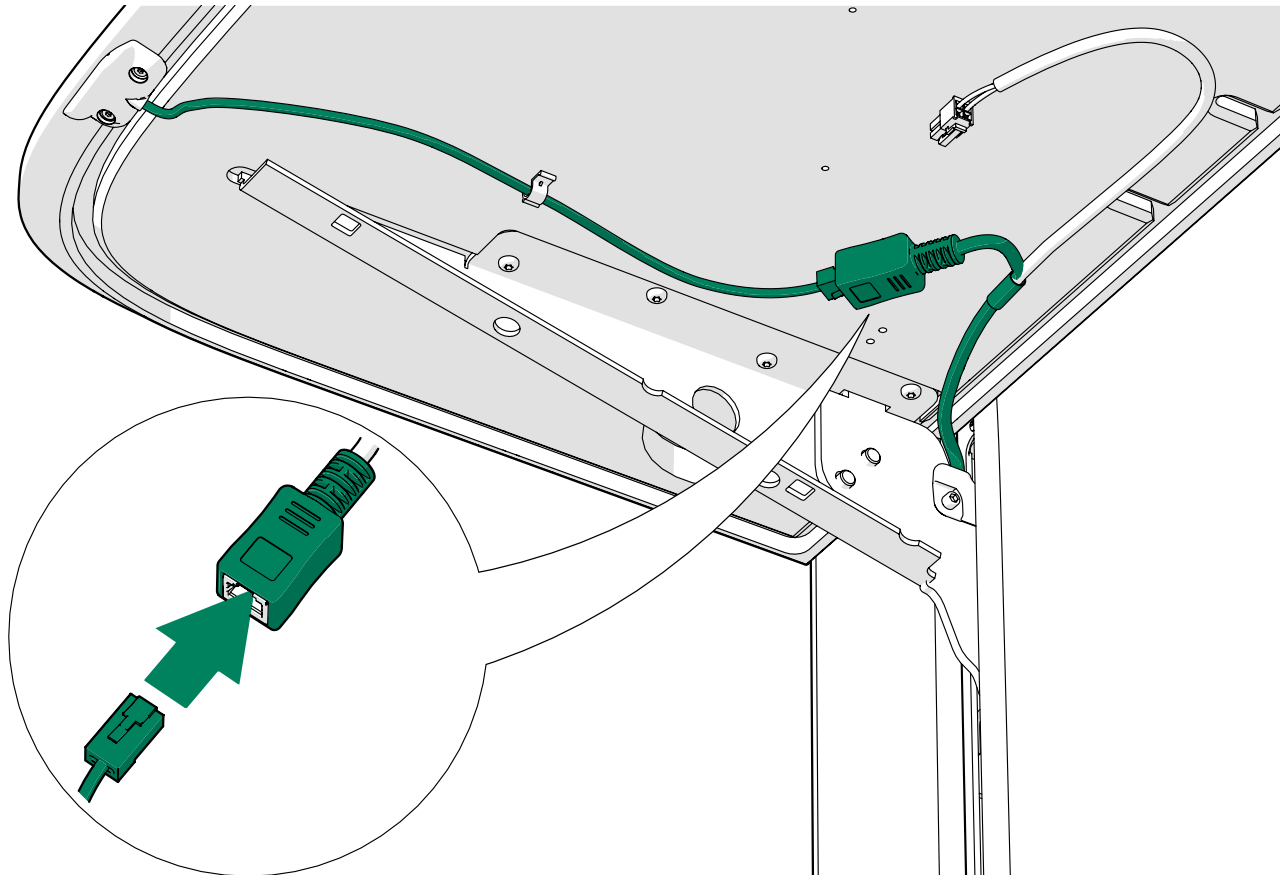

**Figure 111: Without the optional wireless charger**

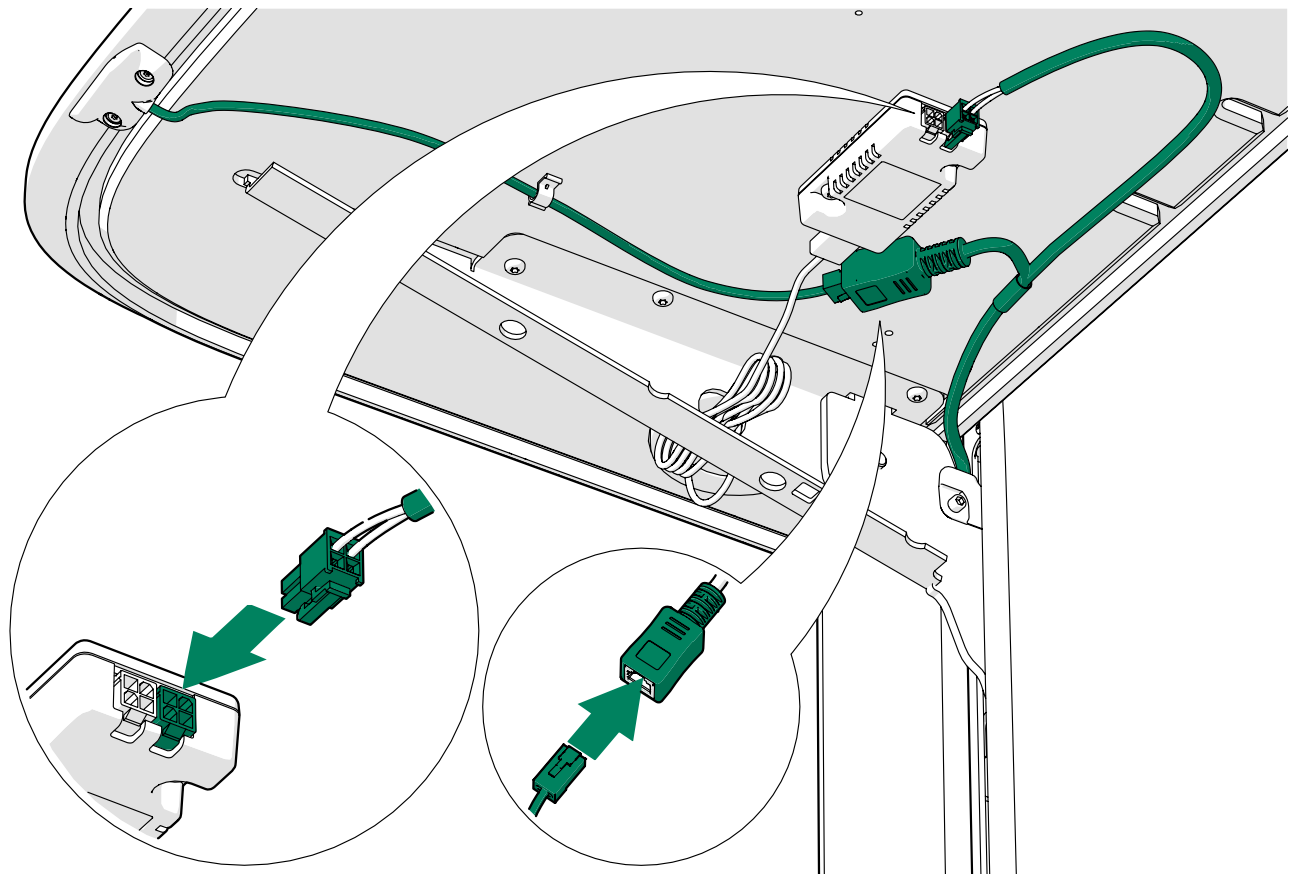

**Figure 112: With the optional wireless charger**

4. Install the strain relief for the spiral cord.

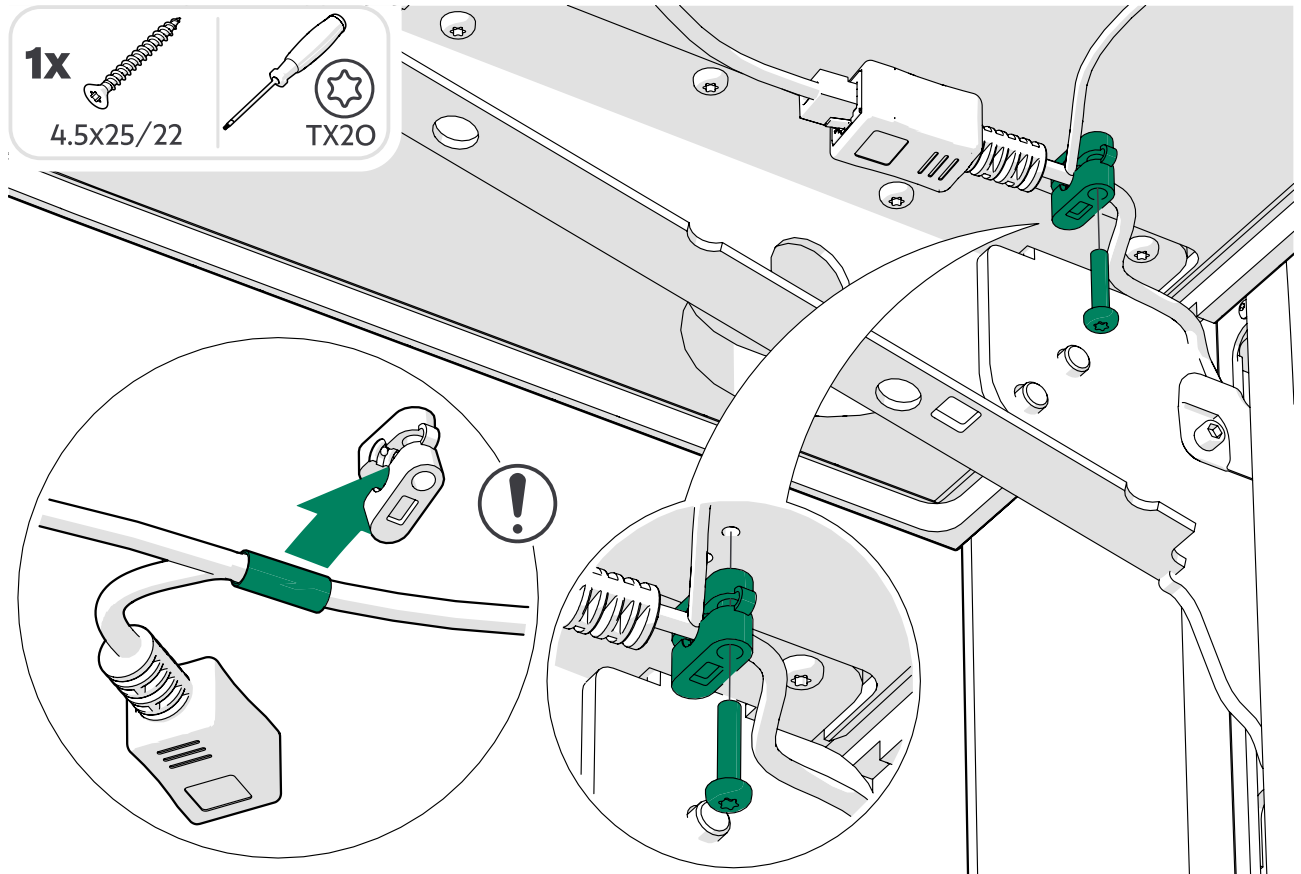


Figure 113: Without the optional wireless charger


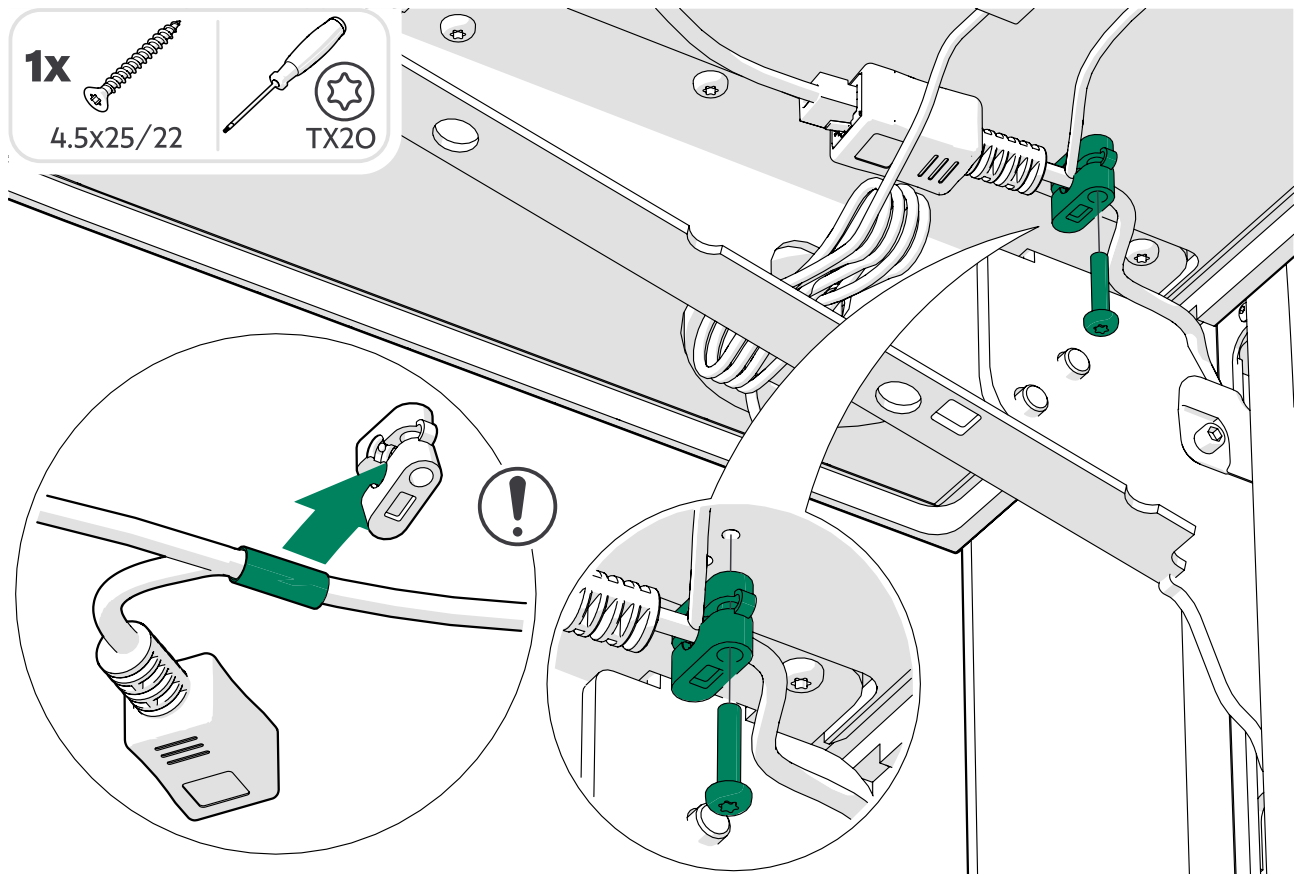


Figure 114: With the optional wireless charger

5. Install the table bottom felt.

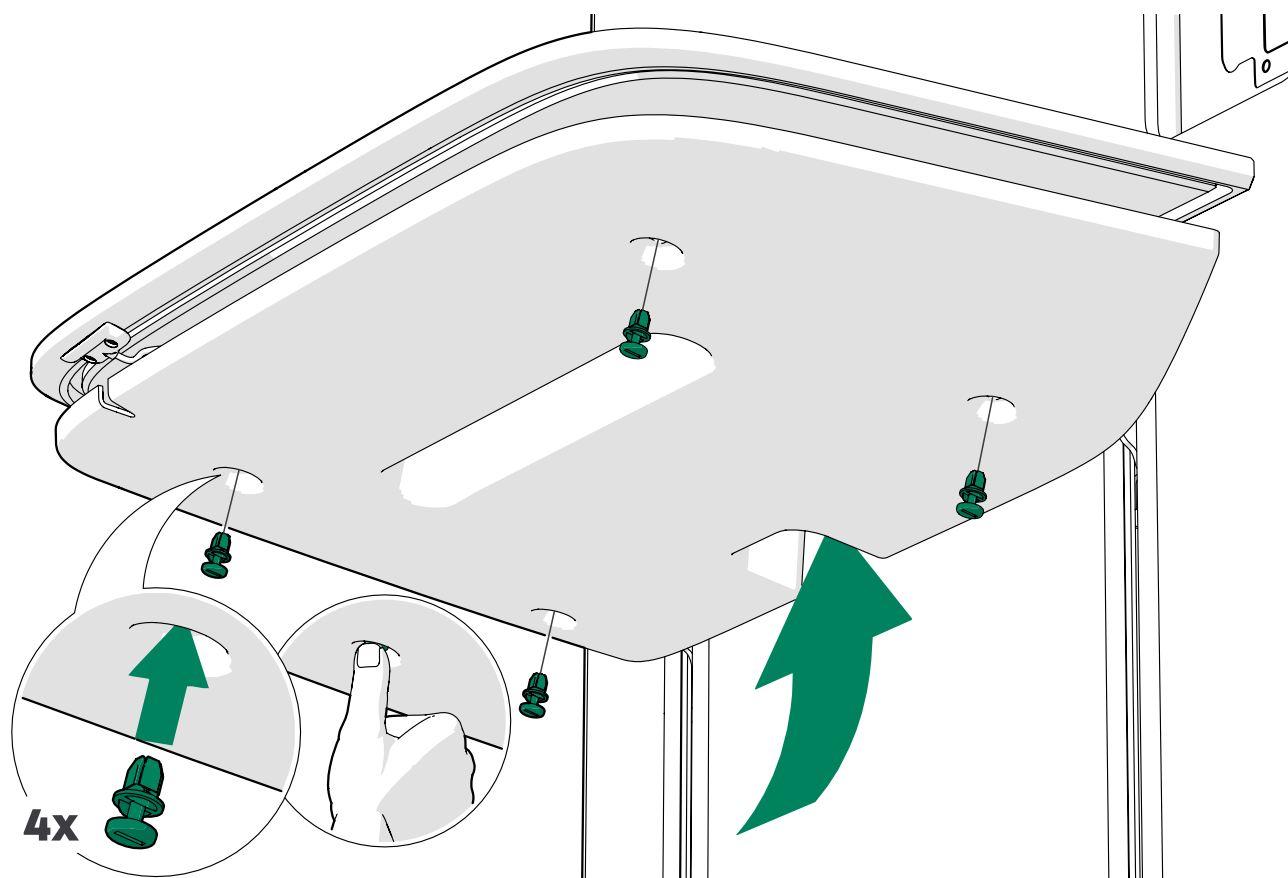

6. Connect the power cord to the power outlet.  
If equipped with the optional LAN, also connect the LAN cord to the outlet.


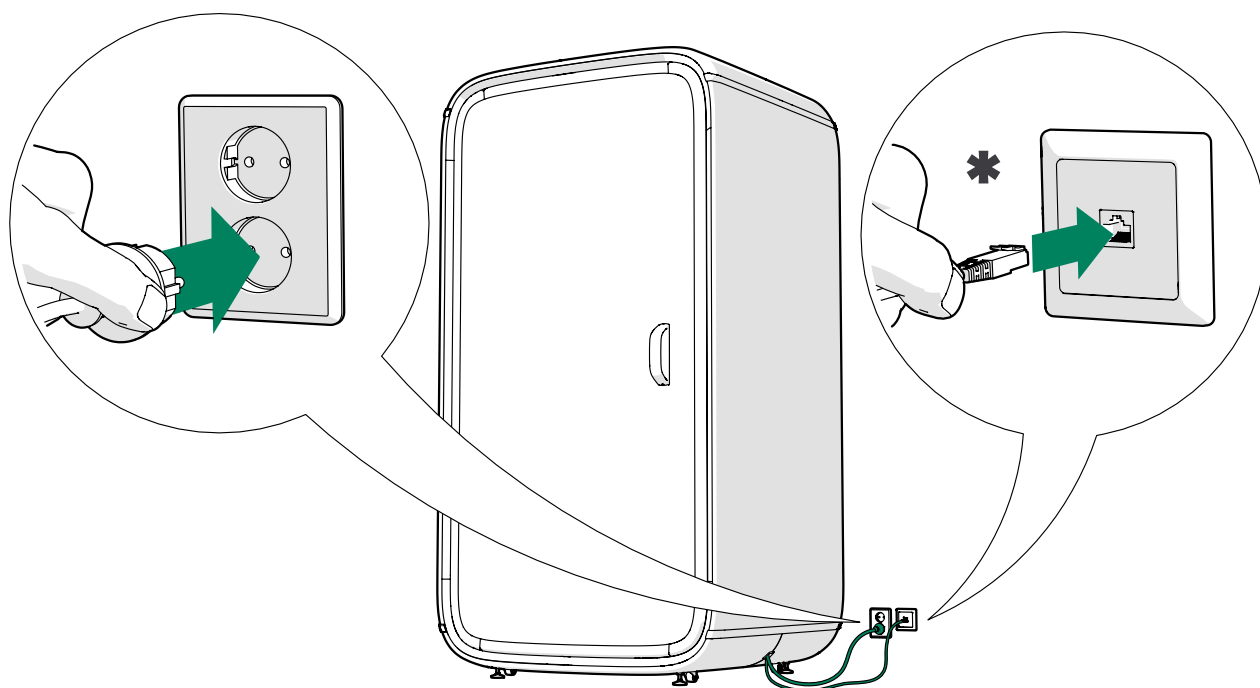



Figure 115: \* = optional LAN

## 7.2 Replace the chair and footrest


1. Remove the carpet.

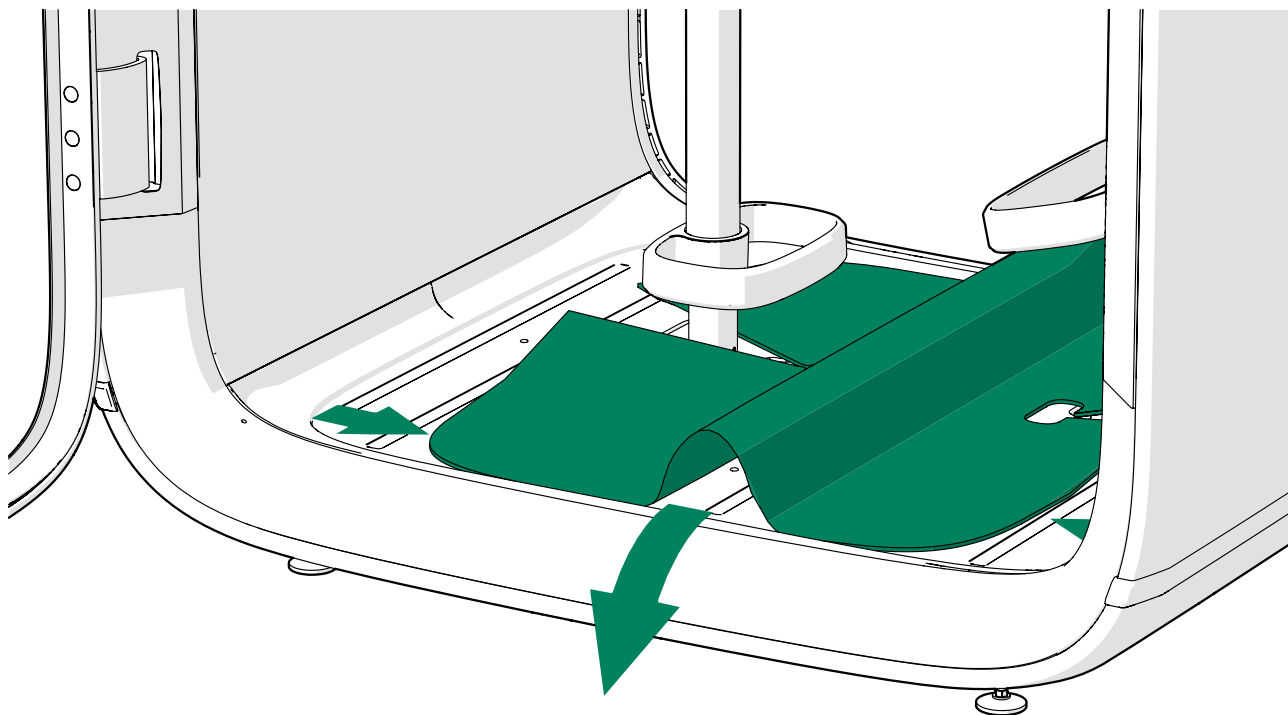


2. Remove the old chair.

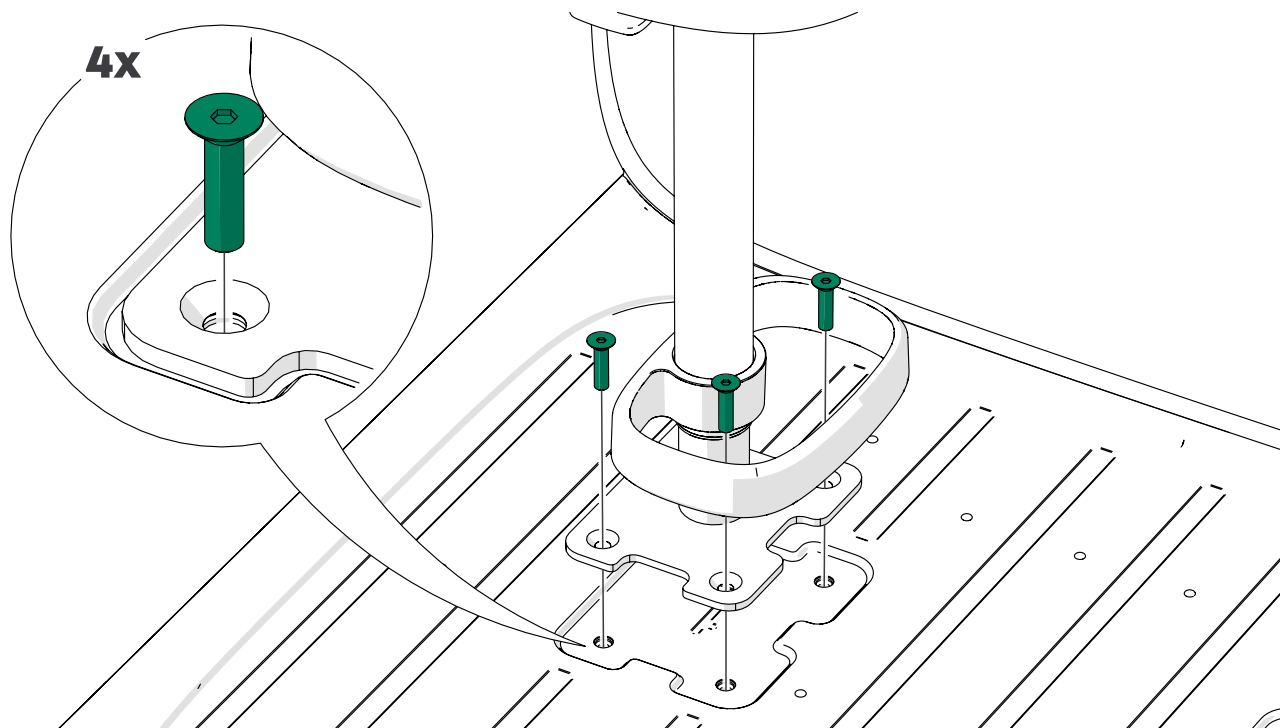

3. Remove the old footrest.

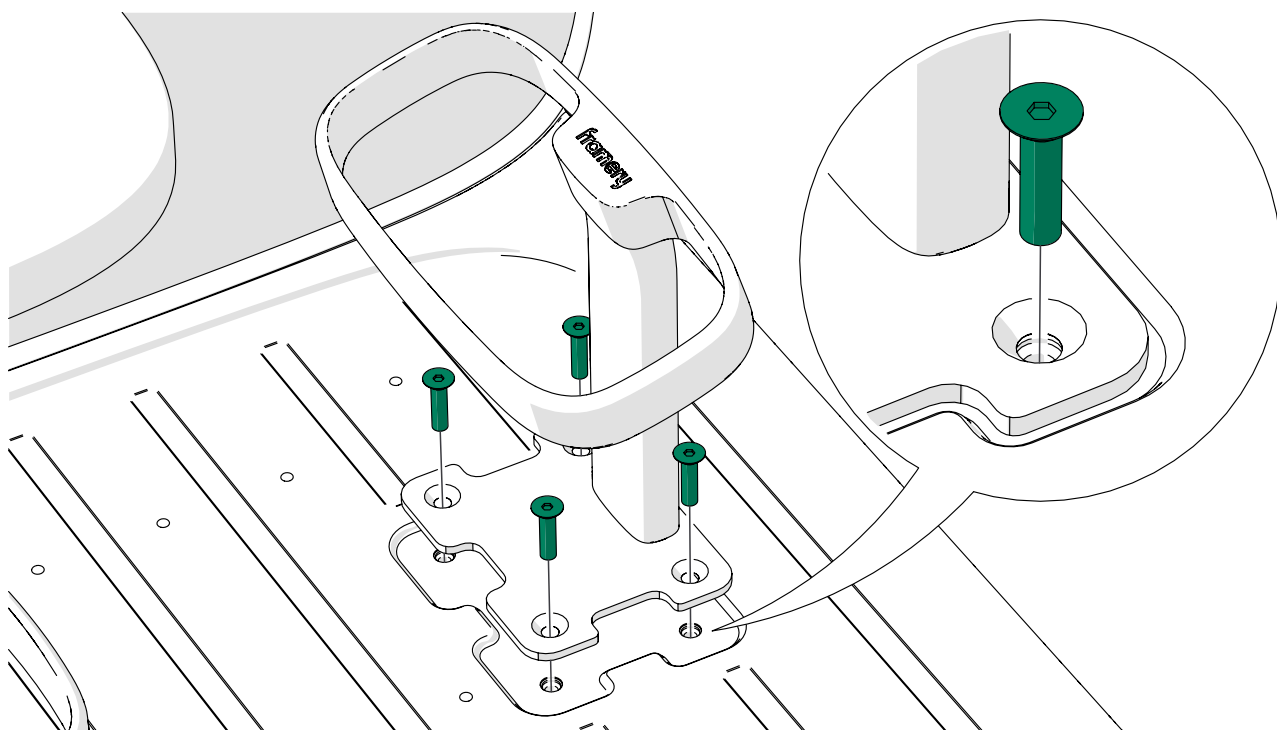

4. Assemble the new chair.

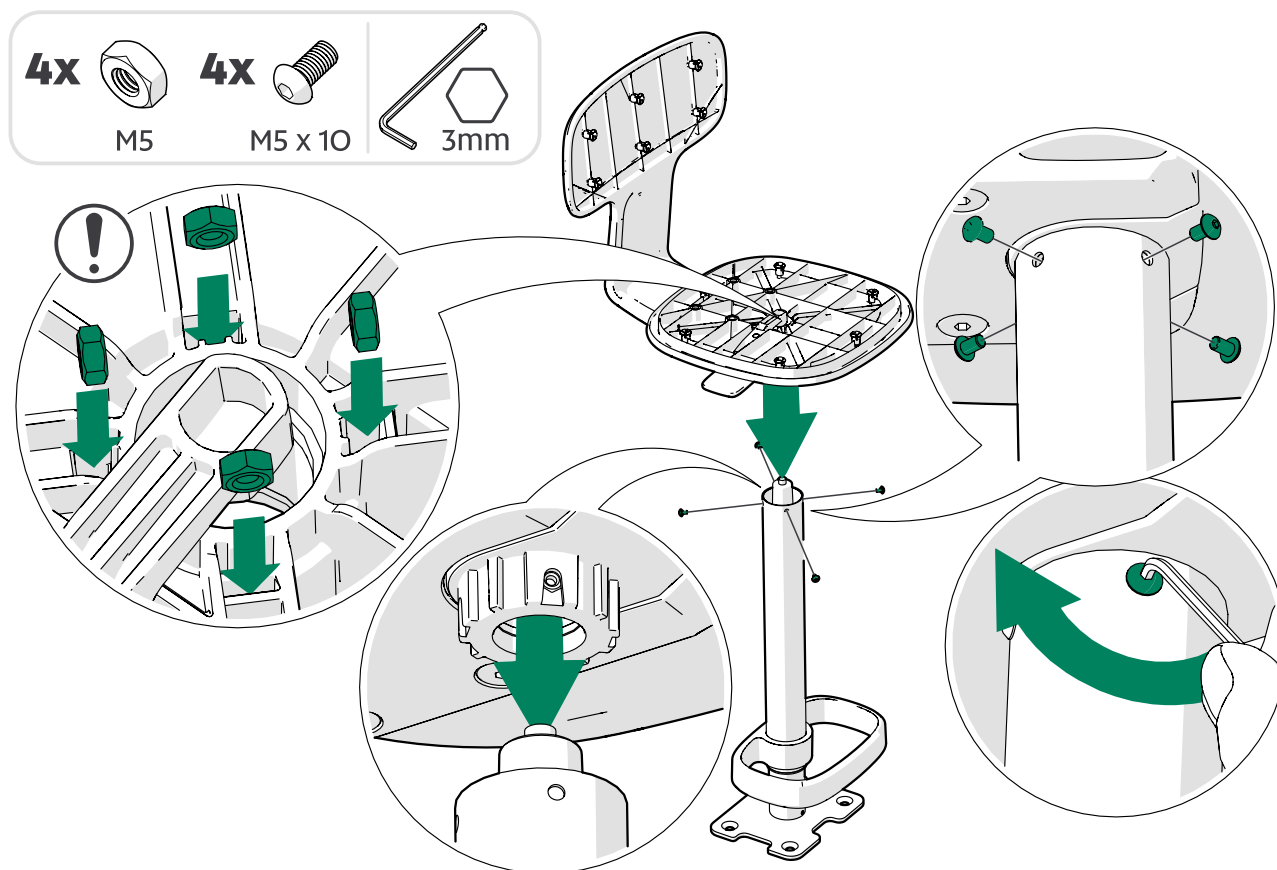




## 5. Install the seat cushion.



**Note:** Make sure that you install the seat cushion the right way round and snap each of the six connectors into place.

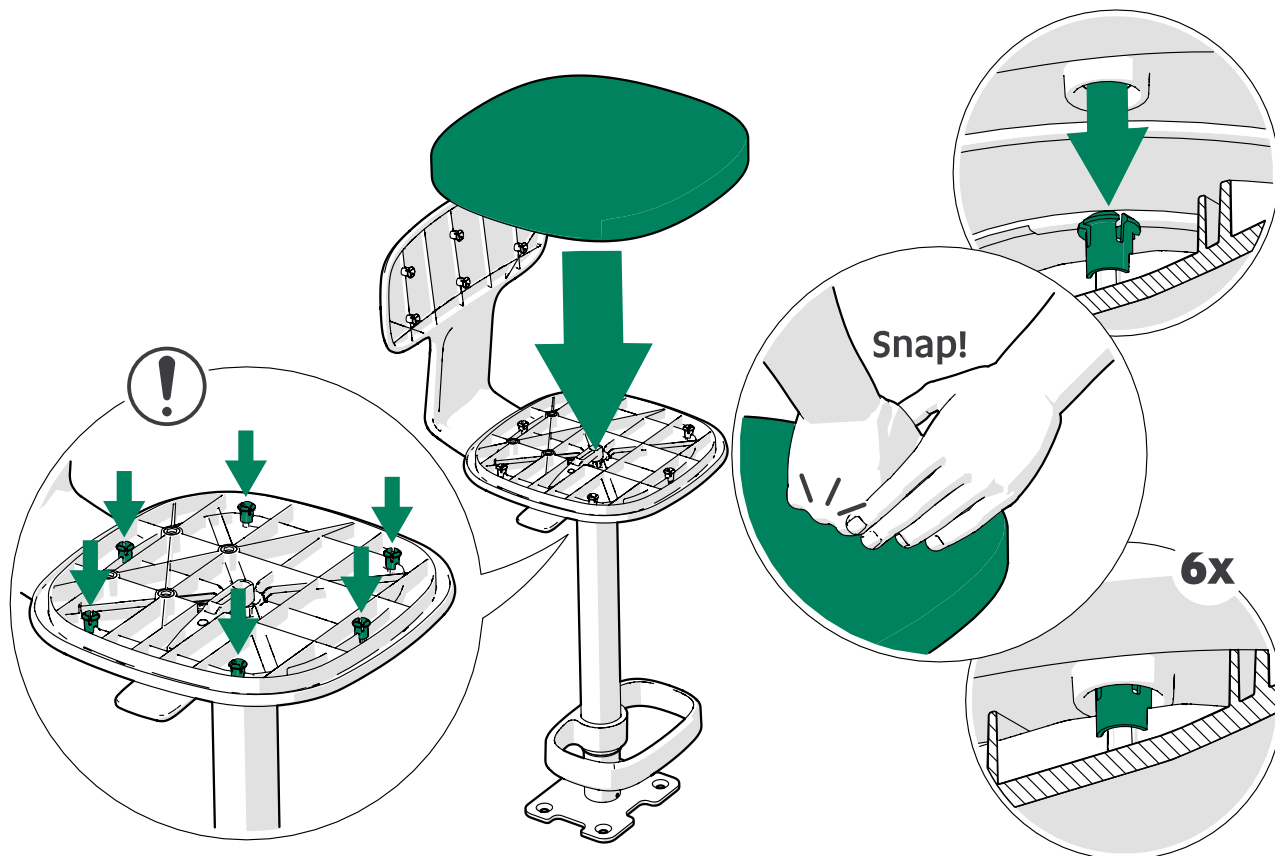




6. Install the backrest cushion.




**Note:** Make sure that you install the backrest cushion the right way round and snap each of the six connectors into place.

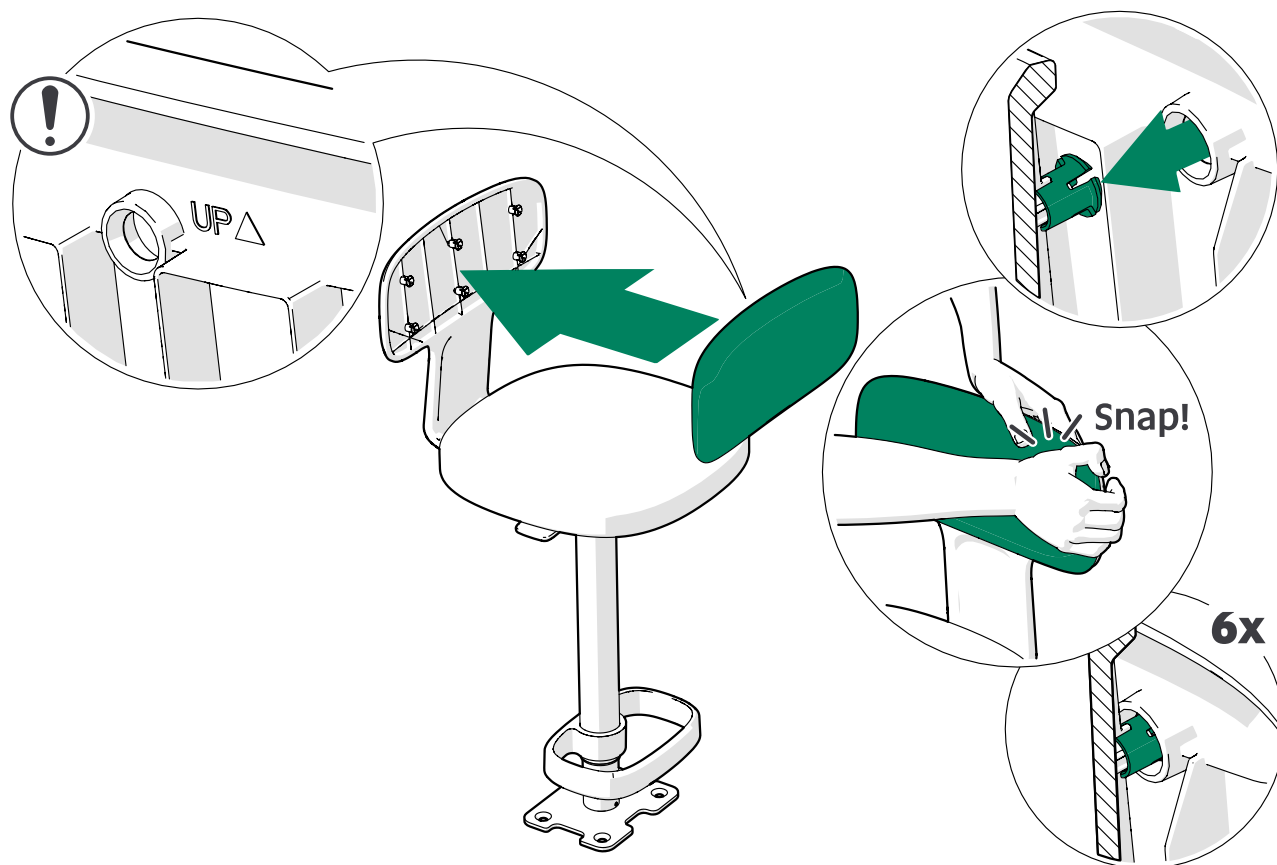


## 7. Install the chair to the floor.


⚠ **Note:** Make sure that you install the chair to the correct side of the floor.

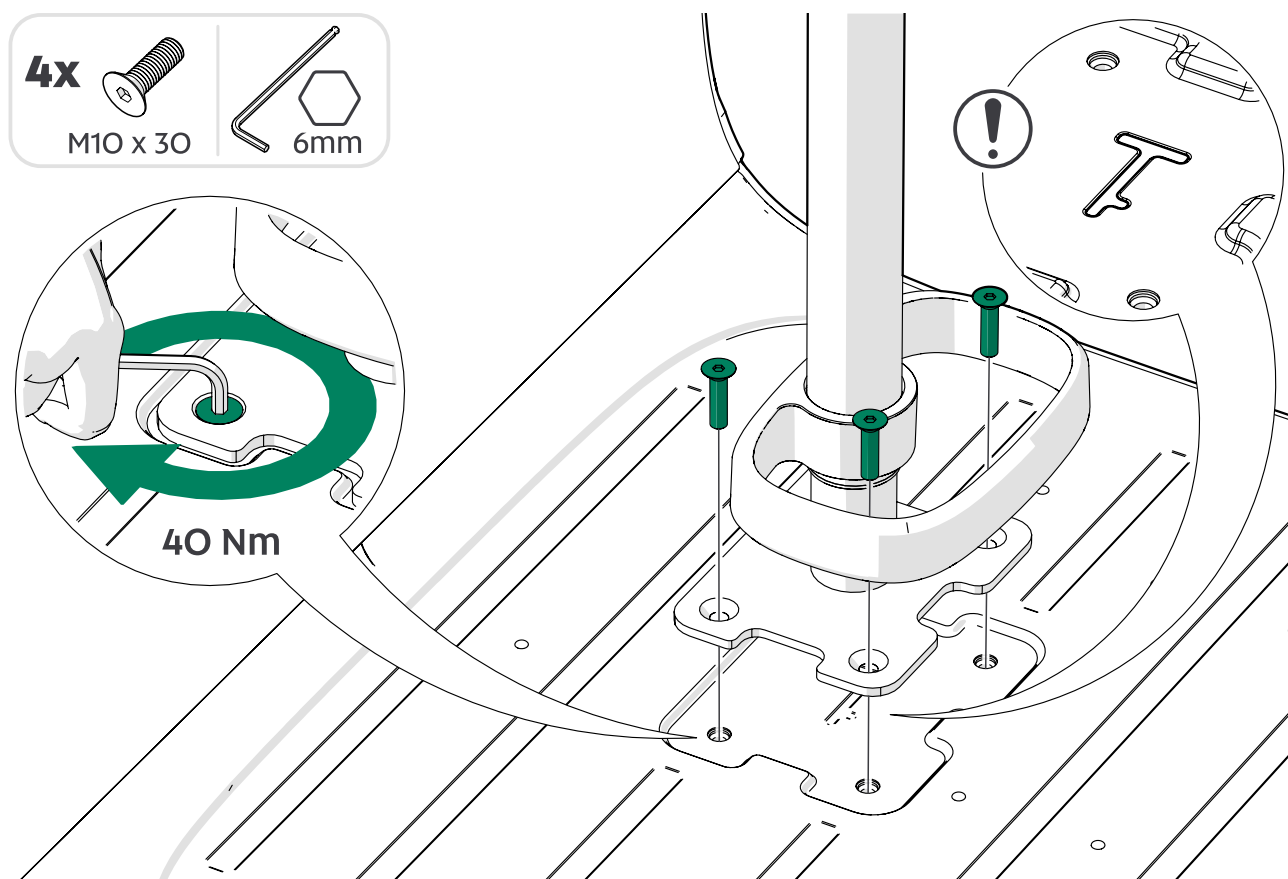


## 8. Assemble the new footrest.

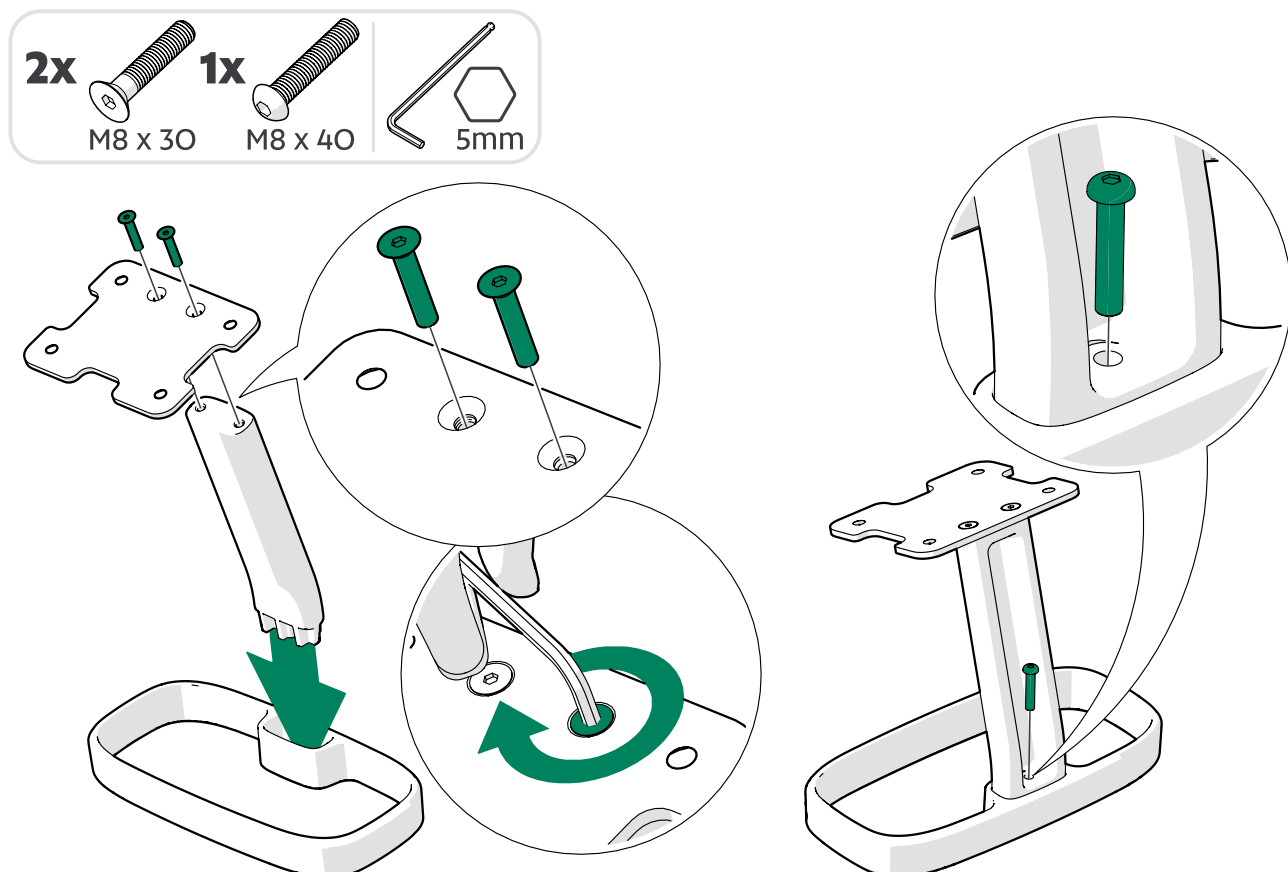

9. Install the footrest to the floor.

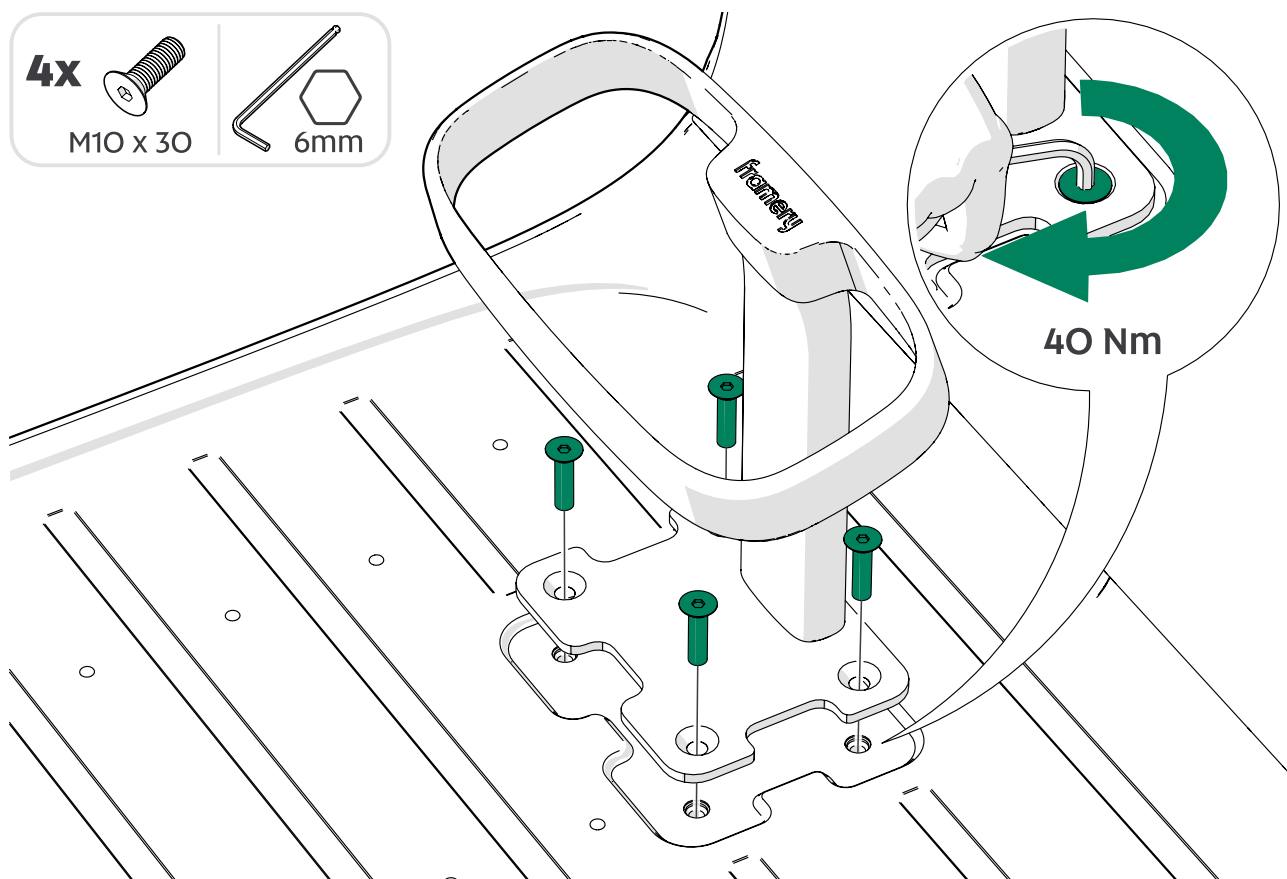

10. Install the carpet.

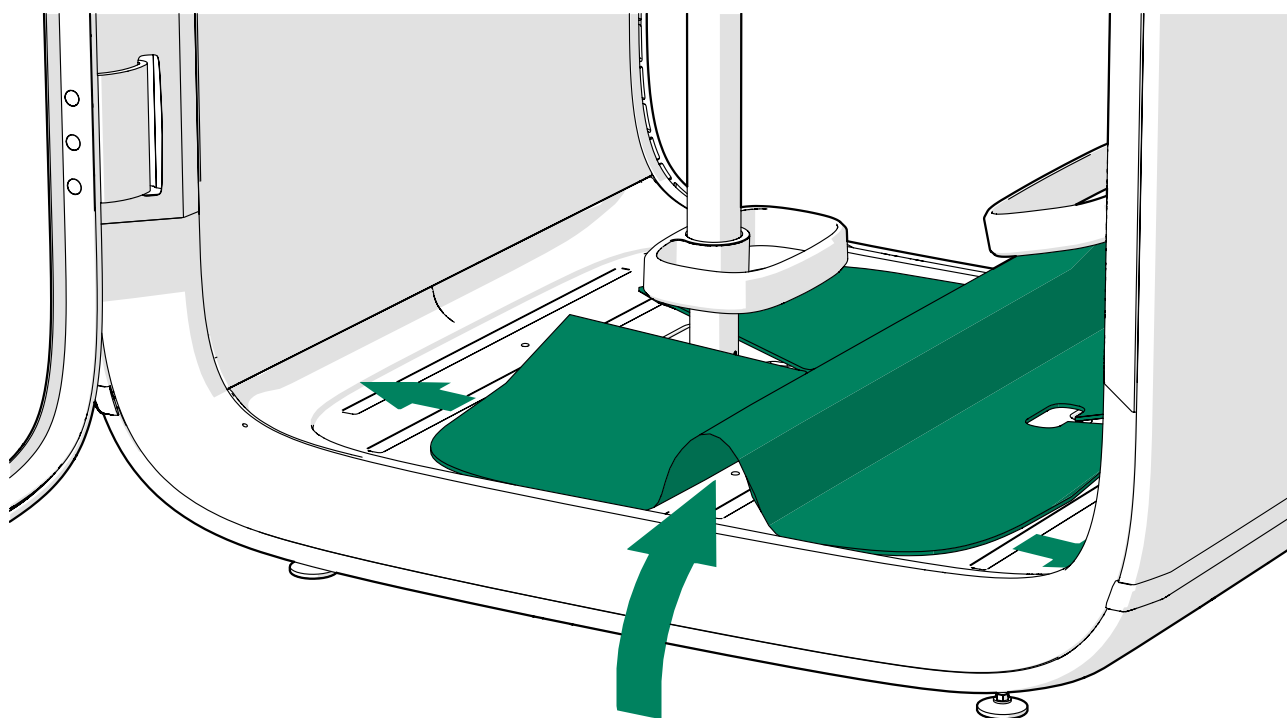





**framery**

Framery One  
Part replacement  
Patamäenkatu 7  
33900 Tampere  
FINLAND  
VAT: FI 23527139