


framery

SERIOUS ABOUT HAPPINESS

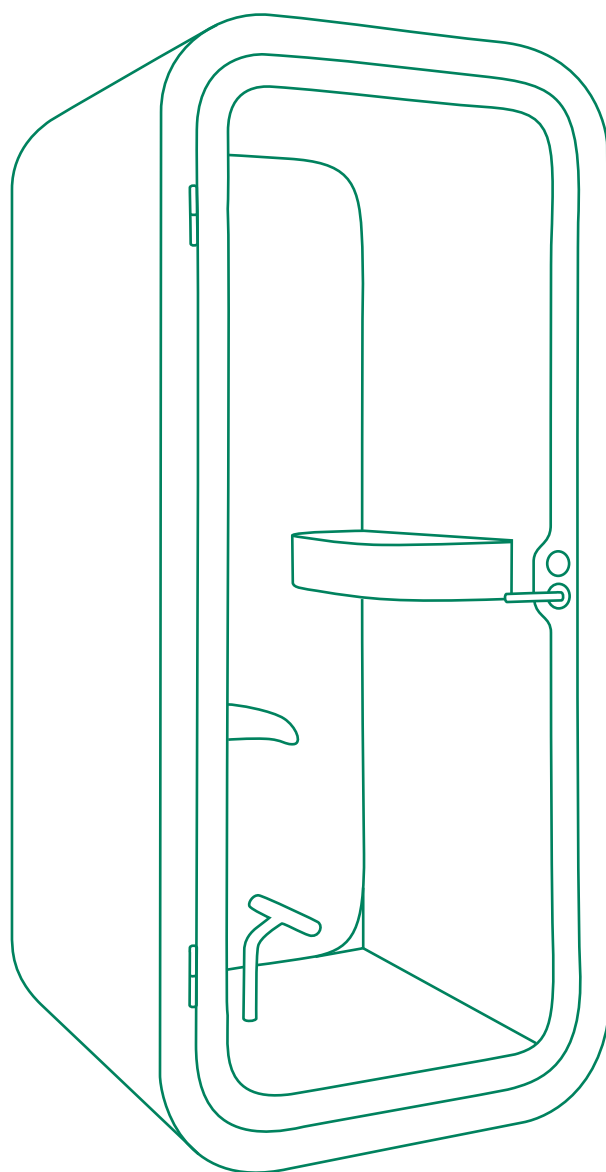

Framery O (UL)
User instructions

English
Version 1.3
Tampere, Finland 08.02.2023

Contents

1 Important safety and product instructions.....	5
1.1 Preface.....	5
1.2 Product information.....	5
1.3 Copyright.....	5
1.4 Manual contents.....	5
1.5 Intended use.....	5
1.5.1 Non-conventional use.....	5
1.5.2 Ambient conditions for use.....	6
1.6 Warning, information, and safety symbols in this manual.....	6
1.7 Main safety risks related to the installation, maintenance, disassembly, and use of the product.....	6
1.7.1 Installation, maintenance, and disassembly.....	7
1.7.2 Electrical safety.....	7
1.7.3 Fire safety.....	8
1.7.4 Use.....	8
1.7.5 Moving the product on casters (optional).....	10
1.8 Location of Product Markings.....	10
 2 Entering the pod.....	 13
 3 Adjusting the stool.....	 15
 4 Connecting electrical equipment.....	 17
 5 Exiting the pod.....	 19

1 Important safety and product instructions

1.1 Preface

This instruction manual describes the use of the product. Everyone involved in using the product must read and understand the contents of the user and safety instructions.

This instruction manual gives you necessary information for the correct use.

All product instructions are also available at help.frameryacoustics.com.

1.2 Product information

The information in this manual corresponds to the product at the time of delivery. All information included in this manual is valid at the time of publication.

1.3 Copyright

This document must not be copied, presented, or delivered to a third party without explicit permission from Framery. The use of this document for any purpose other than those allowed by Framery is prohibited. Framery reserves the right to change the instructions related to the product without separate notice.

1.4 Manual contents

The user instructions contain the following information:

- General information about the purpose and content of the instructions
- Information related to safety
- User instructions

1.5 Intended use

The Framery O is a pod intended for short term indoor commercial and household use by one (1) person at a time.



Warning: WARNING –To reduce the risk of burns, fire, electric shock, or injury to persons:

Use this product only for its intended use as described in the user instructions. Do not use attachments not recommended by the manufacturer.

1.5.1 Non-conventional use

Any use or maintenance of the product that is not specifically allowed in the installation, maintenance, troubleshooting or user instructions is prohibited, including the following:

- Installation, maintenance or disassembly of the pod without reading and understanding the instructions for those actions
- Use of the pod beyond the limits of use
- Making alterations to the pod

- Using the pod in spite of obvious defects or damage
- Using the pod outdoors or in conditions where the temperature or air quality is not safe
- Climbing on top of the product or placing any load on the roof of the product
- Smoking in the pod

1.5.2 Ambient conditions for use

The pod is intended to be used in the following conditions:

- Ambient temperature: +15°C ... +30°C (59°F ... 86°F)
- Humidity: max. 50%
- Sufficient air quality surrounding the product

1.6 Warning, information, and safety symbols in this manual

The warnings in this manual have been divided into the following two categories:

- The term "DANGER" indicates a hazardous situation which, if not avoided, will result in death or serious injury.
- The term "WARNING" indicates a hazardous situation which, if not avoided, could result in death or injury.

The safety symbols found in this manual may also be posted on the product. All personnel who install, disassemble, perform maintenance, or use the product are to be familiar with and observe all safety symbols, labels, and instructions about the action they are performing.

Table 1: Hazard

	An exclamation point symbol inside a colored triangle indicates a hazardous situation.
	

Table 2: Mandatory action

	A white symbol inside a colored circle indicates an action that must be taken to avoid a hazardous situation.
---	---

Table 3: Prohibited action

	A ring with a diagonal bar indicates an action that is not allowed.
---	---

1.7 Main safety risks related to the installation, maintenance, disassembly, and use of the product

1.7.1 Installation, maintenance, and disassembly



	WARNING! To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:
	Use cut resistant safety gloves during the installation, maintenance, or disassembly of the product.
	Use steel toed safety boots during the installation, maintenance, or disassembly of the product.
	Use safety glasses during the installation, maintenance, or disassembly of the product.
	Read and understand the instructions and plan your work beforehand.
	Obey all local rules and regulations regarding workplace safety.
	Keep the work site tidy and free from debris throughout the installation, maintenance, or disassembly process.
	Do not climb on top of the product or place any load on the roof of the product.
	Do not push the the finished product to move it without engaging the optional casters. The product is very heavy and moving the product after installation without engaging the optional casters requires a significant amount of force. Moving a finished product (not using the optional casters) without disassembly and reassembly requires an on-site risk assessment to be performed by the party responsible for moving the product.

1.7.2 Electrical safety

Input for the electrical system: 100-240 VAC (10 A) 50-60 Hz

The maximum load for the electrical system is 6.6 A.

	DANGER! To reduce the risk of electric shock, obey the following:
	Disconnect the power cord from the power outlet before starting any cleaning, maintenance, or disassembly procedures. The power cord serves as a power disconnect device for pluggable equipment. The power outlet shall be located near the equipment and shall be easily accessible.

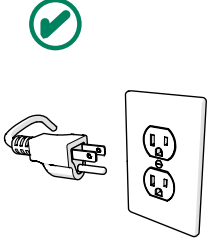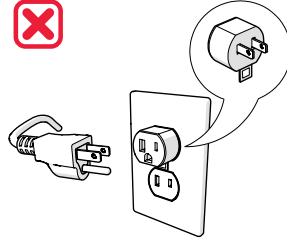	WARNING! To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:
	Connect the power cord to a properly grounded outlet only.
	This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in the figure below. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.  
	Keep the power cord of the product away from heated surfaces.
	Do not use the pod if you notice any defects or damage to the electrical equipment.
	Do not connect any extension cords to the power outlet(s) of the product.

1.7.3 Fire safety

The fire load for the Framery O is approx. 3200 MJ.

	WARNING! To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:
	If safely possible to perform, disconnect the power cord from the power outlet if there is a fire inside the product. The power cord serves as a power disconnect device for pluggable equipment. The power outlet shall be located near the equipment and shall be easily accessible.

Fire safety end devices (alarms, sprinklers etc.) can also be installed inside the pods (instructions available upon request). The need for end devices inside the pod is always determined by the applicable local authorities.

1.7.4 Use

Maximum load for the table is 131 lbs (60 kg).

Maximum load for the Tovi Stool is 300 lbs (136 kg).


	WARNING! To reduce the risk of burns, fire, electric shock, or injury to persons, obey the following:
	Read and understand the user instructions before using the product.
	 Note: The following statement applies to use in Japan. This equipment is not suitable for use in locations where children are likely to be present.
	 Note: The following statements apply to use in all other countries. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons. Keep children away from extended foot support (or other similar parts).
	Risk of injury! Keep hands and other body parts clear of the side edges of the table when raising or lowering the electrically adjustable table top. This applies to all Framery pods with an electric adjustable table.
	Do not use the product if the surrounding conditions are in any way hazardous; the air circulating inside the pod is derived from the surrounding space.
	Do not use the product if the ventilation is not functioning.
	Do not use the product if the ventilation channels are blocked. Keep the ventilation channels free of lint, hair, and the like.
	Do not use the pod if you notice any defects in the electrical equipment or if the product is not working properly. Disconnect the power cord from the power outlet and contact your local dealer or the manufacturer immediately.
	Do not drop or insert any object into any opening if not specifically instructed to do so in this manual.
	Do not use outdoors.
	Do not use where aerosol (spray) products are being used or where oxygen is being administered.
	Do not climb on top of the product or place any load on the roof of the product.
	Do not lean against the product.

	Do not smoke inside the product.
	Do not obstruct the view through the front and back glasses by posting signs, decorations, or by installing blinds or draperies that would prevent occupants from seeing the visible alarm appliances located in the structure where the pod is installed.

1.7.5 Moving the product on casters (optional)

	WARNING! The product is very heavy. Moving the product on the casters requires planning and care. Make sure the product cannot tip over while moving.
	Only move the product on even surfaces: no cracks or thresholds over 3 mm (1/8 in) on the intended route.
	When moving the product, only push below the vertical middle. Do not tow the product.
	Do not enter the product if it is standing on the casters. It is only allowed to use the casters for moving the product. Return the full weight of the product onto the leveling feet immediately after relocation and level the floor.

1.8 Location of Product Markings

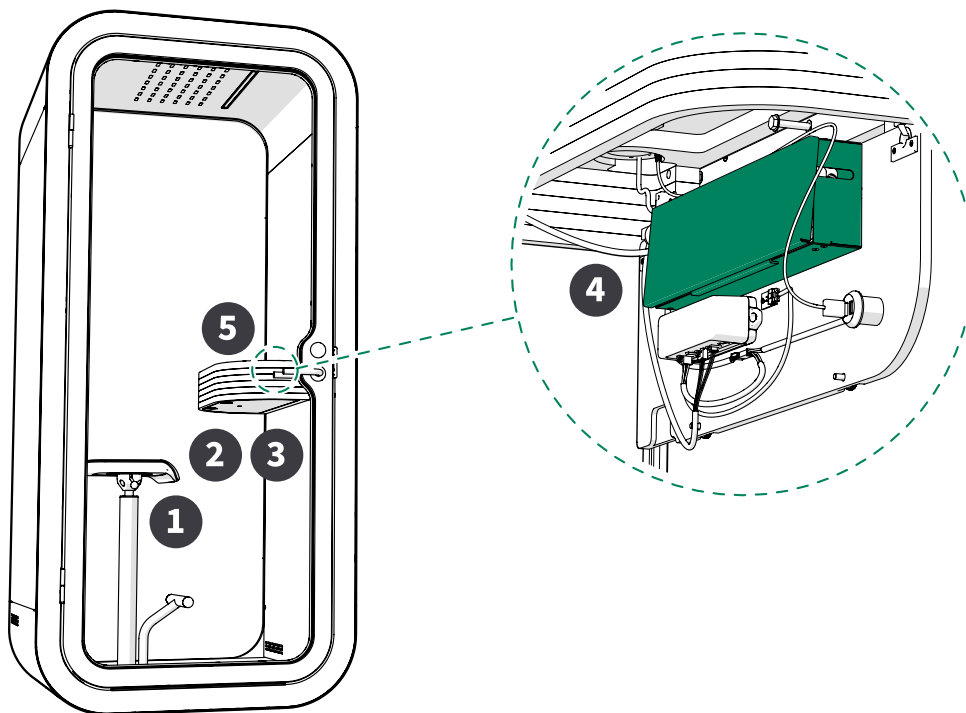


Position	Label	Label text
1.	This furnishing has not been evaluated for flammability or cigarette ignition resistance L'inflammabilité ou la résistance à l'allumage d'une cigarette n'a pas été évaluée pour cette garniture	Framery This furnishing has not been evaluated for flammability or cigarette ignition resistance L'inflammabilité ou la résistance à l'allumage d'une cigarette n'a pas été évaluée pour cette garniture
2.		Framery MANUFACTURED / FABRICATION: [month] - [year] Product / Produit FRAMERY O Input / Entrée 100-240VAC 10A 50-60Hz Manufacturer / Fabricant: Framery Oy Address: Patamäenkatu 7, 33900 Tampere, Finland WEB: www.frameryacoustics.com Email: info@frameryacoustics.com Made in Finland / Fabriqué en Finlande Interior options: FRAMERY O VCR Attention! Always connect the product correctly to a grounded socket to avoid danger for fire or electrical shocks Product evaluated class A (ASTM E84 / UL 723) Attention! Branchez toujours le produit dans une prise reliée à la terre pour éviter tout risque d'incendie ou de choc électrique Produit de classe A (ASTM E84 / UL 723)
3.	SN / N° de série: [BARCODE HERE]	SN / N° de série:

Position	Label	Label text
4.	framery WARNING – Risk of fire and shock Use only 'SJT' type '16' AWG cord AVERTISSEMENT – Risque d'incendie et de choc électrique, utiliser uniquement un cordon d'alimentation 'SJT' de type '16' AWG framery WARNING – Risk of fire and shock Use only 'SJT' type '16' AWG cord AVERTISSEMENT – Risque d'incendie et de choc électrique, utiliser uniquement un cordon d'alimentation 'SJT' de type '16' AWG WARNING – Risk of fire and shock Use only 'SJT' type '16' AWG cord AVERTISSEMENT – Risque d'incendie et de choc électrique, utiliser uniquement un cordon d'alimentation 'SJT' de type '16' AWG WARNING – Risk of fire and shock Use only 'SJT' type '16' AWG cord AVERTISSEMENT – Risque d'incendie et de choc électrique, utiliser uniquement un cordon d'alimentation 'SJT' de type '16' AWG	Framery WARNING - Risk of fire and shock Use only 'SJT' type '16' AWG cord AVERTISSEMENT - Risque d'incendie et de choc électrique, utiliser uniquement un cordon d'alimentation 'SJT' de type '16' AWG
5.	framery WARNING Risk of Injury Maximum load 131 lbs / 60 kg L'AVERTISSEMENT Risque de blessure Poids maximal autorisé 131 lbs / 60 kg Framery US patents & Global IPR: frameryacoustics.com/ipr	Framery WARNING Risk of injury Maximum table load 131 lbs / 60 kg L'AVERTISSEMENT Risque de blessure Poids maximal autorisé 131 lbs / 60 kg Framery US patents & Global IPR: frameryacoustics.com/ipr


SAVE THESE INSTRUCTIONS

2 Entering the pod

1. Push down on the door handle.

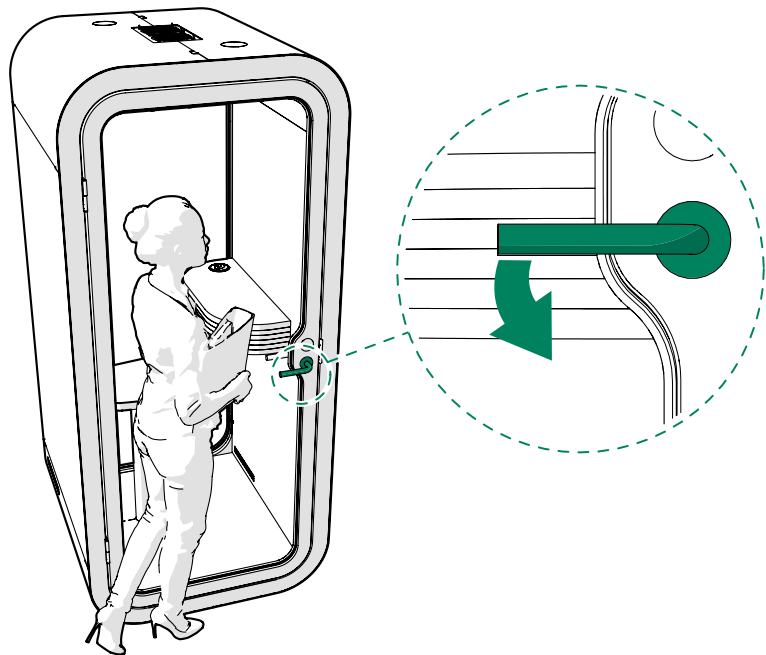

2. Pull the door open.

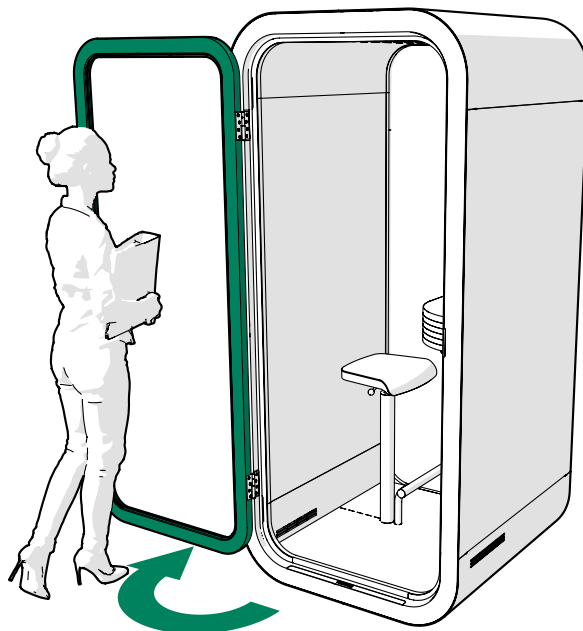

3. Enter the pod.




4. Pull the door shut.




3 Adjusting the stool

The Tovi stool is height-adjustable to better suit different users.


1. Sit on the Tovi stool to determine the possible need for adjustments.

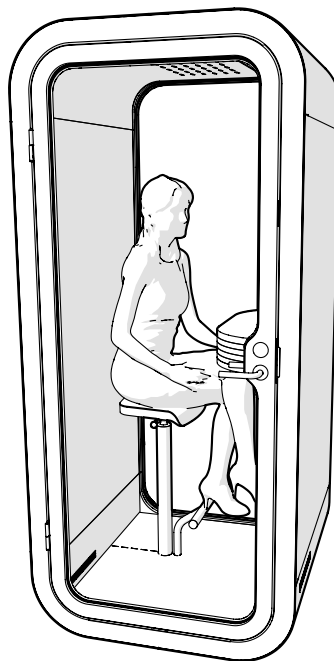

2. To adjust the seat to a lower position, gently pull up on the lever at the side until the correct height is reached.

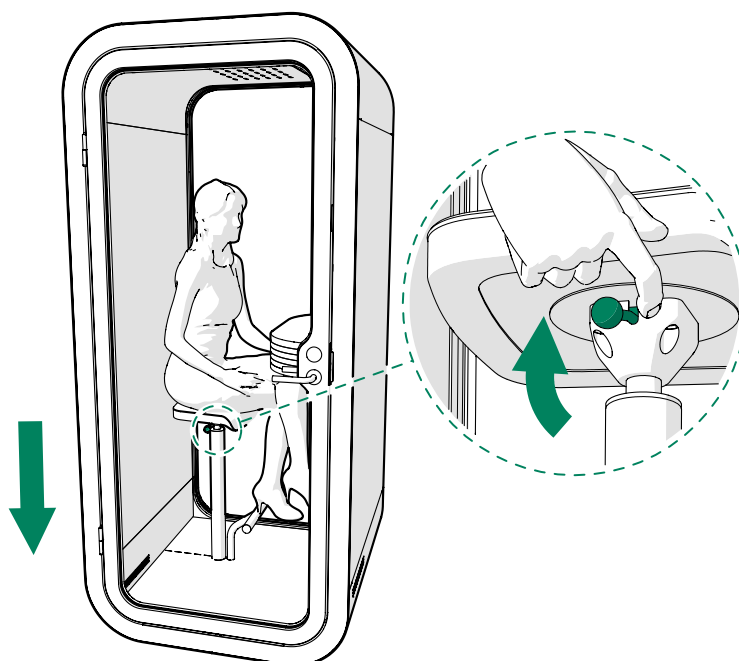


3. To adjust the seat to a higher position, lighten your weight off the seat and gently pull the lever at the side until the correct height is reached.

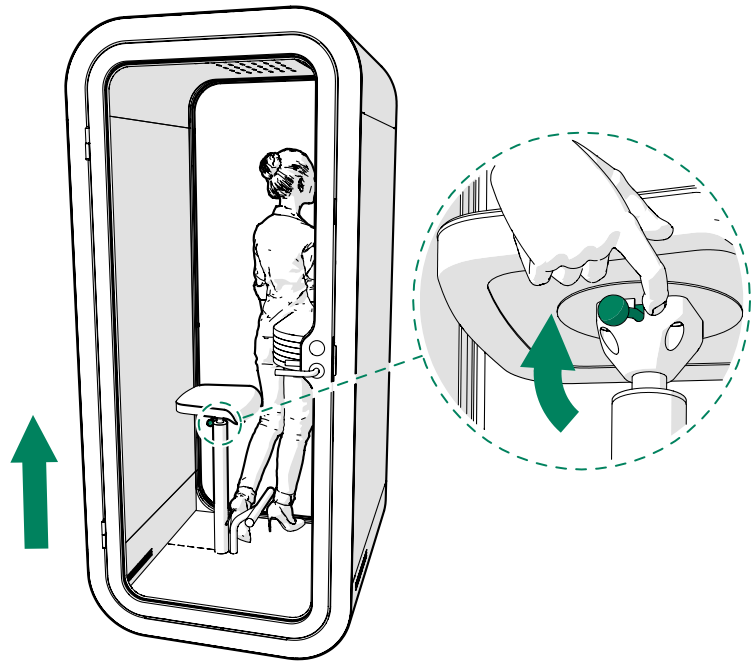


4 Connecting electrical equipment



1. To connect your device to the power outlet, insert the power cord plug of your device to the power outlet of the table.

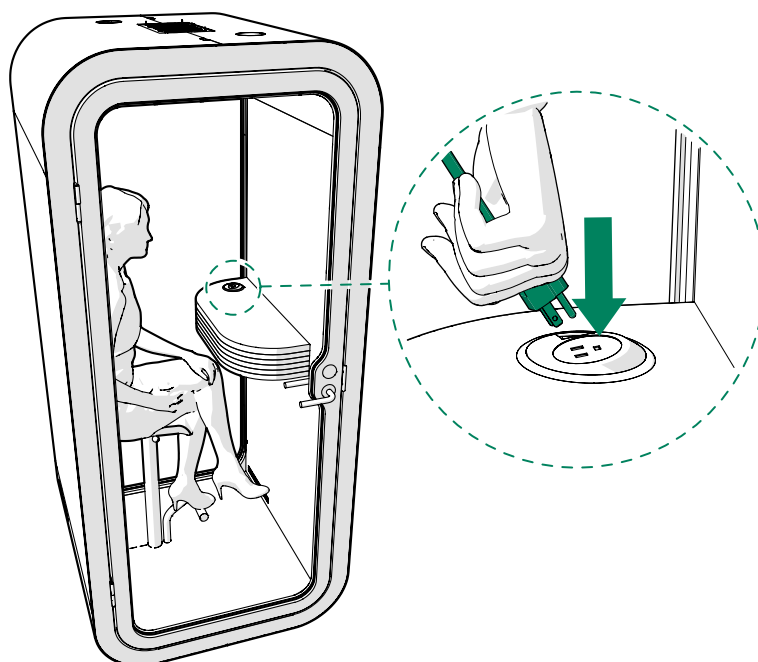

To connect USB-powered devices, use the USB connector of the power outlet in the table.

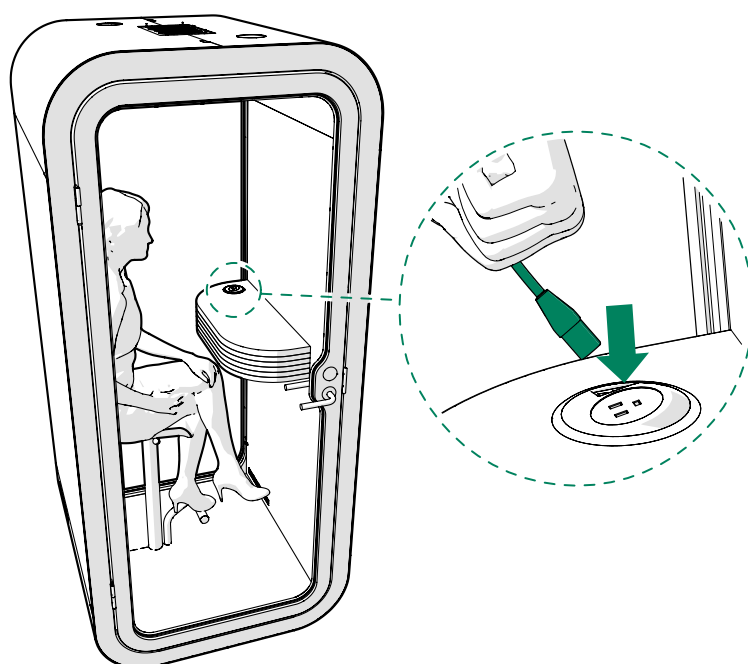

2. To disconnect your device, remove the power cord plug of your device from the power outlet.

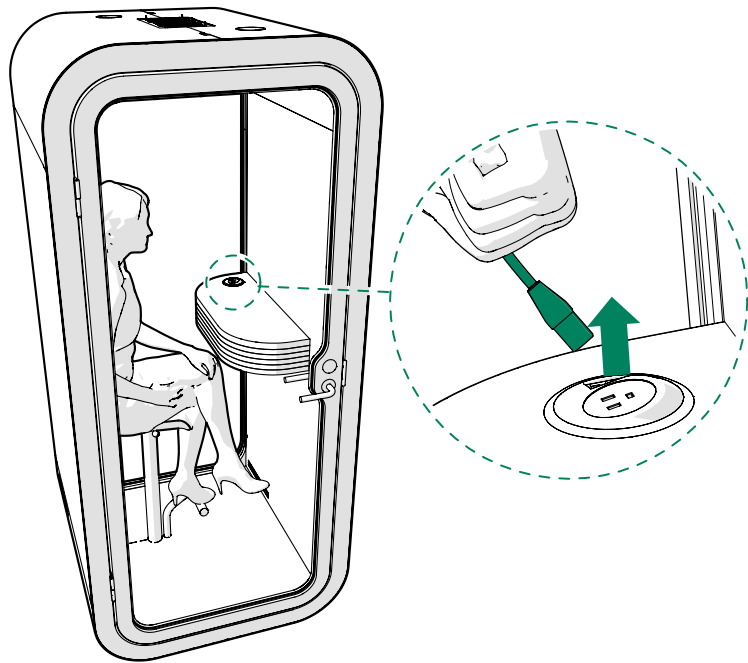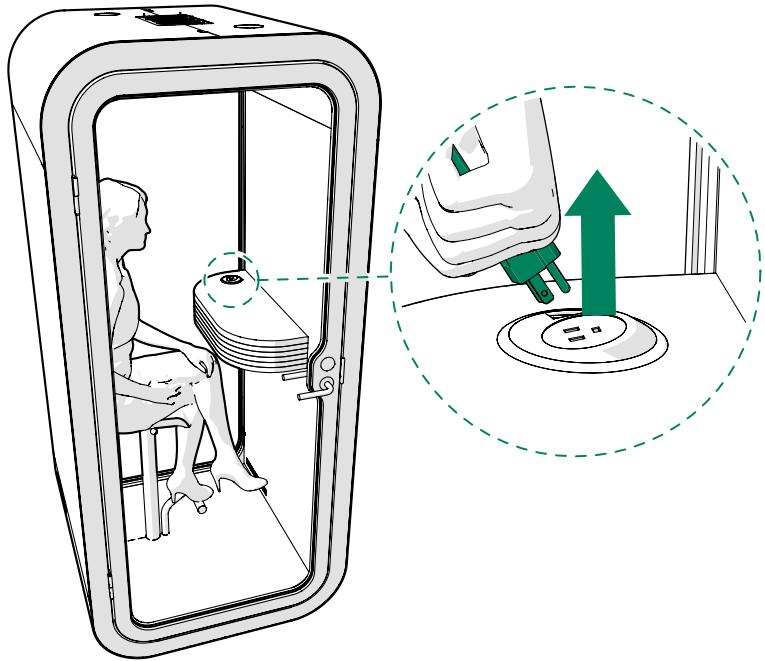


5 Exiting the pod


1. Push down on the door handle.



2. Push the door open.

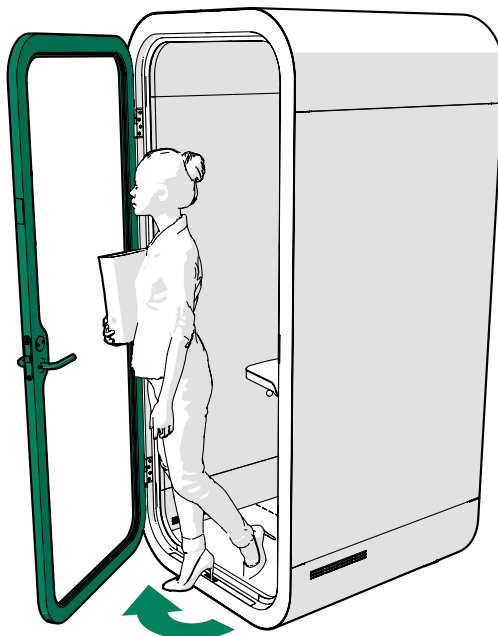

3. Exit the pod.

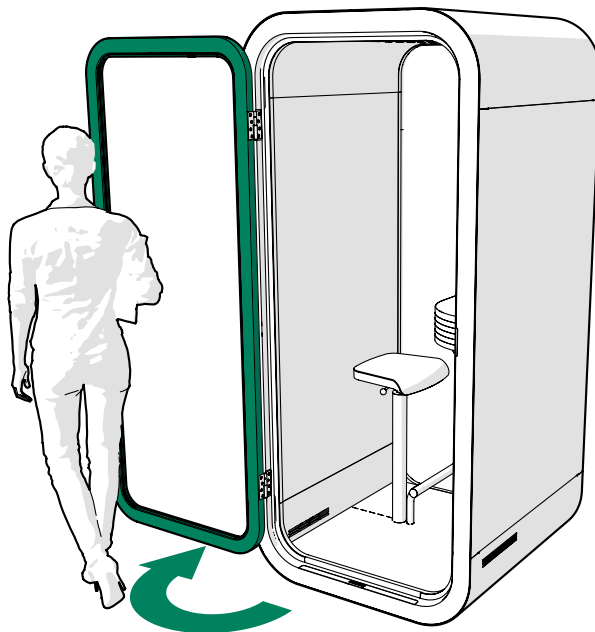

4. Push the door shut.



framery

Framery O (UL)

User instructions

Patamäenkatu 7

33900 Tampere

FINLAND

VAT: FI 23527139